



SD6 drive controller Manual

en-US
11/2024
ID 442426.13

Table of contents

- Table of contents 2**
- 1 Foreword 11**
- 2 User information 12**
 - 2.1 Storage and transfer 12
 - 2.2 Described product 12
 - 2.3 Directives and standards 12
 - 2.4 UL file number 13
 - 2.5 Timeliness 13
 - 2.6 Original language 13
 - 2.7 Limitation of liability 14
 - 2.8 Formatting conventions 14
 - 2.8.1 Display of warning messages and information 14
 - 2.8.2 Markup of text elements 15
 - 2.8.3 Mathematics and formulas 15
 - 2.8.4 Conventions for cables 16
 - 2.9 Marks and test symbols 16
 - 2.10 Trademarks 17
- 3 Safety notes 18**
 - 3.1 Qualified personnel 18
 - 3.2 Intended use 18
 - 3.3 Transport and storage 18
 - 3.4 Operational environment and operation 19
 - 3.5 Working on the machine 20
 - 3.6 Installation 20
 - 3.7 Electrical connection 21
 - 3.8 Ensuring traceability 21
 - 3.9 Decommissioning 21
 - 3.10 Disposal 22
 - 3.11 Firefighting 22
- 4 Security 23**
- 5 UL-compliant use 26**
- 6 System design 29**
 - 6.1 Hardware components 30
 - 6.1.1 Drive controllers 30
 - 6.1.2 Operating motors, encoders and brakes 34
 - 6.1.3 Accessories 35

| | | |
|----------|--|-----------|
| 6.2 | Software components | 45 |
| 6.2.1 | Project configuration and parameterization | 45 |
| 6.2.2 | Applications | 45 |
| 7 | Technical data | 46 |
| 7.1 | Drive controllers | 46 |
| 7.1.1 | General technical data | 46 |
| 7.1.2 | Electrical data | 47 |
| 7.1.3 | Derating | 56 |
| 7.1.4 | Dimensions | 58 |
| 7.1.5 | Weight | 60 |
| 7.1.6 | Cycle times | 60 |
| 7.2 | DC link connection | 61 |
| 7.2.1 | General technical data | 61 |
| 7.2.2 | DL6A – SD6 assignment | 62 |
| 7.2.3 | Dimensions | 63 |
| 7.2.4 | Weight | 64 |
| 7.2.5 | Copper rails | 64 |
| 7.3 | Safety technology | 64 |
| 7.3.1 | ST6 safety module | 64 |
| 7.3.2 | SE6 safety module | 65 |
| 7.4 | Operating motors | 66 |
| 7.5 | Evaluable encoders | 67 |
| 7.5.1 | Overview | 67 |
| 7.5.2 | Signal transmission | 68 |
| 7.5.3 | Drive controllers | 69 |
| 7.5.4 | Terminal module | 73 |
| 7.5.5 | Encoder adapter box | 78 |
| 7.6 | Terminal module | 81 |
| 7.6.1 | XI6 terminal module | 81 |
| 7.6.2 | RI6 terminal module | 83 |
| 7.6.3 | IO6 terminal module | 84 |
| 7.6.4 | Weight | 85 |
| 7.7 | Controllable brakes | 85 |
| 7.7.1 | X5: Brake | 86 |
| 7.7.2 | X8 (SE6 option): Brake | 86 |
| 7.8 | Evaluable motor temperature sensors | 86 |
| 7.9 | Braking resistor | 87 |
| 7.9.1 | Tubular fixed resistor FZMU, FZZMU | 87 |
| 7.9.2 | GVADU, GBADU flat resistor | 89 |
| 7.9.3 | FGFKU steel-grid fixed resistor | 91 |
| 7.9.4 | Rear section braking resistor RB 5000 | 92 |

| | | |
|-----------|--|------------|
| 7.10 | Choke..... | 94 |
| 7.10.1 | TEP power choke | 94 |
| 7.10.2 | TEP output choke..... | 96 |
| 7.11 | Encoder adapter box | 98 |
| 7.11.1 | Dimensions | 98 |
| 7.11.2 | Weight | 98 |
| 8 | Project configuration..... | 99 |
| 8.1 | Drive controller..... | 99 |
| 8.2 | DC link connection..... | 99 |
| 8.2.1 | Information on design and operation..... | 100 |
| 8.2.2 | Design | 101 |
| 8.3 | Mixed operation | 103 |
| 8.4 | Motor..... | 105 |
| 8.5 | Choke..... | 106 |
| 8.5.1 | TEP power choke | 106 |
| 8.5.2 | TEP output choke..... | 107 |
| 9 | Storage..... | 110 |
| 9.1 | Drive controllers | 110 |
| 9.1.1 | Annual reforming..... | 110 |
| 9.1.2 | Reforming before commissioning..... | 111 |
| 10 | Installation..... | 112 |
| 10.1 | Basic assembly instructions | 112 |
| 10.1.1 | Drive controllers | 112 |
| 10.1.2 | Braking resistor | 113 |
| 10.1.3 | Choke | 114 |
| 10.2 | Minimum clearances | 115 |
| 10.3 | Drilling diagrams and bore dimensions | 117 |
| 10.3.1 | Drive controllers | 117 |
| 10.3.2 | Braking resistor..... | 119 |
| 10.3.3 | Choke | 120 |
| 10.4 | Length of copper rails | 122 |
| 10.5 | Installing the communication module..... | 123 |
| 10.6 | Installing the terminal module | 125 |
| 10.7 | Installing the drive controller without a rear section module..... | 128 |
| 10.8 | Installing the DC link connection | 129 |
| 10.9 | Installing a rear section braking resistor | 132 |
| 10.10 | Mounting the drive controller on the rear section module | 133 |
| 10.11 | Attaching the EMC shield plate | 139 |
| 10.12 | Installing the encoder adapter box..... | 141 |

| | | |
|-----------|--|------------|
| 11 | Connection..... | 142 |
| 11.1 | Electrical connection | 142 |
| 11.2 | Line routing..... | 142 |
| 11.3 | Protective measures..... | 143 |
| 11.3.1 | Power grid supply with DC link connection | 143 |
| 11.3.2 | Line fuse..... | 144 |
| 11.3.3 | Grid connection for DC link connection..... | 148 |
| 11.3.4 | Residual current protective device..... | 148 |
| 11.3.5 | Protective grounding | 149 |
| 11.3.6 | EMC recommendations | 151 |
| 11.4 | Drive controllers | 151 |
| 11.4.1 | Overview with ST6 safety module | 152 |
| 11.4.2 | Overview with SE6 safety module | 156 |
| 11.4.3 | X1: Enable and relay 1 | 161 |
| 11.4.4 | X2: Motor temperature sensor..... | 162 |
| 11.4.5 | X3A, X3B: PC, IGB..... | 163 |
| 11.4.6 | X4: Encoder..... | 164 |
| 11.4.7 | X5: Brake – Actuation | 166 |
| 11.4.8 | X6 (ST6 option): Brake – Feedback and supply..... | 167 |
| 11.4.9 | X7 (SE6 option): Brake(s) – Supply..... | 168 |
| 11.4.10 | X8 (SE6 option): Brake 2 – Safe brake control | 169 |
| 11.4.11 | X10: 230/400 V supply..... | 170 |
| 11.4.12 | X11: 24 V supply – Control unit | 172 |
| 11.4.13 | X12 (ST6 option): Safety technology..... | 173 |
| 11.4.14 | X14 (SE6 option): Safety technology – Safe inputs | 174 |
| 11.4.15 | X15 (SE6 option): Safety technology – Safe outputs, supply for X50..... | 175 |
| 11.4.16 | X20: Motor..... | 176 |
| 11.4.17 | X30: DC link connection, braking resistor | 178 |
| 11.4.18 | X50 (SE6 option): Plausibility encoder | 179 |
| 11.4.19 | Connecting a drive controller (ST6 option)..... | 180 |
| 11.4.20 | Connecting a drive controller (SE6 option)..... | 182 |
| 11.5 | Braking resistor..... | 184 |
| 11.5.1 | FZMU, FZZMU connection description | 185 |
| 11.5.2 | GVADU, GBADU connection description | 186 |
| 11.5.3 | FGFKU connection description | 187 |
| 11.5.4 | RB 5000 connection description..... | 187 |
| 11.6 | Power choke | 188 |
| 11.6.1 | Connection description..... | 188 |
| 11.7 | Output choke..... | 189 |
| 11.7.1 | Connection description..... | 189 |
| 11.8 | Communication module | 190 |
| 11.8.1 | EC6: EtherCAT | 190 |
| 11.8.2 | CA6: CANopen | 192 |
| 11.8.3 | PN6: PROFINET | 193 |

| | | |
|-----------|--|------------|
| 11.9 | Terminal module | 195 |
| 11.9.1 | XI6 | 195 |
| 11.9.2 | RI6 | 205 |
| 11.9.3 | IO6 | 218 |
| 11.10 | Encoder adapter box | 223 |
| 11.10.1 | LA6 for synchronous linear motors | 223 |
| 11.11 | Cables | 230 |
| 11.11.1 | Power cables | 230 |
| 11.11.2 | Encoder cables | 236 |
| 12 | Operation | 254 |
| 12.1 | Overview | 254 |
| 12.2 | Menu structure and navigation | 255 |
| 13 | What you should know before commissioning | 257 |
| 13.1 | DS6 program interface | 257 |
| 13.2 | Meaning of parameters | 259 |
| 13.2.1 | Parameter groups | 259 |
| 13.2.2 | Parameter types and data types | 260 |
| 13.2.3 | Parameter types | 261 |
| 13.2.4 | Parameter structure | 261 |
| 13.2.5 | Parameter visibility | 262 |
| 13.3 | Signal sources and process data mapping | 263 |
| 13.4 | Non-volatile memory | 263 |
| 14 | Commissioning | 264 |
| 14.1 | Initiating the project | 264 |
| 14.1.1 | Projecting the drive controller and axis | 264 |
| 14.1.2 | Configuring safety technology | 266 |
| 14.1.3 | Creating other modules and drive controllers | 266 |
| 14.1.4 | Projecting the module | 267 |
| 14.1.5 | Projecting the project | 267 |
| 14.2 | Mapping the mechanical axis model | 268 |
| 14.2.1 | Parameterizing the motor | 268 |
| 14.2.2 | Parameterizing the axis model | 268 |
| 14.3 | Transmitting and saving a configuration | 273 |
| 14.3.1 | Transmitting the configuration | 273 |
| 14.3.2 | Saving the configuration | 275 |
| 14.4 | Testing the configuration | 276 |
| 14.4.1 | Testing the configuration via DriveControlSuite | 276 |
| 14.4.2 | Testing the configuration via the operating unit | 277 |
| 14.5 | Preparing for a case of service | 280 |
| 14.6 | Testing the safety configuration | 280 |
| 14.7 | Safety technology for series machines | 280 |

| | | |
|-----------|--|------------|
| 15 | Communication..... | 281 |
| 15.1 | Direct connection | 282 |
| 15.2 | Remote maintenance | 282 |
| 15.3 | IGB motion bus | 282 |
| 15.4 | Fieldbus | 282 |
| 16 | Optimizing the control cascade | 283 |
| 16.1 | Structure of the control cascade | 283 |
| 16.2 | General procedure | 284 |
| 16.3 | Example project..... | 285 |
| 16.3.1 | Scope settings..... | 285 |
| 16.3.2 | Jog settings | 286 |
| 16.4 | Schematic sequence | 287 |
| 16.5 | Current controller – Notes | 287 |
| 16.6 | 1: Velocity controller – Actual velocity filters..... | 288 |
| 16.7 | 2: Velocity controller – Proportional coefficient | 290 |
| 16.8 | 3: Velocity controller – Integral coefficient | 294 |
| 16.9 | Velocity controller – Summary | 295 |
| 16.10 | 4: Position controller – Proportional coefficient | 296 |
| 16.11 | 5: Position controller – Velocity controller feedforward control | 297 |
| 16.12 | Position controller – Summary | 298 |
| 16.13 | Special cases | 298 |
| 16.13.1 | Current controller – Motor reaches saturation | 298 |
| 16.13.2 | Velocity controller – High set torque..... | 299 |
| 16.13.3 | Position controller – Friction or play | 299 |
| 16.13.4 | Position controller – Poor resolution..... | 299 |
| 17 | Brake | 300 |
| 17.1 | Activating and selecting the brake | 301 |
| 17.2 | Activating functional brake management | 301 |
| 17.3 | Calibrate brake | 302 |
| 17.4 | Testing a functional brake | 303 |
| 17.5 | Bedding in the brake | 304 |
| 17.6 | Bedding in brake 2..... | 305 |
| 17.7 | More about the brake? | 306 |
| 17.7.1 | Direct and indirect brake connection | 306 |
| 17.7.2 | Release override | 306 |
| 17.7.3 | Internal and external brake control..... | 307 |
| 17.7.4 | Brake release time and brake engaging time | 317 |
| 17.7.5 | Time between 2 release processes..... | 318 |

| | | |
|-----------|--|------------|
| 17.7.6 | Functional brake management | 318 |
| 17.7.7 | Calibrating the brake | 320 |
| 17.7.8 | Brake test..... | 322 |
| 17.7.9 | Torque calculation | 323 |
| 17.7.10 | Bedding in the brake..... | 325 |
| 17.7.11 | Special case of load changes when the power unit is switched off | 326 |
| 18 | Predictive Maintenance | 327 |
| 18.1 | Legal disclaimer | 327 |
| 18.2 | Displaying the state | 328 |
| 18.3 | Configuring Predictive Maintenance | 329 |
| 18.4 | Sending the load matrix..... | 332 |
| 18.5 | Exporting the load matrix | 334 |
| 18.6 | Resetting the load matrix | 334 |
| 18.7 | Displaying a 3D load matrix | 335 |
| 18.8 | Resetting the life performance indicator | 335 |
| 18.9 | Information on activation, operation and replacement..... | 336 |
| 18.10 | More about Predictive Maintenance?..... | 337 |
| 18.10.1 | Load matrix | 337 |
| 18.10.2 | Life performance indicator | 346 |
| 18.10.3 | Update and storage cycles..... | 347 |
| 18.10.4 | Recommendation for geared motor replacement | 347 |
| 18.10.5 | Reading out and transmitting the load matrix | 348 |
| 19 | Diagnostics..... | 350 |
| 19.1 | Drive controllers | 350 |
| 19.1.1 | Drive controller state: LEDs | 351 |
| 19.1.2 | Drive controller state: Display | 353 |
| 19.1.3 | Service network connection | 357 |
| 19.1.4 | Fieldbus state..... | 358 |
| 19.1.5 | IGB state | 362 |
| 19.1.6 | Fieldbus network connection | 363 |
| 19.1.7 | Events | 365 |
| 19.2 | SE6 safety module | 418 |
| 19.2.1 | Parameters | 418 |
| 19.2.2 | Error codes..... | 418 |
| 19.3 | Acknowledging faults | 424 |
| 20 | Analysis..... | 425 |
| 20.1 | Scope and multi-axis scope | 426 |
| 20.1.1 | Scope settings..... | 429 |
| 20.1.2 | Image editor | 434 |
| 20.1.3 | Frequency analysis..... | 437 |

| | | |
|-----------|--|------------|
| 20.2 | Scope image | 438 |
| 20.2.1 | Creating a scope image..... | 438 |
| 20.2.2 | Combining scope images | 440 |
| 20.2.3 | Creating a direct image..... | 440 |
| 20.3 | Multi-axis scope images | 442 |
| 20.3.1 | Prerequisites..... | 442 |
| 20.3.2 | Creating a multi-axis scope image | 443 |
| 20.4 | Parameters | 445 |
| 21 | Replacement | 446 |
| 21.1 | Notes on the safety configuration..... | 446 |
| 21.2 | Replacing the drive controller | 446 |
| 21.3 | Commissioning the new drive controller after replacing the device..... | 448 |
| 21.4 | Replacing the Paramodul..... | 450 |
| 21.5 | Updating firmware using DS6..... | 451 |
| 21.6 | Motor replacement | 452 |
| 22 | Service | 453 |
| 22.1 | Information about the product | 453 |
| 22.2 | STOBER electronics service..... | 453 |
| 22.3 | Reverse documentation | 454 |
| 22.3.1 | Creating reverse documentation | 454 |
| 22.3.2 | Deleting reverse documentation | 455 |
| 23 | Appendix..... | 456 |
| 23.1 | Weights..... | 456 |
| 23.2 | Terminal specifications..... | 458 |
| 23.2.1 | Overview..... | 458 |
| 23.2.2 | BCF 3,81 180 SN..... | 459 |
| 23.2.3 | BLF 5.08HC 180 SN..... | 460 |
| 23.2.4 | BLDF 5.08 180 SN..... | 460 |
| 23.2.5 | DFMC 1.5 -ST-3.5 | 461 |
| 23.2.6 | FK-MCP 1,5 -ST-3,5 | 461 |
| 23.2.7 | FMC 1,5 -ST-3,5..... | 462 |
| 23.2.8 | G 10/2 | 462 |
| 23.2.9 | GFKC 2,5 -ST-7,62 | 463 |
| 23.2.10 | GFKIC 2.5 -ST-7.62 | 463 |
| 23.2.11 | ISPC 5 -STGCL-7,62..... | 464 |
| 23.2.12 | ISPC 16 -ST-10,16 | 464 |
| 23.2.13 | MKDSP 25 -15,00 | 465 |
| 23.2.14 | SPC 5 -ST-7,62 | 466 |
| 23.2.15 | SPC 16 -ST-10,16..... | 466 |

- 23.3 Wiring examples 467
 - 23.3.1 Stand-alone operation with direct brake control 467
 - 23.3.2 Stand-alone operation with indirect brake control 468
 - 23.3.3 DC link connection 469
- 23.4 SSI encoders 470
 - 23.4.1 SSI: Evaluation at X4 with free setting (H00 = 78) 470
 - 23.4.2 SSI: Evaluation at X4 with fixed setting (H00 = 65) 471
 - 23.4.3 SSI: Evaluation and simulation at X120 with free setting (H120 = 76 or 83) 473
 - 23.4.4 SSI: Evaluation and simulation at X120 with fixed setting (H120 = 67 or 82) 475
- 23.5 Commutation finding..... 478
- 23.6 Device addressing..... 479
- 23.7 DriveControlSuite 480
 - 23.7.1 System requirements..... 480
 - 23.7.2 Installation types 480
 - 23.7.3 Installing DriveControlSuite 481
 - 23.7.4 Communication requirements..... 482
 - 23.7.5 Establishing a connection 484
 - 23.7.6 Configuring virtual machines 491
 - 23.7.7 Updates 491
 - 23.7.8 Script mode..... 492
 - 23.7.9 Security log 517
- 23.8 Detailed information 519
- 23.9 Symbols in formulas 521
- 23.10 Abbreviations 524
- 24 Contact 526**
 - 24.1 Consultation, service and address..... 526
 - 24.2 Your opinion is important to us..... 526
 - 24.3 Close to customers around the world 527
- Glossary 528**
- List of figures..... 536**
- List of tables..... 540**

1 Foreword

Controlling servo axes precisely and quickly is its game. Due to its high computing power, the SD6 recalculates the position, speed and torque/force control of the servo axes every 62.5 μ s. This enables extraordinarily high dynamics and precision for the drives with very short recovery times and also fast reactions to set value changes and load jumps. The SD6 drive controller is available in four sizes with a nominal output current of up to 85 A. There is also an option of connecting the drive controllers in a DC link for multi-axis applications, which improves the energy footprint of the entire system.

Features

- Control of rotary synchronous servo motors and asynchronous motors
- Control of linear and torque motors
- Multi-functional encoder interfaces
- Automatic motor parameterization from the electronic motor nameplate
- Isochronic system bus (IGB motion bus) for parameterization and multi-axis applications
- Communication over CANopen, EtherCAT or PROFINET
- Safe Torque Off (STO) in the standard version, extended safety technology (SS1, SS2, SLS, etc.) as an option
- Digital and analog inputs and outputs as an option
- Brake chopper, brake control and line filter
- Energy supply through direct power supply
- Flexible DC link connection for multi-axis applications
- Convenient operating unit consisting of graphical display and buttons
- Paramodul removable data storage for quick commissioning and service

2 User information

This documentation covers the SD6 drive controller. You will receive support for the assembly of the individual modules along with the associated components that you will need to operate the drive controllers in the control cabinet.

You will also find information on wiring the modules correctly and checking their functionality in the group with an initial test.

Combinations with other 6th generation STOBER drive controllers are possible under certain boundary conditions.

More detailed information on project configuration, diagnostics and service are additional topics covered in this manual.

2.1 Storage and transfer

As this documentation contains important information for handling the product safely and efficiently, it must be stored in the immediate vicinity of the product until product disposal and be accessible to qualified personnel at all times.

Also pass on this documentation if the product is transferred or sold to a third party.

2.2 Described product

This documentation is binding for:

Drive controllers of the SD6 series in conjunction with the DriveControlSuite (DS6) software in V 6.6-B or higher, PASmotion Safety Configurator in V 1.5.0 or higher and associated firmware in V 6.6-B or higher.

2.3 Directives and standards

The following European directives and standards are relevant to the drive controllers:

- Directive 2006/42/EC – Machinery Directive
- Directive 2014/30/EU – EMC Directive
- Directive 2011/65/EU – RoHS Directive
- Directive 2009/125/EC – Ecodesign Directive
- EN IEC 61800-3:2018
- EN 61800-5-1:2007 + A1:2017
- EN 61800-5-2:2017
- EN 61800-9-2:2017
- EN IEC 63000:2018
- EN ISO 13849-1:2015

Subsequent references to the standards do not specify the respective year in order to improve readability.

2.4 UL file number

cULus certified devices with the corresponding test symbol meet the requirements of standards UL 508C and UL 840.

Under the file number specified in the following table, you can find the product in the online database of Underwriter Laboratories (UL):

<https://iq2.ulprospector.com>

| Type | | File number | UL Category Control Number | | Certification |
|--------------------------|---|-------------------------------|----------------------------|--------|--------------------------|
| | | | America | Canada | |
| Drive controller | SD6A02 | E189114 | NMMS | NMMS7 | cULus |
| | SD6A04 | | | | |
| | SD6A06 | | | | |
| | SD6A14 | | | | |
| | SD6A16 | | | | |
| | SD6A24 | | | | |
| | SD6A26 | | | | |
| | SD6A34 | | | | |
| | SD6A36 | | | | |
| | SD6A38 | | | | |
| Braking resistors | FZMU, FZZMU | E212934 | NMTR2 | NMTR8 | cURus |
| | GVADU, GBADU | | | | |
| | FGFKU | | | | |
| | RB 5000 | | | | |
| Power chokes | TEP4010-2US00 | E103902 | XQNX2 | XQNX8 | cURus |
| Output chokes | TEP3720-0ES41 | E333628 | NMMS2 | NMMS8 | cURus |
| | TEP3820-0CS41 | | | | |
| | TEP4020-0RS41 | | | | |
| Motors | Synchronous servo motors of the EZ series | E488992 | PRHZ2 | PRHZ8 | cURus |
| | Asynchronous motors | E216143 | PRGY2 | PRGY8 | cURus |
| Encoder and power cables | All types | E172204 E170315 E356538 | AVLV2 | AVLV8 | cURus |
| Type E motor starter | All types | E123500 | NKJH | NKJH7 | UL listed, CSA certified |

Tab. 1: File number-certified products

2.5 Timeliness

Check whether this document is the latest version of the documentation. We make the latest document versions for our products available for download on our website:

<http://www.stoerber.de/en/downloads/>.

2.6 Original language

The original language of this documentation is German; all other language versions are derived from the original language.

2.7 Limitation of liability

This documentation was created taking into account the applicable standards and regulations as well as the current state of technology.

No warranty or liability claims for damage shall result from failure to comply with the documentation or from use that deviates from the intended use of the product. This is especially true for damage caused by individual technical modifications to the product or the project configuration and operation of the product by unqualified personnel.

2.8 Formatting conventions

Orientation guides in the form of signal words, symbols and special text markups are used to emphasize specific information so that you are able identify it in this documentation quickly.

2.8.1 Display of warning messages and information

Warning messages are identified with symbols. They indicate special risks when handling the product and are accompanied by relevant signal words that express the extent of the risk. Furthermore, useful tips and recommendations for efficient, error-free operation are specially highlighted.

ATTENTION!

Attention

This indicates that damage to property may occur

- if the stated precautionary measures are not taken.

⚠ CAUTION!

Caution

This word with a warning triangle indicates that minor personal injury may occur

- if the stated precautionary measures are not taken.

⚠ WARNING!

Warning

This word with a warning triangle means there may be a considerable risk of fatal injury

- if the stated precautionary measures are not taken.

⚠ DANGER!

Danger

This word with a warning triangle indicates that there is a considerable risk of fatal injury

- if the stated precautionary measures are not taken.

Information

Information indicates important information about the product or serves to emphasize a section in the documentation that deserves special attention from the reader.

2.8.2 Markup of text elements

Certain elements of the continuous text are distinguished as follows.

| | |
|---|--|
| Important information | Words or expressions with a special meaning |
| Interpolated position mode | Optional: File or product name or other name |
| <u>Detailed information</u> | Internal cross-reference |
| http://www.samplelink.com | External cross-reference |

Software and other displays

The following formatting is used to identify the various information content of elements referenced by the software interface or a drive controller display, as well as any user entries.

| | |
|--------------------------------|---|
| Main menu Settings | Window names, dialog box names, page names or buttons, combined proper nouns, functions referenced by the interface |
| Select Referencing method A | Predefined entry |
| Save your <own IP address> | User-defined entry |
| EVENT 52: COMMUNICATION | Displays (status, messages, warnings, faults) |

Keyboard shortcuts and command sequences or paths are represented as follows.

| | |
|----------------------|---|
| [Ctrl], [Ctrl] + [S] | Key, key combination |
| Table > Insert table | Navigation to menus/submenus (path specification) |

Operating buttons

The buttons of the drive controller are depicted as follows in the continuous text.

| | |
|------|--|
| [OK] | Button on the operating unit of the drive controller |
|------|--|

2.8.3 Mathematics and formulas

The following signs are used to represent mathematical relationships and formulas.

| | |
|---|----------------|
| – | Subtraction |
| + | Addition |
| × | Multiplication |
| ÷ | Division |
| | Absolute value |

2.8.4 Conventions for cables

In the cable connection descriptions, core colors are shortened and used as follows.

Cable colors

| | | | |
|-----|--------|-----|--------|
| BK: | BLACK | PK: | PINK |
| BN: | BROWN | RD: | RED |
| BU: | BLUE | VT: | VIOLET |
| GN: | GREEN | WH: | WHITE |
| GY: | GRAY | YE: | YELLOW |
| OG: | ORANGE | | |

Formatting conventions

| | | |
|----------------------|-------|-----------------------------------|
| Two-colored core: | WHYE | WHITEYELLOW (white-yellow core) |
| Single-colored core: | BK/BN | BLACK/BROWN (black or brown core) |
| Core pair: | BU-BK | BLUE-BLACK (blue and black core) |

2.9 Marks and test symbols

The following marks and test symbols are mentioned in the technical data.



RoHS lead-free mark

Marking in accordance with RoHS directive 2011-65-EU.



CE mark

Manufacturer's self declaration: The product meets the requirements of EU directives.



UKCA test symbol

Manufacturer's self declaration: The product meets the requirements of UK directives.



UL test symbol (cULus)

This product is listed by UL for the United States and Canada.

Representative samples of this product have been evaluated by UL and meet the requirements of applicable standards.



UL recognized component mark (cURus)

This component or material is recognized by UL for the US and Canada.

Representative samples of this product have been evaluated by UL and meet applicable requirements.

2.10 Trademarks

The following names used in connection with the device, its optional equipment and its accessories are trademarks or registered trademarks of other companies:

| | |
|--|---|
| CANopen [®] , CiA [®] | CANopen [®] and CiA [®] are registered trademarks of CAN in AUTOMATION e.V., Germany, the international user and manufacturer association. |
| CODESYS [®] | CODESYS [®] is a registered trademark of CODESYS GmbH, Germany. |
| EnDat [®] | EnDat [®] and the EnDat [®] logo are registered trademarks of Dr. Johannes Heidenhain GmbH, Germany. |
| EPLAN [®] | EPLAN [®] and the EPLAN [®] logo are registered trademarks of EPLAN Software & Service GmbH & Co. KG, Germany. |
| EtherCAT [®] , Safety over EtherCAT [®] | EtherCAT [®] and TwinCAT [®] are registered trademarks and patented technologies, licensed by Beckhoff Automation GmbH, Germany. |
| Hyper-V [®] | Hyper-V [®] is a registered trademark of the Microsoft Corporation in the United States and/or other countries. |
| PLCopen [®] | PLCopen [®] is a registered trademark of the PLCopen Organisation, Netherlands. |
| PROFIBUS [®] , PROFINET [®] | PROFIBUS [®] and PROFINET [®] are registered trademarks of PROFIBUS Nutzerorganisation e.V., Germany. |
| SIMATIC [®] , TIA Portal [®] | SIMATIC [®] and TIA Portal [®] are registered trademarks of Siemens AG, Germany. |
| speedtec [®] | speedtec [®] is a registered trademark of TE Connectivity Industrial GmbH, Germany. |
| TwinCAT [®] | TwinCAT [®] is a registered and licensed trademark of Beckhoff Automation GmbH, Germany. |
| VirtualBox [®] | VirtualBox [®] is a registered trademark of Oracle America, Inc., USA. |
| VMware [®] | VMware [®] is a registered trademark of VMware, Inc., USA. |
| Windows [®] , Windows [®] 7, Windows [®] 10, Windows [®] 11 | Windows [®] , the Windows [®] logo, Windows [®] XP, Windows [®] 7, Windows [®] 10, and Windows [®] 11 are registered trademarks of Microsoft Corporation in the United States and/or other countries. |

All other trademarks not listed here are the property of their respective owners.

Products that are registered as trademarks are not specially indicated in this documentation. Existing property rights (patents, trademarks, protection of utility models) are to be observed.

3 Safety notes

There are risks associated with the product described in this documentation that can be prevented by complying with the following basic safety notes as well as the included technical rules and regulations.

3.1 Qualified personnel

In order to be able to perform the tasks described in this documentation, the persons instructed to perform them must have the appropriate professional qualification and be able to assess the risks and residual hazards when handling the products. For this reason, all work on the products as well as their operation and disposal may be performed only by professionally qualified personnel.

Qualified personnel are persons who have acquired the authorization to perform these activities either through training to become a specialist and/or instruction by specialists.

Furthermore, valid regulations, legal requirements, applicable basic rules, this documentation and the safety notes included in it must be carefully read, understood and observed.

3.2 Intended use

As defined by EN 50178, SD6 drive controllers are electrical devices operating as power electronics to control the flow of energy in high-voltage systems.

They are intended solely for the operation of motors that meet the requirements of EN 60034-1:

- Synchronous servo motors (e.g. of the EZ series)
- Asynchronous motors
- Linear motors
- Torque motors

The connection of other electronic loads or operation outside applicable technical specifications constitutes improper use.

When installing drive controllers in machines, commissioning (i.e. commencing intended operation) may not be performed until it has been determined that the machine is in compliance with local laws and directives.

EMC-compliant installation

The SD6 drive controller and accessories must be installed and wired compliant for EMC.

Modification

As the user, you may not make any physical, technical or electrical modifications to the SD6 drive controller and the accessories.

Maintenance

The SD6 drive controller and accessories are maintenance-free. However, take appropriate measures to detect or prevent possible errors in the connecting wiring.

3.3 Transport and storage

Inspect the delivery for any transport damage immediately after you receive it. Notify the transport company of any damage immediately. Do not put a damaged product into operation.

Store the products in a dry and dust-free room if you do not install them immediately.

Transport and store the products in the original packaging and protect the products from mechanical impacts and vibrations. Observe the transport and storage conditions recommended in the technical data.

Reform drive controllers in storage annually or before commissioning (see [Storage](#) [▶ 110]).

3.4 Operational environment and operation

The products are subject to sales restrictions in accordance with EN IEC 61800-3.

The products are not designed for use in a public low-voltage network that supplies residential areas. Radio-frequency interference can be expected if the products are used in this type of network.

The products are intended exclusively for installation in control cabinets with at least protection class IP54.

To ensure the faultless and safe operation of the products, they must be professionally configured, installed, operated and maintained.

Always operate the products within the limits specified by the technical data.

The following applications are prohibited:

- Use in potentially explosive atmospheres
- Use in environments with harmful substances as specified by EN 60721, such as oils, acids, gases, vapors, dust and radiation

Implementation of the following applications is permitted only after approval from STOBER:

- Use in non-stationary applications
- The connection of active and passive components (drive controllers, supply modules, regenerative feedback modules or discharge units) from third-party manufacturers

All device types are intended exclusively for operation on TN networks or wye sources that supply a maximum differential short-circuit current in accordance with the following table.

For UL-compliant operation:

All device types supplied with 480 V_{AC} are intended solely for operation with grounded wye sources at 480/277 V_{AC}.

For all device types – with 240 V_{AC} or 480 V_{AC} supply – the supply grid must not deliver a differential short-circuit current above the specification in the following table.

| Size of the drive controller | Max. differential short-circuit current |
|------------------------------|---|
| Size 0 – size 2 | 5000 A |
| Size 3 | 10000 A |

Tab. 2: Short-circuit current rating (SCCR)

The drive controller has a configurable restart. If the drive controller is designed for an automatic restart after energy shutdown, this must be clearly specified on the system in accordance with EN 61800-5-1.

The drive controller has the option of a Safe Torque Off safety function (STO) in accordance with EN 61800-5-2 for safely disconnecting the energy supply to the motor. Measures based on this for protection against unexpected startup are described in EN ISO 12100 and EN ISO 14118, for example.

3.5 Working on the machine

Before all work on machines and systems, apply the 5 safety rules in accordance with DIN VDE 0105-100 (Operation of electrical installations – Part 100: General requirements) in the order listed:

- Disconnect (also ensure that the auxiliary circuits are disconnected).
- Ensure power cannot be switched on again.
- Ensure that everything is de-energized.
- Ground and short-circuit.
- Cover adjacent live parts.

Information

Note the discharge time of the DC link capacitors in the general technical data for the devices. You can only determine the absence of voltage after this time period.

3.6 Installation

Installation work is permitted only when no voltage is present. Obey the 5 safety rules (see [Working on the machine \[▶ 20\]](#)).

WARNING!

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

Handle the devices with care:

- Do not damage any components or change any insulation distances when transporting or handling the devices.
- Avoid mechanical overloads.
- Do not touch any electronic components or contacts.

To protect the devices from overheating, obey the operating conditions described in the technical data and comply with the required minimum clearances for installation.

Protect the devices against falling parts (bits or strands of wire, pieces of metal, etc.) during installation or other work in the control cabinet. Parts with conductive properties may result in a short-circuit inside the devices and device failure as a result.

3.7 Electrical connection

Connection work is permitted only when no voltage is present. Observe the 5 safety rules (see [Working on the machine](#) [▶ 20]).

WARNING!

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

The device and the cables connected to it are not necessarily de-energized when the supply voltage is switched off and all displays have gone out!

Opening the housing, plugging in or unplugging connection terminals, connecting or removing a connecting wiring, and installing or removing accessories are prohibited while the voltage supply is switched on.

The device housing must be closed before you turn on the supply voltage.

If you couple drive controllers in the DC link, make sure that all Quick DC-Link modules are built over with a drive controller after installation or after replacing a device.

Protect the devices against falling parts (bits or strands of wire, pieces of metal, etc.) during installation or other work in the control cabinet. Parts with conductive properties may result in a short-circuit inside the devices and device failure as a result.

Use only copper conductors. For the corresponding conductor cross-sections, consult the standards DIN VDE 0298-4 or EN 60204-1 (Annexes D, G) as well as the relevant terminal specifications in this documentation.

The protection class of the devices is protective grounding (protection class I in accordance with EN 61140). This means that operation is permitted only if the grounding conductor is connected according to requirements.

All protective ground connections are identified by "PE" or the international grounding symbol (IEC 60417, symbol 5019).

The products are not designed for use in a public low-voltage network that supplies residential areas. Radio-frequency interference can be expected if the products are used in this type of network.

3.8 Ensuring traceability

The orderer must ensure traceability of the products using the serial number.

3.9 Decommissioning

In safety-oriented applications, note the mission time $T_M = 20$ years in the safety-relevant key performance indicators.

A drive controller with integrated safety module must be taken out of operation 20 years after the production date. The production date of the drive controller is found on the accompanying nameplate.

For detailed information about using the safety technology, refer to the corresponding manual (see [Detailed information](#) [▶ 519]).

3.10 Disposal

Observe the current national and regional regulations when disposing of the packaging and product! Dispose of the packaging and individual product parts depending on their properties, e.g. as:

- Cardboard
- Electronic waste (printed boards)
- Plastic
- Sheet metal
- Copper
- Aluminum
- Battery

3.11 Firefighting



Electrical voltage! Risk of fatal injury due to electric shock!

There is a risk of fatal injury due to electric shock when using conductive firefighting equipment.

- Use ABC powder or carbon dioxide (CO₂) for firefighting.

4 Security

Security refers to the protection and safety of your components and systems with regard to confidentiality, integrity and availability.

While functional safety technology focuses on the avoidance of systematic or random faults, security technology is based on targeted influences. These influences may be intentional or unintentional with direct or indirect access to equipment.

Security risks

- Incorrect operation, e.g. connection to an incorrect device
- Hardware:
 - Changing the wiring
 - Changing the device configuration, e.g. the DIP switch
 - Disassembly of accessories, e.g. from the Paramodul
- Software:
 - Changing the firmware
 - Changing the device configuration, e.g. via DriveControlSuite, via the Paramodul or using Script mode
 - Changing parameters
- Network structure

Recognizing and avoiding risks

For example, the following tools are available to help you identify risks and avoid tampering.

- Make sure that the device identification is unique:
 - Reference code
 - Communication address(es)
- After establishing the connection, make sure that communication with the desired device has been established.
- Test and log the (re)commissioning.
- Check the security log of the drive controller regularly (see [Security log](#) [▶ 517]).
- Limit access:
 - Physically (close off the control cabinet and electrical operating room)
 - Logically (restrict communication, e.g. by means of a firewall)
- Use sealing tape to detect tampering at the following interfaces:
 - PC, IGB X3A and X3B interfaces
 - Fieldbus interfaces X200 and X201
 - Paramodul with microSD card
- Make sure that the controller runs a plausibility check:
 - Device status
 - Application-specific configuration ID

Planning measures

The requirements from the locally applicable safety and application standards regarding protection against tampering must be observed. The authorization of personnel and the implementation of the necessary protective measures are the responsibility of the operator.

All systems to be protected must be considered individually. Organizational protective measures are supported by technical measures. Technical measures alone are not sufficient.

In the course of planning, you should name and document the measures to be taken.

Such measures include:

- Sensible division of user groups
- Use of appropriate passwords
- Updated network plans

Network plans can be used to ensure that secure networks are permanently separated from public networks and, if necessary, that there is only defined access (e.g. via a firewall or a DMZ).

A regular, e.g. annual, review of the security measures is advisable.

Defense in depth concept

Counter risks with layered security solutions.

In accordance with EN IEC 62443-4-1, the defense-in-depth concept is an approach to defend the system against any kind of attack by applying multiple independent methods.

Features:

- The approach is based on the fundamental idea that any protective measure can be, and probably will be, overcome.
- Attackers have to overcome or bypass each layer without being detected.
- A weakness in one layer can be mitigated by the capabilities of another layer.
- The system's IT security becomes a set of layers within the overall IT network security.
- Each layer should stand alone, should not be based on the same functionality as the other layers and should not have the same failure modes as them.

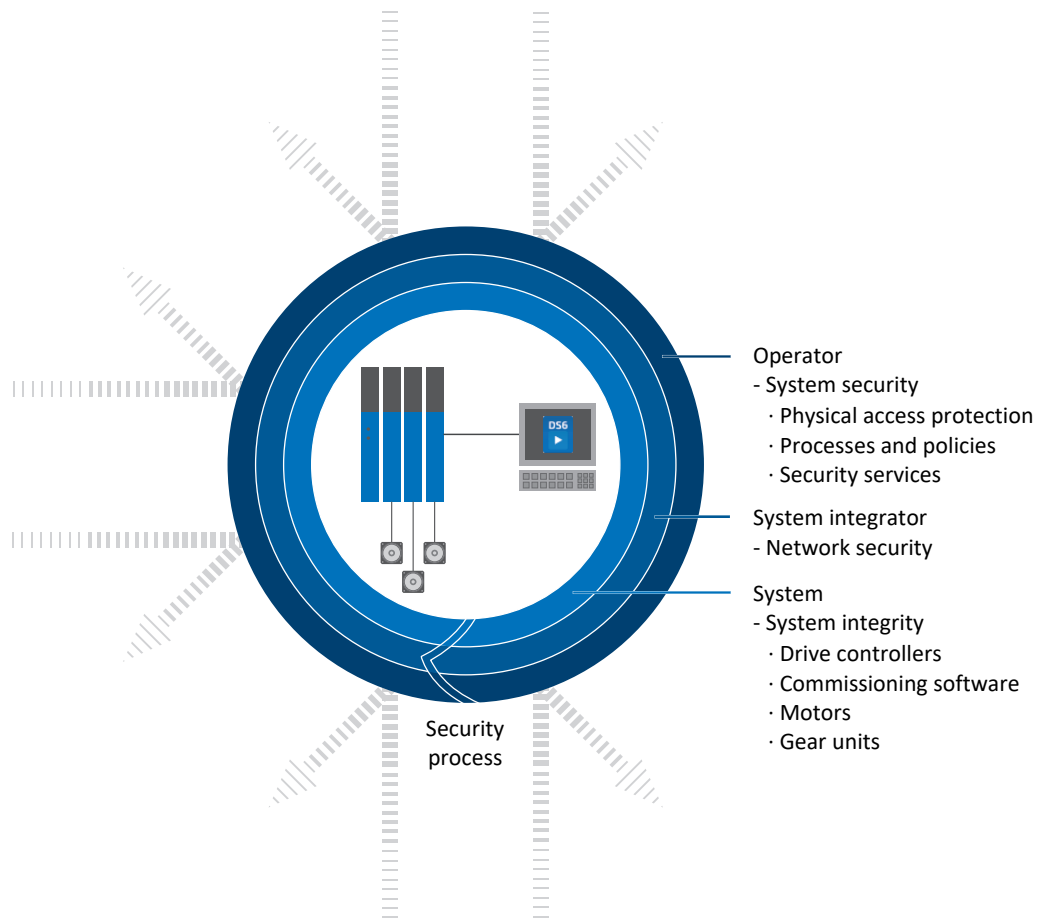


Fig. 1: Defense in depth concept

5 UL-compliant use

This chapter contains relevant information for use under UL conditions (UL – Underwriters Laboratories).

Surrounding air temperature and pollution degree

The maximum surrounding air temperature for UL-compliant operation is 45°C. Use in an environment up to pollution degree 2 is permitted.

Supply grid

All device types supplied with 480 V_{AC} are intended solely for operation with grounded wye sources at 480/277 V_{AC}.

For all device types – with 240 V_{AC} or 480 V_{AC} supply – the supply grid must not deliver a symmetrical short-circuit current above the specification in the following table.

| Size of the drive controller | Max. differential short-circuit current |
|------------------------------|---|
| Size 0 – size 2 | 5000 A |
| Size 3 | 10000 A |

Tab. 3: Short-circuit current rating (SCCR)

Line fuse

Obey the information on the [UL-compliant line fuse of the supplied drive controllers](#) [▶ 147].

Overvoltage protection

In accordance with CSA-C22.2 No. 14-13, the following applies for use in Canada:

Depending on the device type, additional overvoltage protection must be installed in the network upstream of the device and must fulfill the following conditions.

- 1-phase drive controller:
 - Overvoltage category 3
 - Phase-ground = 240 V_{AC} (peak permitted rated surge voltage = 4 kV)
 - Phase-phase (or N) = 240 V_{AC} (peak permitted rated surge voltage = 4 kV)
- 3-phase drive controller:
 - Overvoltage category 3
 - Phase-ground = 277 V_{AC} (peak permitted rated surge voltage = 4 kV)
 - Phase-phase (or N) = 480 V_{AC} (peak permitted rated surge voltage = 6 kV)

Overload capacity

The overload capacity of the power unit depends on the size and clock frequency and – in relation to the nominal current $I_{2N,PU}$ – cannot exceed the following values:

| Size of the drive controller | $f_{PWM,PU} = 4 \text{ kHz}$ | $f_{PWM,PU} = 8 \text{ kHz}$ |
|------------------------------|------------------------------|------------------------------|
| Size 0 – size 2 | 180% for 5 s; 150% for 30 s | 250% for 2 s; 200% for 5 s |
| Size 3 | 200% for 3 s | |

Tab. 4: Overload capacity of the drive controller

Branch circuit protection

Integral solid state short-circuit protection does not provide branch circuit protection (line fuse) upstream of the drive controller. Branch circuit protection must be provided in accordance with the manufacturer instructions, the National Electrical Code, the Canadian Electrical Code, part I, and any additional local codes.

Motor protection

The drive controller has a certified i^2t model of the motor, a computational model for thermal monitoring of the motor. This fulfills the requirements for solid state motor overload protection in accordance with the amendment to UL 508C from May 2013. In order to activate it and start the protective function, set the parameters as follows (deviating from the default values): U10 = 2: Warning and U11 = 1.00 s. This model can be used instead of or in addition to a motor temperature monitoring.

Motor temperature sensor

The drive controller features connections for PTC thermistors (NAT 145°C), KTY temperature sensors (KTY84-130) or Pt temperature sensors (Pt1000). For a proper connection, follow the [terminal description for X2](#) [▶ 162].

Information

STOBER recommends the use of PTC thermistors as thermal winding protection.

Braking resistor

Separate overheat protection is required for an externally mounted braking resistor. The drive controller has an i^2t model, a computational model for thermal monitoring of the braking resistor. This can be used for temperature monitoring of the externally mounted braking resistor. To activate it, parameterize the technical data of the braking resistor in A21, A22 and A23.

Make sure to observe the following output values of the drive controller when selecting the braking resistor (size 0 to 2: X30, size 3: X20):

| Cat. No. | Minimum resistance | Maximum voltage |
|----------|--------------------|---------------------|
| SD6A02 | 100 Ω | 420 V _{DC} |
| SD6A04 | 100 Ω | 830 V _{DC} |
| SD6A06 | 100 Ω | 830 V _{DC} |
| SD6A14 | 47 Ω | 830 V _{DC} |
| SD6A16 | 47 Ω | 830 V _{DC} |
| SD6A24 | 22 Ω | 830 V _{DC} |
| SD6A26 | 22 Ω | 830 V _{DC} |
| SD6A34 | 15 Ω | 830 V _{DC} |
| SD6A36 | 15 Ω | 830 V _{DC} |
| SD6A38 | 15 Ω | 830 V _{DC} |

Terminals

The terminals are labeled accordingly for correct connection. Observe the connection overviews and terminal descriptions for the connection.

Power terminals

Size 0 to 2: Use only copper conductors for a surrounding temperature of 60/75 °C.

Size 3: Use only copper conductors for a surrounding temperature of 75 °C.

24 V supply and fuses

Low-voltage circuits must be supplied by an isolated source with a maximum output voltage that does not exceed 30 V_{DC}.

Fuses for 24 V_{DC} supplies must be approved for DC voltage in accordance with UL 248.

- Use a 1 A fuse (time delay) upstream of relay 1. Follow the [terminal description for X1 \[▶ 161\]](#), pin 1 (NO contact).
- Protect the 24 V_{DC} supply of the control unit with a 10 A fuse (time delay) for size 0 to 2 and with a 4 A fuse (time delay) for size 3. Follow the [terminal description for X11 \[▶ 172\]](#), pin 1 or 2 (+).
- Protect the 24 V_{DC} supply for the brake with a 4 A fuse (time delay). Follow the [terminal description for X6 \[▶ 167\]](#), pin 3 (+) for option ST6 or the [terminal description for X7 \[▶ 168\]](#), pin 1 (+) for option SE6.
- The following applies to the STO safety function via terminal X12 (option ST6): Protect the supply voltage of the status signal with a 3.15 A fuse (time delay). Follow the [terminal description for X12 \[▶ 173\]](#), pin 8 (U_{1status}).
- The following applies to the optional interface extensions with terminal module X16, RI6 or IO6: Protect the 24 V_{DC} supply with a 1 A fuse (time delay). Follow the [terminal description for X101 \[▶ 198\]](#), pin 18 or 19 (+24 V_{DC}).

Tightening torques

Observe the following tightening torques:

| Connection | | Tightening torque |
|--|---|------------------------|
| Size 0 – size 2: Grounding conductor connection on drive controller (ground bolt) | | 4.0 Nm (35 Lb.inch) |
| Size 3: Connecting wiring for X10 and X20 | Conductor cross-sections ≤ 25.0 mm ² | 2.5 Nm (22 Lb.inch) |
| | Conductor cross-sections > 25.0 mm ² | 4.5 Nm (40 Lb.inch) |

Tab. 5: Tightening torques

UL test

Only the risks of electric shock and the risk of fire have been examined during UL acceptance. Functional safety aspects have not been assessed during the UL approval process. These are assessed for STOBER by bodies such as the TÜV SÜD certification service.

6 System design

The SD6 drive controller features a modular interface concept that offers you the variable combination of all interface components (terminals, fieldbus, encoders and safety technology). For the communication between multiple drive controllers, the IGB motion bus isochronic system bus is available for multi-axis applications.

In multi-axis applications with decentralized motion control, we recommend the drive-based application Drive Based. Alternatively, you can implement the application using a CiA 402 interface. You commission the drive-controller using the DriveControlSuite software.

You can also connect multiple SD6 drive controllers in the DC link and thus improve the energy footprint of the entire system. For this purpose, you will need an appropriate Quick DC-Link module for each drive controller.

The drive controllers provide the STO safety function in accordance with EN 61800-5-2.

The following graphic explains the principle system design.

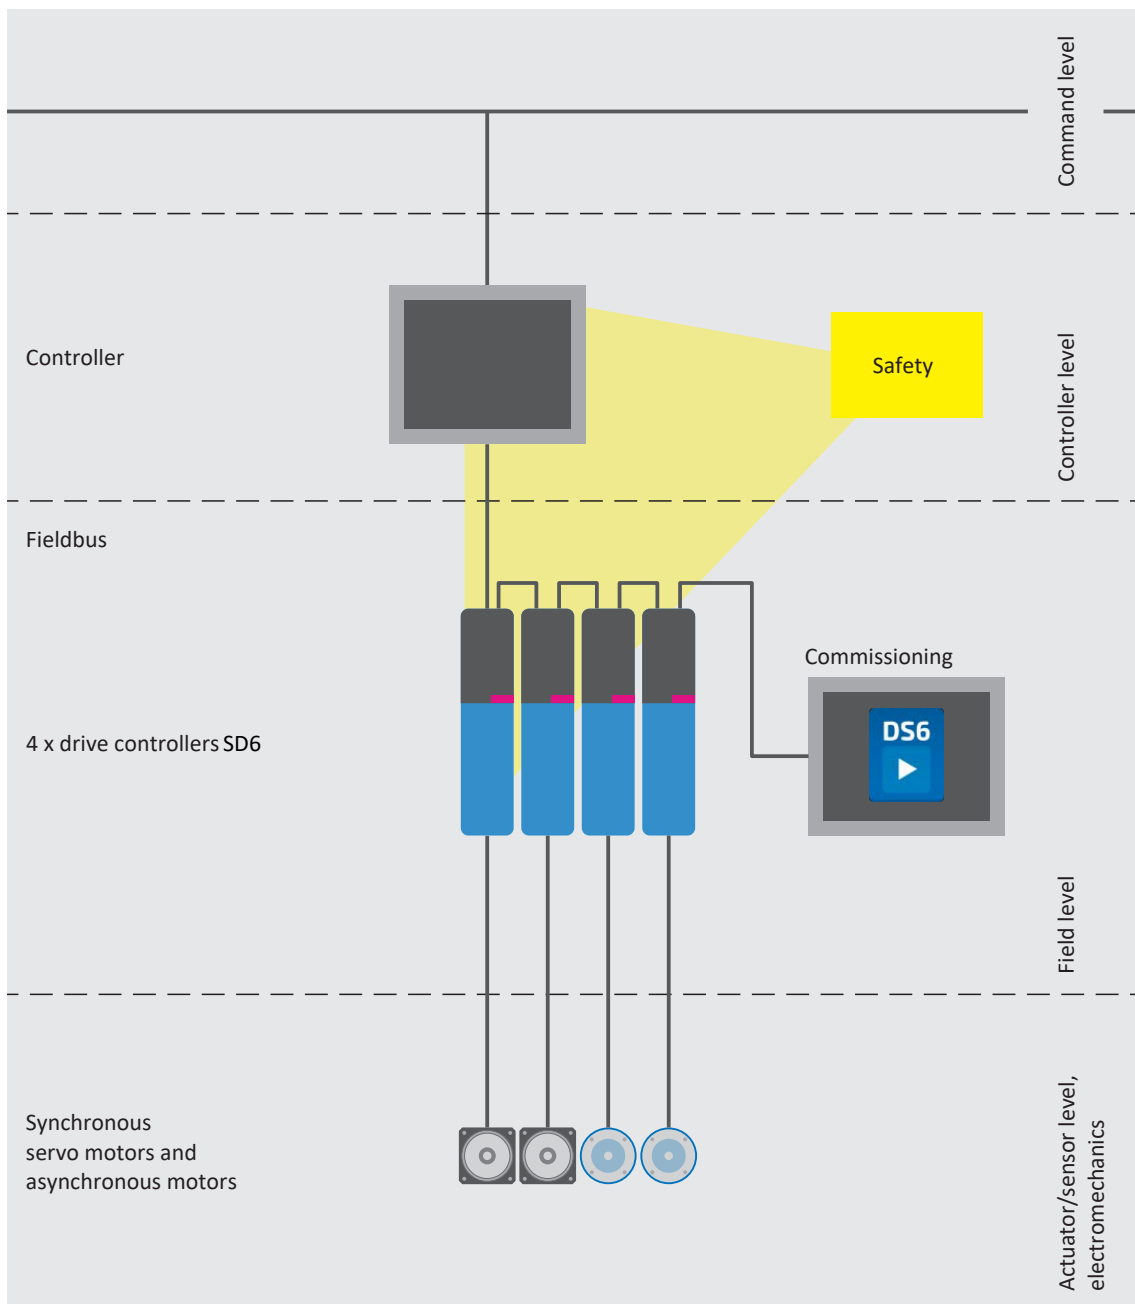


Fig. 2: System overview

6.1 Hardware components

Below you will find an overview of the available hardware components.

6.1.1 Drive controllers

The SD6 drive controller is available in multiple sizes. Various interface options can also be selected.

6.1.1.1 Nameplate

The nameplate is placed on the side of the drive controller.



Fig. 3: SD6A06TEX nameplate

| Designation | Value in example | Meaning |
|------------------|---|--|
| Type | SD6A06TEX | Production information |
| Date | 2030 (year/calendar week) | |
| S/N | 7002418 | |
| Input voltage | 3 × 400 V _{AC} 50 Hz UL: 3 × 480 V _{AC} 50–60 Hz | Input voltage |
| Input current | 4.0 A | Input current |
| Output data | 0 to 460 V _{AC} 0 to 700 Hz @8 kHz: 3.4 A | Output voltage Output frequency Output current for 8 kHz clock frequency |
| Protection class | IP20 | Protection class |

Tab. 6: Meaning of the specifications on the nameplate

| |
|--------------------|
| Information |
|--------------------|

UL and cUL certified devices with the corresponding test symbol meet the requirements of standards UL 508C and UL 840.

6.1.1.2 Type designation

| | | | | | | | |
|-----------|----------|----------|----------|----------|----------|----------|----------|
| SD | 6 | A | 0 | 6 | T | E | X |
|-----------|----------|----------|----------|----------|----------|----------|----------|

Tab. 7: Example code for type designation

| Code | Designation | Design |
|------------------|----------------------|---|
| SD | Series | |
| 6 | Generation | Generation 6 |
| A, B | Version | |
| 0 – 3 | Size | |
| 6 (0 – 9) | Power output stage | Power output stage within the size |
| T | Safety module | ST6: STO via terminals |
| E | | SE6: Extended safety technology using terminals |
| N | Communication module | Empty |
| E | | EC6: EtherCAT |
| C | | CA6: CANopen |
| P | | PN6: PROFINET |
| N | Terminal module | Empty |
| X | | XI6: Extended |
| R | | RI6: Resolver |
| I | | IO6: Standard |

Tab. 8: Meaning of the example code

6.1.1.3 Material variant

On the side of the drive controller above the nameplate, there is another sticker with the material variant (MV) and serial number (SN).



Fig. 4: Sticker with MV and serial number

| Designation | Value in example | Meaning |
|-------------|-------------------|---|
| MV | MV0000012345 | MV number |
| SN | 6001192064 | Serial number |
| — | SD6A06TEX | Device type according to type designation |
| — | 1000914812/001100 | Order number/order item |

Tab. 9: Meaning of the specifications on the sticker

6.1.1.4 Sizes

| Type | Size |
|--------|--------|
| SD6A02 | Size 0 |
| SD6A04 | Size 0 |
| SD6A06 | Size 0 |
| SD6A14 | Size 1 |
| SD6A16 | Size 1 |
| SD6A24 | Size 2 |
| SD6A26 | Size 2 |
| SD6A34 | Size 3 |
| SD6A36 | Size 3 |
| SD6A38 | Size 3 |

Tab. 10: Available SD6 types and sizes



SD6 in sizes 0, 1, 2 and 3

6.1.2 Operating motors, encoders and brakes

You can use the SD6 drive controller to operate synchronous servo motors (such as the EZ series), asynchronous motors, torque motors or linear motors.

Evaluation options for feedback are available at the X4 connection for the following encoder models:

- EnDat 2.1/2.2 digital encoders
- SSI encoders
- Differential HTL and differential TTL incremental encoder

The following additional encoder models can be connected using optional terminal modules:

- Resolver
- EnDat 2.1 sin/cos encoders
- Sin/cos encoders
- Single-ended HTL, single-ended TTL incremental encoder
- Single-ended HTL, single-ended TTL pulse/direction interface

For the commutation finding process for linear motors without an absolute measuring system, Hall sensor signals can be connected using the optionally available LA6 adapter box.

All device types of the SD6 drive controller feature connections for PTC thermistors, KTY or Pt1000 temperature sensors and can control a 24 V_{DC} brake as standard.

6.1.3 Accessories

You can find information about the available accessories in the following chapters.

6.1.3.1 Safety technology

The safety modules are used to realize the STO safety function. They prevent the generation of a rotating magnetic field in the power unit of the drive controller. For an external requirement or in the event of error, the safety module switches the drive controller to the STO state. Different human-machine interfaces and additional safety functions are available depending on the selected design of the accessories.

Information

The drive controller is delivered with the ST6 safety module in the standard design. If you want a drive controller with extended safety technology, you must order this option together with the drive controller. The safety modules are an integrated part of the drive controllers and must not be modified.

ST6 safety module – STO using terminals

Included in the standard version.



ID No. 56431

Accessory for the use of the Safe Torque Off safety function (STO) in safety-relevant applications (PL e, SIL 3) in accordance with EN ISO 13849-1 and EN 61800-5-2. Connection to a higher-level safety circuit via terminal X12.

SE6 safety module – Extended safety technology using terminals



ID No. 56432

Optional accessory for use in safety-related applications up to PL e, SIL 3 in accordance with EN ISO 13849-1 and EN 61800-5-2. In addition to the basic Safe Torque Off (STO) safety function, SE6 provides other safety functions specified in EN 61800-5-2. In addition to the Safe Stop 1 (SS1) and Safe Stop 2 (SS2) safe stop functions, they include Safely-Limited Speed (SLS), Safe Brake Control (SBC), Safe Direction (SDI) and Safely-Limited Increment (SLI). The normative safety functions are supplemented by practical additional functions such as Safe Brake Test (SBT). Connection to the higher-level safety circuit using terminals X14 and X15.

X50 adapter cable (SE6 option)



ID No. 56434

Adapter cable for the X50 encoder interface of the SE6 safety module with flying leads, length: 1.5 m.

For detailed information about using the safety technology, refer to the corresponding manual (see [Detailed information \[▶ 519\]](#)).

6.1.3.2 Communication

The SD6 drive controller has two interfaces for IGB communication on the top of the device as standard. The communication module is installed in the shaft at the top and it is used to connect the drive controller to the fieldbus system.

The following communication modules are available:

- EC6 for the EtherCAT connection
- CA6 for the CANopen connection
- PN6 for the PROFINET connection

IGB connecting cable



Cable for connecting the X3A or X3B interface for IGB, CAT5e, magenta.

The following designs are available:

ID No. 56489: 0.4 m.

ID No. 56490: 2 m.

PC connecting cable



ID No. 49857

Cable for connecting the X3A or X3B interface with the PC, CAT5e, blue, length: 5 m.


USB 2.0 Ethernet adapter



ID No. 49940

Adapter for connecting Ethernet to a USB port.

EC6 communication module

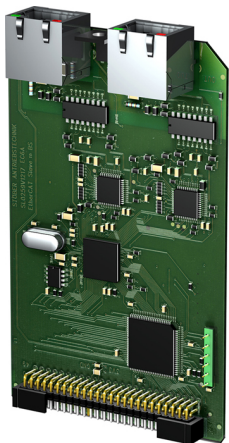

ID No. 138425

Communication module for the EtherCAT connection.

EtherCAT cables




Ethernet patch cable, CAT5e, yellow.

The following designs are available:

ID No. 49313: Length approx. 0.25 m.

ID No. 49314: Length approx. 0.5 m.


CA6 communication module

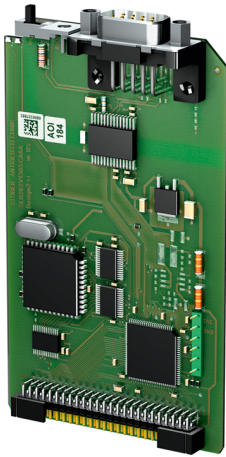

ID No. 138427

Communication module for the CANopen connection.

PN6 communication module

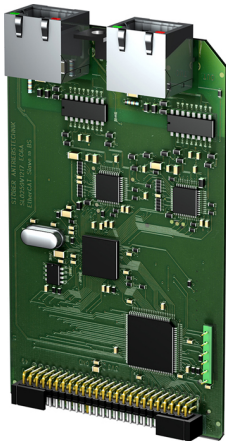


ID No. 138426

Communication module for the PROFINET connection.

For detailed information about the fieldbus connection, refer to the corresponding manual (see [Detailed information \[▶ 519\]](#)).

6.1.3.3 Terminal module

X16 terminal module

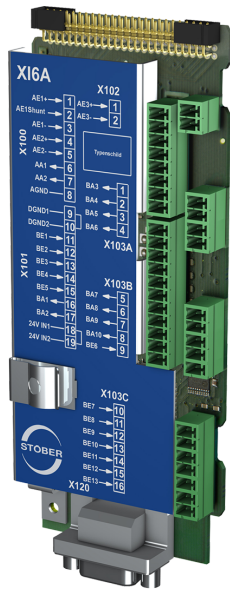

ID no. 138421

Terminal module for connecting analog and digital signals as well as encoders.


Inputs and outputs:

- 13 digital inputs ($24 V_{DC}$)
- 10 digital outputs ($24 V_{DC}$)
- 3 analog inputs ($\pm 10 V_{DC}$, $1 \times 0 - 20 \text{ mA}$, 16 bits)
- 2 analog outputs ($\pm 10 V_{DC}$, 12 bits)

Supported encoders and interfaces:

- SSI encoder (evaluation and simulation)
- Differential TTL incremental encoder (evaluation and simulation)
- HTL incremental encoder, single-ended (evaluation and simulation)
- Differential TTL pulse/direction interface (evaluation and simulation)
- HTL pulse/direction interface, single-ended (evaluation and simulation)

RI6 terminal module

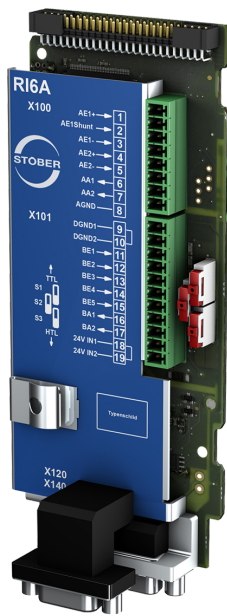

ID no. 138422

Terminal module for connecting analog and digital signals as well as encoders.

Inputs and outputs:

- 5 digital inputs ($24 V_{DC}$)
- 2 digital outputs ($24 V_{DC}$)
- 2 analog inputs ($\pm 10 V_{DC}$, $1 \times 0 - 20 \text{ mA}$, 16 bits)
- 2 analog outputs ($\pm 10 V_{DC}$, $\pm 20 \text{ mA}$, 12 bits)

Supported encoders and interfaces:

- Resolver (evaluation)
- EnDat 2.1 sin/cos encoder (evaluation)
- EnDat 2.1/2.2 digital encoder (evaluation)
- Sin/cos encoder (evaluation)
- SSI encoder (simulation and evaluation)
- Differential TTL incremental encoder (evaluation and simulation)
- TTL incremental encoder, single-ended (evaluation)
- HTL incremental encoder, single-ended (evaluation and simulation)
- Differential TTL pulse/direction interface (evaluation and simulation)
- TTL pulse/direction interface, single-ended (evaluation)
- HTL pulse/direction interface, single-ended (evaluation and simulation)

Information

For connecting con.23 resolver cables with a 9-pin D-sub connector, such as the standard design for ED/EK synchronous servo motors, you must use interface adapter AP6A00 (ID No. 56498) or AP6A01 (ID No. 56522, with motor temperature sensor leads), available separately.

Information

For connecting EnDat 2.1 sin/cos cables with a 15-pin D-sub connector to an integrated motor temperature sensor, you must use the AP6A02 interface adapter (ID No. 56523), available separately, to lead out the temperature sensor cores.

AP6 interface adapters



The following variants are available:

AP6A00

ID No. 56498

Adapter X140 resolver, 9/15-pin.

Adapters for connecting resolver cables with a 9-pin D-sub connector to the X140 encoder interface of the RI6 terminal module.

AP6A01

ID No. 56522

Adapter X140 resolver, 9/15-pin with cores of the motor temperature sensor led out at the side (core length: approx. 11 cm).

Adapters for connecting resolver cables with a 9-pin D-sub connector to the X140 encoder interface of the RI6 terminal module.

AP6A02

ID No. 56523

Adapter X140 EnDat 2.1 sin/cos, 15/15-pin with cores of the motor temperature sensor led out at the side (core length: approx. 11 cm).

Adapters for connecting EnDat 2.1 sin/cos cables with a 15-pin D-sub connector to the X140 encoder interface of the RI6 terminal module.

IO6 terminal module



ID no. 138420

Terminal module for connecting analog and digital signals as well as encoders.

Inputs and outputs:

- 5 digital inputs ($24 V_{DC}$)
- 2 digital outputs ($24 V_{DC}$)
- 2 analog inputs ($\pm 10 V_{DC}$, $1 \times 0 - 20 \text{ mA}$, 12 bits)
- 2 analog outputs ($\pm 10 V_{DC}$, $\pm 20 \text{ mA}$, 12 bits)

Supported encoders and interfaces:

- HTL incremental encoder, single-ended (evaluation and simulation)
- HTL pulse/direction interface, single-ended (evaluation and simulation)


6.1.3.4 DC link connection

If you want to connect SD6 drive controllers in the DC link group, you will need Quick DC-Link modules of type DL6A.

You receive the DL6A rear section modules in different designs for a horizontal connection, suitable for the size of the drive controller.

The quick fastening clamps for attaching the copper rails and an insulation connection piece are contained in the scope of delivery. The copper rails are not included in the scope of delivery. These must have a cross-section of 5 x 12 mm. Insulation end sections are available separately.


Quick DC-Link DL6A – rear section module for drive controller

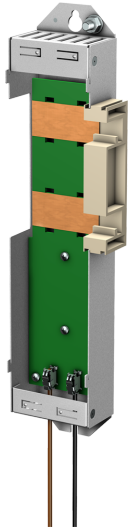

The following designs are available:

- DL6A0
ID No. 56440
Rear section module for size 0 drive controller.
- DL6A1
ID No. 56441
Rear section module for size 1 drive controller.
- DL6A2
ID No. 56442
Rear section module for size 2 drive controller.
- DL6A3
ID No. 56443
Rear section module for size 3 drive controller.

Quick DC-Link DL6A – insulation end section

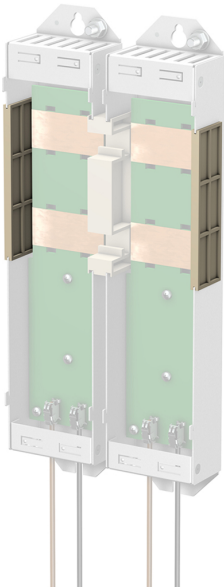

- ID No. 56494
Insulation end sections for the left and right termination of the group, 2 pcs.

6.1.3.5 Braking resistor

STOBER offers braking resistors in different sizes and performance classes.

For more detailed information on this, refer to the technical data (see [Braking resistor](#) [▶ 87]).

6.1.3.6 Choke

STOBER offers various chokes corresponding to your application.

For more detailed information, refer to the technical data (see [Choke](#) [▶ 94]).

6.1.3.7 EMC shield plate

You can use the EM6A EMC shield plate to connect the cable shield of the power cable. Two different designs are available.

EM6A0 EMC shield plate



ID No. 56459


EMC shield plate for SB6 and SD6 series drive controllers up to size 2.

Accessory part for shield connection of the power cable.

Can be attached to the drive controller housing.

Including shield connection terminal.

EM6A3 EMC shield plate

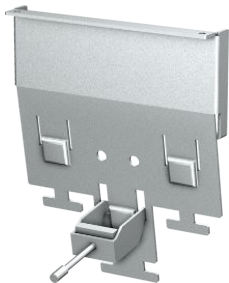

ID No. 56521

EMC shield plate for MDS 5000, SDS 5000 and SD6 series drive controllers up to size 3.

Accessory part for shield connection of the power cable.

Can be attached to the drive controller housing.

Including shield connection terminal.

If necessary, you can also connect the cable shield of the braking resistor and DC link connection to the shield plate.

6.1.3.8 Encoder adapter box

LA6A00 encoder adapter box



ID No. 56510

Interface adapter for differential TTL incremental signals and single-ended TTL Hall sensor signals.

The adapter converts and transmits TTL signals from synchronous linear motors to the SD6 drive controller. A variable, internal interface converts the input signals appropriately for the STOBER standard interfaces.

X120 TTL connecting cable



ID No. 49482

Cable for coupling the X120 TTL interface on the RI6 or XI6 terminal module with the X301 interface on the LA6 adapter box, length: 0.3 m.

LA6 / AX 5000 connecting cable



Cable for connecting the X4 connection on the SD6 drive controller to X300 on the LA6 adapter box in order to transmit incremental encoder signals.

The following designs are available:

ID No. 45405: 0.5 m.

ID No. 45386: 2.5 m.

6.1.3.9 Encoder battery module

Absolute Encoder Support AES



ID No. 55452

Battery module for buffering the supply voltage when using the EnDat 2.2 digital inductive encoder with battery-buffered multi-turn stage, for example EBI 1135 or EBI 135.

A battery is included.

Information

Note that a 15-pin extension cable between the socket and the AES may be necessary for the connection to the drive controller due to limited space.

A commercially available shielded extension cable with a 15-pin D-sub connector and a length of ≤ 1 m can be used between the socket and the AES.

AES replacement battery



ID No. 55453

Replacement battery for AES battery module.

6.1.3.10 Removable data storage

Paramodul removable data storage

Included in the standard version.



ID No. 56403

The plug-in Paramodul with integrated microSD card (from 512 MB, industrial type) is available as a storage medium.

6.2 Software components

Various software components are available for commissioning your drive system and implementing your application.

6.2.1 Project configuration and parameterization

For project configuration and parameterization, the drive controller can be addressed using the DriveControlSuite commissioning software (DS6). The program guides you step by step through the complete project configuration and parameterization process using wizards.

6.2.2 Applications

A drive-based application is recommended for the decentralized motion control of sophisticated machines.

The drive-based application package from STOBER is the right choice wherever universal and flexible solutions are needed. The Drive Based Synchronous application provides drive-based motion control for synchronous operation, positioning, velocity and torque/force with the PLCopen Motion Control command set. These standard commands have been combined into operating modes for different application cases and supplemented with additional functions such as motion block linking or cams. For the command operating mode, all properties of the movements are specified directly by the controller. The properties of the movements in the drive are predefined in the motion block operating mode so that only a start signal is necessary to perform the movement. Linking can be used to define complete motion sequences.

In addition, the CiA 402 application is also available, which includes both the controller-based and drive-based operating modes (csp, csv, cst, ip, pp, vl, pv, pt).

Furthermore, programming based on IEC 61131-3 with CFC can be used to create new applications or expand existing ones.

For detailed information about the available applications, refer to the corresponding manual (see [Detailed information](#) [▶ 519]).

7 Technical data

Technical data for the drive controllers and accessories can be found in the following chapters.

7.1 Drive controllers

The following chapters contain specifications for the electrical data, dimensions and weight of the drive controller.

7.1.1 General technical data

The following information applies to all device types.

| Device features | |
|--|--|
| Protection class of the device | IP20 |
| Protection class of the installation space | At least IP54 |
| Protection class | Protection class I in accordance with EN 61140 |
| Radio interference suppression | Integrated line filter in accordance with EN 61800-3, interference emission class C3 |
| Overvoltage category | III in accordance with EN 61800-5-1 |
| Marks and test symbols | CE, cULus, RoHS |

Tab. 11: Device features

| Transport and storage conditions | |
|---|---|
| Storage/ transport temperature | -20 °C to +70 °C Maximum change: 20 K/h |
| Relative humidity | Maximum relative humidity 85%, non-condensing |
| Vibration (transport) in accordance with EN 60068-2-6 | 5 Hz ≤ f ≤ 9 Hz: 3.5 mm 9 Hz ≤ f ≤ 200 Hz: 10 m/s ² 200 Hz ≤ f ≤ 500 Hz: 15 m/s ² |
| Fall height for free fall ¹ Weight < 100 kg in accordance with EN 61800-2 (or IEC 60721-3-2, class 2M4) | 0.25 m |
| Shock testing in accordance with EN 60068-2-27 | Pulse shape: Half-sine Acceleration: 5 g Shock duration: 30 ms Number of shocks: 3 per axis |

Tab. 12: Transport and storage conditions

¹ Only valid for components in their original packaging.

| Operating conditions | |
|---|--|
| Surrounding temperature during operation | 0 °C to 45 °C with nominal data 45 °C to 55 °C with derating –2.5% / K |
| Relative humidity | Maximum relative humidity 85%, non-condensing |
| Installation altitude | 0 m to 1000 m above sea level without restrictions 1000 m to 2000 m above sea level with –1.5%/100 m derating |
| Pollution degree | Pollution degree 2 in accordance with EN 50178 |
| Ventilation | Installed fan |
| Vibration (operation) in accordance with EN 60068-2-6 | 5 Hz ≤ f ≤ 9 Hz: 0.35 mm 9 Hz ≤ f ≤ 200 Hz: 1 m/s ² |

Tab. 13: Operating conditions

| Discharge times | |
|---------------------------|-------|
| Self-discharge of DC link | 6 min |

Tab. 14: Discharge times of the DC link circuit

7.1.2 Electrical data

The electrical data of the available sizes as well as the properties of the brake chopper can be found in the following chapters.

Information

For the time span between energizing two devices, note that:

- Direct, repeat activation of the supply voltage is possible for cyclical power-on/power-off operation.

Information

The STO safety function is available for safe stopping as an alternative to continuous, cyclical power-on/power-off operation.

For an explanation of the formula symbols used, see [Symbols in formulas \[► 521\]](#).

7.1.2.1 Control unit

| Electrical data | All types |
|-----------------|------------------------------|
| U_{1CU} | 24 V _{DC} +20%/–15% |
| I_{1maxCU} | 1.5 A |

Tab. 15: Control unit electrical data

7.1.2.2 Power unit: Size 0

| Electrical data | SD6A02 | SD6A04 | SD6A06 |
|-----------------|---|---|-------------|
| U_{1PU} | $1 \times 230 V_{AC}$ +20% / -40%, 50/60 Hz | $3 \times 400 V_{AC}$ +32% / -50%, 50/60 Hz; $3 \times 480 V_{AC}$ +10% / -58%, 50/60 Hz | |
| f_{2PU} | 0 – 700 Hz | | |
| U_{2PU} | 0 – max. U_{1PU} | | |
| $U_{2PU,ZK}$ | $\sqrt{2} \times U_{1PU}$ | | |
| C_{PU} | 340 μF | 135 μF | 135 μF |
| $C_{N,PU}$ | 1620 μF | 540 μF | 540 μF |

Tab. 16: SD6 electrical data, size 0

Nominal currents up to +45 °C (in the control cabinet)

| Electrical data | SD6A02 | SD6A04 | SD6A06 |
|-----------------|-----------------------------|--------|--------|
| $f_{PWM,PU}$ | 4 kHz | | |
| $I_{1N,PU}$ | 8.3 A | 2.8 A | 5.4 A |
| $I_{2N,PU}$ | 4 A | 2.3 A | 4.5 A |
| I_{2maxPU} | 180% for 5 s; 150% for 30 s | | |

Tab. 17: SD6 electrical data, size 0, for 4 kHz clock frequency

| Electrical data | SD6A02 | SD6A04 | SD6A06 |
|-----------------|----------------------------|--------|--------|
| $f_{PWM,PU}$ | 8 kHz | | |
| $I_{1N,PU}$ | 6 A | 2.2 A | 4 A |
| $I_{2N,PU}$ | 3 A | 1.7 A | 3.4 A |
| I_{2maxPU} | 250% for 2 s; 200% for 5 s | | |

Tab. 18: SD6 electrical data, size 0, for 8 kHz clock frequency

| Electrical data | SD6A02 | SD6A04 | SD6A06 |
|-----------------|--------------------|--------------------|--------|
| U_{onCH} | 400 – 420 V_{DC} | 780 – 800 V_{DC} | |
| U_{offCH} | 360 – 380 V_{DC} | 740 – 760 V_{DC} | |
| R_{2minRB} | 100 Ω | | |
| P_{maxRB} | 1.8 kW | 6.4 kW | |
| P_{effRB} | 1.0 kW | 2.9 kW | |

Tab. 19: Brake chopper electrical data, size 0

7.1.2.3 Power unit: Size 1

| Electrical data | SD6A14 | SD6A16 |
|-----------------|---|---------|
| U_{1PU} | 3 × 400 V _{AC} , +32% / -50%, 50/60 Hz; 3 × 480 V _{AC} , +10% / -58%, 50/60 Hz | |
| f_{2PU} | 0 – 700 Hz | |
| U_{2PU} | 0 – max. U_{1PU} | |
| $U_{2PU,ZK}$ | $\sqrt{2} \times U_{1PU}$ | |
| C_{PU} | 470 μF | 560 μF |
| $C_{N,PU}$ | 1400 μF | 1400 μF |

Tab. 20: SD6 electrical data, size 1

Nominal currents up to +45 °C (in the control cabinet)

| Electrical data | SD6A14 | SD6A16 |
|-----------------|-----------------------------|--------|
| $f_{PWM,PU}$ | 4 kHz | |
| $I_{1N,PU}$ | 12 A | 19.2 A |
| $I_{2N,PU}$ | 10 A | 16 A |
| I_{2maxPU} | 180% for 5 s; 150% for 30 s | |

Tab. 21: SD6 electrical data, size 1, for 4 kHz clock frequency

| Electrical data | SD6A14 | SD6A16 |
|-----------------|----------------------------|--------|
| $f_{PWM,PU}$ | 8 kHz | |
| $I_{1N,PU}$ | 9.3 A | 15.8 A |
| $I_{2N,PU}$ | 6 A | 10 A |
| I_{2maxPU} | 250% for 2 s; 200% for 5 s | |

Tab. 22: SD6 electrical data, size 1, for 8 kHz clock frequency

| Electrical data | SD6A14 | SD6A16 |
|-----------------|---------------------------|--------|
| U_{onCH} | 780 – 800 V _{DC} | |
| U_{offCH} | 740 – 760 V _{DC} | |
| R_{2minRB} | 47 Ω | |
| P_{maxRB} | 13.6 kW | |
| P_{effRB} | 6.2 kW | |

Tab. 23: Brake chopper electrical data, size 1

7.1.2.4 Power unit: Size 2

| Electrical data | SD6A24 | SD6A26 |
|-----------------|---|---------|
| U_{1PU} | 3 × 400 V _{AC} , +32% / -50%, 50/60 Hz; 3 × 480 V _{AC} , +10% / -58%, 50/60 Hz | |
| f_{2PU} | 0 – 700 Hz | |
| U_{2PU} | 0 – max. U_{1PU} | |
| $U_{2PU,ZK}$ | $\sqrt{2} \times U_{1PU}$ | |
| C_{PU} | 680 μF | 1000 μF |
| $C_{N,PU}$ | 1400 μF | 1400 μF |

Tab. 24: SD6 electrical data, size 2

Nominal currents up to +45 °C (in the control cabinet)

| Electrical data | SD6A24 | SD6A26 |
|-----------------|-----------------------------|--------|
| $f_{PWM,PU}$ | 4 kHz | |
| $I_{1N,PU}$ | 26.4 A | 38.4 A |
| $I_{2N,PU}$ | 22 A | 32 A |
| I_{2maxPU} | 180% for 5 s; 150% for 30 s | |

Tab. 25: SD6 electrical data, size 2, for 4 kHz clock frequency

| Electrical data | SD6A24 | SD6A26 |
|-----------------|----------------------------|--------|
| $f_{PWM,PU}$ | 8 kHz | |
| $I_{1N,PU}$ | 24.5 A | 32.6 A |
| $I_{2N,PU}$ | 14 A | 20 A |
| I_{2maxPU} | 250% for 2 s; 200% for 5 s | |

Tab. 26: SD6 electrical data, size 2, for 8 kHz clock frequency

| Electrical data | SD6A24 | SD6A26 |
|-----------------|---------------------------|--------|
| U_{onCH} | 780 – 800 V _{DC} | |
| U_{offCH} | 740 – 760 V _{DC} | |
| R_{2minRB} | 22 Ω | |
| P_{maxRB} | 29.1 kW | |
| P_{effRB} | 13.2 kW | |

Tab. 27: Brake chopper electrical data, size 2

7.1.2.5 Power unit: Size 3

| Electrical data | SD6A34 | SD6A36 | SD6A38 |
|-----------------|---|---------|---------|
| U_{1PU} | 3 × 400 V _{AC} , +32% / -50%, 50/60 Hz; 3 × 480 V _{AC} , +10% / -58%, 50/60 Hz | | |
| f_{2PU} | 0 – 700 Hz | | |
| U_{2PU} | 0 – max. U_{1PU} | | |
| $U_{2PU,ZK}$ | $\sqrt{2} \times U_{1PU}$ | | |
| C_{PU} | 430 μF | 900 μF | 900 μF |
| $C_{N,PU}$ | 5100 μF | 5100 μF | 5100 μF |

Tab. 28: SD6 electrical data, size 3

Nominal currents up to +45 °C (in the control cabinet)

| Electrical data | SD6A34 | SD6A36 | SD6A38 |
|-----------------|---|--------|-------------------|
| $f_{PWM,PU}$ | 4 kHz | | |
| $I_{1N,PU}$ | 45.3 A | 76 A | 76 A |
| $I_{2N,PU}$ | 44 A | 70 A | 85 A ² |
| I_{2maxPU} | 180% for 5 s; 150% for 30 s UL: 200% for 3 s | | |

Tab. 29: SD6 electrical data, size 3, for 4 kHz clock frequency

| Electrical data | SD6A34 | SD6A36 | SD6A38 |
|-----------------|--|--------|--------|
| $f_{PWM,PU}$ | 8 kHz | | |
| $I_{1N,PU}$ | 37 A | 62 A | 76 A |
| $I_{2N,PU}$ | 30 A | 50 A | 60 A |
| I_{2maxPU} | 250% for 2 s; 200% for 5 s UL: 200% for 3 s | | |

Tab. 30: SD6 electrical data, size 3, for 8 kHz clock frequency

| Electrical data | SD6A34 | SD6A36 | SD6A38 |
|-----------------|---|--------|--------|
| U_{onCH} | 780 – 800 V _{DC} | | |
| U_{offCH} | 740 – 760 V _{DC} | | |
| R_{intRB} | 30 Ω (PTC resistance; 100 W; max. 1 kW for 1 s; τ = 40 s) | | |
| R_{2minRB} | 15 Ω | | |
| P_{maxRB} | 42 kW | | |
| P_{effRB} | 19.4 kW | | |

Tab. 31: Brake chopper electrical data, size 3

| |
|--------------------|
| Information |
|--------------------|

Be aware that the internal braking resistor is not active automatically and must be parameterized in DriveControlSuite.

²Specification applies to the default value of the field weakening voltage limit: B92 = 80%.

7.1.2.6 X1: Enable and relay

You enable the power unit of the drive controller using the enable signal. The function of relay 1 can be parameterized using parameter F75.

| Electrical data | | All types |
|-----------------------------|---------|---|
| Internal device update rate | | Cycle time parameterized in A150 of the application: $t_{\min} = 1 \text{ ms}$ |
| $U_{2\max}$ | Relay 1 | 30 V |
| $I_{2\max}$ | | 1.0 A |
| Life span | | Mechanical min. 5,000,000 switching cycles; at 24 V _{DC} /1 A (ohm. load): 300,000 switching cycles |
| High level | Enable | 12 – 30 V _{DC} |
| Low level | | 0 – 8 V _{DC} |
| $I_{1\max}$ | | 16 mA |

Tab. 32: X1 electrical data, enable and relay

7.1.2.7 Power loss data in accordance with EN 61800-9-2

| Type | Nominal current $I_{2N,PU}$ | Apparent power | Absolute losses $P_{V,CU}^3$ | Operating points ⁴ | | | | | | | | IE class ⁵ | Comparison ⁶ |
|--------|--------------------------------|----------------|---------------------------------|-------------------------------|--------|---------|---------|---------|----------|---------|----------|-----------------------|-------------------------|
| | | | | (0/25) | (0/50) | (0/100) | (50/25) | (50/50) | (50/100) | (90/50) | (90/100) | | |
| | | | | Relative losses | | | | | | | | | |
| | | | | [%] | | | | | | | | | |
| | [A] | [kVA] | [W] | | | | | | | | | | |
| SD6A02 | 4 | 0.9 | 10 | 5.01 | 5.07 | 5.68 | 5.20 | 5.37 | 6.30 | 5.88 | 7.43 | IE2 | |
| SD6A04 | 2.3 | 1.6 | 10 | 2.98 | 3.13 | 3.49 | 3.02 | 3.22 | 3.71 | 3.36 | 4.09 | IE2 | |
| SD6A06 | 4.5 | 3.1 | 12 | 1.71 | 1.86 | 2.24 | 1.75 | 1.97 | 2.51 | 2.16 | 3.04 | IE2 | |
| SD6A14 | 10 | 6.9 | 12 | 1.38 | 1.54 | 1.93 | 1.43 | 1.64 | 2.17 | 1.80 | 2.57 | IE2 | |
| SD6A16 | 16 | 11.1 | 12 | 0.95 | 1.12 | 1.66 | 0.99 | 1.23 | 1.98 | 1.41 | 2.52 | IE2 | |
| SD6A24 | 22 | 15.2 | 15 | 0.80 | 0.97 | 1.49 | 0.84 | 1.06 | 1.75 | 1.21 | 2.19 | IE2 | |
| SD6A26 | 32 | 22.2 | 15 | 0.70 | 0.87 | 1.40 | 0.74 | 0.97 | 1.67 | 1.11 | 2.10 | IE2 | |
| SD6A34 | 44 | 30.5 | 35 | 0.61 | 0.76 | 1.21 | 0.68 | 0.90 | 1.53 | 1.06 | 1.96 | IE2 | |
| SD6A36 | 70 | 48.5 | 35 | 0.53 | 0.69 | 1.18 | 0.59 | 0.82 | 1.49 | 0.97 | 1.89 | IE2 | |
| SD6A38 | 85 | 58.9 | 35 | 0.47 | 0.64 | 1.18 | 0.54 | 0.78 | 1.50 | 0.94 | 1.94 | IE2 | |

³ Absolute losses for a power unit that is switched off

⁴ Operating points for relative motor stator frequency in % and relative torque current in %

⁵ IE class in accordance with EN 61800-9-2

⁶ Comparison of the losses for the reference related to IE2 in the nominal point (90, 100)

| Type | Nominal current $I_{2N,PU}$ | Apparent power | Absolute losses $P_{V,CU}^3$ | Operating points ⁴ | | | | | | | | IE class ⁵ | Comparison ⁶ |
|--------|--------------------------------|----------------|---------------------------------|-------------------------------|--------|---------|---------|---------|----------|---------|----------|-----------------------|-------------------------|
| | | | | (0/25) | (0/50) | (0/100) | (50/25) | (50/50) | (50/100) | (90/50) | (90/100) | | |
| | | | | Absolute losses P_V | | | | | | | | | |
| | | | [A] | [kVA] | [W] | [W] | | | | | | | [%] |
| SD6A02 | 4 | 0.9 | 10 | 45.1 | 45.6 | 51.1 | 46.8 | 48.3 | 56.7 | 52.9 | 66.9 | IE2 | 51.8 |
| SD6A04 | 2.3 | 1.6 | 10 | 47.7 | 50.1 | 55.8 | 48.3 | 51.5 | 59.3 | 53.8 | 65.4 | IE2 | 40.2 |
| SD6A06 | 4.5 | 3.1 | 12 | 52.9 | 57.6 | 69.3 | 54.4 | 61.0 | 77.9 | 67.1 | 94.1 | IE2 | 39.6 |
| SD6A14 | 10 | 6.9 | 12 | 95.3 | 106.1 | 133.3 | 98.6 | 113.2 | 149.9 | 123.9 | 177.0 | IE2 | 37.1 |
| SD6A16 | 16 | 11.1 | 12 | 104.9 | 124.0 | 184.6 | 110.3 | 136.6 | 219.8 | 156.0 | 279.8 | IE2 | 35.8 |
| SD6A24 | 22 | 15.2 | 15 | 121.5 | 146.9 | 226.1 | 128.1 | 161.6 | 266.0 | 183.7 | 332.7 | IE2 | 32.9 |
| SD6A26 | 32 | 22.2 | 15 | 154.7 | 192.8 | 311.3 | 164.7 | 214.9 | 370.5 | 246.9 | 465.9 | IE2 | 38.6 |
| SD6A34 | 44 | 30.5 | 35 | 187.5 | 232.2 | 368.7 | 207.7 | 273.9 | 466.8 | 323.0 | 597.8 | IE2 | 32.1 |
| SD6A36 | 70 | 48.5 | 35 | 256.6 | 332.3 | 570.8 | 287.9 | 397.0 | 721.5 | 471.0 | 915.9 | IE2 | 33.9 |
| SD6A38 | 85 | 58.9 | 35 | 277.8 | 376.9 | 692.3 | 317.4 | 459.0 | 886.1 | 554.6 | 1143.1 | IE2 | 35.3 |

Tab. 33: Power loss data of the SD6 drive controller in accordance with EN 61800-9-2

General conditions

The power loss data applies to drive controllers without accessories.

The power loss calculation is based on a 3-phase supply voltage with 400 V_{AC}/50 Hz.

The calculated data includes a supplement of 10% in accordance with EN 61800-9-2.

The power loss specifications refer to a clock frequency of 4 kHz.

The absolute losses for a power unit that is switched off refer to the 24 V_{DC} power supply of the control electronics.

7.1.2.8 Power loss data of accessories

If you intend to order the drive controller with accessory parts, losses increase as follows:

| Type | Absolute losses P_v [W] |
|----------------------------|------------------------------|
| SE6 safety module | < 4 |
| ST6 safety module | 1 |
| IO6 terminal module | < 2 |
| XI6 or RI6 terminal module | < 5 |
| CA6 communication module | 1 |
| EC6 communication module | < 2 |
| PN6 communication module | < 4 |

Tab. 34: Absolute losses of the accessories

Information

Note the absolute power loss of the encoder (usually < 3 W) and of the brake when designing as well.

Loss specifications for other optional accessories can be found in the technical data of the respective accessory part.

7.1.3 Derating

When dimensioning the drive controller, observe the derating of the nominal output current as a function of the clock frequency, surrounding temperature and installation altitude. There is no restriction for a surrounding temperature from 0 °C to 45 °C and an installation altitude of 0 m to 1000 m. The details given below apply to values outside these ranges.

7.1.3.1 Effect of the clock frequency

Changing the clock frequency f_{PWM} affects the amount of noise produced by the drive, among other things. However, increasing the clock frequency results in increased losses. During project configuration, define the highest clock frequency and use it to determine the nominal output current $I_{2N,PU}$ for dimensioning the drive controller.

| Type | $I_{2N,PU}$ 4 kHz | $I_{2N,PU}$ 8 kHz | $I_{2N,PU}$ 16 kHz |
|--------|----------------------|----------------------|-----------------------|
| SD6A02 | 4 A | 3 A | 2 A |
| SD6A04 | 2.3 A | 1.7 A | 1.1 A |
| SD6A06 | 4.5 A | 3.4 A | 2.3 A |
| SD6A14 | 10 A | 6 A | 4 A |
| SD6A16 | 16 A | 10 A | 5.7 A |
| SD6A24 | 22 A | 14 A | 8.1 A |
| SD6A26 | 32 A | 20 A | 12 A |
| SD6A34 | 44 A | 30 A | 18 A |
| SD6A36 | 70 A | 50 A | 31 A |
| SD6A38 | 85 A ⁷ | 60 A | 37.8 A |

Tab. 35: Nominal output current $I_{2N,PU}$ dependent on the clock frequency

| |
|---|
| Information |
| Select the defined clock frequency using parameter B24. |

⁷Specification applies to the default value of the field weakening voltage limit: B92 = 80%.

7.1.3.2 Effect of the surrounding temperature

Derating as a function of the surrounding temperature is determined as follows:

- 0 °C to 45 °C: No restrictions ($D_T = 100\%$)
- 45 °C to 55 °C: Derating $-2.5\%/K$

Example

The drive controller needs to be operated at 50 °C.

The derating factor D_T is calculated as follows

$$D_T = 100\% - 5 \times 2.5\% = 87.5\%$$

7.1.3.3 Effect of the installation altitude

Derating as a function of the installation altitude is determined as follows:

- 0 m to 1000 m: No restriction ($D_{IA} = 100\%$)
- 1000 m to 2000 m: Derating $-1.5\%/100\text{ m}$

Example

The drive controller needs to be installed at an altitude of 1500 m above sea level.

The derating factor D_{IA} is calculated as follows:

$$D_{IA} = 100\% - 5 \times 1.5\% = 92.5\%$$

7.1.3.4 Calculating the derating

Follow these steps for the calculation:

1. Determine the highest clock frequency (f_{PWM}) that will be used during operation and use it to determine the nominal current $I_{2N,PU}$.
2. Determine the derating factors for installation altitude and surrounding temperature.
3. Calculate the reduced nominal current $I_{2N,PU(red)}$ in accordance with the following formula:

$$I_{2N,PU(red)} = I_{2N,PU} \times D_T \times D_{IA}$$

Example

A drive controller of type SD6A06 needs to be operated at a clock frequency of 8 kHz at an altitude of 1500 m above sea level and a surrounding temperature of 50 °C.

The nominal current of the SD6A06 at 8 kHz is 3.4 A. The derating factor D_T is calculated as follows:

$$D_T = 100\% - 5 \times 2.5\% = 87.5\%$$

The derating factor D_{IA} is calculated as follows:

$$D_{IA} = 100\% - 5 \times 1.5\% = 92.5\%$$

The output current of importance for the project configuration is:

$$I_{2N,PU(red)} = 3.4\text{ A} \times 0.875 \times 0.925 = 2.75\text{ A}$$

7.1.4 Dimensions

The dimensions of the available SD6 sizes can be found in the following chapters.

7.1.4.1 Dimensions: sizes 0 to 2

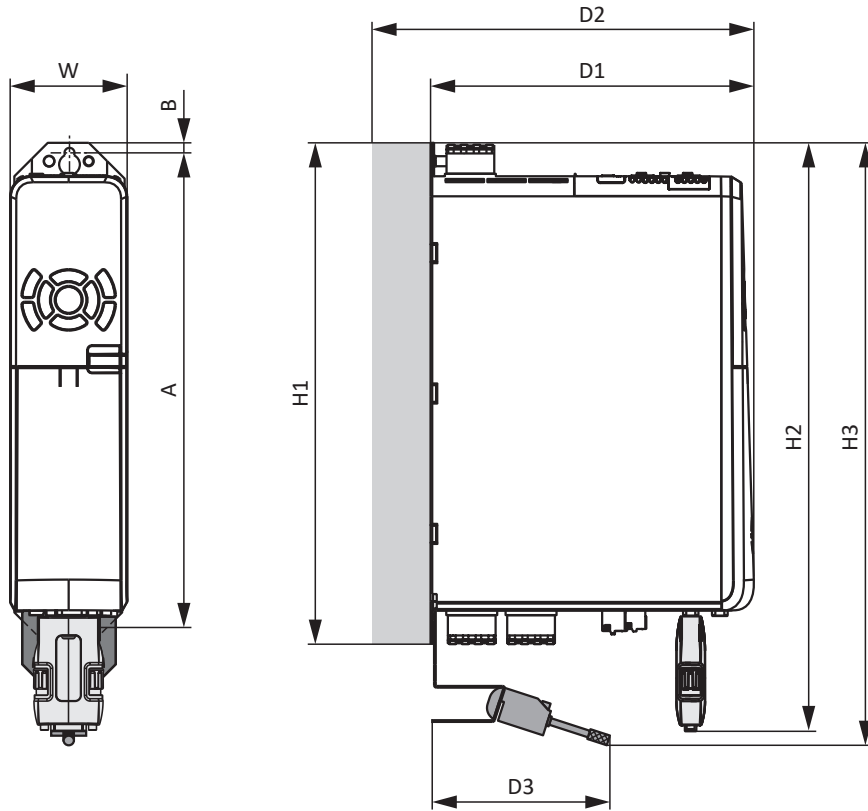


Fig. 5: SD6 dimensional drawing, sizes 0 to 2

| Dimension | | | Size 0 | Size 1 | Size 2 |
|---|--------------------------------------|----|-------------|--------|--------|
| Drive controller | Width | W | 70 | 70 | 105 |
| | Depth | D1 | 194 | 284 | |
| | Depth incl. RB 5000 braking resistor | D2 | 212 | 302 | |
| | Depth incl. Quick DC-Link | D2 | 229 | 319 | |
| | Height incl. fastening clips | H1 | 300 | | |
| | Height incl. AES | H2 | 360 | | |
| | Height incl. EMC shield plate | H3 | 360 | | |
| EMC shield plate incl. shield connection terminal | Depth | D3 | approx. 111 | | |
| Fastening bores | Vertical distance | A | 283+2 | | |
| | Vertical distance to the upper edge | B | 6 | | |

Tab. 36: SD6 dimensions, sizes 0 to 2 [mm]

7.1.4.2 Dimensions: size 3

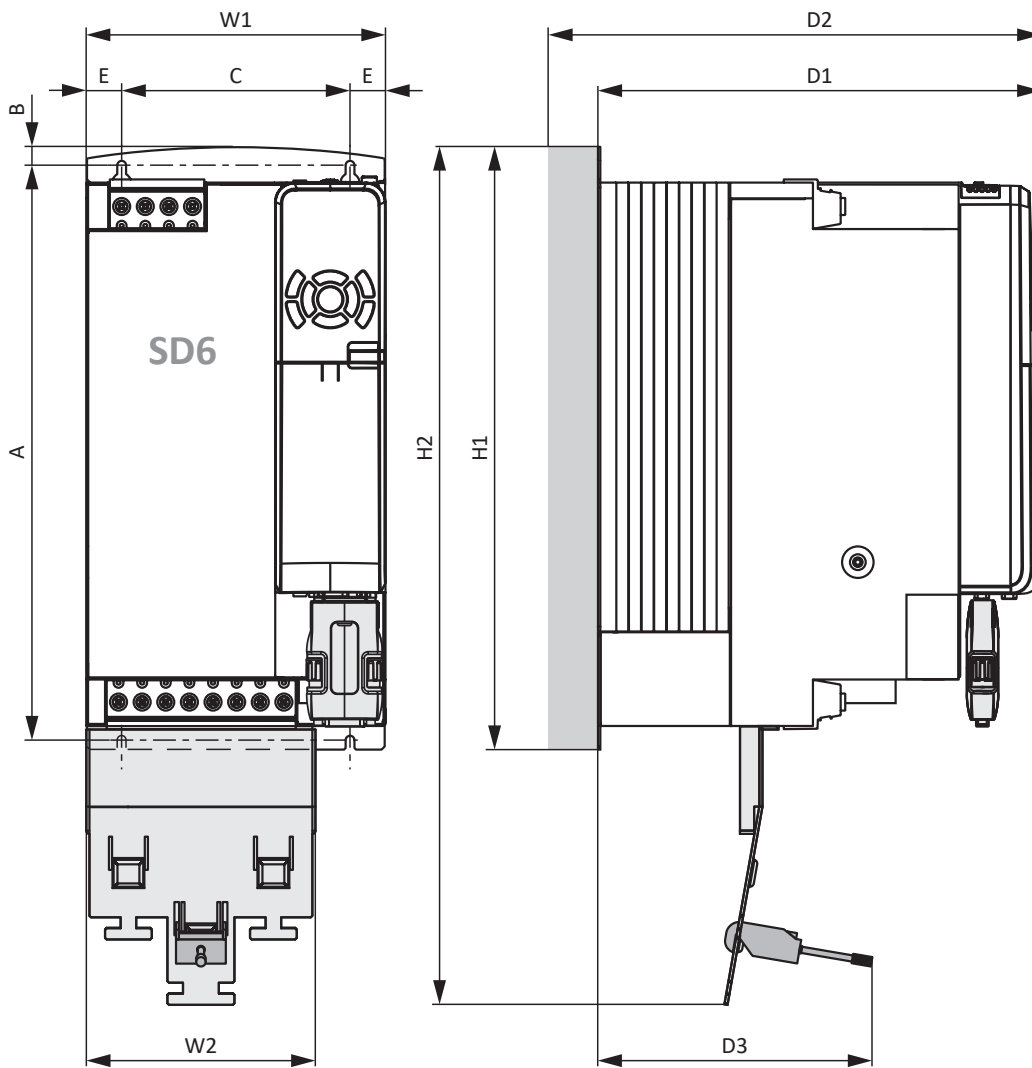


Fig. 6: SD6 dimensional drawing, size 3

| Dimension | | | Size 3 |
|---|--|----|--------------|
| Drive controller | Width | W1 | 190 |
| | Depth | D1 | 305 |
| | Depth incl. Quick DC-Link | D2 | 340 |
| | Height incl. fastening clips | H1 | 382.5 |
| | Height incl. EMC shield plate | H2 | 540 |
| EMC shield plate incl. shield connection terminal | Width | W2 | 147 |
| | Depth | D3 | approx. 174 |
| Fastening bores | Vertical distance | A | 365+2 |
| | Vertical distance to the upper edge | B | 11.5 |
| | Horizontal distance of the fastening bores of the drive controller | C | 150+0.2/-0.2 |
| | Horizontal distance to the side edge of the drive controller | E | 20 |

Tab. 37: SD6 dimensions, size 3 [mm]

7.1.5 Weight

| Size | Weight without packaging [g] | Weight with packaging [g] |
|--------|------------------------------|---------------------------|
| Size 0 | 2530 | 3520 |
| Size 1 | 3700 | 5470 |
| Size 2 | 5050 | 6490 |
| Size 3 | 13300 | 14800 |

Tab. 38: SD6 weight [g]

If you intend to order the drive controller with accessory parts, the weight increases as follows.

| Accessories | Weight without packaging [g] |
|----------------------|------------------------------|
| Communication module | 50 |
| Terminal module | 135 |
| Safety module | 110 |

Tab. 39: Weight of the accessory part [g]

Weight specifications for other optional accessories can be found in the appendix (see [Weights \[► 456\]](#)).

7.1.6 Cycle times

Possible cycle times can be found in the following table.

| Type | Cycle times | Relevant parameters |
|--|------------------------|---|
| Application | 1 ms, 2 ms, 4 ms, 8 ms | Adjustable in A150 |
| EtherCAT fieldbus, cyclical communication | 1 ms, 2 ms, 4 ms, 8 ms | Adjustable in TwinCAT 3 or CODESYS |
| PROFINET RT fieldbus, cyclical communication | 1 ms, 2 ms, 4 ms, 8 ms | Adjustable in the TIA Portal |
| Motion core (movement calculation) | 250 μ s | — |
| Control cascade | 62.5 μ s | B24 \geq 8 kHz and B20 = 48, 64 or 70 |
| | 125 μ s | B24 = 4 kHz |

Tab. 40: Cycle times

7.2 DC link connection

The following chapters contain the technical data of the DL6A Quick DC-Link modules.

7.2.1 General technical data

The following information applies to all Quick DC-Link modules and corresponds to the general technical data for the base device.

| Device features | |
|--|---|
| Protection class of the device | IP20 (if built over with drive controller or supply module) |
| Protection class | Protection class I in accordance with EN 61140 (if built over with drive controller or supply module) |
| Protection class of the installation space | At least IP54 |

Tab. 41: Device features

| Transport and storage conditions | |
|---|---|
| Storage/ transport temperature | -20 °C to +70 °C Maximum change: 20 K/h |
| Relative humidity | Maximum relative humidity 85%, non-condensing |
| Vibration (transport) in accordance with EN 60068-2-6 | 5 Hz ≤ f ≤ 9 Hz: 3.5 mm 9 Hz ≤ f ≤ 200 Hz: 10 m/s ² 200 Hz ≤ f ≤ 500 Hz: 15 m/s ² |
| Fall height for free fall ⁸ Weight < 100 kg in accordance with EN 61800-2 (or IEC 60721-3-2, class 2M4) | 0.25 m |
| Shock testing in accordance with EN 60068-2-27 | Pulse shape: Half-sine Acceleration: 5 g Shock duration: 30 ms Number of shocks: 3 per axis |

Tab. 42: Transport and storage conditions

| Operating conditions | |
|---|--|
| Surrounding temperature during operation | 0 °C to 45 °C with nominal data 45 °C to 55 °C with derating -2.5% / K |
| Relative humidity | Maximum relative humidity 85%, non-condensing |
| Installation altitude | 0 m to 1000 m above sea level without restrictions 1000 m to 2000 m above sea level with -1.5%/100 m derating |
| Pollution degree | Pollution degree 2 in accordance with EN 50178 |
| Vibration (operation) in accordance with EN 60068-2-6 | 5 Hz ≤ f ≤ 9 Hz: 0.35 mm 9 Hz ≤ f ≤ 200 Hz: 1 m/s ² |

Tab. 43: Operating conditions

⁸ Only valid for components in their original packaging.

7.2.2 DL6A – SD6 assignment

DL6A is available in the following designs, appropriate for the sizes of the drive controller:

| Type | DL6A0 | DL6A1 | DL6A2 | DL6A3 |
|--------|-------|-------|-------|-------|
| ID No. | 56440 | 56441 | 56442 | 56443 |
| SD6A02 | X | — | — | — |
| SD6A04 | X | — | — | — |
| SD6A06 | X | — | — | — |
| SD6A14 | — | X | — | — |
| SD6A16 | — | X | — | — |
| SD6A24 | — | — | X | — |
| SD6A26 | — | — | X | — |
| SD6A34 | — | — | — | X |
| SD6A36 | — | — | — | X |
| SD6A38 | — | — | — | X |

Tab. 44: Assignment of DL6A to SD6

7.2.3 Dimensions

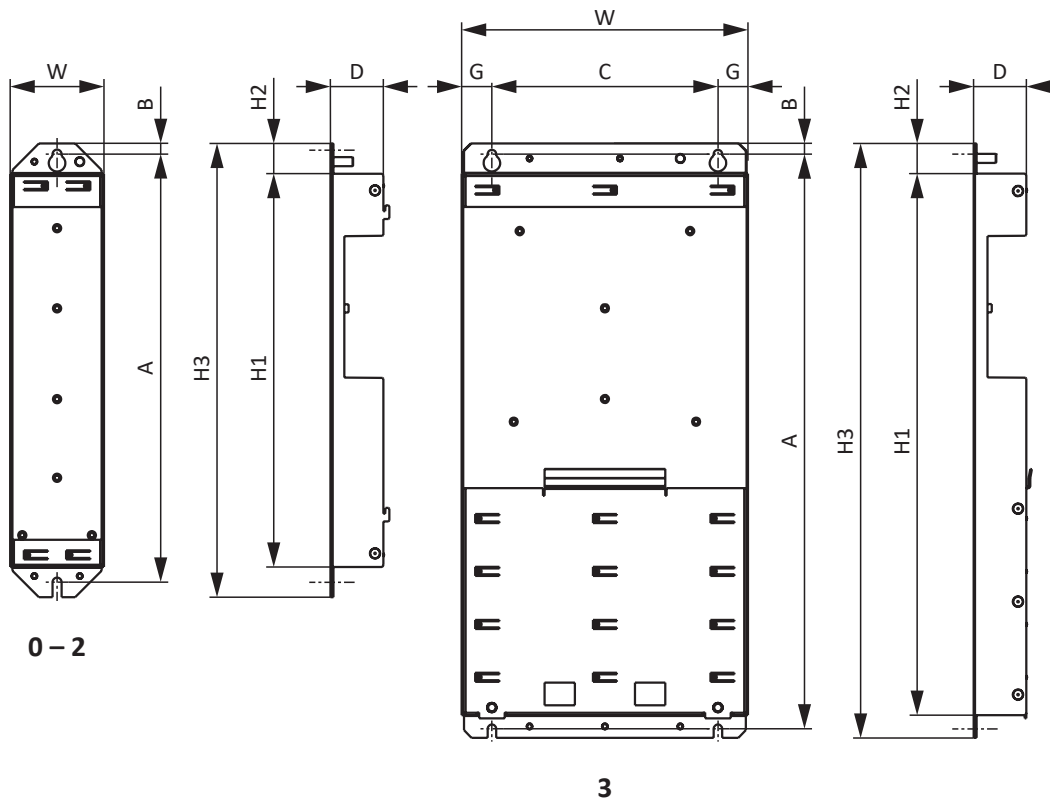


Fig. 7: DL6A dimensional drawing

| Dimension | | | DL6A0 DL6A1 | DL6A2 | DL6A3 |
|-----------------|--|----|----------------|-------|-------|
| Quick DC-Link | Width | W | 62 | 97 | 105 |
| | Depth | D | 35 | | |
| | Height | H1 | 260 | | 358 |
| | Fastening clip height | H2 | 20 | | 15 |
| | Height incl. fastening clips | H3 | 300 | | 393 |
| Fastening bores | Vertical distance (wall mounting) | A | 283+2 | | 380+2 |
| | Vertical distance to the upper edge | B | 7 | | |
| | Horizontal distance of the fastening bores | C | — | | 150 |
| | Horizontal distance to the side edge | G | — | | 20 |

Tab. 45: DL6A dimensions [mm]

7.2.4 Weight

| Type | Weight without packaging [g] | Weight with packaging [g] |
|-------|------------------------------|---------------------------|
| DL6A0 | 400 | 500 |
| DL6A1 | 390 | 460 |
| DL6A2 | 540 | 620 |
| DL6A3 | 1540 | 1580 |

Tab. 46: DL6A weight [g]

7.2.5 Copper rails

For the DC link connection of DL6A Quick DC-Link modules, you need two copper rails with a cross-section of 5×12 mm in the correct length. The copper rails must comply with the requirements in accordance with either EN 12167 or EN 13601. The required length depends on the total width of the device group (see [Length of copper rails \[► 122\]](#)).

7.3 Safety technology

7.3.1 ST6 safety module

The ST6 safety module adds the STO safety function to the SD6 drive controller via terminal X12.

Information

If you would like to use the STO safety function via terminals, be sure to read the manual for the ST6 safety module (see [Detailed information \[► 519\]](#)).

If you do not want to use the safety function, connect STO_a and STO_b to $24 V_{DC}$ and connect GND to the reference potential, e.g. using a connection with terminal X11.

| Digital input | Electrical data |
|-----------------------|---|
| STO_a | $U_{1max} = 30 V_{DC}$ (PELV) High level = $15 - 30 V_{DC}$ Low level = $0 - 8 V_{DC}$ $I_{1max} = 100$ mA $I_{1N} = 10 - 15$ mA per channel $C_{1max} = 100$ nF |
| STO_b | |
| STO_{status} | $U_2 = U_1 - (200 \text{ m}\Omega * I_1)$ $I_{2min} = 1$ mA |
| STO_{status} supply | $U_1 = +24 V_{DC}$, +20%/25% $I_{1max} = 100$ mA |
| GND | — |

Tab. 47: X12 electrical data – Digital inputs

7.3.2 SE6 safety module

The SE6 safety module adds the extended safety functions to the SD6 drive controller using terminals X14 and X15.

Information

If you want to use the extended safety technology via terminals, be sure to read the manual for the SE6 safety module (see [Detailed information \[▶ 519\]](#)).

| Electrical data | Digital input | Value |
|-----------------|---------------|--|
| Low level | I0–I7 | $-3 - +5 V_{DC}$ |
| High level | | $15 - 30 V_{DC}$ |
| U_{1max} | | $30 V_{DC}$ |
| I_{1max} | | 10.8 mA |
| f_{1max} | | < 250 Hz; results from the SE6 cycle time and the configurable filter time constant of the input |

Tab. 48: X14 electrical data – Digital inputs (SE6 option)

| Electrical data | Digital output | Value |
|----------------------|--------------------|----------------------|
| I_{2max} | O0 – O4 | 0.5 A |
| Typical voltage drop | | 25 mV |
| U_1 | 24 V_{DC} supply | $20.4 - 28.8 V_{DC}$ |

Tab. 49: X15 electrical data – Digital outputs (SE6 option)

7.4 Operating motors

The drive controller supports rotational motors with a number of motor poles from 2 to 120 poles (1 through 60 pole pairs), as well as linear motors with pole pitches from 1 to 500 mm.

When selecting the motor, consider the technical data of the drive controller (output voltage range and clock frequency).

You can operate the following motors with the specified control modes.

| Motor type | B20 Control mode | Encoders | Other settings | Characteristics |
|---------------------------------------|--|---|---|--|
| Synchronous servo motor, torque motor | 64: SSM - vector control | Absolute encoder required: EnDat 2.1/2.2 digital, SSI, resolver or EnDat 2.1 Sin/Cos encoders | Without field weakening (B91 Field weakening = 0: Inactive) | High dynamics, high speed accuracy, very constant speed, high overcurrent protection |
| | | | With field weakening (B91 Field weakening = 1: Active) | High dynamics, high speed accuracy, very constant speed, high overcurrent protection, greater speed range, but also higher current requirement |
| | 48: SSM-vector control incremental encoder | Incremental encoder or relative sin/cos encoder required | Without field weakening (B91 Field weakening = 0: Inactive) | High dynamics, high speed accuracy, very constant speed, high overcurrent protection |
| | | | With field weakening (B91 Field weakening = 1: Active) | High dynamics, high speed accuracy, very constant speed, high overcurrent protection, greater speed range, but also higher current requirement |
| Synchronous linear motor | 70: SLM - vector control | Linear encoder and commutation information required | — | High dynamics, high overcurrent protection |
| Asynchronous motor | 2: ASM - vector control | Encoder required | — | High dynamics, high speed accuracy, very constant speed, high overcurrent protection |
| | 3: ASM - sensorless vector control | No encoder required | — | Dynamics, speed accuracy, constant speed, overcurrent protection |
| | 1: ASM - V/f-slip compensated | | Linear characteristic curve (B21 V/f-characteristic = 0: Linear) | Very constant speed |
| | | | Quadratic characteristic curve (B21 V/f-characteristic = 1: Square) | Very constant speed, especially suitable for fan applications |
| | 0: ASM - V/f-control | | Linear characteristic curve (B21 V/f-characteristic = 0: Linear) | Very constant speed |
| | | Quadratic characteristic curve (B21 V/f-characteristic = 1: Square) | Very constant speed, especially suitable for fan applications | |

Tab. 50: Motor types and control modes

7.5 Evaluable encoders

The technical data of the evaluable encoder can be found in the following chapters.

7.5.1 Overview

The overview table explains which connections are available for the various encoders.

If simulation is also possible at the interface in addition to evaluation, this is noted in the Note column accordingly.

| Encoder | Connection | Connection location | Note |
|-------------------------|------------|----------------------------------|---|
| EnDat 2.1 digital | X4 | Base unit | Not suitable for linear encoders |
| | X140 | RI6 terminal module | |
| EnDat 2.2 digital | X4 | Base unit | The drive controller evaluates the information reported by the encoder and automatically detects whether the encoder of a rotational or linear motor is connected |
| | X140 | RI6 terminal module | |
| SSI | X4 | Base unit | — |
| | X50 | SE6 safety module | Plausibility encoder |
| | X120 | XI6 or RI6 terminal modules | Evaluation and simulation |
| Incremental HTL | X4 | Base unit | HTL signals, differential |
| | X101 | IO6, XI6 or RI6 terminal modules | HTL signals, single-ended; evaluation and simulation |
| Incremental TTL | X4 | Base unit | TTL signals, differential |
| | X50 | SE6 safety module | TTL differential signals; plausibility encoder |
| | X101 | RI6 terminal module | TTL signals, single-ended |
| | X120 | XI6 or RI6 terminal modules | TTL signals, differential; evaluation and simulation |
| HTL pulse and direction | X101 | IO6, XI6 or RI6 terminal modules | HTL signals, single-ended; evaluation and simulation |
| TTL pulse and direction | X101 | RI6 terminal module | TTL signals, single-ended |
| | X120 | XI6 or RI6 terminal modules | TTL signals, differential; evaluation and simulation |
| Resolvers | X140 | RI6 terminal module | — |
| EnDat 2.1 sin/cos | X140 | RI6 terminal module | — |
| Sin/cos | X140 | RI6 terminal module | Sin/cos encoders with W&S are connected to X140 directly; RI6 evaluates the analog sin/cos signals |
| Hall sensor | X101 | IO6, XI6 or RI6 terminal modules | For connecting single-ended HTL Hall sensors directly; Hall sensors with single-ended TTL signal levels can be connected using the LA6 adapter box; LA6 converts the signals from the Hall sensors for X101 accordingly |
| | X120 | XI6 or RI6 terminal modules | For connecting TTL differential Hall sensors directly; Hall sensors with TTL single-ended signal levels can be connected using the LA6 adapter box; LA6 converts the signals from the Hall sensors for X120 accordingly |

Tab. 51: Encoder connections

7.5.2 Signal transmission

The signal levels of the encoder inputs and outputs apply to signal transmission.

7.5.2.1 Encoder inputs

The following signal levels apply to the encoder inputs for single-ended signal transmission:

| Signal level | HTL, single-ended | TTL, single-ended |
|--------------|-------------------|-------------------|
| Low level | 0 to $8 V_{DC}$ | 0 to $0.8 V_{DC}$ |
| High level | 15 to $30 V_{DC}$ | 2 to $6 V_{DC}$ |

Tab. 52: Signal level encoder inputs, single-ended

The following signal levels apply to the encoder inputs for differential signal transmission:

| Signal level | Differential HTL | TTL, differential (ANSI TIA/EIA-422) | Differential TTL to X50 (SE6 option) |
|--------------|------------------------|--------------------------------------|--------------------------------------|
| Low level | -30 to $-4.2 V_{DC}$ | -6 to $-0.2 V_{DC}$ | $\leq 0.5 V_{DC}$ |
| High level | 4.2 to $30 V_{DC}$ | 0.2 to $6 V_{DC}$ | $\geq 2.5 V_{DC}$ |

Tab. 53: Signal levels of encoder inputs, differential

7.5.2.2 Encoder outputs (simulation)

The following signal levels apply to single-ended signal transmission at encoder outputs:

| Signal level | HTL, single-ended |
|--------------|-------------------|
| Low level | $0 V_{DC}$ |
| High level | $U_1 - 2 V_{DC}$ |

Tab. 54: Signal level of encoder outputs, single-ended

The following signal levels apply to differential signal transmission at encoder outputs:

| Signal level | TTL, differential |
|--------------|-------------------|
| Low level | $-3 V_{DC}$ |
| High level | $3 V_{DC}$ |

Tab. 55: Signal levels of encoder outputs, differential

7.5.3 Drive controllers

The X4 connection is provided on the bottom of the drive controller as an encoder interface. The technical data for the connection and other encoder terminations are described below.

7.5.3.1 X4: Encoder

X4 – EnDat 2.1 digital encoders

| Technical data | EnDat 2.1 digital signals |
|-------------------|--|
| U_2 | 5 – 15 V _{DC} (see encoder supply) |
| I_{2max} | 250 mA (sum of X4, X120, X140: 500 mA) |
| I_{2min} | 13 mA |
| Encoder type | Single-turn and multi-turn; not suitable for linear encoders |
| Clock frequency | 2 MHz |
| Max. cable length | 100 m, shielded |

Tab. 56: X4 technical data – EnDat 2.1 digital signals

X4 – EnDat 2.2 digital encoders

| Technical data | EnDat 2.2 digital signals |
|-------------------|---|
| U_2 | 5 – 15 V _{DC} (see encoder supply) |
| I_{2max} | 250 mA (sum of X4, X120, X140: 500 mA) |
| I_{2min} | 13 mA |
| Encoder type | Single-turn and multi-turn |
| Clock frequency | 4 MHz |
| Max. cable length | 100 m, shielded |

Tab. 57: X4 technical data – EnDat 2.2 digital signals

X4 – SSI encoders with free setting

Obey the instructions on the free setting of SSI encoders (see [SSI: Evaluation at X4 with free setting \(H00 = 78\) \[▶ 470\]](#)).

| Technical data | SSI signals |
|-------------------|---|
| U_2 | 5 – 15 V _{DC} (see encoder supply) |
| I_{2max} | 250 mA (sum of X4, X120, X140: 500 mA) |
| I_{2min} | 13 mA |
| Encoder type | Single-turn and multi-turn |
| Data length | Various resolutions possible |
| Clock frequency | 150 – 1000 kHz |
| Sampling rate | 250 µs |
| Monoflop time | 10 – 100 µs |
| Code | Binary or gray |
| Transfer | Double or single |
| Max. cable length | 100 m, shielded |

Tab. 58: X4 technical data – SSI signals with free setting

X4 – SSI encoders with fixed setting

Obey the instructions on the fixed setting of SSI encoders (see [SSI: Evaluation at X4 with fixed setting \(H00 = 65\) \[▶ 471\]](#)).

| Technical data | SSI signals |
|-------------------|---|
| U_2 | 5 – 15 V _{DC} (see encoder supply) |
| I_{2max} | 250 mA (sum of X4, X120, X140: 500 mA) |
| I_{2min} | 13 mA |
| Encoder type | Single-turn and multi-turn |
| Data length | 13, 24 or 25 bits |
| Clock frequency | 250 or 600 kHz |
| Sampling rate | 250 µs |
| Monoflop time | 30 µs |
| Code | Binary or gray |
| Transfer | Double or single |
| Max. cable length | 100 m, shielded |

Tab. 59: X4 technical data – SSI signals with fixed setting

X4 – Incremental encoders

| Technical data | Incremental signals |
|-------------------|---|
| U_2 | 5 – 15 V _{DC} (see encoder supply) |
| I_{2max} | 250 mA (sum of X4, X120, X140: 500 mA) |
| I_{2min} | 13 mA |
| f_{max} | 1 MHz |
| Signal level | Differential HTL and differential TTL |
| Max. cable length | 100 m, shielded |

Tab. 60: X4 technical data – Incremental signals

Information**Calculation example – Maximum frequency f_{max}**

for an encoder with 2048 increments per revolution: 3000 revolutions per minute (equivalent to 50 revolutions per second)
 x 2048 increments per revolution = 102400 increments per second = 102.4 kHz << 1 MHz

Encoder supply

| U_2 | Through | Note |
|-------------------------------------|--|---|
| 5 V _{DC} +/-10% at encoder | Sense line of the encoder connected at pin 12 (U_2 Sense) | STOBER synchronous servo motors; EnDat 2.1/2.2 encoder (standard) |
| 5 V _{DC} +/-10% | Pin 12 (U_2 Sense) bridged with pin 4 (U_2) | STOBER asynchronous motors; TTL incremental encoders (for customer-specific solutions), without cable compensation |
| 11 V _{DC} +/-15% | Pin 12 (U_2 Sense) not assigned | — |
| 15 V _{DC} +/-10% | Pin 12 (U_2 Sense) bridged with pin 2 (0 V GND) | STOBER asynchronous motors; HTL incremental encoders: bridge in cable connector connected to X4; SSI encoders: bridge for U2 made on the motor side |

Tab. 61: Encoder supply X4

7.5.3.2 X50 (SE6 option): Plausibility encoder

X50 – SSI encoder

| Technical data | SSI |
|-------------------|----------------------------|
| U_2 | 5 – 30 V _{DC} |
| I_{2max} | 0.2 A |
| I_{2min} | — |
| Encoder type | Single-turn and multi-turn |
| Data length | 12 – 28 bits |
| Clock frequency | 300 kHz |
| Sampling rate | 3 ms |
| Monoflop time | ≤ 30 μs |
| Code | Binary or gray |
| Transfer | Single |
| Max. cable length | 50 m, shielded |

Tab. 62: X50 technical data – SSI

X50 – Incremental encoder

| Technical data | Incremental signals |
|-------------------|------------------------|
| U_2 | 5 – 30 V _{DC} |
| I_{2max} | 0.2 A |
| I_{2min} | — |
| f_{max} | 500 kHz |
| Signal level | TTL, differential |
| Max. cable length | 50 m, shielded |

Tab. 63: X50 technical data – Incremental encoder

7.5.4 Terminal module

Depending on the terminal module, the following additional encoder interfaces are available.

7.5.4.1 X101: Encoder

The X101 connection is a part of the optional XI6, RI6 or IO6 terminal modules.

Information

To evaluate single-ended TTL signals at the X101 connection, you need the RI6 terminal module. Using three sliders, select the input voltage range (HTL or TTL) for the inputs DI3 to DI5. Observe the information printed on the terminal module for the correct position of the switches.

Use the digital inputs DI3 to DI5 to evaluate incremental or pulse/direction signals. For the simulation, use the digital outputs DO1 and DO2.

Hall sensors with single-ended HTL signal levels can be connected to digital inputs DI1 through DI3 directly.

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 64: Maximum core/cable length [m]

X101 on RI6 terminal module – Encoder

| Electrical data | Digital inputs/ outputs | HTL, single-ended (evaluation and simulation) | TTL, single-ended |
|----------------------|-----------------------------|---|-------------------|
| U_{1max} | DI1 – DI5 | 30 V _{DC} | 6 V _{DC} |
| I_{1max} | | 16 mA | 13 mA |
| f_{max} | DI1 – DI3 | 10 kHz | 10 kHz |
| f_{max} | DI4 – DI5 | 100 kHz (if high level > 15 V _{DC} and external push-pull wiring) | 250 kHz |
| I_{2max} | DO1 – DO2 as encoder output | 100 mA | — |
| Typical voltage drop | | < 2 V _{DC} | — |
| f_{max} | | 250 kHz | — |
| U_1 | 24 V supply | 18 – 28.8 V _{DC} | — |

Tab. 65: X101 electrical data on RI6 terminal module – Incremental, pulse/direction or Hall sensor signals

Information

Calculation example – Maximum frequency f_{max}

for an encoder with 2048 increments per revolution: 3000 revolutions per minute (equivalent to 50 revolutions per second) x 2048 increments per revolution = 102400 increments per second = 102.4 kHz < 250 kHz

X101 on XI6 terminal module – Encoder

| Electrical data | Digital inputs/ outputs | HTL, single-ended (evaluation and simulation) |
|----------------------|-----------------------------|---|
| U_{1max} | DI1 – DI5 | 30 V _{DC} |
| I_{1max} | | 16 mA |
| f_{max} | DI1 – DI3 | 10 kHz |
| f_{max} | DI4 – DI5 | 100 kHz (if high level > 15 V _{DC} and external push-pull wiring) |
| I_{2max} | DO1 – DO2 as encoder output | 50 mA |
| Typical voltage drop | | < 2 V _{DC} |
| f_{max} | | 250 kHz |
| U_1 | 24 V supply | 18 – 28.8 V _{DC} |

Tab. 66: X101 electrical data on XI6 terminal module – Incremental, pulse/direction or Hall sensor signals

Information

Calculation example – Maximum frequency f_{max}

for an encoder with 2048 increments per revolution: 3000 revolutions per minute (equivalent to 50 revolutions per second) x 2048 increments per revolution = 102400 increments per second = 102.4 kHz < 250 kHz

X101 on IO6 terminal module – Encoder

| Electrical data | Digital inputs/ outputs | HTL, single-ended (evaluation and simulation) |
|----------------------|-----------------------------|---|
| U_{1max} | DI1 – DI5 | 30 V _{DC} |
| I_{1max} | | 16 mA |
| f_{max} | DI1 – DI3 | 10 kHz |
| f_{max} | DI4 – DI5 | 100 kHz (if high level > 15 V _{DC} and external push-pull wiring) |
| I_{2max} | DO1 – DO2 as encoder output | 100 mA |
| Typical voltage drop | | < 2 V _{DC} |
| f_{max} | | 250 kHz |
| U_1 | 24 V supply | 18 – 28.8 V _{DC} |

Tab. 67: X101 electrical data on IO6 terminal module – Incremental, pulse/direction or Hall sensor signals

Information

Calculation example – Maximum frequency f_{max}

for an encoder with 2048 increments per revolution: 3000 revolutions per minute (equivalent to 50 revolutions per second) x 2048 increments per revolution = 102400 increments per second = 102.4 kHz < 250 kHz

7.5.4.2 X120: Encoder

The X120 encoder connection is part of the optional XI6 and RI6 terminal modules.

X120 – SSI encoder with free setting (evaluation and simulation)

Obey the instructions on the free setting of SSI encoders for the XI6 terminal module from hardware version 14 or RI6 terminal module from hardware version 8 (see [SSI: Evaluation and simulation at X120 with free setting \(H120 = 76 or 83\)](#) [[▶ 473](#)]).

| Technical data | SSI signals |
|-------------------|---|
| U_2 | 15 V _{DC} +/- 10% (see encoder supply) |
| I_{2max} | 250 mA (sum of X4, X120, X140: 500 mA) |
| Encoder type | Single-turn and multi-turn |
| Data length | Various resolutions possible |
| Clock frequency | 150 – 1000 kHz |
| Sampling rate | 250 µs |
| Monoflop time | Evaluation: 10 – 100 µs, simulation: 20 µs |
| Code | Binary or gray |
| Transfer | Double or single |
| Max. cable length | 50 m, shielded |

Tab. 68: X120 technical data – SSI signals with free setting (evaluation and simulation)

X120 – SSI encoder with fixed setting (evaluation and simulation)

Obey the instructions on the fixed setting of SSI encoders (see [SSI: Evaluation and simulation at X120 with fixed setting \(H120 = 67 or 82\)](#) [[▶ 475](#)]).

| Technical data | SSI signals |
|-------------------|--|
| U_2 | 15 V _{DC} +/- 10% (see encoder supply) |
| I_{2max} | 250 mA (sum of X4, X120, X140: 500 mA) |
| Encoder type | Single-turn and multi-turn |
| Data length | 13, 24 or 25 bits |
| Clock frequency | 600 kHz (motor encoder); 250 kHz (position encoder) |
| Sampling rate | 250 µs |
| Monoflop time | 30 µs |
| Code | Binary or gray |
| Transfer | Double or single |
| Max. cable length | 50 m, shielded |

Tab. 69: X120 technical data – SSI signals with fixed setting (evaluation and simulation)

X120 – Incremental encoder (evaluation and simulation), pulse/direction interface (evaluation and simulation) or Hall sensor

| Technical data | Incremental, pulse/direction or hall sensors |
|-------------------|---|
| U_2 | 15 V _{DC} +/- 10% (see encoder supply) |
| I_{2max} | 250 mA (sum of X4, X120, X140: 500 mA) |
| f_{max} | Evaluation: 1 MHz; simulation: 500 kHz |
| Signal level | TTL, differential |
| Max. cable length | 50 m, shielded |

Tab. 70: X120 technical data – Differential TTL incremental, pulse/direction or hall sensor signals

Information

Calculation example – Maximum frequency f_{max}

for an encoder with 2048 increments per revolution: 3000 revolutions per minute (equivalent to 50 revolutions per second) x 2048 increments per revolution = 102,400 increments per second = 102.4 kHz

Encoder supply

Depending on the power consumption of the encoder, an external supply may be required, which can cause differences in the GND connection.

| U_2 | Bridge |
|---------------------------|---|
| Internal: Pin 8 (U_2) | Pin 1 (GND Enc) to pin 9 (0 V GND) |
| External | Pin 1 (GND Enc) to 0 V GND of the external supply |

Tab. 71: X120 encoder supply

7.5.4.3 X140: Encoder

The X140 encoder connection is a part of the optional RI6 terminal module.

X140 – EnDat 2.1 digital encoders

| Technical data | EnDat 2.1 digital signals |
|-------------------|--|
| U_2 | 5 – 12 V _{DC} (see encoder supply) |
| I_{2max} | 250 mA (sum of X4, X120, X140: 500 mA) |
| I_{2min} | 13 mA |
| Encoder type | Single-turn and multi-turn; not suitable for linear encoders |
| Clock frequency | 2 MHz |
| Max. cable length | 100 m, shielded |

Tab. 72: X140 technical data – EnDat 2.1 digital signals

X140 – EnDat 2.2 digital encoders

| Technical data | EnDat 2.2 digital signals |
|-------------------|---|
| U_2 | 5 – 12 V _{DC} (see encoder supply) |
| I_{2max} | 250 mA (sum of X4, X120, X140: 500 mA) |
| I_{2min} | 13 mA |
| Encoder type | Single-turn and multi-turn |
| Clock frequency | 4 MHz |
| Max. cable length | 100 m, shielded |

Tab. 73: X140 technical data – EnDat 2.2 digital encoder signals

X140 – Resolvers

| Technical data | Resolver signals |
|-------------------|------------------|
| Measuring range | ± 2.5 V |
| Resolution | 16 bits |
| U_2 | ± 10 V |
| I_{2max} | 80 mA |
| f_2 | 7 – 9 kHz |
| P_{max} | 0.8 W |
| Transfer ratio | 0.5 ± 5% |
| Number of poles | 2, 4, 6 and 8 |
| Signal shape | Sine |
| Max. cable length | 100 m, shielded |

Tab. 74: X140 technical data – Resolver signals

X140 – EnDat 2.1 sin/cos encoders and sin/cos encoders

| Technical data | EnDat 2.1 sin/cos, sin/cos signals |
|-------------------|---|
| Measuring range | ± 2.5 V _{DC} |
| Resolution | 16 bits |
| U_2 | 5 – 12 V _{DC} (see encoder supply) |
| I_{2max} | 250 mA (sum of X4, X120, X140: 500 mA) |
| I_{2min} | 13 mA |
| Encoder type | Single-turn and multi-turn |
| f_{max} analog | 225 kHz |
| f_{max} digital | 2 MHz |
| Max. cable length | 100 m, shielded |

Tab. 75: X140 technical data – EnDat 2.1 sin/cos, sin/cos signals

Information**Calculation example – Maximum frequency f_{max}**

for an encoder with 2048 increments per revolution: 3000 revolutions per minute (equivalent to 50 revolutions per second)
 x 2048 increments per revolution = 102,400 increments per second = 102.4 kHz

Encoder supply

| U ₂ | Through | Note |
|--------------------------------------|--|--|
| 5 V _{DC} +/- 10% at encoder | Sense line of the encoder connected at pin 12 (U ₂ Sense) | STOBER synchronous servo motors; EnDat 2.1/2.2 (standard) |
| 5 V _{DC} +/- 10% | Pin 12 (U ₂ Sense) bridged with pin 4 (U ₂) | STOBER asynchronous motors; TTL incremental encoders (for customer-specific solutions), without cable compensation |
| 11 V _{DC} +/- 10% | | Pin 12 (U ₂ Sense) not assigned |
| 12 V _{DC} +/- 10% | Pin 12 (U ₂ Sense) bridged with pin 2 (0 V GND) | |

Tab. 76: Encoder supply X140

7.5.5 Encoder adapter box

The connections X300 to X306 are part of the optional LA6 adapter box. LA6 is an interface adapter for differential TTL incremental signals and single-ended TTL Hall sensor signals. LA6 transmits TTL signals from synchronous linear motors to the SD6 drive controller.

7.5.5.1 X300: Encoder at X4

X300 transmits differential TTL incremental signals to connection X4 of the drive controller.

X300 – Differential TTL incremental encoder

| Technical data | Incremental signals |
|-------------------|---------------------|
| U ₂ | 5 V _{DC} |
| I _{2max} | 250 mA |
| I _{2min} | 13 mA |
| f _{max} | 1 MHz |
| Signal level | TTL, differential |
| Max. cable length | 100 m, shielded |

Tab. 77: X300 technical data – TTL differential incremental signals

7.5.5.2 X301: Hall sensor at X120

X301 converts single-ended TTL hall sensor signals for the transmission to connection X120 on the XI6 or RI6 terminal module.

X301 – Differential TTL Hall sensor

| Technical data | Hall sensor signals |
|-------------------|---------------------|
| U ₂ | 15 V _{DC} |
| I _{2max} | 250 mA |
| f _{max} | 1 MHz |
| Signal level | TTL, differential |
| Max. cable length | 50 m, shielded |

Tab. 78: X301 technical data – Differential TTL hall sensor signals

7.5.5.3 X302: Hall sensor at X101

X302 converts single-ended TTL Hall sensor signals for the transmission to connection X101 on the XI6, RI6 or IO6 terminal module.

X302 – Single-ended HTL Hall sensor

| Technical data | Incremental signals |
|----------------------|---|
| Typical voltage drop | $< 2 V_{DC}$; related to the encoder supply U_2 of terminal X303 |
| I_{2max} | 50 mA |
| Signal level | HTL, single-ended |
| Max. cable length | 30 m |

Tab. 79: X302 technical data – Single-ended HTL Hall sensor signals

7.5.5.4 X303: 24 V supply

The connection of $24 V_{DC}$ to X303 is required for supplying the adapter box.

| Electrical data | Value |
|-----------------|--------------------------|
| U_1 | $24 V_{DC}, +20\%/-15\%$ |
| I_{1max} | 100 mA |

Tab. 80: X303 electrical data – Adapter box

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 81: Maximum core/cable length [m]

7.5.5.5 X304, X305, X306: Encoder, Hall sensor

Connect the differential TTL incremental encoder to the single-ended TTL Hall sensor at X304 using a D-sub connector.

At X305 and X306, you can alternatively connect the differential TTL incremental encoder with the single-ended TTL Hall sensor using loose cable ends.

X304, 305, X306 – Differential TTL incremental encoder with single-ended TTL Hall sensor

| Technical data | Hall sensor signals |
|-------------------|--|
| U_2 | 5 V _{DC} |
| I_{2max} | 250 mA |
| I_{2min} | 13 mA |
| f_{max} | 1 MHz |
| Signal level | Differential TTL (incremental encoder), single-ended TTL (Hall sensor) |
| Max. cable length | 100 m, shielded |

Tab. 82: X304, 305, X306 technical data – Differential TTL incremental signals with single-ended TTL hall sensor signals

| |
|--------------------|
| Information |
|--------------------|

Calculation example – Maximum frequency f_{max}

for an encoder with 2048 increments per revolution: 3000 revolutions per minute (equivalent to 50 revolutions per second) x 2048 increments per revolution = 102400 increments per second = 102.4 kHz << 1 MHz

7.6 Terminal module

The technical data of the optional terminal modules can be found in the following chapters.

7.6.1 XI6 terminal module

| Technical data | Value |
|-----------------------------|--|
| Internal device update rate | Cycle time for the application parameterized in A150; $t_{\min} = 1 \text{ ms}$; also applicable to digital inputs DI4 and DI5: with timestamp correction in an accuracy range of $1 \mu\text{s}$ |
| Max. cable length | 30 m |

Tab. 83: Technical data – Inputs and outputs

X100 – Analog inputs and outputs

| Electrical data | Analog input/output | Value |
|-----------------------|---|-----------------------------|
| Measuring range | AI1 – AI2 | $\pm 10 V_{\text{DC}}$ |
| Resolution | | 16 bits |
| Internal resistance | | $> 40 \text{ k}\Omega$ |
| Level | AE1 as current input (AI1+ and AI1 shunt bridged) | $\pm 20 \text{ mA}$ |
| Resolution | | 16 bits |
| Internal resistance | | 492Ω |
| Wire break monitoring | | Can be parameterized in F15 |
| Level | AO1 – AO2 | $\pm 10 V_{\text{DC}}$ |
| Resolution | | 12 bits |
| $I_{2\text{max}}$ | | 10 mA |

Tab. 84: X100 electrical data – Analog inputs and outputs

X101 – Digital inputs and outputs

| Electrical data | Digital inputs/outputs | Value |
|----------------------|---------------------------|---------------------------|
| Low level | DI1 – DI5 | $0 - 8 V_{\text{DC}}$ |
| High level | | $12 - 30 V_{\text{DC}}$ |
| $U_{1\text{max}}$ | | $30 V_{\text{DC}}$ |
| $I_{1\text{max}}$ | | 16 mA |
| $f_{1\text{max}}$ | DI1 – DI3 | 10 kHz |
| $f_{1\text{max}}$ | DI4 – DI5 | 250 kHz |
| $I_{2\text{max}}$ | DO1 – DO2 | 50 mA |
| Typical voltage drop | | $< 2 V_{\text{DC}}$ |
| U_1 | 24 V_{DC} supply | $18 - 28.8 V_{\text{DC}}$ |

Tab. 85: X101 electrical data – Digital inputs and outputs

X101 for encoders

If you would like to use X101 as an encoder connection, obey the technical data of the evaluable encoders at X101 (see [X101: Encoder \[► 73\]](#)).

X102 – Analog inputs

| Electrical data | Analog input | Value |
|---------------------|--------------|-----------------|
| Measuring range | AI3 | $\pm 10 V_{DC}$ |
| Resolution | | 16 bits |
| Internal resistance | | $> 40 k\Omega$ |

Tab. 86: X102 electrical data – Analog inputs

X103A – Digital outputs

| Electrical data | Digital output | Value |
|----------------------|----------------|--------------|
| I_{2max} | DO3 – DO6 | 50 mA |
| Typical voltage drop | | $< 2 V_{DC}$ |
| Inductive load | DO3 – DO4 | Max. 1.2 VA |

Tab. 87: X103A electrical data – Digital outputs

X103B – Digital inputs and outputs

| Electrical data | Digital inputs/ outputs | Value |
|----------------------|----------------------------|------------------|
| Low level | DI6 | $0 - 8 V_{DC}$ |
| High level | | $12 - 30 V_{DC}$ |
| U_{1max} | | $30 V_{DC}$ |
| I_{1max} | | 16 mA |
| I_{2max} | DO7 – DO10 | 50 mA |
| Typical voltage drop | | $< 2 V_{DC}$ |

Tab. 88: X103B electrical data – Digital inputs and outputs

X103C – Digital inputs

| Electrical data | Digital input | Value |
|-----------------|---------------|------------------|
| Low level | DI7 – DI13 | $0 - 8 V_{DC}$ |
| High level | | $12 - 30 V_{DC}$ |
| U_{1max} | | $30 V_{DC}$ |
| I_{1max} | | 16 mA |

Tab. 89: X103C electrical data – Digital inputs

X120 for encoders

X120 is available as an encoder connection. Note the technical data of the evaluable encoders at X120 (see [X120: Encoder \[► 75\]](#)).

7.6.2 RI6 terminal module

| Technical data | Value |
|-----------------------------|--|
| Internal device update rate | Cycle time for the application parameterized in A150; $t_{\min} = 1 \text{ ms}$; also applicable to digital inputs DI4 and DI5: with timestamp correction in an accuracy range of $1 \mu\text{s}$ |
| Max. cable length | 30 m |

Tab. 90: Technical data – Inputs and outputs

X100 – Analog inputs and outputs

| Electrical data | Analog input/ output | Value |
|-----------------------|---|---|
| Measuring range | AI1 – AI2 | $\pm 10 V_{\text{DC}}$ |
| Resolution | | 16 bits |
| Internal resistance | | $> 40 \text{ k}\Omega$ |
| Level | AE1 as current input (AI1+ and AI1 shunt bridged) | $\pm 20 \text{ mA}$ |
| Resolution | | 16 bits |
| Internal resistance | | 492Ω |
| Wire break monitoring | | Can be parameterized in F15 |
| Level | AO1 – AO2 (short- circuit proof) | $\pm 10 V_{\text{DC}}, \pm 20 \text{ mA}$ |
| Resolution | | 12 bits |
| $I_{2\text{max}}$ | | $\pm 20 \text{ mA}$ |

Tab. 91: X100 electrical data – Analog inputs and outputs

X101 – Digital inputs and outputs

| Electrical data | Digital inputs/ outputs | Value |
|----------------------|----------------------------|---------------------------|
| Low level | DI1 – DI5 | $0 - 8 V_{\text{DC}}$ |
| High level | | $12 - 30 V_{\text{DC}}$ |
| $U_{1\text{max}}$ | | $30 V_{\text{DC}}$ |
| $I_{1\text{max}}$ | | 16 mA |
| $f_{1\text{max}}$ | DI1 – DI3 | 10 kHz |
| $f_{1\text{max}}$ | DI4 – DI5 | 250 kHz |
| $I_{2\text{max}}$ | DO1 – DO2 | 100 mA |
| Typical voltage drop | | $< 2 V_{\text{DC}}$ |
| U_1 | $24 V_{\text{DC}}$ supply | $18 - 28.8 V_{\text{DC}}$ |

Tab. 92: X101 electrical data – Digital inputs and outputs

X101 for encoders

If you would like to use X101 as an encoder connection, obey the technical data of the evaluable encoders at X101 (see [X101: Encoder \[► 73\]](#)).

X120 for encoders

X120 is available as an encoder connection. Note the technical data of the evaluable encoders at X120 (see [X120: Encoder \[▶ 75\]](#)).

X140 for encoders

X140 is available as an encoder connection. Note the technical data of the evaluable encoders at X140 (see [X140: Encoder \[▶ 76\]](#)).

7.6.3 I06 terminal module

| Technical data | Value |
|-----------------------------|--|
| Internal device update rate | Cycle time for the application parameterized in A150; $t_{\min} = 1 \text{ ms}$; also applicable to digital inputs DI4 and DI5: with timestamp correction in an accuracy range of $1 \mu\text{s}$ |
| Max. cable length | 30 m |

Tab. 93: Technical data – Inputs and outputs

X100 – Analog inputs and outputs

| Electrical data | Analog input/output | Value |
|-----------------------|---|---|
| Measuring range | AI1 – AI2 | $\pm 10 V_{\text{DC}}$ |
| Resolution | | 12 bits |
| Internal resistance | | $> 40 \text{ k}\Omega$ |
| Level | AE1 as current input (AI1+ and AI1 shunt bridged) | $\pm 20 \text{ mA}$ |
| Resolution | | 12 bits |
| Internal resistance | | 492Ω |
| Wire break monitoring | | Can be parameterized in F15 |
| Level | AO1 – AO2 (short-circuit proof) | $\pm 10 V_{\text{DC}}, \pm 20 \text{ mA}$ |
| Resolution | | 12 bits |
| $I_{2\text{max}}$ | | $\pm 20 \text{ mA}$ |

Tab. 94: X100 electrical data – Analog inputs and outputs

X101 – Digital inputs and outputs

| Electrical data | Digital inputs/ outputs | Value |
|----------------------|---------------------------|---------------------------|
| Low level | DI1 – DI5 | 0 – 8 V _{DC} |
| High level | | 12 – 30 V _{DC} |
| U _{1max} | | 30 V _{DC} |
| I _{1max} | | 16 mA |
| f _{1max} | DI1 – DI3 | 10 kHz |
| f _{1max} | DI4 – DI5 | 250 kHz |
| I _{2max} | DO1 – DO2 | 100 mA |
| Typical voltage drop | | < 2 V _{DC} |
| U ₁ | 24 V _{DC} supply | 18 – 28.8 V _{DC} |

Tab. 95: X101 electrical data – Digital inputs and outputs

X101 for encoders

If you would like to use X101 as an encoder connection, obey the technical data of the evaluable encoders at X101 (see [X101: Encoder \[► 73\]](#)).

7.6.4 Weight

| Accessories | Weight without packaging [g] |
|-----------------|------------------------------|
| Terminal module | 135 |

Tab. 96: Weight of the accessory part [g]

7.7 Controllable brakes

You can control the following brakes:

- 24 V_{DC} brakes connected directly to X5
- Brakes connected indirectly over contactor to X5

Only in combination with SE6 safety module:

- 24 V_{DC} brakes connected directly to X8
- Brakes connected indirectly over contactor to X8

Information

Control modes 48: SSM-vector control incremental encoder and 70: SLM - vector control with commutation finding using Wake and Shake may only be used in combination with a brake for axes without gravity load.

For more information, see [B20 = 48, 64 or 70 \[► 314\]](#).

7.7.1 X5: Brake

| Electrical data | Brake connection |
|-------------------------------------|------------------|
| I_{2max} | 3 A |
| I_{2min} (direct brake control) | 330 mA |
| I_{2min} (indirect brake control) | 20 mA |
| f_{2max} | 1 Hz |
| E_{2max} | 2.84 J |

Tab. 97: X5 electrical data – Brake connection

In combination with the ST6 safety module, the brake connected to X5 is supplied via terminal X6, and in combination with the SE6 safety module via terminal X7.

7.7.2 X8 (SE6 option): Brake

| Electrical data | Brake connection |
|-----------------|--|
| I_{2max} | 3.6 A / 2.5 A at surrounding temperature > 45 °C |
| I_{2min} | 0.5 mA |
| f_{2max} | 1 Hz |
| E_{2max} | 4.5 J |

Tab. 98: X8 electrical data – Brake connection

The brake connected to X8 is supplied over terminal X7.

7.8 Evaluable motor temperature sensors

You can connect a PTC triplet, KTY84-130 or Pt1000 to the SD6 drive controller.

| |
|--------------------|
| Information |
|--------------------|

STOBER recommends the use of PTC thermistors as thermal winding protection.

| |
|--------------------|
| Information |
|--------------------|

Evaluation of the temperature sensors is always active. If operation without a temperature sensor is permitted, the connections must be bridged to X2. Otherwise a fault is triggered when the device is switched on.

| Type | Triggering limit |
|---------------------------|---|
| PTC thermistor | 4000 Ω |
| Pt1000 temperature sensor | Can be parameterized in °C in parameter B39 |
| Pt1000 temperature sensor | Can be parameterized in °C in parameter B39 |
| KTY temperature sensor | Can be parameterized in °C in parameter B39 |

Tab. 99: Triggering limit of temperature sensor

7.9 Braking resistor

In addition to drive controllers, STOBER offers the following braking resistors described below in various sizes and performance classes. For the selection, note the minimum permitted braking resistors specified in the technical data of the individual drive controller types.

7.9.1 Tubular fixed resistor FZMU, FZZMU

| Type | FZMU 400×65 | | | FZZMU 400×65 | | |
|--------|-------------|-------|-------|--------------|-------|-------|
| ID No. | 49010 | 55445 | 55446 | 53895 | 55447 | 55448 |
| SD6A02 | X | — | — | — | — | — |
| SD6A04 | X | — | — | — | — | — |
| SD6A06 | X | — | — | — | — | — |
| SD6A14 | (X) | — | — | X | — | — |
| SD6A16 | (X) | — | — | X | — | — |
| SD6A24 | (—) | X | — | (X) | X | — |
| SD6A26 | (—) | X | — | (X) | X | — |
| SD6A34 | (—) | (X) | X | (—) | (X) | X |
| SD6A36 | (—) | (X) | X | (—) | (X) | X |
| SD6A38 | (—) | (X) | X | (—) | (X) | X |

Tab. 100: Assignment of FZMU, FZZMU braking resistor – SD6 drive controller

| | |
|-----|---------------------------------|
| X | Recommended |
| (X) | Possible |
| (—) | Useful under certain conditions |
| — | Not possible |

Properties

| Technical data | FZMU 400×65 | | | FZZMU 400×65 | | |
|------------------------------------|------------------------|---------|---------|------------------------|---------|---------|
| ID No. | 49010 | 55445 | 55446 | 53895 | 55447 | 55448 |
| Type | Tubular fixed resistor | | | Tubular fixed resistor | | |
| Resistance [Ω] | 100 ±10% | 22 ±10% | 15 ±10% | 47 ±10% | 22 ±10% | 15 ±10% |
| Thermal drift | ±10% | | | ±10% | | |
| Power [W] | 600 | | | 1200 | | |
| Therm. time const. τ_{th} [s] | 40 | | | 40 | | |
| Pulse power for < 1 s [kW] | 18 | | | 36 | | |
| U_{max} [V] | 848 | | | 848 | | |
| Weight without packaging [g] | 2200 | | | 4170 | | |
| Protection class | IP20 | | | IP20 | | |
| Marks and test symbols | cURus, CE, UKCA | | | cURus, CE, UKCA | | |

Tab. 101: FZMU, FZZMU technical data

Dimensions

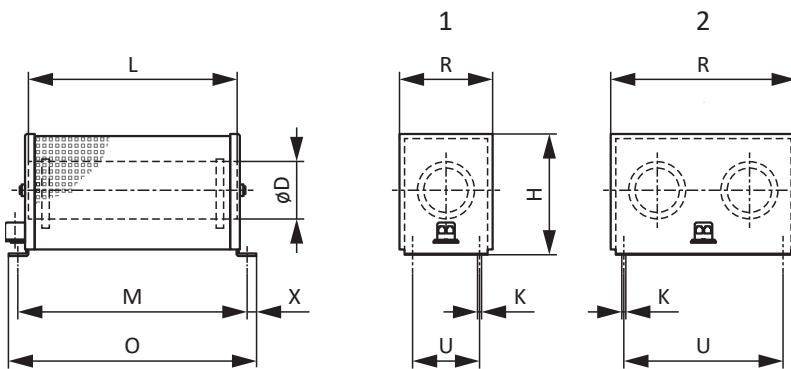


Fig. 8: FZMU (1), FZZMU (2) dimensional drawing

| Dimension | FZMU 400×65 | | | FZZMU 400×65 | | |
|-----------|-------------|-------|-------|--------------|-------|-------|
| ID No. | 49010 | 55445 | 55446 | 53895 | 55447 | 55448 |
| L x D | 400 × 65 | | | 400 × 65 | | |
| H | 120 | | | 120 | | |
| K | 6.5 × 12 | | | 6.5 × 12 | | |
| M | 430 | | | 426 | | |
| O | 485 | | | 485 | | |
| R | 92 | | | 185 | | |
| U | 64 | | | 150 | | |
| X | 10 | | | 10 | | |

Tab. 102: FZMU, FZZMU dimensions [mm]

7.9.2 GVADU, GBADU flat resistor

| Type | GVADU 210×20 | GBADU 265×30 | GBADU 405×30 | GBADU 335×30 | GBADU 265×30 |
|--------|-----------------|-----------------|-----------------|-----------------|-----------------|
| ID No. | 55441 | 55442 | 55499 | 55443 | 55444 |
| SD6A02 | X | X | X | — | — |
| SD6A04 | X | X | X | — | — |
| SD6A06 | X | X | X | — | — |
| SD6A14 | (X) | (X) | (X) | X | — |
| SD6A16 | (X) | (X) | (X) | X | — |
| SD6A24 | (—) | (—) | (—) | (X) | X |
| SD6A26 | (—) | (—) | (—) | (X) | X |
| SD6A34 | (—) | (—) | (—) | (—) | (X) |
| SD6A36 | (—) | (—) | (—) | (—) | (X) |
| SD6A38 | (—) | (—) | (—) | (—) | (X) |

Tab. 103: Assignment of GVADU, GBADU braking resistor – SD6 drive controller

| | |
|-----|---------------------------------|
| X | Recommended |
| (X) | Possible |
| (—) | Useful under certain conditions |
| — | Not possible |

Properties

| Technical data | GVADU 210×20 | GBADU 265×30 | GBADU 405×30 | GBADU 335×30 | GBADU 265×30 |
|------------------------------------|----------------------------------|---------------------------------|---------------------------------|---------------------------------|---------------------------------|
| ID No. | 55441 | 55442 | 55499 | 55443 | 55444 |
| Type | Flat resistor | | | | |
| Resistance [Ω] | 100 \pm 10% | 100 \pm 10% | 100 \pm 10% | 47 \pm 10% | 22 \pm 10% |
| Thermal drift | \pm 10% | \pm 10% | \pm 10% | \pm 10% | \pm 10% |
| Power [W] | 150 | 300 | 500 | 400 | 300 |
| Therm. time const. τ_{th} [s] | 60 | 60 | 60 | 60 | 60 |
| Pulse power for < 1 s [kW] | 3.3 | 6.6 | 11 | 8.8 | 6.6 |
| U_{max} [V] | 848 | 848 | 848 | 848 | 848 |
| Cable design | Radox | FEP | FEP | FEP | FEP |
| Cable length [mm] | 500 | 1500 | 500 | 1500 | 1500 |
| Conductor cross-section [AWG] | 18/19 (0.82 mm ²) | 14/19 (1.9 mm ²) | 14/19 (1.9 mm ²) | 14/19 (1.9 mm ²) | 14/19 (1.9 mm ²) |
| Weight without packaging [g] | 300 | 930 | 1410 | 1200 | 930 |
| Protection class | IP54 | IP54 | IP54 | IP54 | IP54 |
| Test symbols | cURus, CE, UKCA | | | | |

Tab. 104: GVADU, GBADU technical data

Dimensions

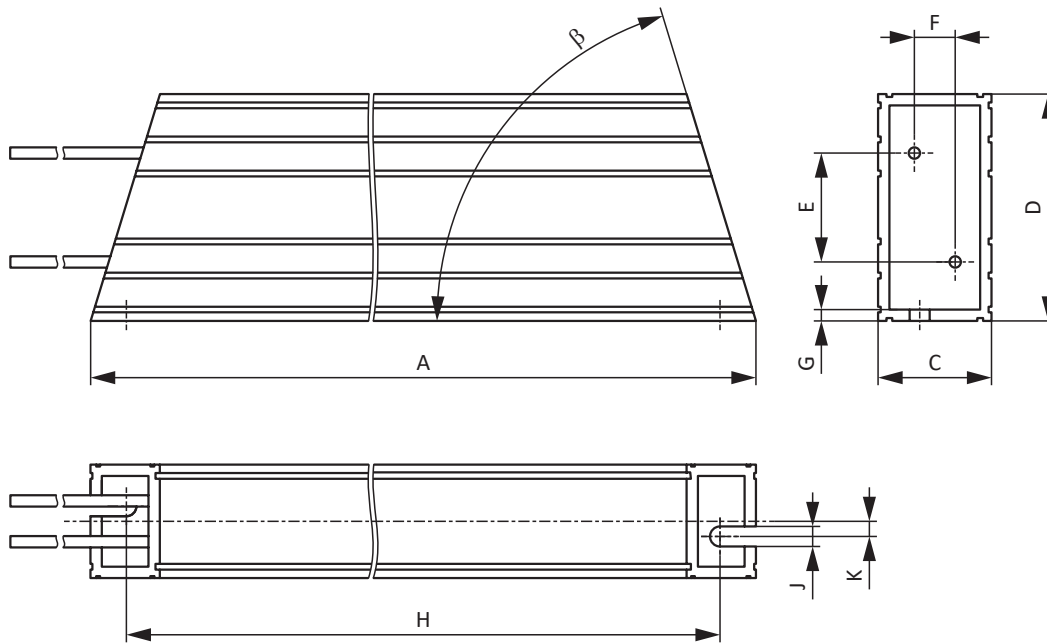


Fig. 9: GVADU, GBADU dimensional drawing

| Dimension | GVADU 210×20 | GBADU 265×30 | GBADU 405×30 | GBADU 335×30 | GBADU 265×30 |
|-----------|-----------------|-----------------|-----------------|-----------------|-----------------|
| ID No. | 55441 | 55442 | 55499 | 55443 | 55444 |
| A | 210 | 265 | 405 | 335 | 265 |
| H | 192 | 246 | 386 | 316 | 246 |
| C | 20 | 30 | 30 | 30 | 30 |
| D | 40 | 60 | 60 | 60 | 60 |
| E | 18.2 | 28.8 | 28.8 | 28.8 | 28.8 |
| F | 6.2 | 10.8 | 10.8 | 10.8 | 10.8 |
| G | 2 | 3 | 3 | 3 | 3 |
| K | 2.5 | 4 | 4 | 4 | 4 |
| J | 4.3 | 5.3 | 5.3 | 5.3 | 5.3 |
| β | 65° | 73° | 73° | 73° | 73° |

Tab. 105: GVADU, GBADU dimensions [mm]

7.9.3 FGFKU steel-grid fixed resistor

| Type | FGFKU 3100502 | FGFKU 3100502 | FGFKU 3111202 | FGFKU 3121602 ⁹ |
|--------|---------------|---------------|---------------|----------------------------|
| ID No. | 55449 | 55450 | 55451 | 53897 |
| SD6A24 | X | — | — | — |
| SD6A26 | X | — | — | — |
| SD6A34 | (X) | X | X | X |
| SD6A36 | (X) | X | X | X |
| SD6A38 | (X) | X | X | X |

Tab. 106: Assignment of FGFKU braking resistor – SD6 drive controller

| | |
|-----|--------------|
| X | Recommended |
| (X) | Possible |
| — | Not possible |

Properties

| Technical data | FGFKU 3100502 | FGFKU 3100502 | FGFKU 3111202 | FGFKU 3121602 |
|------------------------------------|---------------------------|---------------|---------------|---------------|
| ID No. | 55449 | 55450 | 55451 | 53897 |
| Type | Steel-grid fixed resistor | | | |
| Resistance [Ω] | 22 \pm 10% | 15 \pm 10% | 15 \pm 10% | 15 \pm 10% |
| Thermal drift | \pm 10% | \pm 10% | \pm 10% | \pm 10% |
| Power [W] | 2500 | 2500 | 6000 | 8000 |
| Therm. time const. τ_{th} [s] | 30 | 30 | 20 | 20 |
| Pulse power for < 1 s [kW] | 50 | 50 | 120 | 160 |
| U_{max} [V] | 848 | 848 | 848 | 848 |
| Weight without packaging [g] | 7500 | 7500 | 12000 | 18000 |
| Protection class | IP20 | IP20 | IP20 | IP20 |
| Marks and test symbols | cURus, CE, UKCA | | | |

Tab. 107: FGFKU technical data

⁹ Not available since 06/23!

Dimensions

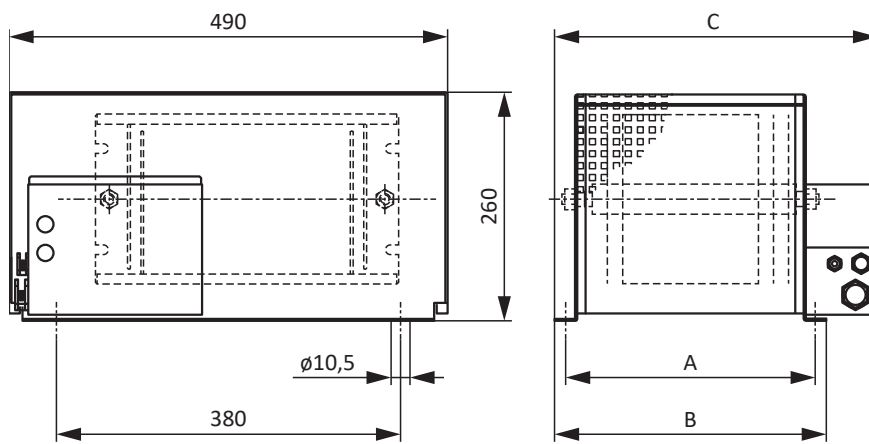


Fig. 10: FGFKU dimensional drawing

| Dimension | FGFKU 3100502 | FGFKU 3100502 | FGFKU 3111202 | FGFKU 3121602 |
|-----------|---------------|---------------|---------------|---------------|
| ID No. | 55449 | 55450 | 55451 | 53897 |
| A | 270 | 270 | 370 | 570 |
| B | 295 | 295 | 395 | 595 |
| C | 355 | 355 | 455 | 655 |

Tab. 108: FGFKU dimensions [mm]

7.9.4 Rear section braking resistor RB 5000

| Type | RB 5022 | RB 5047 | RB 5100 |
|--------|---------|---------|---------|
| ID No. | 45618 | 44966 | 44965 |
| SD6A02 | — | — | X |
| SD6A04 | — | — | X |
| SD6A06 | — | — | X |
| SD6A14 | — | X | (X) |
| SD6A16 | — | X | (X) |
| SD6A24 | X | — | — |
| SD6A26 | X | — | — |
| SD6A34 | — | — | — |
| SD6A36 | — | — | — |
| SD6A38 | — | — | — |

Tab. 109: Assignment of RB 5000 braking resistor – SD6 drive controller

- X Recommended
- (X) Possible
- Not possible

Properties

| Technical data | RB 5022 | RB 5047 | RB 5100 |
|--|----------------------------------|----------------------------------|----------------------------------|
| ID No. | 45618 | 44966 | 44965 |
| Resistance [Ω] | 22 \pm 10% | 47 \pm 10% | 100 \pm 10% |
| Thermal drift | \pm 10% | \pm 10% | \pm 10% |
| Power [W] | 100 | 60 | 60 |
| Therm. time const. τ_{th} [s] | 8 | 8 | 8 |
| Pulse power for < 1 s [kW] | 1.5 | 1.0 | 1.0 |
| U_{max} [V] | 800 | 800 | 800 |
| Weight without packaging [g] | 640 | 460 | 440 |
| Cable design | Radox | Radox | Radox |
| Cable length [mm] | 250 | 250 | 250 |
| Conductor cross-section [AWG] | 18/19 (0.82 mm ²) | 18/19 (0.82 mm ²) | 18/19 (0.82 mm ²) |
| Maximum torque of M5 threaded bolts [Nm] | 5 | 5 | 5 |
| Protection class | IP40 | IP40 | IP40 |
| Marks and test symbols | cURus, CE, UKCA | cURus, CE, UKCA | cURus, CE, UKCA |

Tab. 110: RB 5000 technical data

Dimensions

| Dimension | RB 5022 | RB 5047 | RB 5100 |
|--------------------------------------|---------|---------|-------------------|
| ID No. | 45618 | 44966 | 44965 |
| Height | 300 | 300 | 300 |
| Width | 94 | 62 | 62 |
| Depth | 18 | 18 | 18 |
| Drilling diagram corresponds to size | Size 2 | Size 1 | Size 0 and Size 1 |

Tab. 111: RB 5000 dimensions [mm]

Information

Note the dimensional data in the drilling diagram of the drive controller (see [Drive controllers](#) [▶ 117](#)) for the installation of a drive controller with rear section braking resistor.

7.10 Choke

Technical specifications for suitable chokes can be found in the following chapters.

7.10.1 TEP power choke

For each size 3 SD6 drive controller, you need one power choke. It dampens voltage and current peaks and reduces the load of the drive controller power feed-in.

Properties

| Technical data | TEP4010-2US00 |
|--|--|
| ID No. | 56528 |
| Phases | 3 |
| Thermally allowed continuous current | 100 A |
| Nominal current $I_{N,MF}$ | 90 A |
| Absolute loss P_V | 103 W |
| Inductance | 0.14 mH |
| Voltage range | 3 × 400 V _{AC} +32%/–50% 3 × 480 V _{AC} +10%/–58% |
| Voltage drop U_k | 2% |
| Frequency range | 50/60 Hz |
| Protection class | IP00 |
| Max. surrounding temperature $\vartheta_{amb,max}$ | 40 °C |
| Insulation class | B |
| Connection | Screw terminal |
| Connection type | Flexible with and without end sleeve |
| Max. conductor cross-section | 6 – 35 mm ² |
| Tightening torque | 2.5 Nm |
| Insulation stripping length | 17 mm |
| Installation | Screws |
| Directive | EN 61558-2-20 |
| UL Recognized Component (CAN; USA) | Yes |
| Marks and test symbols | cURus, CE |

Tab. 112: TEP technical data

Dimensions

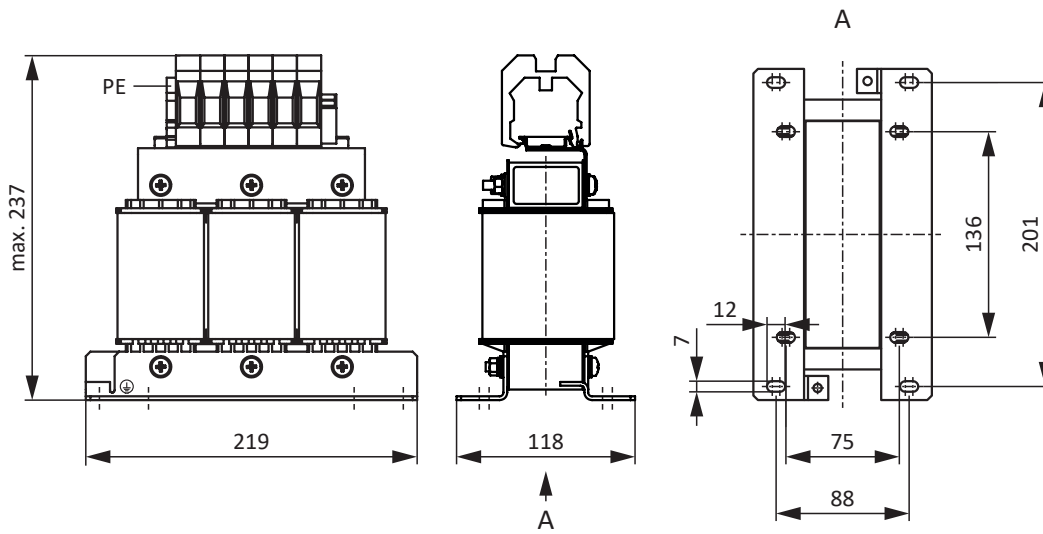


Fig. 11: Power choke dimensional drawing

| Dimensions | TEP4010-2US00 |
|--|---------------|
| Height [mm] | Max. 237 |
| Width [mm] | 219 |
| Depth [mm] | 118 |
| Vertical distance 1 – Fastening bores [mm] | 201 |
| Vertical distance 2 – Fastening bores [mm] | 136 |
| Horizontal distance 1 – Fastening bores [mm] | 88 |
| Horizontal distance 2 – Fastening bores [mm] | 75 |
| Drill holes – Depth [mm] | 7 |
| Drill holes – Width [mm] | 12 |
| Screw connection – M | M6 |
| Weight without packaging [g] | 9900 |

Tab. 113: TEP dimensions and weight

7.10.2 TEP output choke

Output chokes are required for connecting size 0 to 2 drive controllers from a cable length > 50 m in order to reduce interference pulses and protect the drive system.

Information

The following technical data only applies to a rotating magnetic field frequency of 200 Hz. For example, this rotating magnetic field frequency is achieved with a motor with 4 pole pairs and a nominal speed of 3000 rpm. Always observe the specified derating for higher rotating magnetic field frequencies. Also observe the relationship with the clock frequency.

Properties

| Technical data | TEP3720-OES41 | TEP3820-OCS41 | TEP4020-ORS41 |
|---|------------------------------|---------------|---------------|
| ID No. | 53188 | 53189 | 53190 |
| Voltage range | 3 × 0 to 480 V _{AC} | | |
| Frequency range | 0 – 200 Hz | | |
| Nominal current I _{N,MF} at 4 kHz | 4 A | 17.5 A | 38 A |
| Nominal current I _{N,MF} at 8 kHz | 3.3 A | 15.2 A | 30.4 A |
| Max. permitted motor cable length with output choke | 100 m | | |
| Max. surrounding temperature $\vartheta_{amb,max}$ | 40 °C | | |
| Protection class | IP00 | | |
| Winding losses | 11 W | 29 W | 61 W |
| Iron losses | 25 W | 16 W | 33 W |
| Connection | Screw terminal | | |
| Max. conductor cross-section | 10 mm ² | | |
| UL Recognized Component (CAN; USA) | Yes | | |
| Marks and test symbols | cURus, CE | | |

Tab. 114: TEP technical data

Dimensions

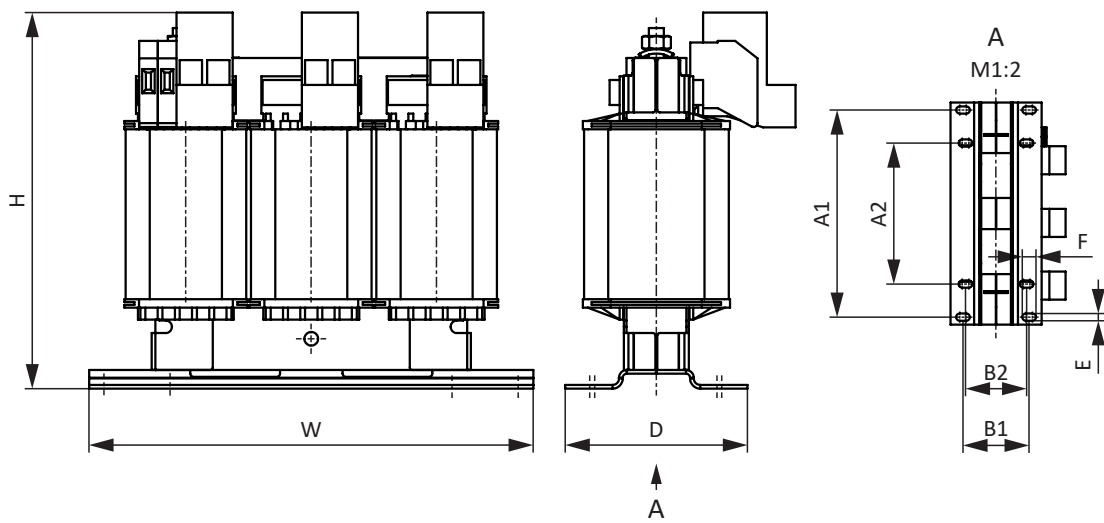


Fig. 12: TEP dimensional drawing

| Dimension | TEP3720-OES41 | TEP3820-OCS41 | TEP4020-ORS41 |
|---|---------------|---------------|---------------|
| Height H [mm] | Max. 150 | Max. 152 | Max. 172 |
| Width W [mm] | 178 | 178 | 219 |
| Depth D [mm] | 73 | 88 | 119 |
| Vertical distance – A1 fastening bores [mm] | 166 | 166 | 201 |
| Vertical distance – A2 fastening bores [mm] | 113 | 113 | 136 |
| Horizontal distance – B1 fastening bores [mm] | 53 | 68 | 89 |
| Horizontal distance – B2 fastening bores [mm] | 49 | 64 | 76 |
| Drill holes – Depth E [mm] | 5.8 | 5.8 | 7 |
| Drill holes – Width F [mm] | 11 | 11 | 13 |
| Screw connection – M | M5 | M5 | M6 |
| Weight without packaging [g] | 2900 | 5900 | 8800 |

Tab. 115: TEP dimensions and weight

7.11 Encoder adapter box

This chapter contains technical specifications for the LA6 encoder adapter box.

7.11.1 Dimensions

| Dimension | LA6 |
|-----------|------|
| W1 | 70 |
| W2 | 20 |
| D1 | 54 |
| D2 | 51 |
| H1 | 129 |
| H2 | 149 |
| H3 | 48.8 |
| A | 140 |
| B | 4.5 |

Tab. 116: LA6 dimensions [mm]

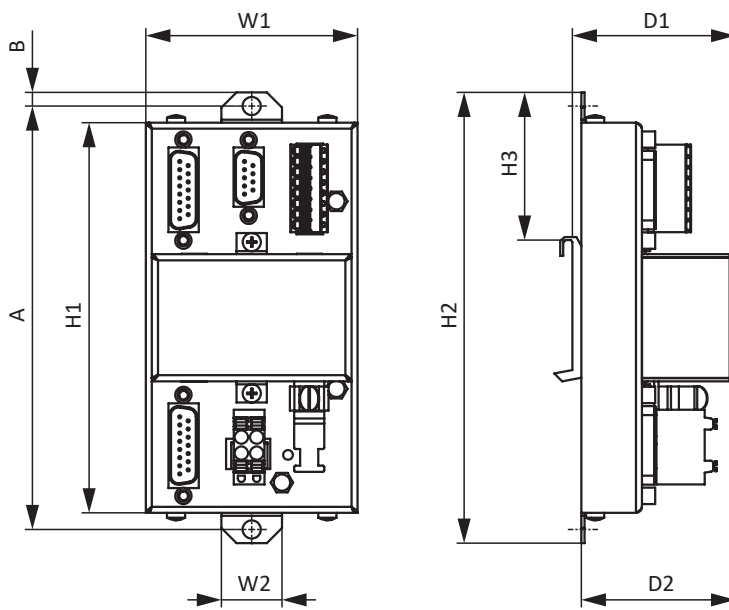


Fig. 13: LA6 dimensional drawing [mm]

7.11.2 Weight

| Type | Weight without packaging [g] |
|------|------------------------------|
| LA6 | 400 |

Tab. 117: LA6 weight [g]

8 Project configuration

Relevant information on the project configuration and design of your drive system can be found in the following chapters.

EPLAN macros for all 6th generation drive controllers and their accessories are available in the EPLAN Data Portal for efficient planning and support of your project configuration.

8.1 Drive controller

Minimum time between 2 energizing processes

The drive controllers have temperature-dependent resistors in the charging circuit that prevent the devices from being damaged when being connected to the grid after a fault, such as a short-circuited DC link, incorrect wiring, etc. These resistors are heated when charging the DC link. In order to prevent overloading, a specified, minimum time period must be maintained between energizing two devices.

Information

For the time span between energizing two devices, note that:

- Direct, repeat activation of the supply voltage is possible for cyclical power-on/power-off operation.

Information

The STO safety function is available for safe stopping as an alternative to continuous, cyclical power-on/power-off operation.

8.2 DC link connection

Braked motors work like generators: Operating with an active drive controller, they convert kinetic energy from movement into electrical energy. This electrical energy is stored in the DC link capacitors of the drive controller. It can be supplied to powered motors with connected DC circuits and be used efficiently as a result.

However, capacitors in the DC link can only accept a limited amount of energy. The DC link voltage increases when a motor decelerates. If the DC link voltage rises above a defined limit, a chopper circuit is activated that tries to convert the excess energy into heat by means of a connected braking resistor. If the permitted maximum voltage is nonetheless reached, any possible damage must be prevented. The drive controller switches to the Fault state and shuts down.

In a DC link connection, the DC link capacitors of the drive controllers involved are connected in parallel. As a result, the maximum acceptable amount of energy increases in the DC link in comparison to a single unit.

The DC link connection can help save energy and reduce costs, especially in coil winding technology or during regular acceleration and braking cycles.

8.2.1 Information on design and operation

In order to connect the capacitors of multiple drive controllers, you need a separate DL6A Quick DC-Link module for each drive controller in the group.

Information

Note that Quick DC-Link can be subject to system or country-specific standards.

Central braking resistor

During a controlled emergency stop, all drive controllers may brake at the same time. During the design phase, check whether a central braking resistor is necessary to be able to stop certain system parts safely within a prescribed time.

Electrical data of the drive controllers

The electrical data of the individual types of drive controllers must be observed in the design and operation of the DC link connection, including the following in particular:

- Self-capacitance C_{pU}
- Charging capacity $C_{N,PU}$
- Nominal input current $I_{1N,PU}$
- Derating of the nominal input current

The values can be found in the technical data of the drive controller (see [Electrical data \[▶ 47\]](#)). For calculation examples, refer to the project configuration of the DC link connection (see [Design \[▶ 101\]](#)).

Maximum voltage and maximum current

The maximum DC link voltage is 750 V_{DC} and the maximum permitted overall current is 200 A.

Group with drive controllers of size 3

Furthermore, the following framework conditions apply in a group with size 3 drive controllers:

- If a group consists of drive controllers in sizes 0, 1, 2 and 3, only those of size 3 may be connected to the grid; the remaining drive controllers may be supplied only with DC voltage
- You may connect a maximum of two drive controllers of size 3
- A TEP4010-2US00 power choke must be upstream of each size 3 drive controller connected to the grid

Protective measures

Obey the information on the following topics:

- [Power grid supply with DC link connection \[▶ 143\]](#)
- [Line fuses for DC link connection \[▶ 145\]](#)
- [Grid connection for DC link connection \[▶ 148\]](#)

8.2.2 Design

Charging capacity

The charging circuit integrated into a drive controller can charge the DC links of other drive controllers in addition to its own DC link.

Information

When designing the DC link connection, note that the sum of the charging capacities of the drive controllers connected to the grid is greater than or equal to the sum of the self-capacitances of all drive controllers in the DC link group.

Example – Checking the charging capacity of drive controllers connected to the grid

Two SD6A26 drive controllers connected to the grid are to charge five SD6A04 drive controllers.

Calculate the charging capacity of both drive controllers connected to the grid as follows:

$$2 \times 1400 \mu\text{F} = 2800 \mu\text{F}$$

The DC link capacitance in the group to be charged corresponds to the sum of the self-capacitances of all drive controllers in the group:

$$2 \times 1000 \mu\text{F} (\text{SD6A26}) + 5 \times 135 \mu\text{F} (\text{SD6A04}) = 2675 \mu\text{F}$$

This means that it is less than the cumulative charging capacity of both drive controllers connected to the grid. In this case, Quick DC-Link is permitted.

Current load capacity of the input rectifiers

Information

When designing the DC link connection, note that the required supply current does not exceed the maximum supply current in total.

$$I_{\text{minLINE}} < I_{\text{maxLINE}}$$

For calculating the effective as well as maximum supply current, SERVOSOFT is helpful mechanical and electrical design software for drive systems.

Calculating supply current for motors

The necessary supply current for motors can be determined using the required drive output:

$$P_{\text{LINE}} \cong P_{\text{totalMOT}}$$

Calculating motor rating and voltage

The following formulas and assumptions are used to calculate the motor rating and voltage:

$$P_{\text{MOT}} = \sqrt{3} \times U_{\text{MOT}} \times I_{\text{MOT}} \times \cos \varphi_{\text{MOT}}$$

$$P_{\text{Line}} = \sqrt{3} \times U_{\text{Line}} \times I_{\text{Line,nec}} \times \lambda_{\text{Line}}$$

$$U_{\text{maxMOT}} = 0,8 \times U_{\text{LINE}}$$

$$I_{\text{minLINE}} = \frac{U_{\text{MOT}}}{U_{\text{LINE}}} \times I_{\text{MOT}} \times \frac{\cos \varphi_{\text{MOT}}}{\lambda_{\text{LINE}}}$$

In addition, the field weakening range begins.

The active factor for a synchronous servo motor ($\cos \phi_{\text{MOT}}$) is about 0.9 in 4 kHz operation and about 0.98 in 8 kHz operation. The active factor of an asynchronous motor can be determined according to the accompanying electrical data.

The following is true for the power factor of the supply grid:

$$\lambda_{\text{LINE}} = 0,6 \rightarrow I_{\text{LINE}} < 40\text{A}$$

$$\lambda_{\text{LINE}} = 0,7 \rightarrow I_{\text{LINE}} > 40\text{A}$$

The required motor rating must be calculated in order to determine the necessary supply current and the number and sizes of the drive controllers to be connected to the grid as part of the design.

The overall maximum permitted input current I_{maxLINE} is the sum of the maximum input currents of all connected drive controllers in continuous operation. Dynamic movements of the connected motors are possible in the permitted range.

The following is true for the sum of the input currents of the connected drive controllers:

- If the respective power of all drive controllers connected to the grid is identical, the sum of the maximum input currents in the network is calculated using the formula

$$I_{\text{maxLINE}} = 0,8 \times n_{\text{fed}} \times I_{\text{IN,PU}}$$

- If the respective power of all drive controllers connected to the grid differs, the sum of the input current is calculated by multiplying the input current of the smallest drive controller connected to the grid by the number of connected drive controllers

$$I_{\text{maxLINE}} = 0,9 \times n_{\text{fed}} \times I_{\text{IN,PUmin}}$$

To prevent current asymmetry, all drive controllers connected to the grid with different ratings must contain the same fuse protection, which in turn must correspond to the drive controller with the least power.

Current load capacity of the copper rails

DC rails connect the DC link capacitors of the drive controllers with one another. They are copper rails that are installed using the quick fastening clamps. DC rails must have a cross-section of 5×12 mm. The maximum permitted current load capacity of the copper rails is 200 A.

Wiring example

The example in the appendix (see [DC link connection \[▶ 469\]](#)) illustrates the basic connection of multiple SD6 drive controllers based on a DC link connection with a DL6A Quick DC-Link.

8.3 Mixed operation

You can combine the SD6 drive controller with other 6th generation STOBER drive controllers.

For a DC link connection in mixed operation, however, only devices of the same series (e.g. SD6) and of same type (e.g. SD6A16) may be supplied with power.

For example, two SC6A261 drive controllers are to be coupled with one SD6A06 drive controller in the DC link. In this case, both SC6A261 drive controllers are connected to the supply grid. The SD6A06 drive controller may only be connected to the DC link of the SC6A261 drive controllers in this case, not to the supply grid.

Coupling via Quick DC-Link

The graphic below shows an example of the grounding concept in mixed operation when using Quick DC-Link rear section modules. The grounding conductor connection between the drive controller and the associated Quick DC-Link rear section module (type DL6B or DL6A) is made using the metallic connection of the housings. The grounding conductor connection between the DL6B type rear section modules is established using a copper rail (PE rail).

Obey the requirements for connecting the grounding conductor to the drive controllers (see [Protective grounding \[▶ 149\]](#)).

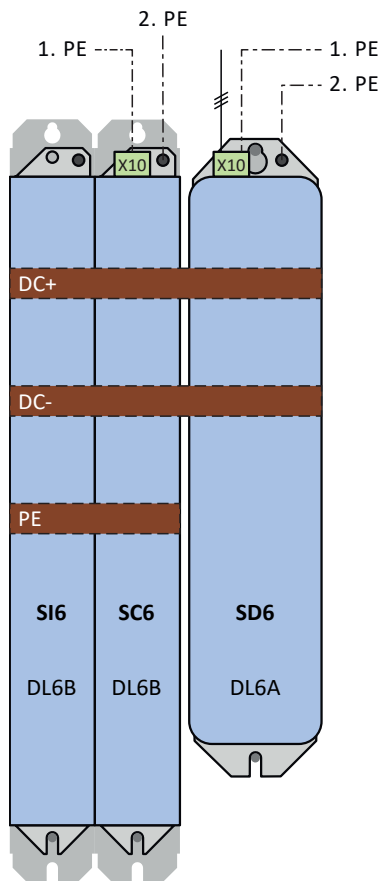


Fig. 14: Grounding concept in mixed operation of SI6 and SC6 with powered SD6 drive controller

If the grounding conductor connection over the 3rd copper rail (PE rail) is omitted between the DL6B rear section modules, the SI6 drive controllers must be grounded to the ground bolt.

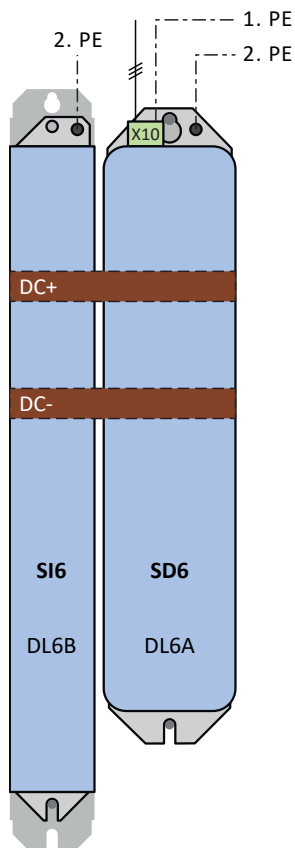


Fig. 15: Grounding concept in mixed operation of SI6 and powered SD6 drive controller

Direct coupling via terminal X22

If you would like to connect two drive controllers directly via terminal X22 without a rear section module, there are special requirements for the connecting wiring:

- The connection cables must have a nominal voltage of at least $U_0/U: 450/750 V_{DC}$, e.g. requirement H07V-K.
- The connection lines have to be implemented as twisted pairs.
- At line lengths of 30 cm or more, the lines also must be implemented with shielding and the shield must be applied over a wide area in the immediate vicinity of the drive controller.
- Select the maximum permissible conductor cross-section (with or without end sleeve, depending on the design) of the drive controller with the smaller size as the conductor cross-section.
- Obey the terminal specifications for terminal X22 (see [Terminal specifications](#) [▶ 458]).

Obey the requirements for connecting the grounding conductor (see [Protective grounding](#) [▶ 149]).

8.4 Motor

During the project configuration for motors, note the framework conditions described below.

Rotational motors (synchronous servo motors, asynchronous motors, torque motors)

The maximum possible motor speed is limited to 36000 rpm.

The following relationship applies:

$$\text{Rotating magnetic field frequency} = \text{Motor speed} \times \text{Number of pole pairs} \div 60$$

Since the output frequency f_{2PU} can be a maximum of 700 Hz, the motor speed can only be reached if the calculated rotating magnetic field frequency is less than f_{2PU} .

Translational motors (linear motors)

The maximum possible motor velocity is limited to 20,000 m/min.

The following relationship applies:

$$\text{Field frequency} = \text{Velocity in m/min} \times 1000 \div (60 \div \text{pole distance in mm})$$

Since the output frequency f_{2PU} can be a maximum of 700 Hz, the motor velocity can only be reached if the calculated field frequency is less than f_{2PU} .

8.5 Choke

For project configuration of the chokes, note the general conditions described below.

8.5.1 TEP power choke

Derating – Effect of surrounding temperature

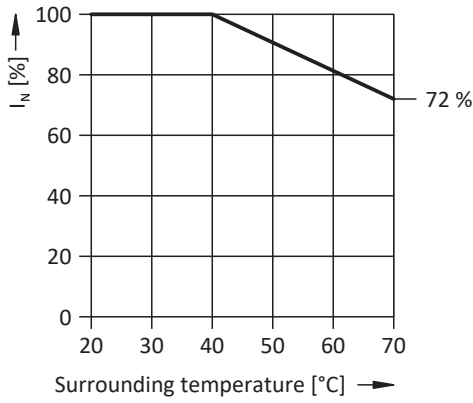


Fig. 16: Derating the nominal current based on surrounding temperature

Derating – Effect of the installation elevation

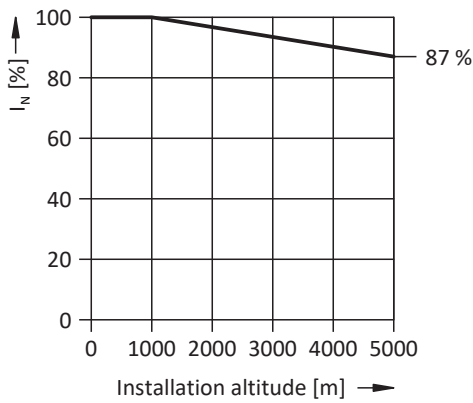


Fig. 17: Derating the nominal current depending on installation elevation

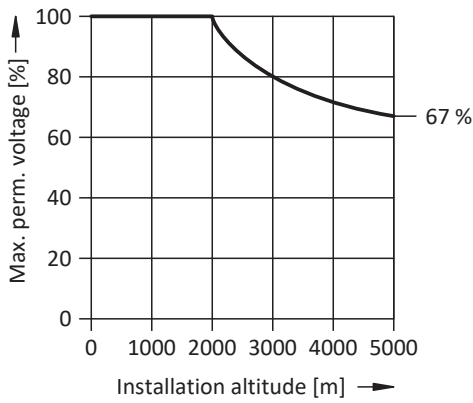


Fig. 18: Derating the voltage depending on installation elevation

8.5.2 TEP output choke

Select the output chokes in accordance with the nominal currents of the output chokes, motor and drive controller. In particular, observe the derating of the output choke for rotating magnetic field frequencies higher than 200 Hz. You can calculate the rotating magnetic field frequency for your drive with the following formula:

$$f_N = n_N \times \frac{p}{60}$$

Derating – Effect of the clock frequency

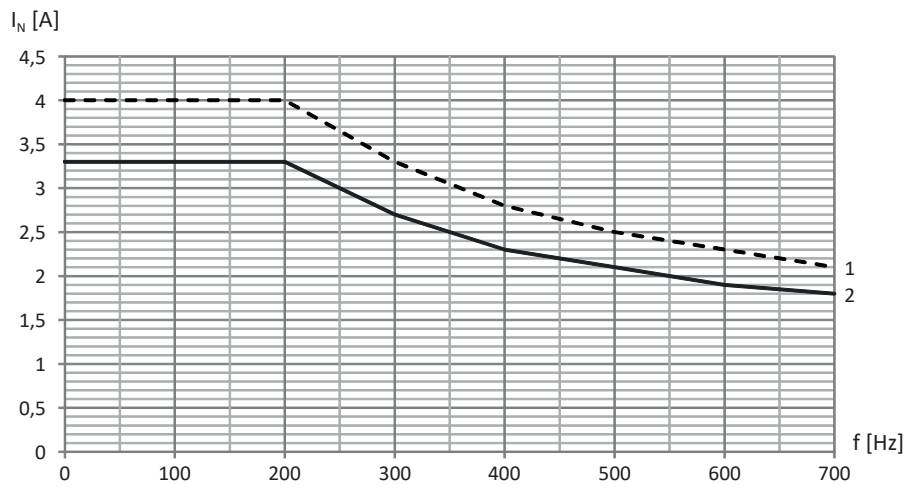


Fig. 19: Derating the nominal current depending on the clock frequency, TEP3720-0ES41

- 1 4 kHz clock frequency
- 2 8 kHz clock frequency

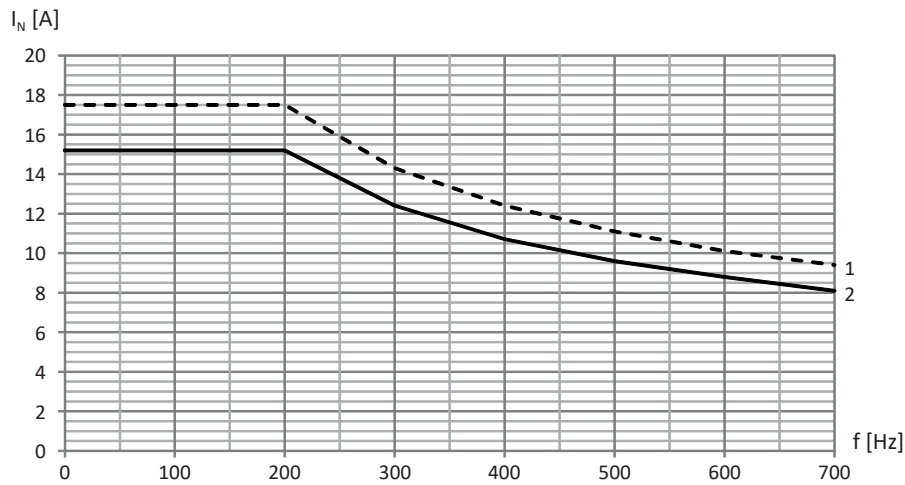


Fig. 20: Derating the nominal current depending on the clock frequency, TEP3820-0CS41

- 1 4 kHz clock frequency
- 2 8 kHz clock frequency

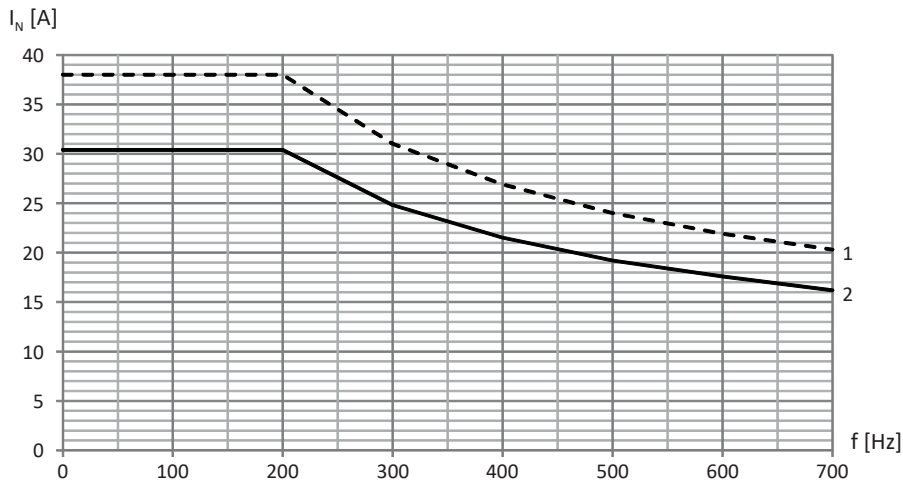


Fig. 21: Derating the nominal current depending on the clock frequency, TEP4020-ORS41

- 1 4 kHz clock frequency
- 2 8 kHz clock frequency

Derating – Effect of surrounding temperature

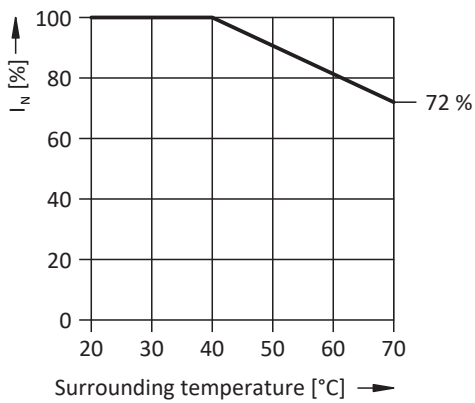


Fig. 22: Derating the nominal current based on surrounding temperature

Derating – Effect of the installation elevation

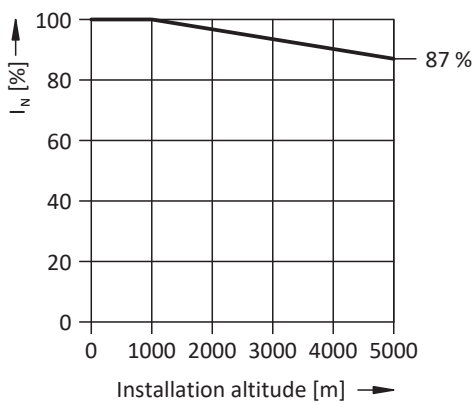


Fig. 23: Derating the nominal current depending on installation elevation

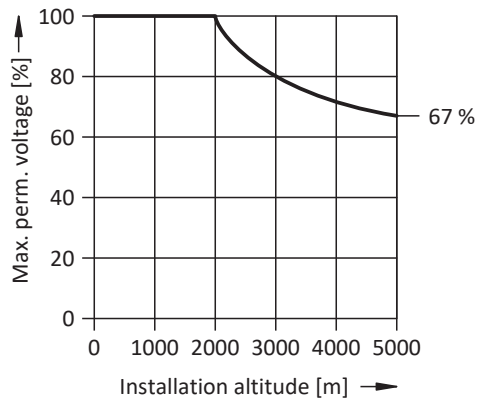


Fig. 24: Derating the voltage depending on installation elevation

9 Storage

Store the products in a dry and dust-free room if you do not install them immediately.

9.1 Drive controllers

The DC link capacitors can lose their electrical strength due to long storage times and must be reformed before commissioning.

This property does not apply to size 3 DC link capacitors. Therefore, size 3 drive controllers do not require reforming even after prolonged storage periods.

ATTENTION!

Material damage due to reduced electrical strength!



Reduced electrical strength can cause considerable material damage when switching on the drive controller.

- Reform drive controllers in storage annually or before commissioning.

9.1.1 Annual reforming

To prevent damage to stored drive controllers, STOBER recommends connecting stored devices to the supply voltage once per year for one hour.

The following graphics show the basic line connection for 1-phase and 3-phase devices.

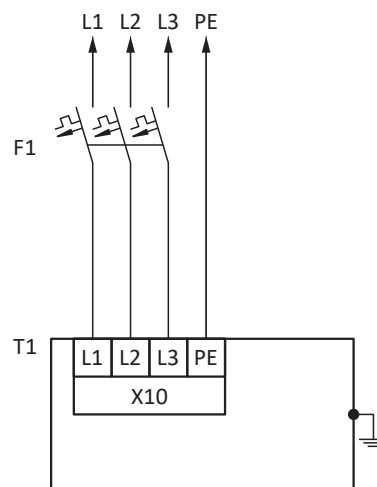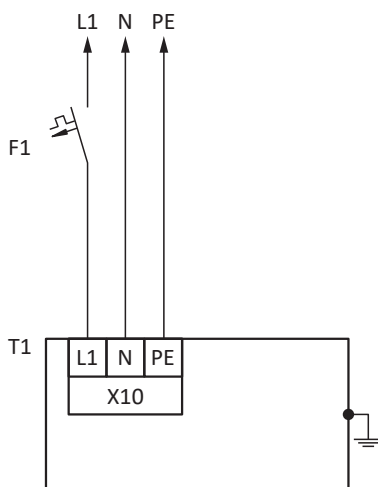


| | |
|---------|---------------------|
| L1 – L3 | Lines 1 to 3 |
| N | Neutral conductor |
| PE | Grounding conductor |
| F1 | Fuse |
| T1 | Drive controller |

9.1.2 Reforming before commissioning

If annual reforming is not possible, implement reforming on stored devices before commissioning. Note that the voltage levels depend on the storage time.

The following graphic shows the predominant supply connection.

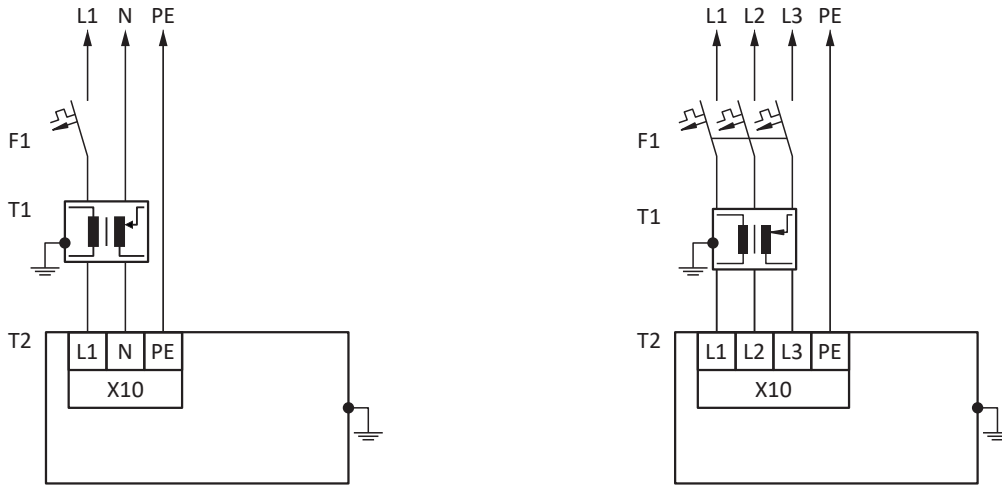

- L1 – L3 Lines 1 to 3
- N Neutral conductor
- PE Grounding conductor
- F1 Fuse
- T1 Variable transformer
- T2 Drive controller

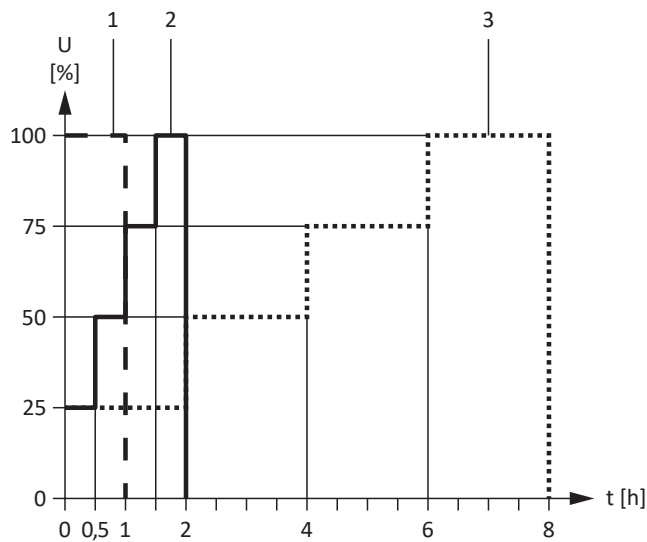


Fig. 25: Voltage levels dependent on storage time

- | | | |
|---|------------------------------|---|
| 1 | Storage time of 1 – 2 years: | Apply voltage for 1 hour before switching on. |
| 2 | Storage time of 2 – 3 years: | Implement reforming according to the graph before switching on. |
| 3 | Storage time ≥ 3 years: | Implement reforming according to the graph before switching on. |
| | Storage time < 1 year: | No actions required. |

10 Installation

The following chapters describe the installation of a drive controller and the available accessories.

For information on replacing a drive controller, see [Replacement](#) [▶ 446].

10.1 Basic assembly instructions

Note the points described below for installation.

10.1.1 Drive controllers


Note the following points for installation:

- Prevent condensation, e.g. with anti-condensation heating elements.
- For reasons related to EMC, use installation plates with a conductive surface (unpainted, etc.).
- Avoid installation above or in the immediate vicinity of heat-generating devices, e.g. output chokes or braking resistors.
- To ensure there is sufficient air circulation in the control cabinet, observe the minimum clearances.
- Install the devices vertically.

10.1.2 Braking resistor

Note the permitted mounting positions for the braking resistor.

FZMU, FZZMU tubular fixed resistor

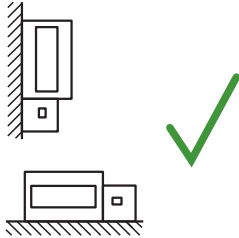

Permitted installation:


- On vertical surfaces with terminals downwards
- On horizontal surfaces
- In control cabinets



Impermissible installation:

- On vertical surfaces with terminals upwards, left or right
- Outside of control cabinets

GVADU, GBADU flat resistor

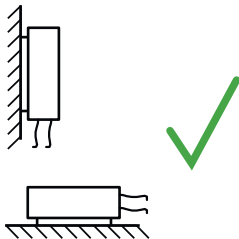

Permitted installation:


- On vertical surfaces with cables downwards
- On horizontal surfaces
- Installation outside of the control cabinet possible for mechanical protection of the conductors



Impermissible installation:

- On vertical surfaces with cables upwards

FGFKU steel-grid fixed resistor

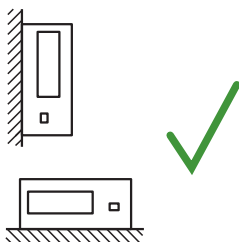

Permitted installation:

- On vertical surfaces with terminals downwards
- Top and bottom perforated sheets
- On horizontal surfaces
- Installation on, next to or in the control cabinet possible




Impermissible installation:

- On vertical surfaces with terminals upwards, left or right

10.1.3 Choke

In relation to the flow of cooling air, the following mounting positions are permitted for the TEP output choke:

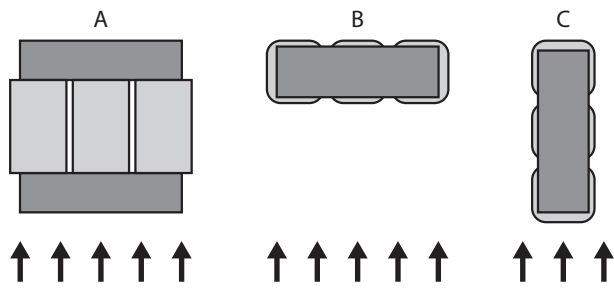

10.2 Minimum clearances

Note the minimum clearances for installation below.

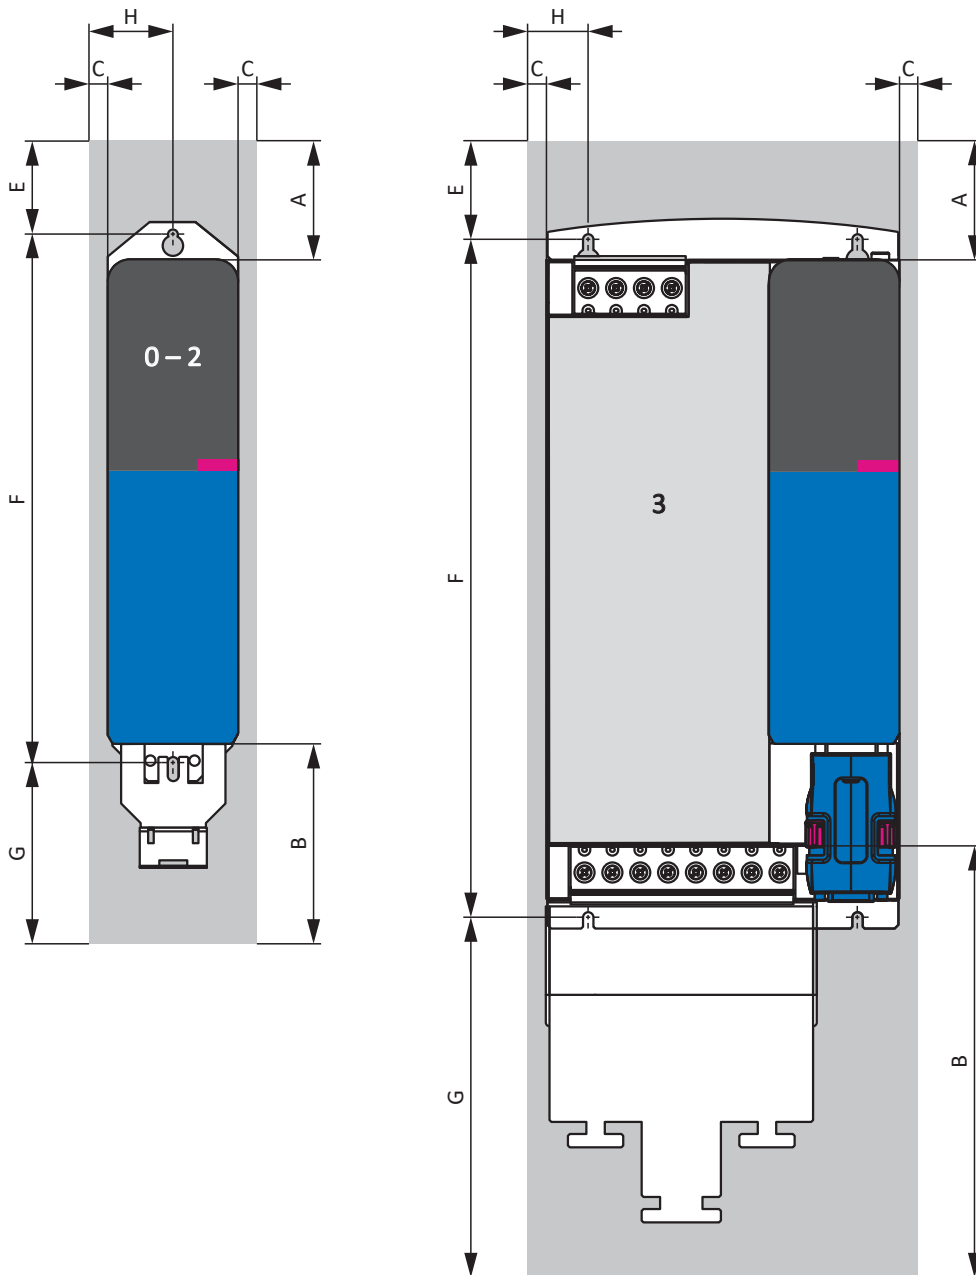


Fig. 26: Minimum clearances

The dimensions specified in the table relate to the outer edges of the drive controller.

| Minimum clearance | A (above) | B (below) | C (one the side) ¹⁰ |
|---------------------------|-----------|-----------|--------------------------------|
| Size 0 – Size 2 | 100 | 100 | 5 |
| ... with EMC shield plate | 100 | 120 | 5 |
| Size 3 | 100 | 100 | 5 |
| ... with EMC shield plate | 100 | 220 | 5 |

Tab. 118: Minimum clearances [mm]

¹⁰ Installation without Quick DC-Link module

| Dimension | E | F | G | H |
|---------------------------|----|-------|---------------|------|
| Size 0, size 1 | 86 | 283+2 | approx. 89 | 40 |
| ... with EMC shield plate | 86 | 283+2 | approx. 109 | 40 |
| Size 2 | 86 | 283+2 | approx. 89 | 57.5 |
| ... with EMC shield plate | 86 | 283+2 | approx. 109 | 57.5 |
| Size 3 | 89 | 365+2 | approx. 59.5 | 25 |
| ... with EMC shield plate | 89 | 365+2 | approx. 179.5 | 25 |

Tab. 119: Dimensions [mm]

Chokes and filters

Avoid installation below drive controllers or supply modules. For installation in a control cabinet, a distance of approximately 100 mm to other neighboring components is recommended. This distance ensures proper heat dissipation for chokes and filters.

Braking resistors

Avoid installation below drive controllers or supply modules. In order for heated air to flow out unimpeded, a minimum clearance of approximately 200 mm must be maintained in relation to neighboring components or walls and approximately 300 mm must be maintained to components above or ceilings.

10.3 Drilling diagrams and bore dimensions

Drilling diagrams and dimensions can be found in the following chapters.

10.3.1 Drive controllers

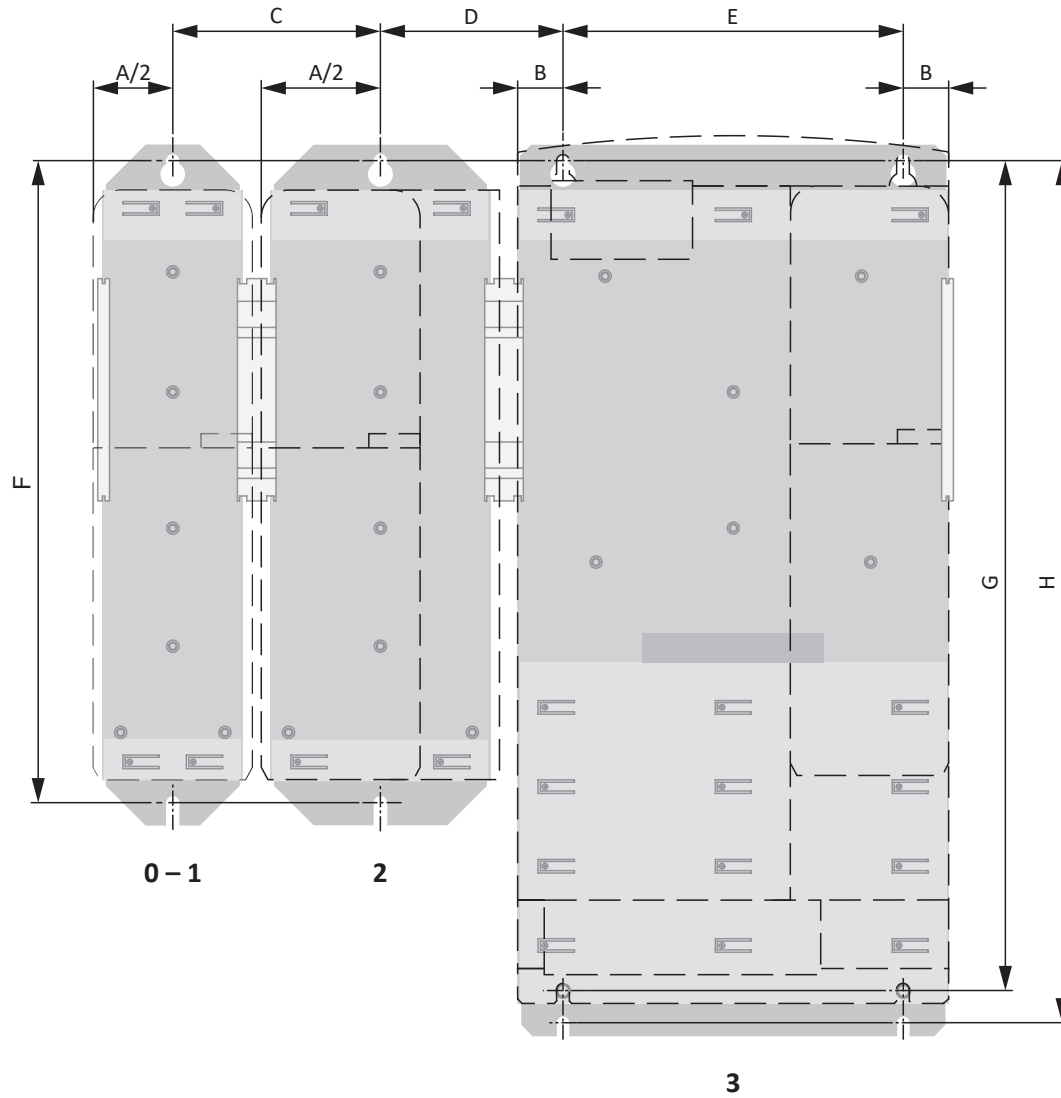


Fig. 27: SD6 and DL6A drilling diagram

The drilling dimensions depend on the selected design.

The following specifications apply to installation without a rear section module:

| SD6 dimension | | Size 0, size 1 | Size 2 | Size 3 | |
|--|---|----------------|--------|--------------|--------|
| Horizontal SD6 fastening bores Ø 4.2 (M5) | A | 70 | 105 | — | |
| | B | — | — | 20 | |
| | E | — | — | 150+0.2/-0.2 | |
| | C | Size 0, size 1 | 76±1 | 93.5±1 | — |
| | C | Size 2 | 93.5±1 | 111±1 | — |
| | D | Size 0, size 1 | — | — | 61±1 |
| | D | Size 2 | — | — | 78.5±1 |
| | D | Size 3 | — | — | 46±1 |
| Vertical SD6 fastening bores Ø 4.2 (M5) | F | 283+2 | 283+2 | — | |
| | G | — | — | 365+2 | |

Tab. 120: Drilling dimensions for SD6 drive controller [mm]

The following specifications apply to installation with a DL6A Quick DC-Link or RB 5000 rear section braking resistor:

| Dimension of DL6A / rear section braking resistor | | Size 0, size 1 | Size 2 | Size 3 | |
|--|---|----------------|--------|--------------|--------|
| Horizontal rear section module fastening bores Ø 4.2 (M5) | A | 70 | 105 | — | |
| | B | — | — | 20 | |
| | E | — | — | 150+0.2/-0.2 | |
| | C | Size 0, size 1 | 74+1 | 91.5+1 | — |
| | C | Size 2 | 91.5+1 | 109+1 | — |
| | D | Size 0, size 1 | — | — | 63+1 |
| | D | Size 2 | — | — | 80.5+1 |
| | D | Size 3 | — | — | 52+1 |
| Vertical rear section module fastening bores Ø 4.2 (M5) | F | 283+2 | 283+2 | — | |
| | H | — | — | 380+2 | |

Tab. 121: Drilling dimensions for DL6A Quick DC-Link or RB 5000 rear section braking resistor [mm]

10.3.2 Braking resistor

10.3.2.1 FZMU, FZZMU tubular fixed resistor

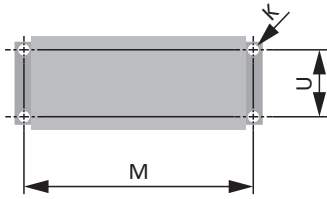


Fig. 28: FZMU, FZZMU drilling diagram

| Dimension | FZMU 400×65 | FZZMU 400×65 |
|-----------|-------------|--------------|
| K | 6.5 × 12 | 6.5 × 12 |
| M | 430 | 426 |
| U | 64 | 150 |

Tab. 122: FZMU, FZZMU drilling dimensions [mm]

10.3.2.2 GVADU, GBADU flat resistor

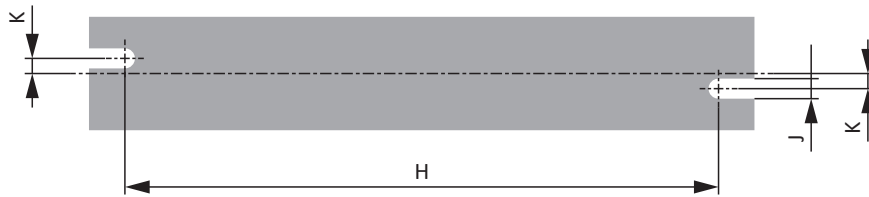


Fig. 29: GVADU, GBADU drilling diagram

| Dimension | GVADU 210×20 | GBADU 265×30 | GBADU 405×30 | GBADU 335×30 | GBADU 265×30 |
|-----------|-----------------|-----------------|-----------------|-----------------|-----------------|
| H | 192 | 246 | 386 | 316 | 246 |
| K | 2.5 | 4 | 4 | 4 | 4 |
| J | 4.3 | 5.3 | 5.3 | 5.3 | 5.3 |

Tab. 123: GVADU, GBADU drilling dimensions [mm]

10.3.2.3 FGFKU steel-grid fixed resistor

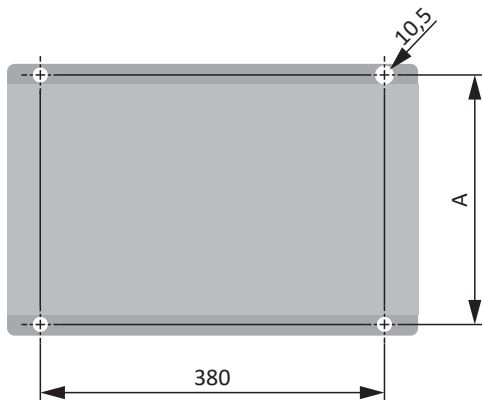


Fig. 30: FGFKU drilling diagram

| Dimension | FGFKU 3100502 | FGFKU 3111202 | FGFKU 3121602 |
|-----------|---------------|---------------|---------------|
| A | 270 | 370 | 570 |

Tab. 124: FGFKU drilling dimensions [mm]

10.3.2.4 RB 5000 rear section braking resistor

| Information |
|---|
| <p>Note the dimensional data in the drilling diagram of the drive controller (see Drive controllers [▶ 117]) for the installation of a drive controller with rear section braking resistor.</p> |

10.3.3 Choke

10.3.3.1 TEP power choke

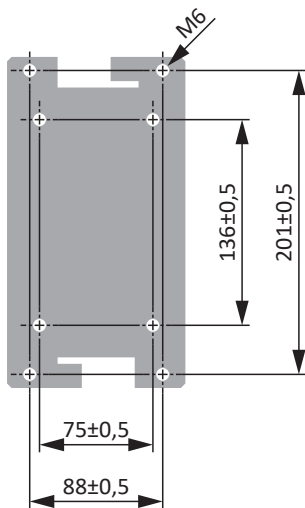


Fig. 31: Power choke drilling diagram

10.3.3.2 TEP output choke

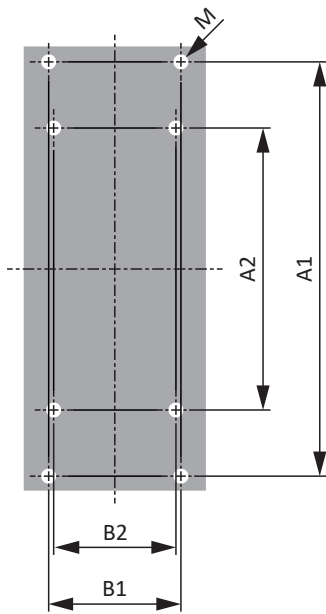



Fig. 32: TEP drilling diagram

| Dimension | TEP3720-OES41 | TEP3820-OCS41 | TEP4020-ORS41 |
|---|---------------|---------------|---------------|
| Vertical distance – A1 fastening bores [mm] | 166 | 166 | 201 |
| Vertical distance – A2 fastening bores [mm] | 113 | 113 | 136 |
| Horizontal distance – B1 fastening bores [mm] | 53 | 68 | 89 |
| Horizontal distance – B2 fastening bores [mm] | 49 | 64 | 76 |
| Drill holes – Depth E [mm] | 5.8 | 5.8 | 7 |
| Drill holes – Width F [mm] | 11 | 11 | 13 |
| Screw connection – M | M5 | M5 | M6 |

Tab. 125: TEP drilling dimensions

10.4 Length of copper rails

If you would like to connect SD6 drive controllers in the DC link group using a DL6A Quick DC-Link, you need two copper rails with a cross-section of 5 × 12 mm in the correct length.

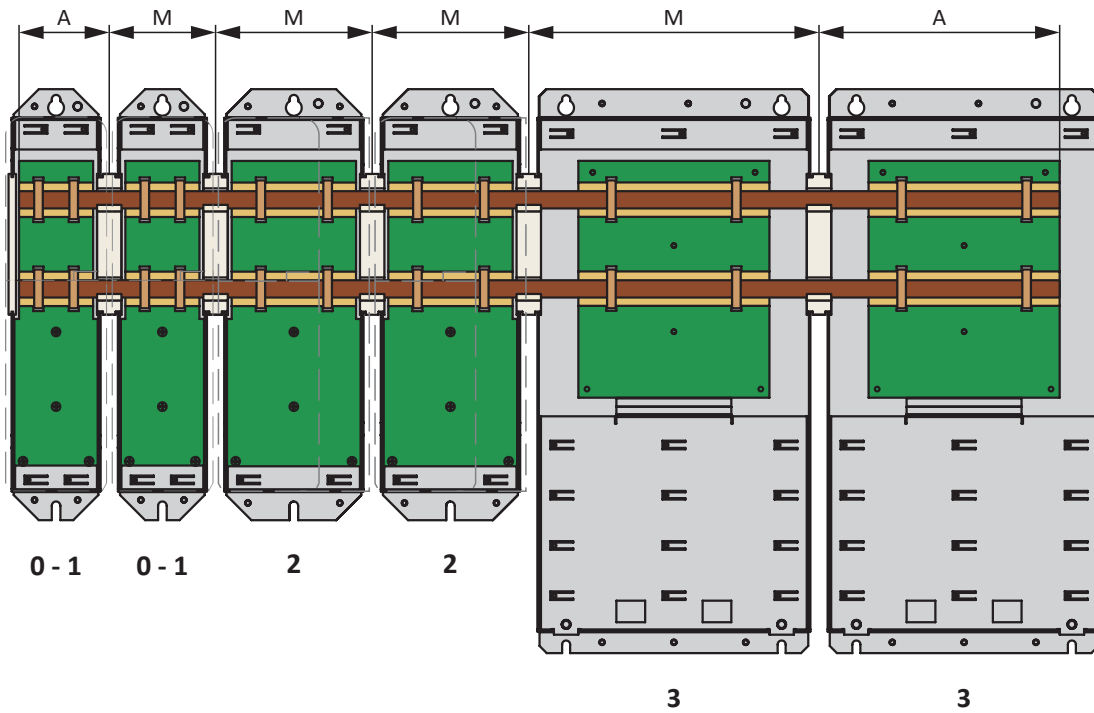

Note the following specifications for determining the length:

| Position | Dimension | Size 0, size 1 | Size 2 | Size 3 |
|-------------------------------|-----------|----------------|--------|--------|
| Beginning or end of the group | A | 62 | 97 | 167 |
| Within the group | M | 74 | 109 | 202 |

Tab. 126: Determination of the correct length of the copper rails [mm]

10.5 Installing the communication module

In order to connect EtherCAT, CANopen or PROFINET, you need an EC6, CA6 or PN6 communication module. The communication module is installed in the upper slot. Installation is identical for all communication modules.

WARNING!

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

ATTENTION!

Damage to property due to electrostatic discharge!

Take appropriate measures when handling exposed printed boards, e.g. wearing ESD-safe clothing.

Do not touch contact surfaces.


Tools and material

You will need:


- A TORX screwdriver TX10
- The cover and screws included with the communication module

Installation


1. Unscrew the fastening screw of the dummy cover on top of the drive controller and remove the cover.

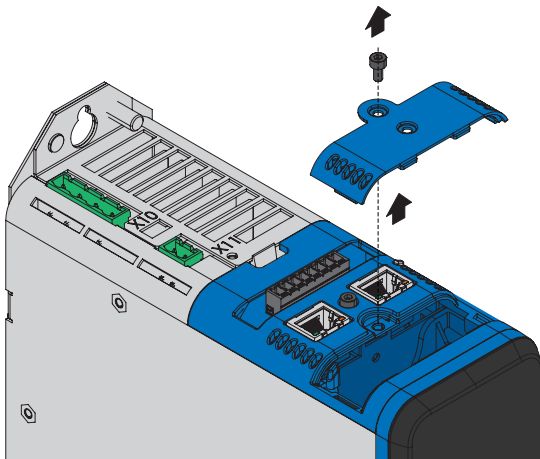


- Slide the communication module on the guide rails into the drive controller.

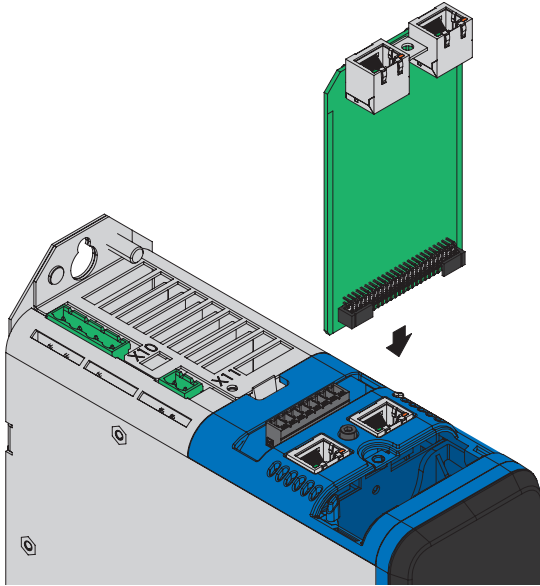


- Press on the module in order to push the pin contacts into the box header.
- Set the tabs of the cover included with the communication module in front into the notch at an angle.

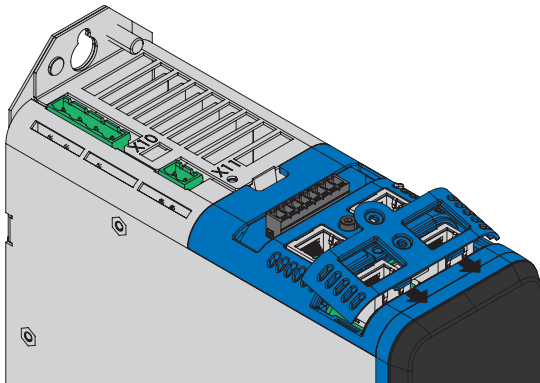

- Place the cover on the drive controller so that the tabs lie under the edge.

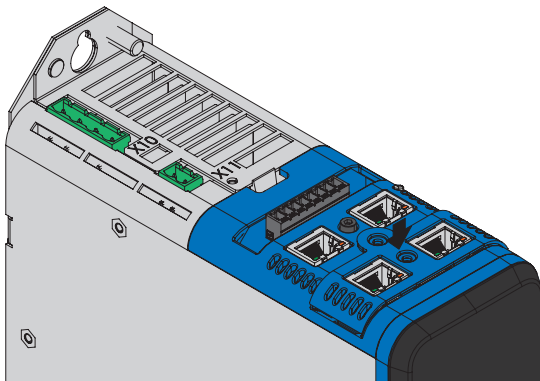

6. Attach the cover using both screws.

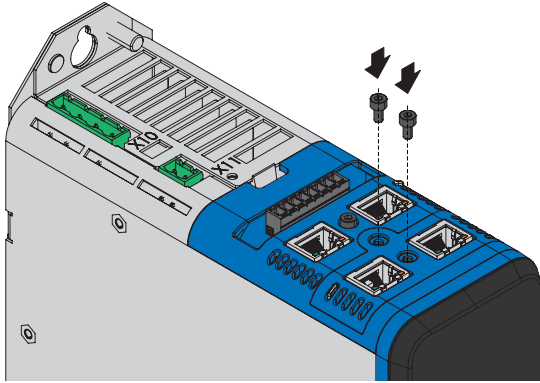

10.6 Installing the terminal module

Analog and digital signals can be connected only by means of XI6, RI6 or IO6 terminal modules. Installation is identical for all terminal modules.

WARNING!

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

ATTENTION!

Damage to property due to electrostatic discharge!

Take appropriate measures when handling exposed printed boards, e.g. wearing ESD-safe clothing.

Do not touch contact surfaces.


Tools and material

You will need:


- A TX10 Torx screwdriver
- The accessories included with the terminal module

Installation


1. Lightly press the snap closure on the front cover to unlock it.

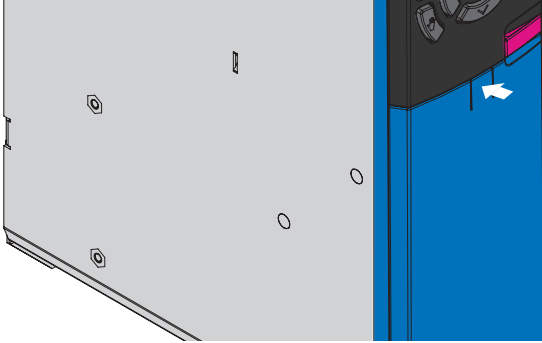


2. Push the front cover down as far as it will go.

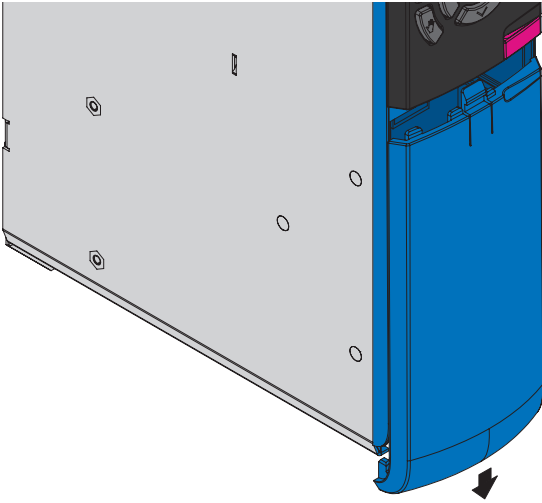


3. Pull the cover forwards to remove it.

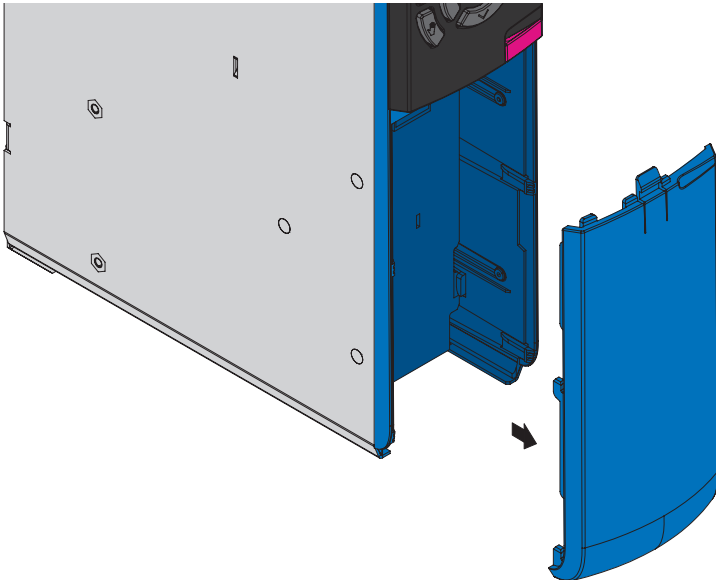


4. Insert the terminal module so that the notches of the module as well as the hold-down devices on the drive controller can be guided past each other. The rear side of the module touches the drive controller.

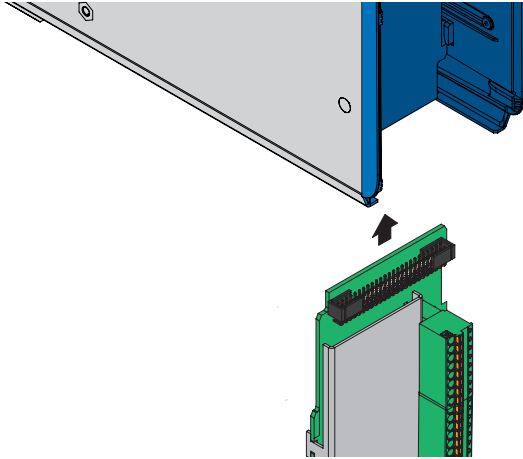

5. Push the terminal module upwards so that the pin contacts are pushed into the box header.

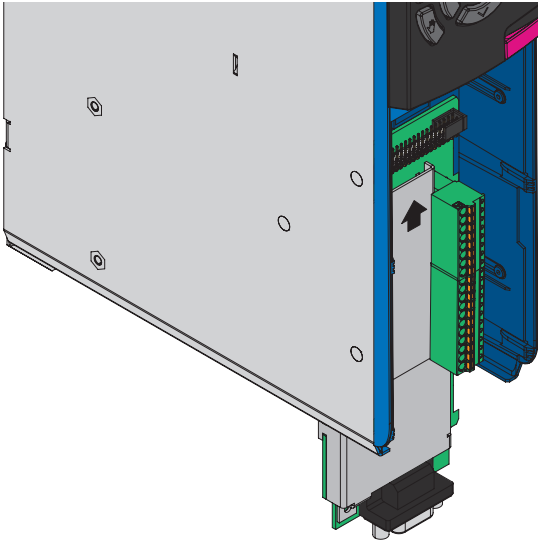

6. Fasten the terminal module to the drive controller using the fastening screw.

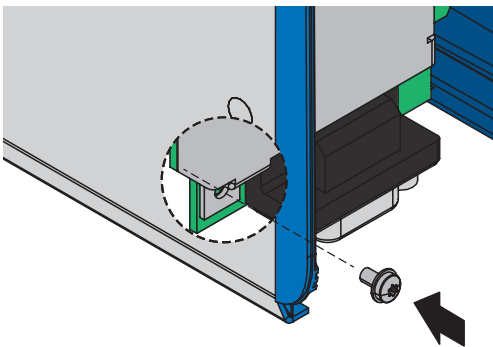

10.7 Installing the drive controller without a rear section module

This chapter describes the installation of the SD6 drive controller without a rear section module. If you would like to connect SD6 drive controllers in the DC link or insert rear section braking resistors, you must mount the required rear section modules and then build the appropriate drive controllers over them.

WARNING!

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

Information

Note that drive controllers in storage require reforming each year or before commissioning at the latest.

Tools and material

You will need:

- Fastening screws
- Tool for tightening the fastening screws

Requirements and installation

Perform the following steps for each drive controller within the group and in the specified order.

- ✓ In accordance with the drilling diagram, taking into consideration the various device dimensions, you have made threaded holes for the threaded bolts on the mounting plate at the mounting position.
 - ✓ The mounting plate has been cleaned (free of oil, grease and swarf).
1. If present, install the communication module (see [Installing the communication module \[▶ 123\]](#)).
 2. If present, install the terminal module (see [Installing the terminal module \[▶ 125\]](#)).
 3. Size 3: Mount the EM6A3 EMC shield plate (see [Attaching the EMC shield plate \[▶ 139\]](#)).
 4. Fasten the top of the drive controller on the mounting plate.
 5. Sizes 0 to 2: Mount the EM6A0 EMC shield plate (see [Attaching the EMC shield plate \[▶ 139\]](#)).
 6. Fasten the bottom of the drive controller on the mounting plate.
 7. Connect the grounding conductor to the ground bolt. Obey the instructions and requirements for [Protective grounding \[▶ 149\]](#).
- ⇒ The installation is completed. In the next step, connect the drive controller.

10.8 Installing the DC link connection

If you would like to connect the SD6 drive controllers in the DC link group, you must first mount the Quick DC-Link modules of type DL6A and then build the appropriate drive controllers over them.

Information

Note that you cannot combine DL6A Quick DC-Link modules and RB 5000 rear section braking resistors within a group.

WARNING!

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

Tools and material

You will need:


- 2 copper rails with a cross-section of 5 x 12 mm in the correct length (see [Length of copper rails \[► 122\]](#))
- The M5 threaded bolts included with the Quick DC-Link modules and the accompanying screw and washer assemblies (screws with flat and spring washers)
- An 8 mm hexagonal socket wrench
- The insulation connection pieces and quick fastening clips included with the Quick DC-Link modules
- The insulation end sections for the left and right termination of the group that are available separately

Requirements and installation


Perform the following steps in the specified order.

- ✓ In accordance with the drilling diagram, taking into consideration the various device dimensions, you have made threaded holes for the threaded bolts on the mounting plate at the mounting position.
- ✓ The mounting plate has been cleaned (free of oil, grease and swarf).
- ✓ The copper rails must be straight, smooth, free of burrs and cleaned (free of oil and grease).

1. Fasten the Quick DC-Link modules to the mounting plate using the threaded bolts.

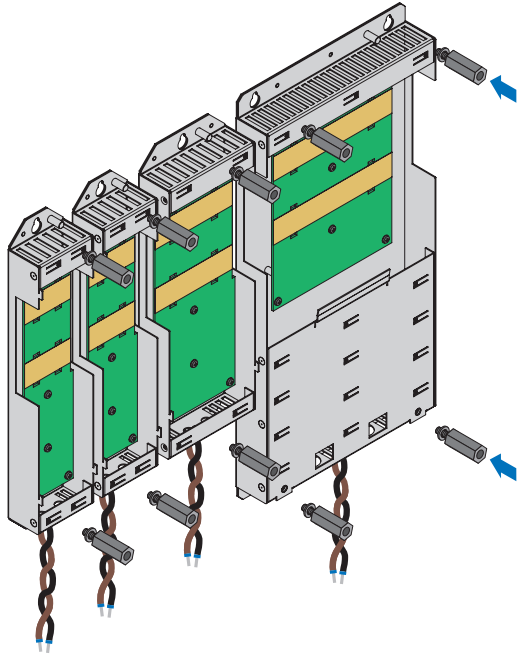


2. Insert the insulation connection pieces between the modules and insulation end section each at the left edge of the first module and at the right edge of the last module.

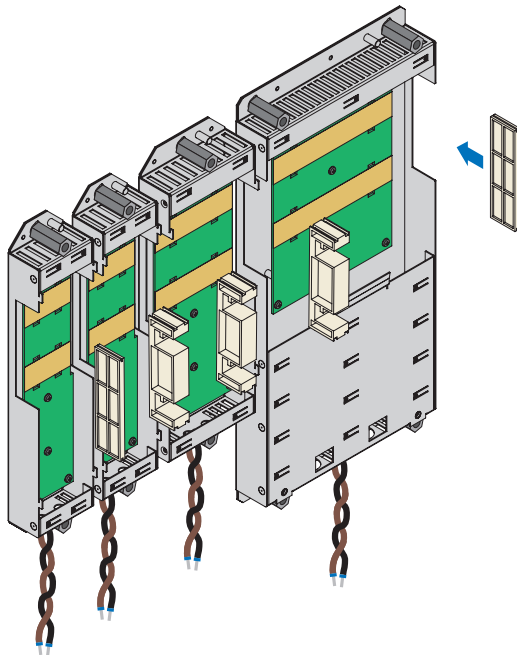


3. Clean the copper rails, especially at the contact points.

4. Insert both copper rails one after the other.

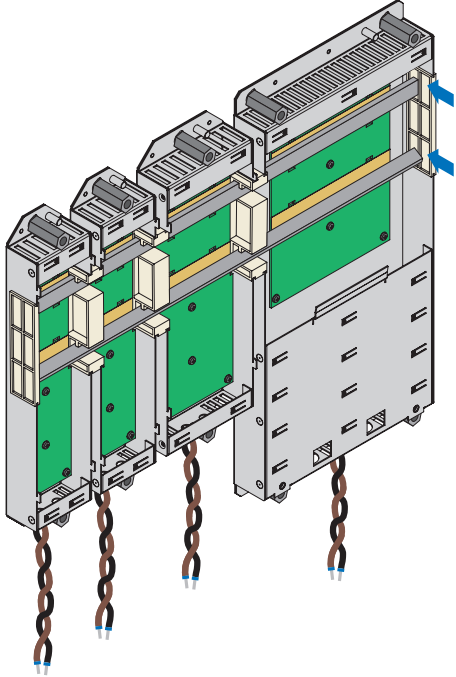

5. Fasten each of the copper rails with two quick fastening clamps per rail and Quick DC-Link module. Make certain the contact points of the copper rails do not become contaminated.

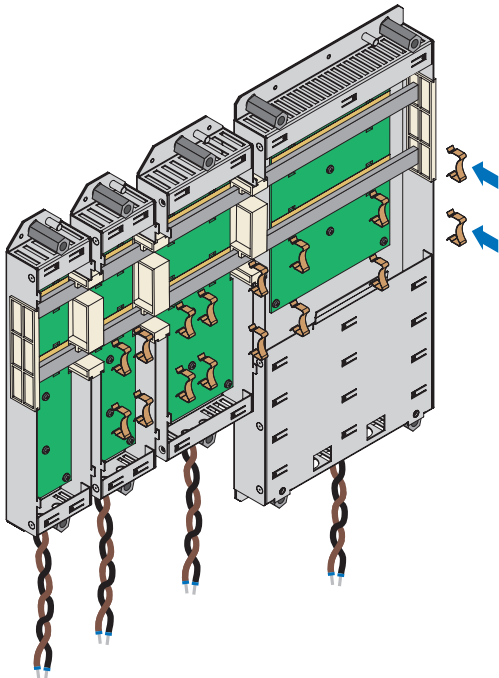

- ⇒ You have installed the Quick DC-Link. In the next step, build over the Quick DC-Link modules with the appropriate drive controllers.

10.9 Installing a rear section braking resistor

If you employ the RB 5000 rear section braking resistor provided for drive controllers of sizes 0 to 2, you must mount it first and then build over with the appropriate drive controller.

WARNING!

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

Information

Note that you cannot combine DL6A Quick DC-Link modules and RB 5000 rear section braking resistors within a group.


Tools and material

You will need:

- The M5 threaded bolts included with the rear section braking resistor and the accompanying screw and washer assemblies (screws with flat and spring washers)
- An 8 mm hexagonal socket wrench

Requirements and installation

- ✓ In accordance with the drilling diagram, taking into consideration the various device dimensions, you have made threaded holes for the threaded bolts on the mounting plate at the mounting position.
 - ✓ The mounting plate has been cleaned (free of oil, grease and swarf).
1. Fasten the rear section braking resistor to the mounting plate using the threaded bolts.

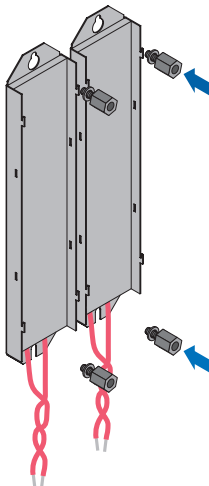

- ⇒ You have installed the rear section braking resistor. In the next step, build over it with the appropriate drive controller.

10.10 Mounting the drive controller on the rear section module

WARNING!

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

Information

Note that drive controllers in storage require reforming each year or before commissioning at the latest.

Tools and material

You will need:

- A PH2 Phillips screwdriver

Requirements and installation


Perform the following steps for each drive controller within the group and in the specified order. For size 3 drive controllers, note that terminal X20 cannot be disconnected.

- ✓ There is a circuit diagram of the system that describes the connection of the drive controllers.
 - ✓ For each drive controller, the appropriate DL6A Quick DC-Link rear section modules or rear section braking resistors have already been installed in the installation position.
1. If present, install the communication module; see chapter [Installing the communication module \[► 123\]](#).
 2. If present, install the terminal module; see the chapter [Installing the terminal module \[► 125\]](#).
 3. Size 3: Mount the EM6A3 EMC shield plate; see the chapter [Attaching the EMC shield plate \[► 139\]](#).
 4. Sizes 0 to 2: Disconnect the X30 terminal from the drive controller.


Further action varies depending on the type of rear section module.

Mounting on a Quick DC-Link module


1. Sizes 0 to 2: Connect the brown core to D+ of terminal X30 and the black core to D- of terminal X30. Make sure that the conductors of the Quick DC-Link module are twisted pairs.

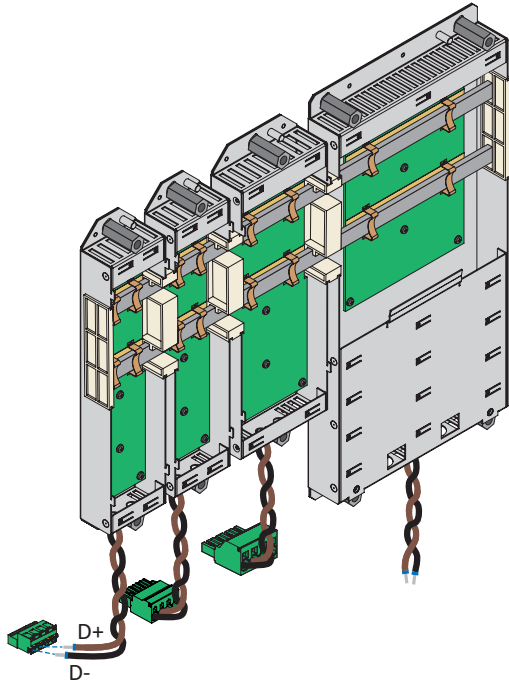


2. Position the drive controller on the guides of the rear section module.

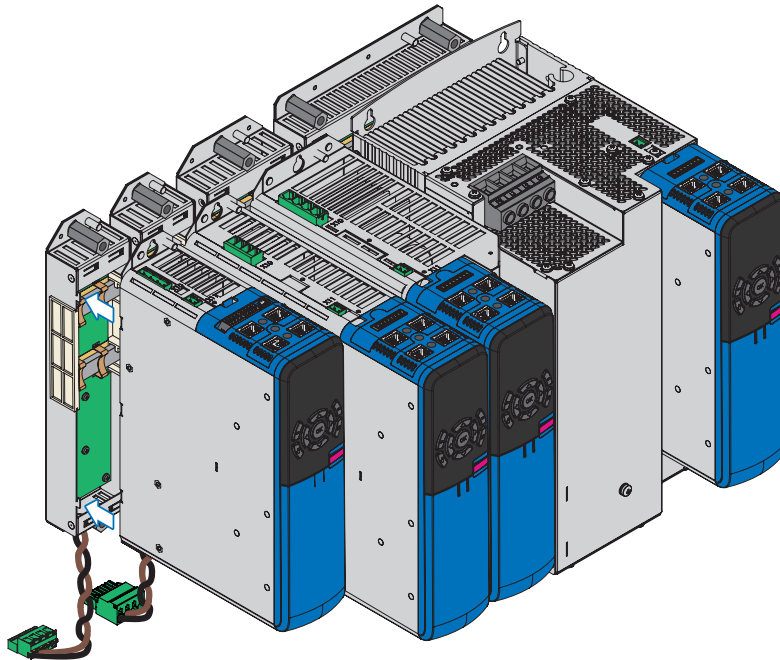

3. Press the drive controller downward onto the guides.

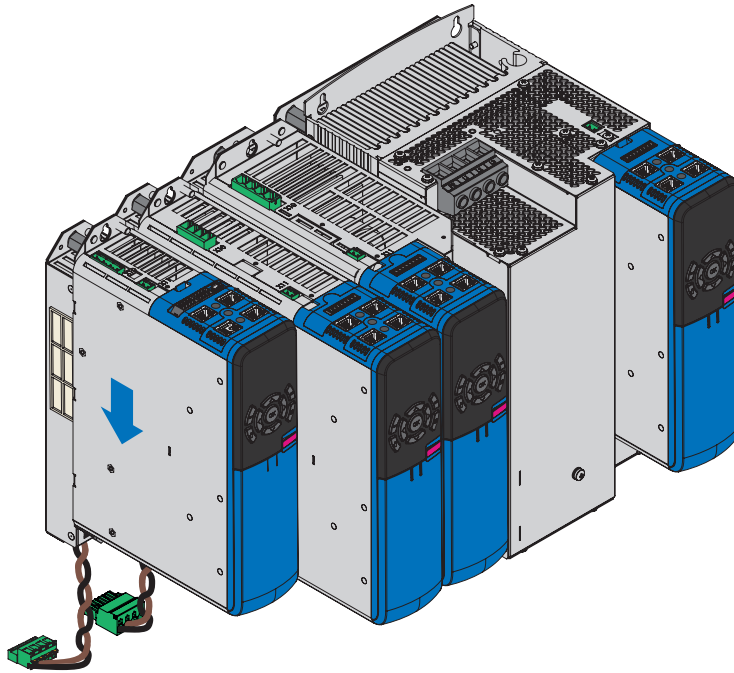


4. Sizes 0 to 2: Mount the EM6A0 EMC shield plate; see the chapter [Attaching the EMC shield plate](#) [▶ 139].
5. Attach the drive controller to the threaded bolts using the screw and washer assemblies.

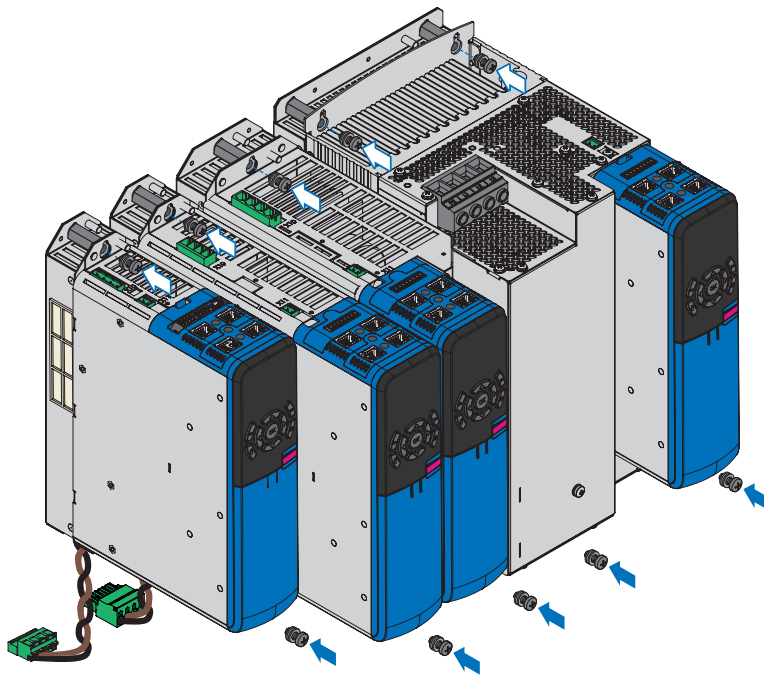

6. Connect the grounding conductor of the rear section module to the ground bolt of the rear section module and the grounding conductor of the drive controller to the ground bolt of the drive controller. Note the instructions and requirements in chapter [Protective grounding](#) [▶ 149].


7. Sizes 0 to 2: Attach terminal X30 on the underside of the drive controller.
Size 3: Connect the brown core to D+ of terminal X20 and the black core to D- of terminal X20. Make sure that the cores of the Quick DC-Link module are twisted pairs.

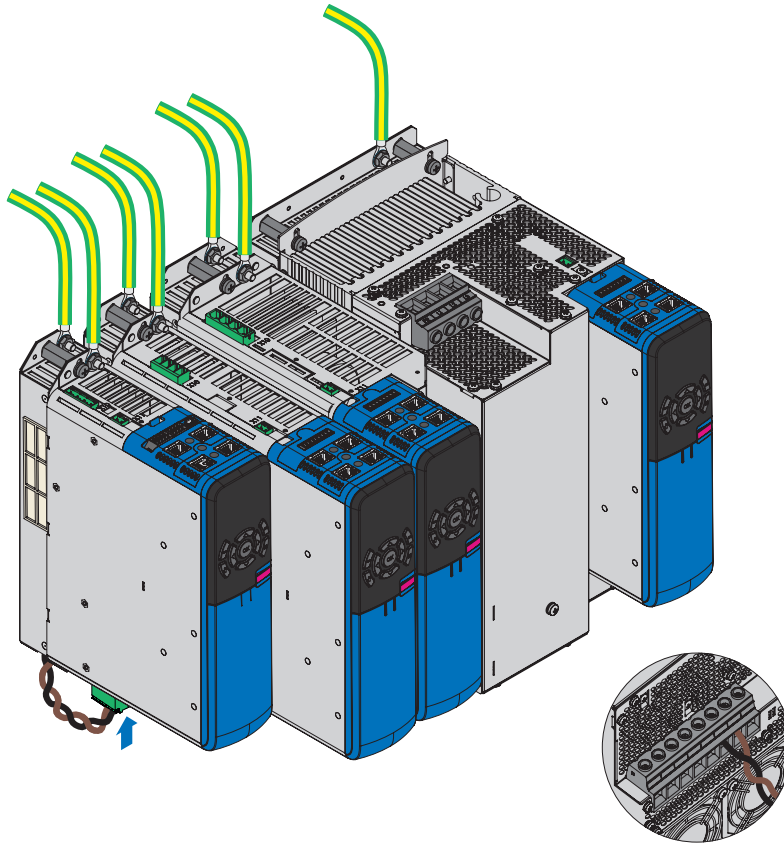


⇒ The installation is completed. In the next step, connect the drive controller.

Mounting on a rear section braking resistor


1. Sizes 0 to 2: Connect the two cores to R+ and R- of terminal X30. Make sure that the cores of the braking resistor are twisted pairs.

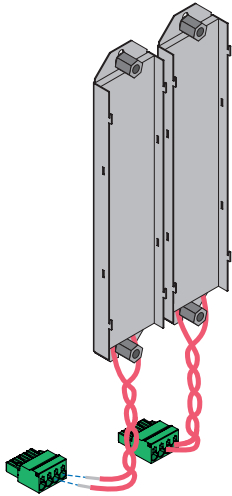

2. Position the drive controller on the guides of the rear section module.

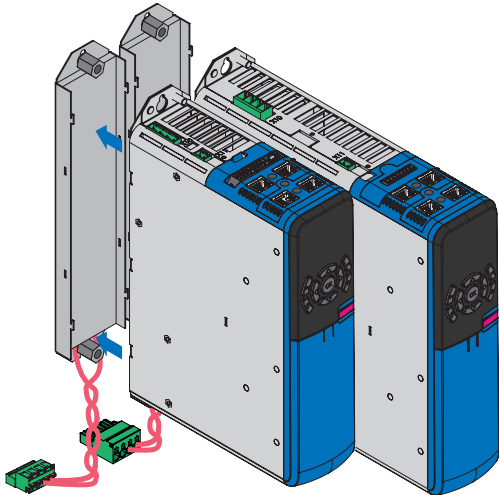


3. Press the drive controller downward onto the guides.

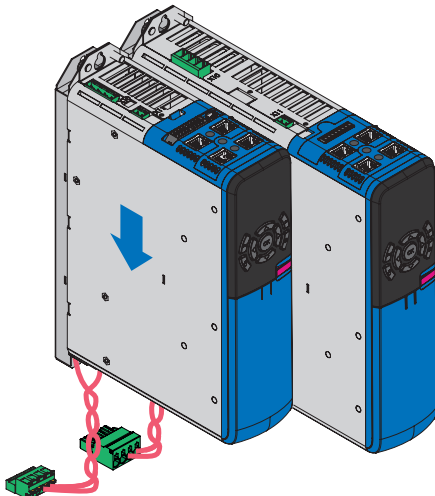


4. Sizes 0 to 2: Mount the EM6A0 EMC shield plate; see the chapter [Attaching the EMC shield plate](#) [▶ 139].

- Attach the drive controller to the threaded bolts using the screw and washer assemblies.

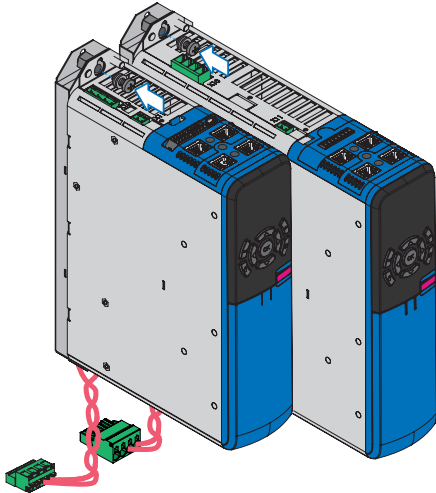

- Connect the grounding conductor of the drive controller to the ground bolt of the drive controller. Note the instructions and requirements in chapter [Connection of the grounding conductor](#) [► 150].
- Sizes 0 to 2: Attach terminal X30 on the underside of the drive controller.

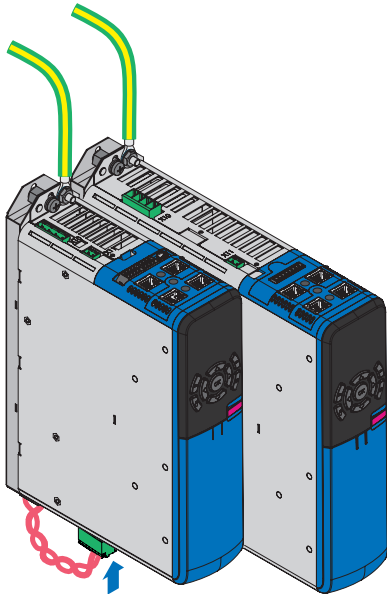

- ⇒ The installation is completed. In the next step, connect the drive controller.

10.11 Attaching the EMC shield plate

The EMC shield plate is used to be able to apply the cable shield of the power cable. You need the EM6A0 shield plate for drive controllers of sizes 0 to 2 and the EM6A3 shield plate for size 3. Due to the different designs, the attachment of this accessory part to the drive controllers is also different.

WARNING!

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

Tools and material


You will need:

- A PH2 Phillips-head screwdriver
- EM6A3: The two screw and washer assemblies included with the shield plate (screw with tooth lock washer, M4×8)


Attaching the EM6A0 to a drive controller up to size 2

- ✓ The drive controller is already installed in the control cabinet, in combination with a Quick DC-Link or a rear section braking resistor if applicable.


1. Unscrew the bottom fastening screw and flat washer of the drive controller.

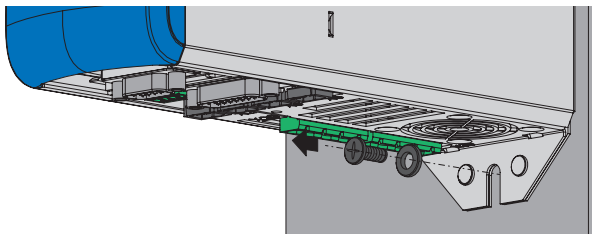


2. Insert the shield plate at a slight angle into the openings on the underside of the drive controller.

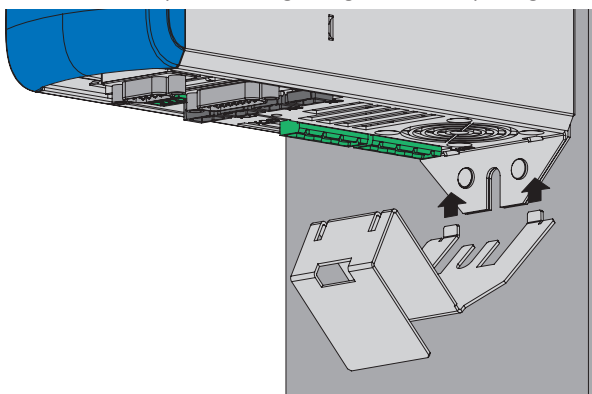

3. Press the rear side of the shield plate either onto the mounting plate directly or onto the threaded bolts of the rear section module.

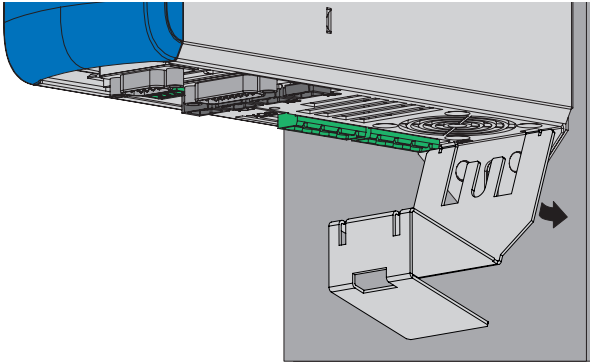


4. Fasten the shield plate using the fastening screw and flat washers to the drive controller and mounting plate or threaded bolt.

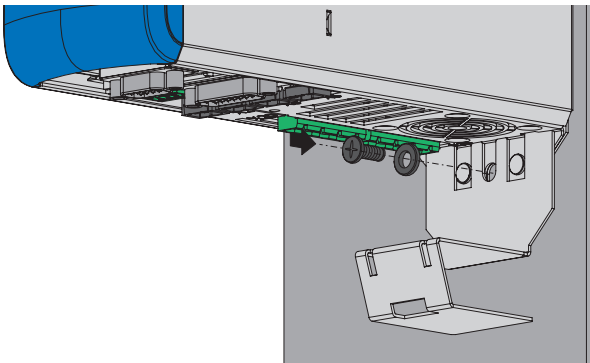

Attaching the EM6A3 to a drive controller of size 3

1. Before installing the drive controller, fasten the shield plate to the underside of the drive controller in the threaded holes provided for this purpose using the included screw and washer assemblies (max. tightening torque: 2.4 Nm).

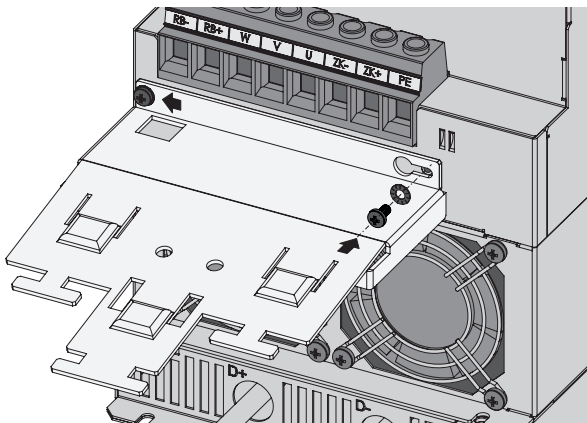

10.12 Installing the encoder adapter box

The LA6 adapter box should be mounted right next to the drive controller. The permitted installation options are described below.

WARNING!

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

DIN rail attachment

- ✓ You have already mounted 35 mm wide, symmetrical DIN rails in accordance with EN 50022 (TS 35).
1. Place the spring of the mounting aid on the rear side of the adapter box on the DIN rail.
 2. Press the adapter box upward and back until the clamping mechanism audibly locks in.

Screw fastening

Tools and material

You will need:

- A TX10 Torx screwdriver for unscrewing the assembly aid
 - Two M5 fastening screws
 - Tool for tightening the fastening screws
1. Before assembly, remove the mounting aid on the rear side of the adapter box by unscrewing both screws.
 2. Fasten the adapter box to the mounting plate using the M5 screws.

11 Connection

The following chapter describes the connection of the drive controller and the available accessories.

11.1 Electrical connection

Connection work is permitted only when no voltage is present. Observe the 5 safety rules (see [Working on the machine \[▶ 20\]](#)).

WARNING!

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

The device and the cables connected to it are not necessarily de-energized when the supply voltage is switched off and all displays have gone out!

Opening the housing, plugging in or unplugging connection terminals, connecting or removing a connecting wiring, and installing or removing accessories are prohibited while the voltage supply is switched on.

The device housing must be closed before you turn on the supply voltage.

If you couple drive controllers in the DC link, make sure that all Quick DC-Link modules are built over with a drive controller after installation or after replacing a device.

Protect the devices against falling parts (bits or strands of wire, pieces of metal, etc.) during installation or other work in the control cabinet. Parts with conductive properties may result in a short-circuit inside the devices and device failure as a result.

Use only copper conductors. For the corresponding conductor cross-sections, consult the standards DIN VDE 0298-4 or EN 60204-1 (Annexes D, G) as well as the relevant terminal specifications in this documentation.

The protection class of the devices is protective grounding (protection class I in accordance with EN 61140). This means that operation is permitted only if the grounding conductor is connected according to requirements.

All protective ground connections are identified by "PE" or the international grounding symbol (IEC 60417, symbol 5019).

The products are not designed for use in a public low-voltage network that supplies residential areas. Radio-frequency interference can be expected if the products are used in this type of network.

11.2 Line routing

Observe the valid provisions for your machine or system, e.g. IEC 60364 or EN 50110, during the installation of electrical equipment.

11.3 Protective measures

Take the following protective measures into account.

11.3.1 Power grid supply with DC link connection

In a DC link connection, only operate drive controllers with the same supply voltage.

ATTENTION!

Damage to device when connecting 1-phase and 3-phase drive controllers!

Connecting 1-phase and 3-phase drive controllers will damage the 1-phase drive controllers.

- Only connect 1-phase or 3-phase drive controllers to drive controllers of the same type.

Also note the following:

- All 1-phase drive controllers must be connected to the same line conductor
- All 3-phase drive controllers must be operated on the same supply grid

Group with drive controllers of size 3

Furthermore, the following framework conditions apply in a group with size 3 drive controllers:

- If a group consists of drive controllers in sizes 0, 1, 2 and 3, only those of size 3 may be connected to the grid; the remaining drive controllers may be supplied only with DC voltage
- You may connect a maximum of two drive controllers of size 3
- A TEP4010-2US00 power choke must be upstream of each size 3 drive controller connected to the grid

ATTENTION!

Device damage due to the emission of electromagnetic interference!

If the EMC threshold limits are exceeded, devices in the immediate area can be interrupted or damaged.

- Take suitable measures to comply with the electromagnetic compatibility.
- Twist intermediate circuit connections and connections to braking resistors and always route the shortest possible connections. If they are longer than 30 cm, they must be shielded.

ATTENTION!

Device damage in the event of failure of a device in the DC link group!

The failure of a drive controller or supply module in the DC link group can result in damage to additional devices.

- A failure must trigger the isolation of the entire DC link group from the grid.
- For the most comprehensive equipment protection possible, follow the recommendations for device protection.

Wiring example

The example in the appendix (see [DC link connection](#) [▶ 469]) illustrates the basic connection of multiple SD6 drive controllers based on a DC link connection with a DL6A Quick DC-Link.

11.3.2 Line fuse

All device types are intended exclusively for operation on TN networks or wye sources that supply a maximum differential short-circuit current in accordance with the following table.

For UL-compliant operation:

All device types supplied with 480 V_{AC} are intended solely for operation with grounded wye sources at 480/277 V_{AC}.

For all device types – with 240 V_{AC} or 480 V_{AC} supply – the supply grid must not deliver a differential short-circuit current above the specification in the following table.

| Size of the drive controller | Max. differential short-circuit current |
|------------------------------|---|
| Size 0 – size 2 | 5000 A |
| Size 3 | 10000 A |

Tab. 127: Short-circuit current rating (SCCR)

The line fuse ensures the line and overload protection in the drive controller. To that end, observe the requirements described below, which vary based on the configuration.

11.3.2.1 Line fuses in stand-alone operation

You can use the following protective devices when operating a single drive controller:

- Full-range safety fuses for cable and line protection with operating class gG in accordance with IEC 60269-2-1 or time delay triggering characteristics in accordance with DIN VDE 0636
- Miniature circuit breakers with triggering characteristic C in accordance with EN 60898
- Circuit breakers

| |
|--------------------|
| Information |
|--------------------|

For size 3 device types, only operation with power chokes and line fuses is permitted for operating class gG.

Information on the recommended maximum line fuse can be found in the following table:

| Size | Type | I _{IN,PU} (4 kHz) [A] | Recommended max. line fuse [A] |
|------|--------|--------------------------------|--------------------------------|
| 0 | SD6A02 | 8.3 | 10 |
| | SD6A04 | 2.8 | 10 |
| | SD6A06 | 5.4 | 10 |
| 1 | SD6A14 | 12 | 16 |
| | SD6A16 | 19.2 | 20 |
| 2 | SD6A24 | 26.4 | 35 |
| | SD6A26 | 38.4 | 50 |
| 3 | SD6A34 | 45.3 | 50 |
| | SD6A36 | 76 | 80 |
| | SD6A38 | 76 | 80 |

Tab. 128: Line fuses in stand-alone operation

| |
|--------------------|
| Information |
|--------------------|

To ensure problem-free operation, always comply with the recommended trigger limits and trigger characteristics of the fuse elements.

11.3.2.2 Line fuses for DC link connection

Every drive controller connected to the grid in the DC link group must be protected at the line input against overload and short-circuit. To do this, a fuse combination consisting of overload protection and semiconductor short-circuit protection is connected in series. A miniature circuit breaker protects against overload and a safety fuse with gR triggering characteristics protects against short-circuit.

You can use the following fuse combinations:

| Size | Type | $I_{IN,PU}$ (4 kHz) [A] | Fuse selection | |
|------|--------|-------------------------------|---|---|
| | | | Miniature circuit breakers | Safety fuse |
| 0 | SD6A02 | 8.3 | EATON Type: FAZ-B10/1, Manufacturer No. 278531 Triggering characteristics: B 10 A | SIBA Type: URZ, Item No. 50 140 06.20 Triggering characteristics: gR 20 A |
| | SD6A04 | 2.8 | EATON Type: FAZ-B6/3, Manufacturer No. 278841 Triggering characteristics: B 6 A | SIBA Type: URZ, Item No. 50 140 06.20 Triggering characteristics: gR 20 A |
| | SD6A06 | 5.4 | | |
| 1 | SD6A14 | 12 | EATON Type: FAZ-Z20/3, Manufacturer No. 278928 Triggering characteristics: Z 20 A | SIBA Type: URZ, Item No. 50 140 06.32 Triggering characteristics: gR 32 A |
| | SD6A16 | 19.2 | | |
| 2 | SD6A24 | 26.4 | EATON Type: FAZ-Z40/3, Manufacturer No. 278931 Triggering characteristics: Z 40 A | SIBA Type: URZ, Item No. 50 140 06.80 Triggering characteristics: gR 80 A |
| | SD6A26 | 38.4 | | |
| 3 | SD6A34 | 45.3 | EATON Type: FAZ-B63/3, Manufacturer No. 278853 Triggering characteristics: B 63 A ¹¹ Siemens Type: SIRUS, Item No. 3RV 1041-4KA10 Triggering characteristics: 57 A–75 A ¹² | SIBA Type: URZ, Item No. 50 140 06.100 Triggering characteristics: gR 100 A |
| | SD6A36 | 76 | | |
| | SD6A38 | 76 | | |

Tab. 129: Line fuses for DC link connection

Information

To ensure problem-free operation, always comply with the recommended trigger limits and trigger characteristics of the fuse elements.

¹¹ The input current is reduced from 73 A to 63 A and the output power is lowered as a result; however, reliable rectifier protection is still guaranteed.

¹² Miniature circuit breaker size S3, CLASS 10, adjustable current range: 57 A – 75 A, electromagnetic triggering: 975 A. The rectifier diodes are not protected in the range of 2x to 13x the nominal current.

Maximum number of drive controllers

Multiple drive controllers of the same rating can be connected via a common fuse combination. The fuses and the resulting maximum line input current correspond to that of a single drive controller.

In order to prevent gradual damage to the safety fuse, the maximum number of possible drive controllers on one fuse combination is limited as follows:

- Size 0: Maximum of 4 drive controllers
- Size 1: Maximum 2 drive controllers
- Size 2: Maximum 5 drive controllers
- Size 3: Maximum of 2 drive controllers

ATTENTION!

Damage due to overload!

In order to ensure an even distribution of charging current on all AC-supplied drive controllers, all circuit breakers must be closed when engaging the power supply.

- In order that the input rectifier is not overloaded in the event of a possible fuse failure in the group, evaluation of the grid monitoring for AC-supplied drive controllers must lead to deactivation of the entire DC link group.

11.3.2.3 UL-compliant line fuses

For UL-compliance, use the following fuses for the powered drive controller:

- Fuses of class RK1 (e.g. Bussmann KTS-R-xxA/600 V), CF, J, T or G
- For drive controllers of sizes 0 and 1, you can alternatively use fuses of class CC
- For drive controllers of sizes 0 to 2, you can alternatively use type E motor starters, which consist of a circuit breaker and supply terminal

More detailed specifications about the appropriate fuses can be found in the following table:

| Size | Type | Class CC [A] | Class RK1, CF, J, T or G [A] | Type E motor starter |
|------|--------|--------------|------------------------------|--------------------------------------|
| 0 | SD6A02 | 10 | 10 | EATON PKZM0-10/SP + BK25/3-PKZ0-E |
| | SD6A04 | 10 | 10 | EATON PKZM0-10/SP + BK25/3-PKZ0-E |
| | SD6A06 | 10 | 10 | EATON PKZM0-10/SP + BK25/3-PKZ0-E |
| 1 | SD6A14 | 15 | 15 | EATON PKZM0-16/SP + BK25/3-PKZ0-E |
| | SD6A16 | 20 | 20 | EATON PKZM0-25/SP + BK25/3-PKZ0-E |
| 2 | SD6A24 | — | 35 | EATON PKZM0-32/SP + BK25/3-PKZ0-E |
| | SD6A26 | — | 50 | EATON PKZM4-50 + BK50/3-PKZ4-E |
| 3 | SD6A34 | — | 50 | — |
| | SD6A36 | — | 80 | — |
| | SD6A38 | — | 80 | — |

Tab. 130: UL-compliant line fuses

The pre-configured Type E motor starters can be assembled as an alternative from the individual components in accordance with the following table:

| Type E motor starter | Circuit breakers | | Supply terminal | | Lockable knob | |
|-----------------------------|------------------|----------|-----------------|----------|---------------|----------|
| | Type | Item No. | Type | Item No. | Type | Item No. |
| PKZM0-10/SP + BK25/3-PKZ0-E | PKZM0-10 | 72739 | BK25/3-PKZ0-E | 262518 | AK-PKZ0 | 30851 |
| PKZM0-16/SP + BK25/3-PKZ0-E | PKZM0-16 | 46938 | | | | |
| PKZM0-25/SP + BK25/3-PKZ0-E | PKZM0-25 | 46989 | | | | |
| PKZM0-32/SP + BK25/3-PKZ0-E | PKZM0-32 | 278489 | | | | |
| PKZM4-50 + BK50/3-PKZ4-E | PKZM4-50 | 222355 | BK50/3-PKZ4-E | 272165 | | |

Tab. 131: Individual components of Type E motor starters

| |
|--------------------|
| Information |
|--------------------|

To ensure problem-free operation, always comply with the recommended trigger limits and trigger characteristics of the fuse elements.

11.3.3 Grid connection for DC link connection

All drive controllers must be connected to the power grid simultaneously. Simultaneously in this case means that the time difference may be a maximum of 20 ms. This condition is generally met if you use contactors of identical design from one manufacturer.

Provided that simultaneous connection to the grid is achieved, the design with one contactor per drive controller is also permitted.

ATTENTION!

Damage due to overload!

If the grid does not connect to all drive controllers simultaneously in the design with one contactor per drive controller, their charging resistors can be damaged.

11.3.4 Residual current protective device

Depending on the function, leakage currents may occur when operating drive controllers. Leakage currents are interpreted as residual currents by residual current protective devices (RCDs) and may therefore lead to false triggering. Depending on the relevant power supply connections, residual currents may occur with or without a DC current component. Because of this, you should take into consideration both the magnitude as well as the profile of the possible leakage or residual current when selecting a suitable residual current protective device.

Leakage and residual currents with a DC current component can restrict the functionality of type A and AC residual current protective devices.

Protect 1-phase installations using type B universal current-sensitive residual current protective devices or type F mixed frequency-sensitive devices.

Protect 3-phase installations with type B universal current-sensitive residual current protective devices.

DANGER!

Electrical voltage! Risk of fatal injury due to electric shock!

In 3-phase installations, this product can cause a direct current in the protective grounding conductor.

- If a residual current protective device (RCD) or residual current monitoring device (RCM) is used for protection in case of direct or indirect contact, only one RCD or RCM of type B is permitted on the power supply side of this product.

False triggering – Causes

Depending on stray capacitances and imbalances, leakage currents above 30 mA may occur during operation.

Undesirable false triggering occurs under the following conditions:

- Connecting the installation to the supply voltage:
This false triggering can be remedied by using short-time delayed (super-resistant), delayed switch-off (selective) residual current protective devices or those with increased tripping current (e.g. 300 or 500 mA).
- Higher frequency leakage currents for long power cables under normal operating conditions:
For example, use low-capacitance cables or use an output choke.
- High imbalances in the supply grid.
This false triggering can be rectified, e.g. using an isolating transformer.

 **DANGER!**
Electrical voltage! Risk of fatal injury due to electric shock!

Residual current protective devices with increased tripping current as well as with short-time delayed or delayed switch-off trigger characteristics may not meet the requirements for personal protection.

- Check whether the use of the selected residual current protective device is permitted in your application.

11.3.5 Protective grounding

In order to dimension the grounding, it must be ensured that the upstream fuse is triggered in the event of a short-circuit. Observe the requirements described below for the correct connection of the protective grounding.

11.3.5.1 Minimum cross-section of the grounding conductor

Leakage currents > 10 mA can arise in normal operation. The minimum cross-section of the protective grounding conductor must comply with the local safety regulations for protective grounding conductors with high leakage current. To fulfill regulations such as EN 60204-1, connect a copper conductor according to the following table:

| Cross-section A Power grid line | Minimum cross-section A_{\min} Grounding conductor |
|---|---|
| $A \leq 2.5 \text{ mm}^2$ | 2.5 mm ² |
| $2.5 \text{ mm}^2 < A \leq 16 \text{ mm}^2$ | A |
| $16 \text{ mm}^2 < A \leq 35 \text{ mm}^2$ | $\geq 16 \text{ mm}^2$ |
| $> 35 \text{ mm}^2$ | A/2 |

Tab. 132: Minimum cross-section of the grounding conductor

11.3.5.2 Cable shields and sheaths

In accordance with EN 60204-1, the following parts of a machine and its electrical equipment must be connected to the grounding conductor system, but must not be used as grounding conductors:

- Metal cable shields
- Sheath

11.3.5.3 Connection of the grounding conductor

You connect the grounding conductor to the drive controller over terminal X10.

Additional requirements for protective equipotential bonding apply in the event of ground leakage currents > 10 mA. At least one of the following conditions must be fulfilled:

- The grounding conductor must have a minimum cross-section of 10 mm² Cu over its overall length
- If the grounding conductor has a cross-section of less than 10 mm², a 2nd grounding conductor must be provided with a cross-section of at least the same size, as at terminal X10, up to the point at which the grounding conductor exhibits the minimum cross-section of 10 mm²

A ground bolt is mounted to the devices for connecting the 2nd grounding conductor. The ground bolt is marked with the grounding symbol according to IEC 60417 (symbol 5019).

You will need an open-ended wrench or external hex key with a width across flats of 10 mm.

Obey a tightening torque of 4.0 Nm (35 Lb.inch).

Observe the order for assembly:

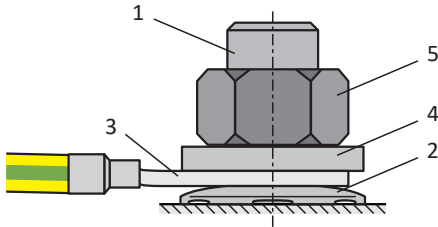


Fig. 33: Connection of the grounding conductor

- 1 M6 ground bolt
- 2 Contact disk
- 3 Cable lug
- 4 Washer
- 5 Nut

The contact disk, washer and nut are supplied with the drive controller.

11.3.6 EMC recommendations

| |
|--------------------|
| Information |
|--------------------|

The following information on EMC-compliant installation is only a recommendation. Depending on the application, the ambient conditions as well as the legal requirements, measures beyond these recommendations may be required.

Lay the power line, power cable and signal lines separately from each other, e.g. in separate cable ducts.

Only use shielded, low-capacitance cables as power cables.

If the brake line is carried in the power cable, it must be shielded separately.

Ground and insulate free line ends if they cannot be connected to the terminals provided for this purpose on the drive controller, e.g. using a connecting terminal.

Connect the shield of the power cable to the grounding conductor system over a wide area and in the immediate vicinity of the drive controller. For this purpose, use the shield contact provided for the drive controllers or suitable accessories.

The connection lines for braking resistors as well as the cores of the Quick DC-Link modules must be implemented as twisted pairs. At line lengths of 30 cm or more, the lines also must be implemented with shielding and the shield must be applied over a wide area in the immediate vicinity of the drive controller.

For motors with terminal boxes, connect the shield to the terminal box over large contact areas. For example, use EMC cable glands.

Connect the shield of the control lines on one side to the reference potential of the source, e.g. the PLC or CNC.

You may use chokes to improve the EMC and protect the drive system. Power chokes are used to dampen voltage and current peaks and reduce the load of the power feed-in of the drive controllers or supply modules. Output chokes reduce current peaks caused by line capacity at the power output of the drive controller.

11.4 Drive controllers

The following section contains detailed information about the terminals and the correct connection of the drive controller.

| |
|--------------------|
| Information |
|--------------------|

For UL-compliant operation: The connections marked with PE are intended solely for the functional grounding.

11.4.1 Overview with ST6 safety module

The images for the connection overviews show the SD6 drive controller in every size with the following equipment:

- ST6 safety module (STO using terminals)
- XI6 terminal module
- EC6 communication module (EtherCAT)

11.4.1.1 Sizes 0 and 1

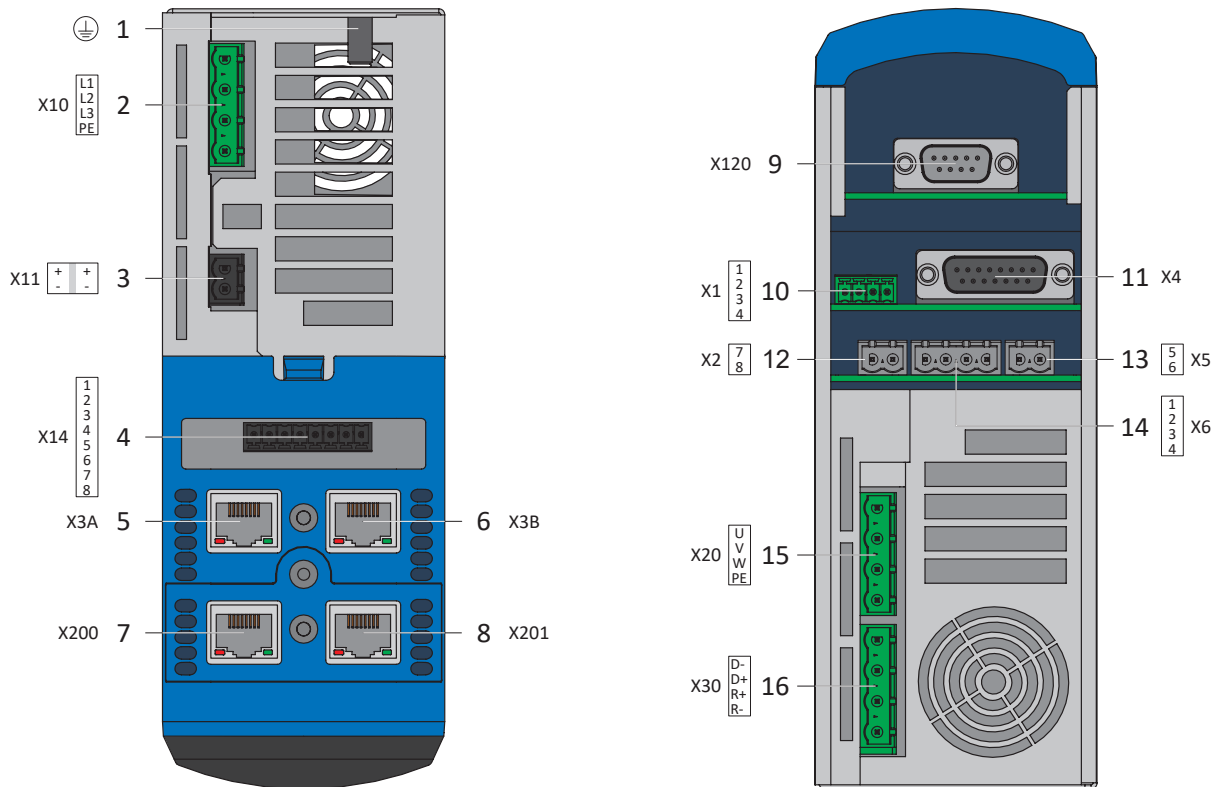


Fig. 34: Connection overview of sizes 0 and 1 with ST6 safety module

- | | |
|--|---|
| <p>1 Ground bolt</p> <p>2 X10: 230/400 V_{AC} supply</p> <p>3 X11: 24 V_{DC} supply</p> <p>4 X12: ST6 safety technology</p> <p>5 X3A: PC, IGB</p> <p>6 X3B: PC, IGB</p> <p>7 X200: EtherCAT on the optional EC6 communication module (alternatively CANopen on CA6 communication module or PROFINET on PN6 communication module)</p> <p>8 X201: EtherCAT on the optional EC6 communication module (alternatively PROFINET on PN6 communication module)</p> | <p>9 X120: Encoder connection on optional XI6 terminal module (alternatively X120 and X140: Encoder connections on RI6 terminal module or IO6 terminal module without encoder connection)</p> <p>10 X1: Enable and relay 1</p> <p>11 X4: Encoder</p> <p>12 X2: Motor temperature sensor</p> <p>13 X5: Brake (actuation)</p> <p>14 X6: Brake (feedback and supply)</p> <p>15 X20: Motor</p> <p>16 X30: Quick DC-Link, braking resistor</p> |
|--|---|

11.4.1.2 Size 2

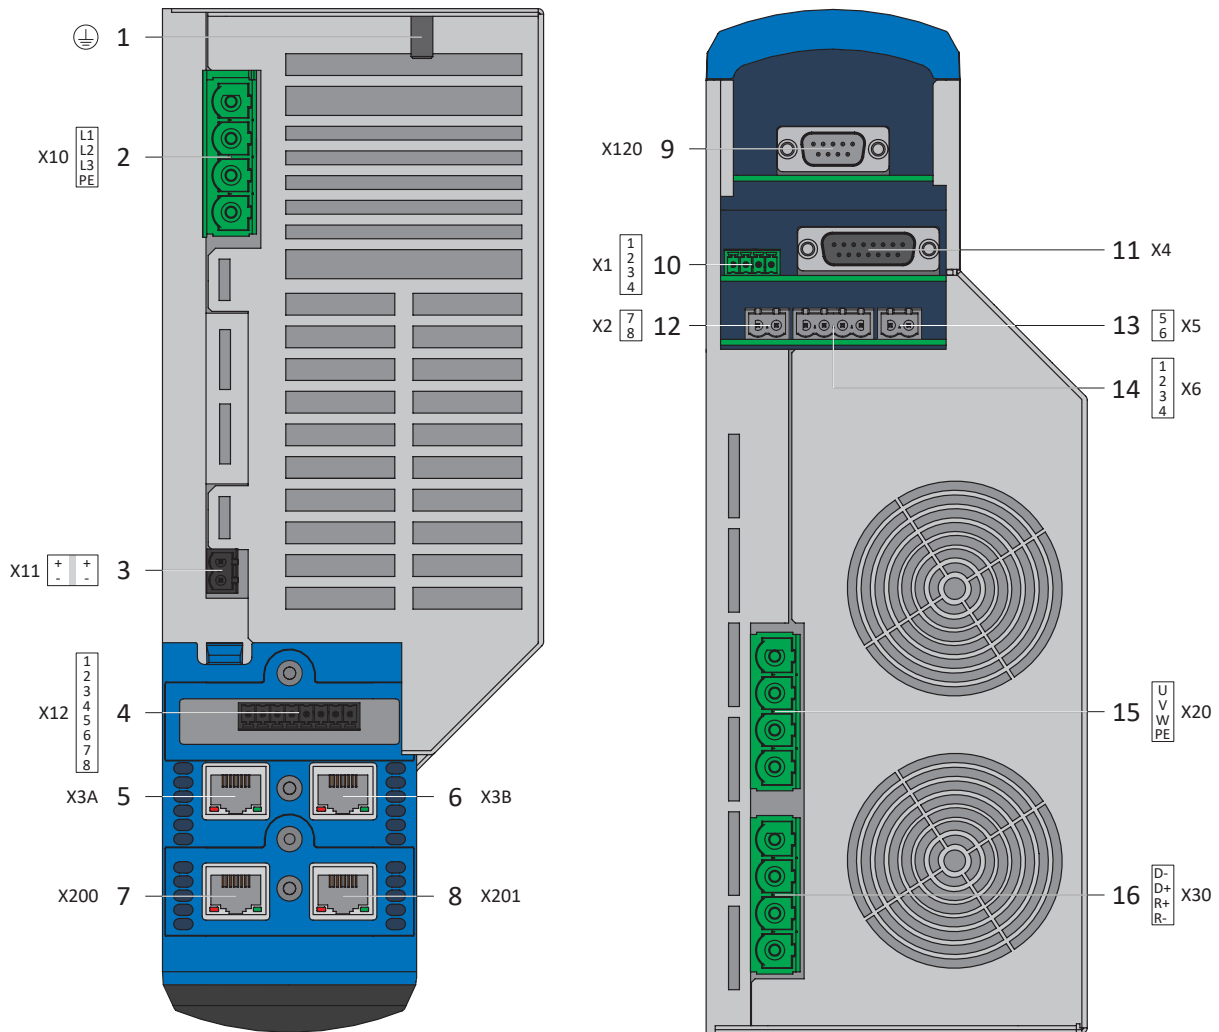


Fig. 35: Connection overview of size 2 with ST6 safety module

- | | |
|--|---|
| <p>1 Ground bolt</p> <p>2 X10: 400 V_{AC} supply</p> <p>3 X11: 24 V_{DC} supply</p> <p>4 X12: ST6 safety technology</p> <p>5 X3A: PC, IGB</p> <p>6 X3B: PC, IGB</p> <p>7 X200: EtherCAT on the optional EC6 communication module (alternatively CANopen on CA6 communication module or PROFINET on PN6 communication module)</p> <p>8 X201: EtherCAT on the optional EC6 communication module (alternatively PROFINET on PN6 communication module)</p> | <p>9 X120: Encoder connection on optional X16 terminal module (alternatively X120 and X140: Encoder connections on RI6 terminal module or IO6 terminal module without encoder connection)</p> <p>10 X1: Enable and relay 1</p> <p>11 X4: Encoder</p> <p>12 X2: Motor temperature sensor</p> <p>13 X5: Brake (actuation)</p> <p>14 X6: Brake (feedback and supply)</p> <p>15 X20: Motor</p> <p>16 X30: Quick DC-Link, braking resistor</p> |
|--|---|

11.4.1.3 Size 3

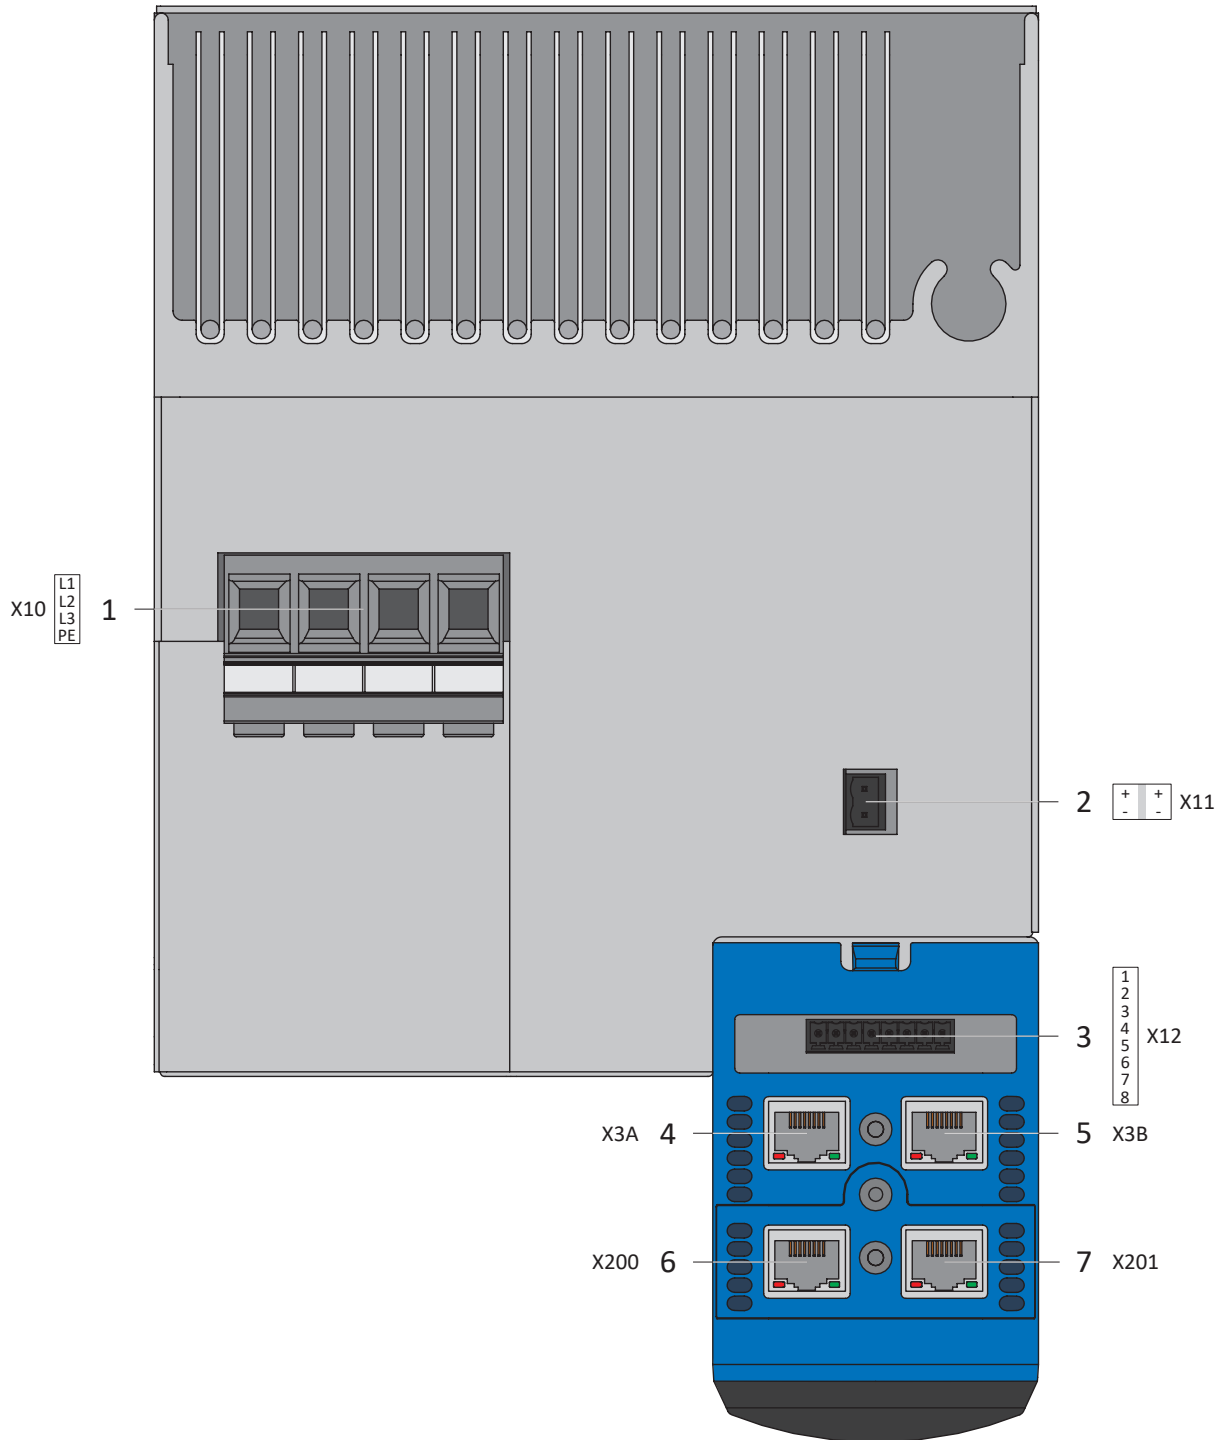


Fig. 36: Connection overview of size 3 with ST6 safety module, top of device

- 1 X10: 400 V_{AC} supply
- 2 X11: 24 V_{DC} supply
- 3 X12: ST6 safety technology
- 4 X3A: PC, IGB
- 5 X3B: PC, IGB
- 6 X200: EtherCAT on the optional EC6 communication module (alternatively CANopen on CA6 communication module or PROFINET on PN6 communication module)
- 7 X201: EtherCAT on the optional EC6 communication module (alternatively PROFINET on PN6 communication module)

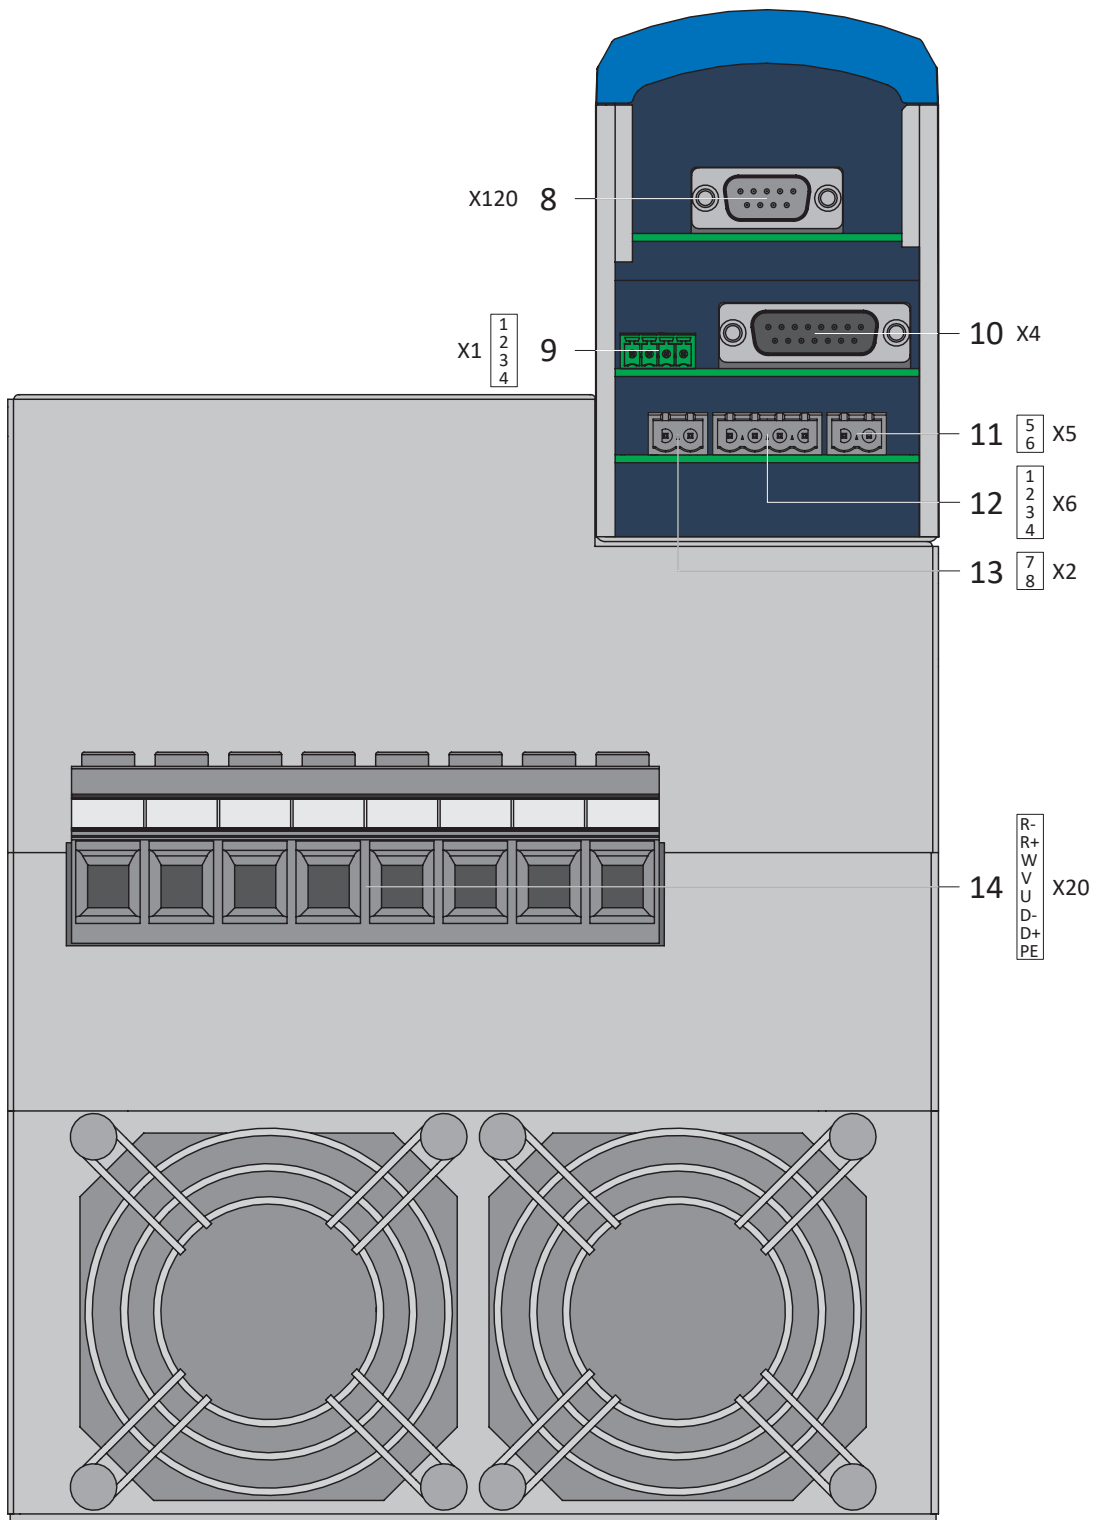


Fig. 37: Connection overview of size 3 with ST6 safety module, bottom of device

- 8 X120: Encoder connection on optional XI6 terminal module (alternatively X120 and X140: Encoder connections on RI6 terminal module or IO6 terminal module without encoder connection)
- 9 X1: Enable and relay 1
- 10 X4: Encoder
- 11 X5: Brake (actuation)
- 12 X6: Brake (feedback and supply)
- 13 X2: Motor temperature sensor
- 14 X20: Motor, Quick DC-Link, braking resistor

11.4.2 Overview with SE6 safety module

The images for the connection overviews show the SD6 drive controller in every size with the following equipment:

- SE6 safety module (extended safety technology using terminals)
- XI6 terminal module
- EC6 communication module (EtherCAT)

11.4.2.1 Sizes 0 and 1

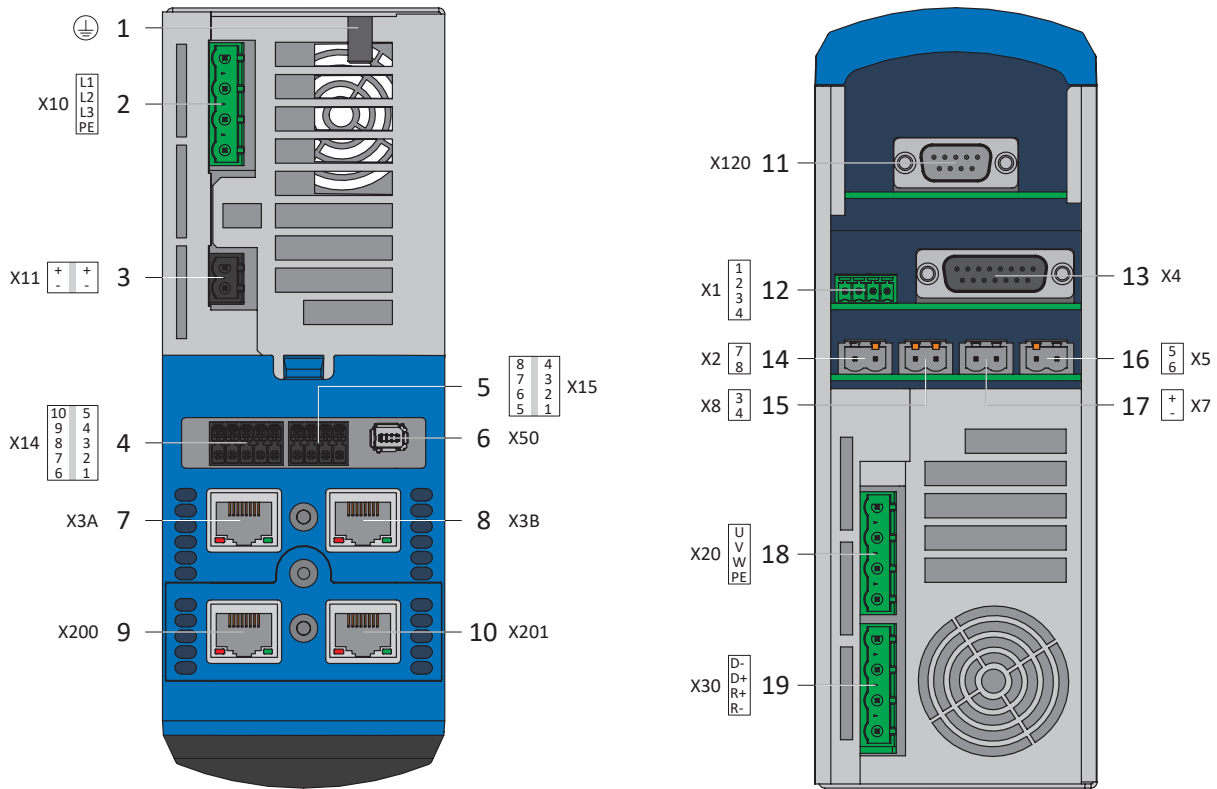


Fig. 38: Connection overview of sizes 0 and 1 with SE6 safety module

| | |
|--|---|
| <p>1 Ground bolt</p> <p>2 X10: 230/400 V_{AC} supply</p> <p>3 X11: 24 V_{DC} supply</p> <p>4 X14: SE6 safety technology – Safe inputs</p> <p>5 X15: SE6 safety technology – Safe outputs and supply for X50</p> <p>6 X50: SE6 safety technology – Plausibility encoder</p> <p>7 X3A: PC, IGB</p> <p>8 X3B: PC, IGB</p> <p>9 X200: EtherCAT on the optional EC6 communication module (alternatively CANopen on CA6 communication module or PROFINET on PN6 communication module)</p> <p>10 X201: EtherCAT on the optional EC6 communication module (alternatively PROFINET on PN6 communication module)</p> | <p>11 X120: Encoder connection on optional XI6 terminal module (alternatively X120 and X140: Encoder connections on RI6 terminal module or IO6 terminal module without encoder connection)</p> <p>12 X1: Enable and relay 1</p> <p>13 X4: Encoder</p> <p>14 X2: Motor temperature sensor</p> <p>15 X8: Brake 2 (SBC+/-)</p> <p>16 X5: Brake 1 (BD1/BD2)</p> <p>17 X7: Supply for brake(s)</p> <p>18 X20: Motor</p> <p>19 X30: Quick DC-Link, braking resistor</p> |
|--|---|

11.4.2.2 Size 2

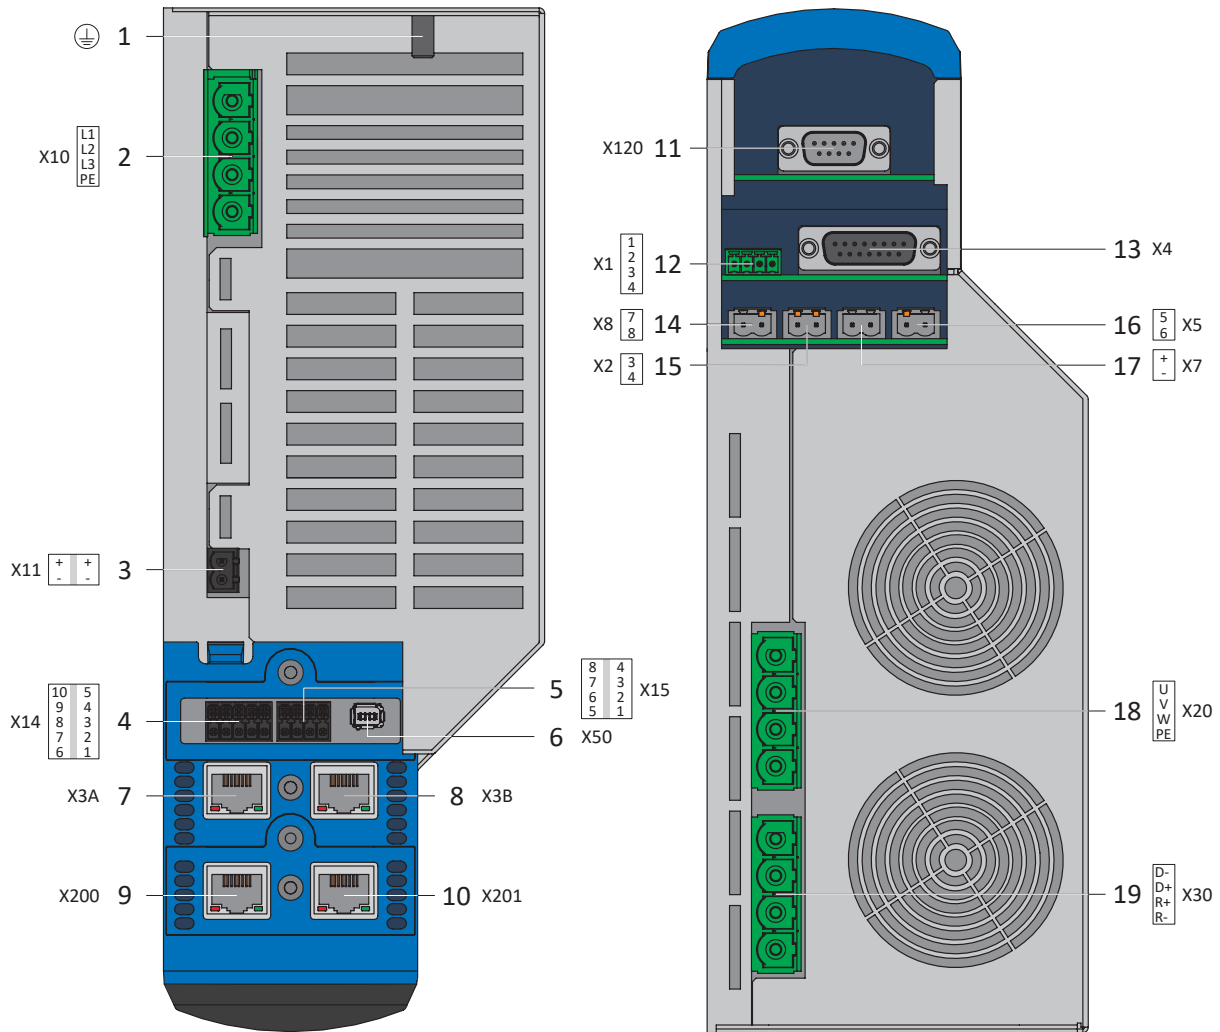


Fig. 39: Connection overview of size 2 with SE6 safety module

- | | |
|--|---|
| <p>1 Ground bolt</p> <p>2 X10: 230/400 V_{AC} supply</p> <p>3 X11: 24 V_{DC} supply</p> <p>4 X14: SE6 safety technology – Safe inputs</p> <p>5 X15: SE6 safety technology – Safe outputs and supply for X50</p> <p>6 X50: SE6 safety technology – Plausibility encoder</p> <p>7 X3A: PC, IGB</p> <p>8 X3B: PC, IGB</p> <p>9 X200: EtherCAT on the optional EC6 communication module (alternatively CANopen on CA6 communication module or PROFINET on PN6 communication module)</p> <p>10 X201: EtherCAT on the optional EC6 communication module (alternatively PROFINET on PN6 communication module)</p> | <p>11 X120: Encoder connection on optional X16 terminal module (alternatively X120 and X140: Encoder connections on RI6 terminal module or IO6 terminal module without encoder connection)</p> <p>12 X1: Enable and relay 1</p> <p>13 X4: Encoder</p> <p>14 X2: Motor temperature sensor</p> <p>15 X8: Brake 2 (SBC+/-)</p> <p>16 X5: Brake 1 (BD1/BD2)</p> <p>17 X7: Supply for brake(s)</p> <p>18 X20: Motor</p> <p>19 X30: Quick DC-Link, braking resistor</p> |
|--|---|

11.4.2.3 Size 3

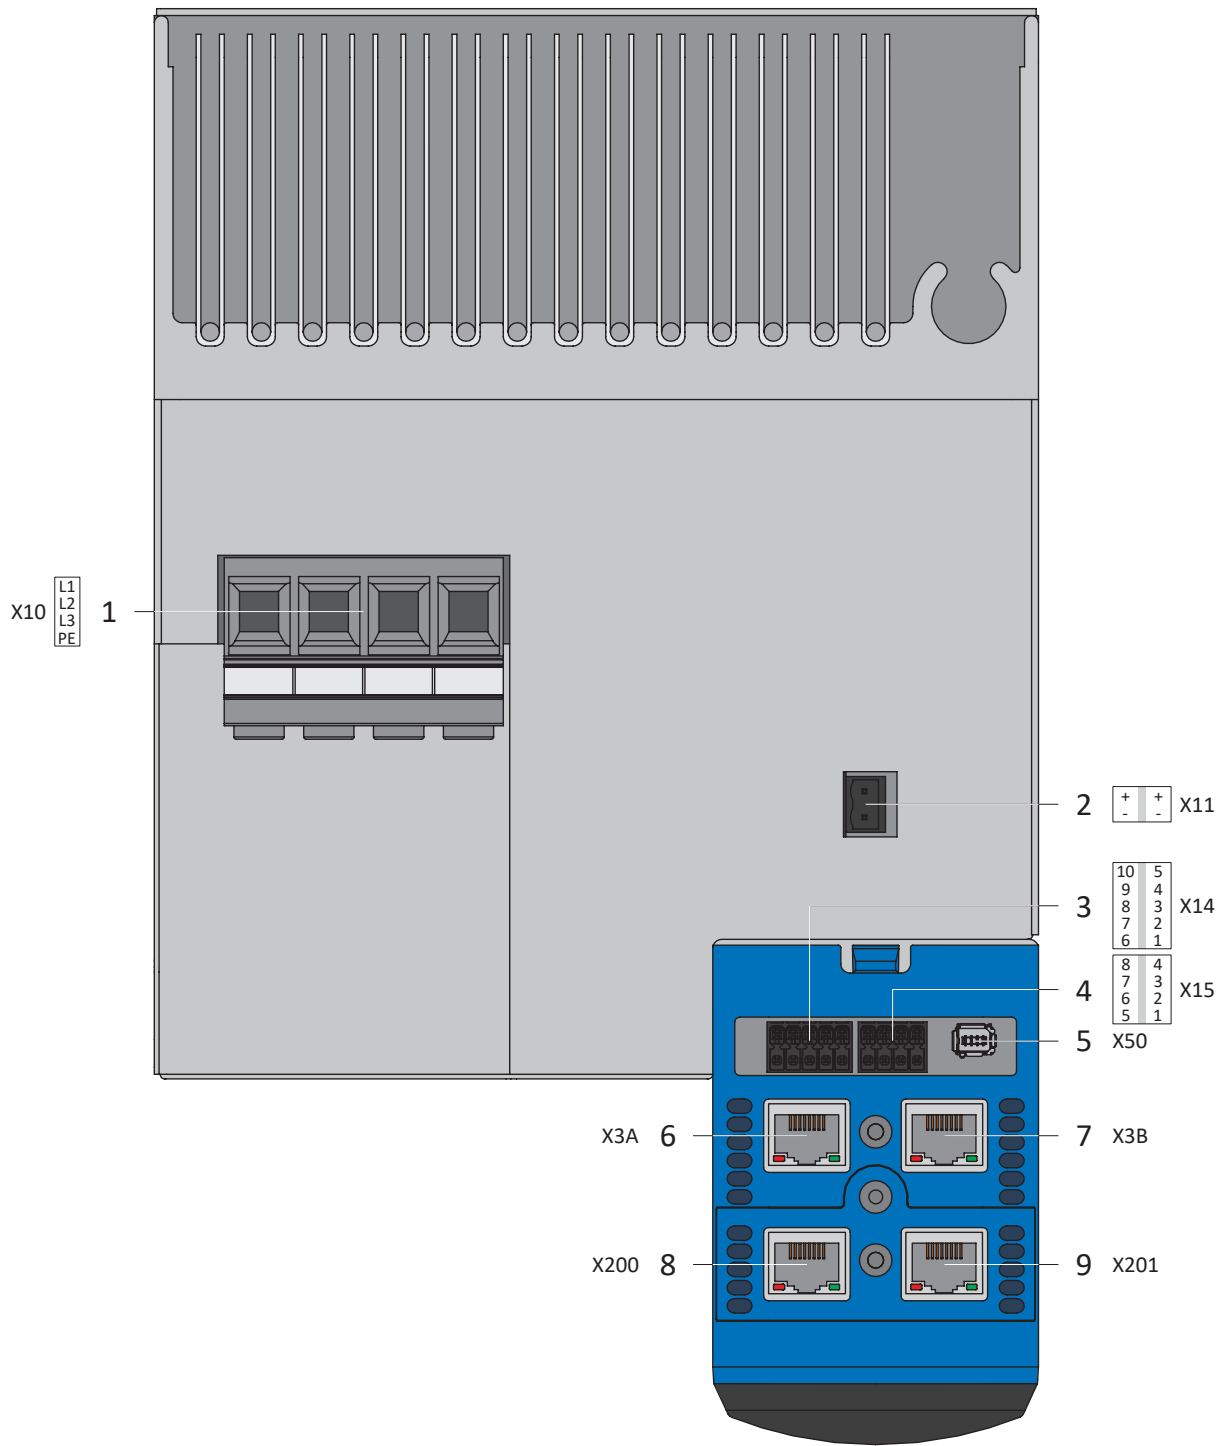


Fig. 40: Connection overview of size 3 with SE6 safety module, top of device

- 1 X10: 400 V_{AC} supply
- 2 X11: 24 V_{DC} supply
- 3 X14: SE6 safety technology – Safe inputs
- 4 X15: SE6 safety technology – Safe outputs and supply for X50
- 5 X50: SE6 safety technology – Plausibility encoder
- 6 X3A: PC, IGB
- 7 X3B: PC, IGB
- 8 X200: EtherCAT on the optional EC6 communication module
(alternatively CANopen on CA6 communication module or
PROFINET on PN6 communication module)
- 9 X201: EtherCAT on the optional EC6 communication module
(alternatively PROFINET on PN6 communication module)

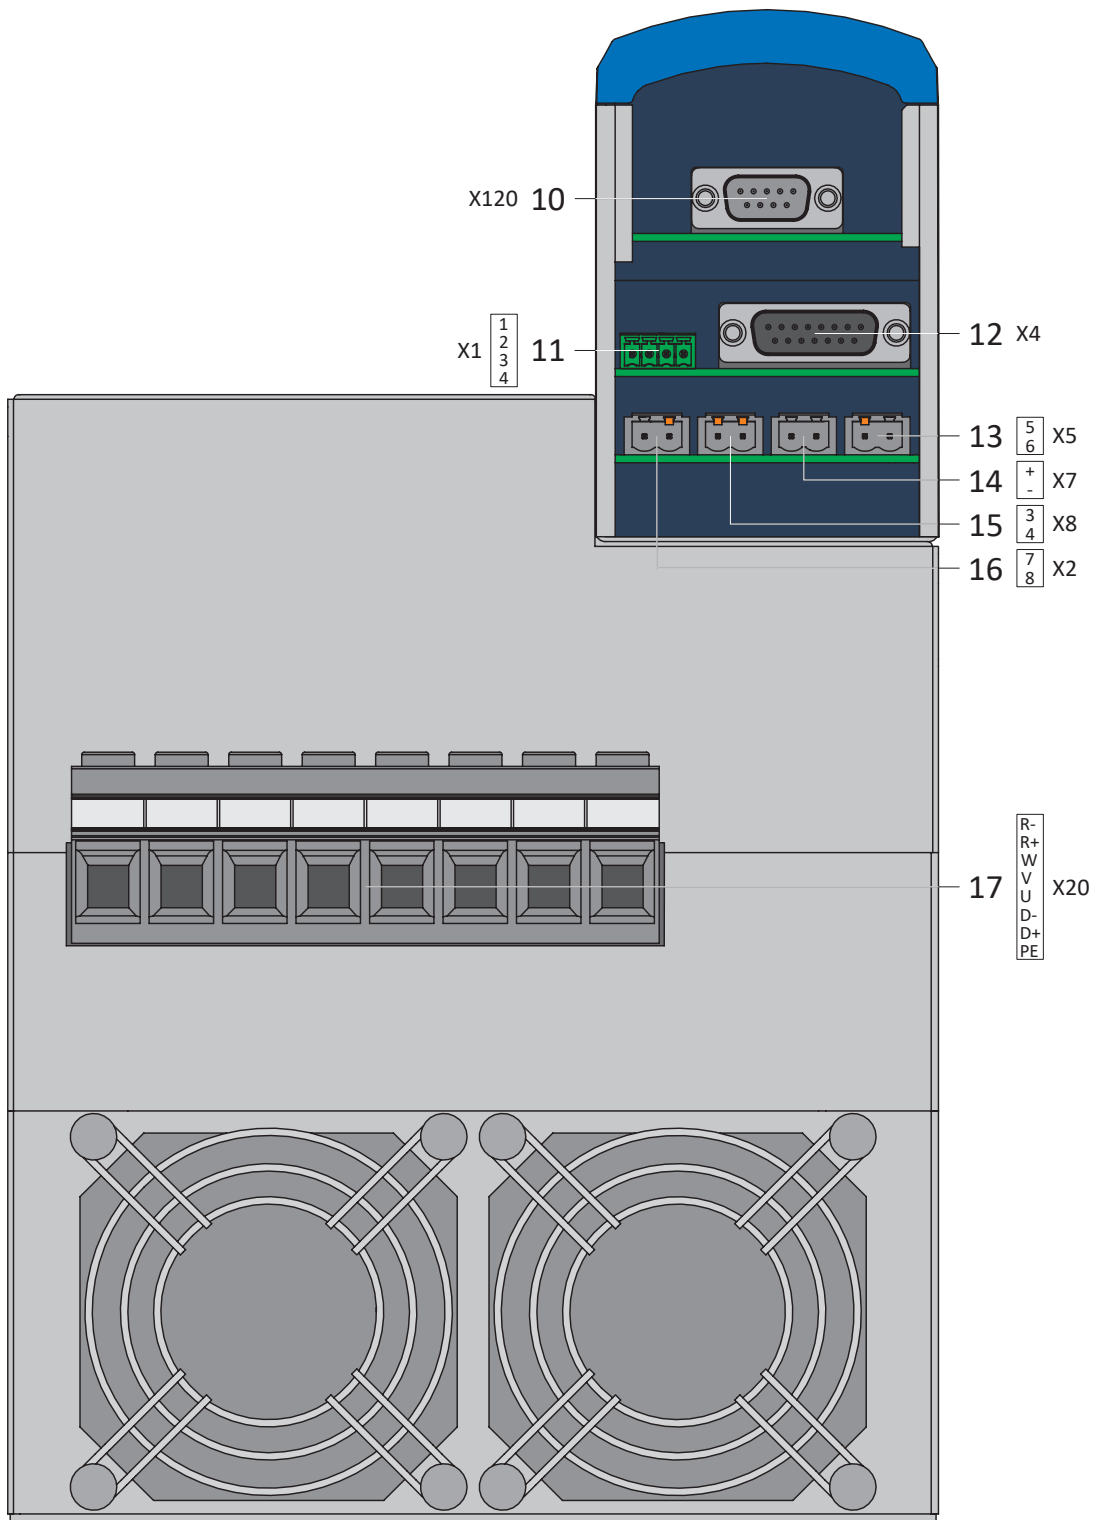


Fig. 41: Connection overview of size 3 with SE6 safety module, bottom of device

- 10 X120: Encoder connection on optional XI6 terminal module (alternatively X120 and X140: Encoder connections on RI6 terminal module or IO6 terminal module without encoder connection)
- 11 X1: Enable and relay 1
- 12 X4: Encoder
- 13 X5: Brake 1 (BD1/BD2)
- 14 X7: Supply for brake(s)
- 15 X8: Brake 2 (SBC+/-)
- 16 X2: Motor temperature sensor
- 17 X20: Motor, Quick DC-Link, braking resistor


11.4.3 X1: Enable and relay 1

You enable the power unit of the drive controller using the enable signal. The function of relay 1 can be parameterized using parameter F75.

Technical data

Note the technical data for X1 (see [X1: Enable and relay](#) [▶ 52]).

Connection

| Terminal | Pin | Designation | Role |
|--|-----|-------------|--|
|  1 2 3 4 | 1 | NO contact | Relay 1; recommended fuse protection: max. 1 AT ¹³ |
| | 2 | | |
| | 3 | 0 V GND | Enable |
| | 4 | Input | |

Tab. 133: X1 connection description

For the connecting wiring, obey the terminal specification [FMC 1,5 -ST-3,5](#) [▶ 462].

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 134: Maximum core/cable length [m]

¹³ For fuse protection, use a 1 A fuse (time delay) before relay 1. For UL-compliant use, be sure that the fuse meets certification requirements for DC voltage in accordance with UL 248.

11.4.4 X2: Motor temperature sensor

Terminal X2 is provided for connecting motor temperature sensors. The following can be connected to all SD6 drive controller device types:

- A KTY84-130 in one winding
- A Pt1000 in one winding
- A PTC triplet

| |
|--------------------|
| Information |
|--------------------|

Evaluation of the temperature sensor is always active. If operation without a temperature sensor is permitted, the connections must be bridged to X2. Otherwise a fault is triggered when the device is switched on.


| |
|--------------------|
| Information |
|--------------------|

STOBER recommends the use of PTC thermistors as thermal winding protection.

Motor temperature sensor wires in the resolver or EnDat cable for SDS 4000

If you replace an SDS 4000 with an SD6, the wires of the motor temperature sensor are maintained in the previously used encoder cable. To be able to continue using the cable, you need the RI6 terminal module, to which you can connect the cable via an AP6 interface adapter. The adapter is available in three different designs.

Connection

| | Pin | Designation | Role |
|--|-----|-------------|---------------------------|
|  7 8 | 7 | 1TP1/1K1 | PTC/Pt1000/KTY connection |
| | 8 | 1TP2/1K2 | |

Tab. 135: X2 connection description

For the connecting wiring, obey the terminal specification [BLF 5.08HC 180 SN | 460](#).

| Feature | All sizes |
|-------------------|-----------------|
| Max. cable length | 100 m, shielded |


Tab. 136: Maximum cable length [m]

11.4.5 X3A, X3B: PC, IGB

You can implement the IGB function (Integrated Bus) using the X3A and X3B interfaces:

- Direct connection to the PC
- IGB motion bus
- Remote maintenance

Connection

| Socket | Pin | Designation | Function |
|--|-----|-------------|------------------------|
| 1 2 ... 7 8  | 1 | Tx+ | Ethernet communication |
| | 2 | Tx- | |
| | 3 | Rx+ | |
| | 4 | — | — |
| | 5 | — | — |
| | 6 | Rx- | Ethernet communication |
| | 7 | — | — |
| | 8 | — | — |

Tab. 137: X3A and X3B connection description

Cable requirements

| |
|--------------------|
| Information |
|--------------------|

To ensure proper functionality, we recommend using cables from STOBER that are matched to the complete system. If unsuitable cables are used, we reserve the right to reject claims under the warranty.

STOBER offers ready-made cables for:

- Direct connection of PC and drive controller
- Setup of Integrated Bus

It is also possible to use cables with the following specification:

Ethernet patch cables or crossover cables meeting the CAT 5e quality level are the ideal cables. The Fast Ethernet technology allows a maximum cable length of 100 m between two nodes.

| |
|--------------------|
| Information |
|--------------------|

Ensure that you only use shielded cables with an SF/FTP, S/FTP or SF/UTP design.

Device addressing

For information on device addressing, see [Device addressing \[▶ 479\]](#).

11.4.6 X4: Encoder

The encoders described below can be connected to X4.

ATTENTION!

Risk of encoder destruction!


X4 may not be plugged in or unplugged when the device is switched on!

Technical data

Note the technical data of the evaluable encoders at X4 (see [X4: Encoder \[▶ 69\]](#)).


Connection

 EnDat 2.1/2.2 digital encoders and SSI encoders

| Socket | Pin | Designation | Function |
|---|-----|----------------------|--|
|  | 1 | — | — |
| | 2 | 0 V GND | Reference potential for encoder supply to pin 4 |
| | 3 | — | — |
| | 4 | U ₂ | Encoder supply |
| | 5 | Data + | Differential input for DATA |
| | 6 | — | — |
| | 7 | — | — |
| | 8 | Clock + | Differential input for CLOCK |
| | 9 | — | — |
| | 10 | 0 V Sense | Optional reference potential of the Sense connection for regulating the encoder supply |
| | 11 | — | — |
| | 12 | U ₂ Sense | Sense connection for regulating the encoder supply |
| | 13 | Data - | Inverse differential input for DATA |
| | 14 | — | — |
| | 15 | Clock - | Inverse differential input for CLOCK |


Tab. 138: X4 connection description for EnDat 2.1/2.2 digital encoders and SSI encoders

Differential HTL incremental encoders

| Socket | Pin | Designation | Function |
|---|-----|----------------------|--|
|  | 1 | B + | Differential input for B track |
| | 2 | 0 V GND | Reference potential for encoder supply to pin 4 |
| | 3 | N + | Differential input for N track |
| | 4 | U ₂ | Encoder supply |
| | 5 | — | — |
| | 6 | A + | Differential input for A track |
| | 7 | — | — |
| | 8 | — | — |
| | 9 | B - | Inverse differential input for B track |
| | 10 | N - | Inverse differential input for N track |
| | 11 | A - | Inverse differential input for A track |
| | 12 | U ₂ Sense | Sense connection for regulating the encoder supply |
| | 13 | — | — |
| | 14 | — | — |
| | 15 | — | — |

Tab. 139: X4 connection description for differential HTL incremental encoders

 Differential TTL incremental encoders

| Socket | Pin | Designation | Function |
|---|-----|----------------------|--|
|  | 1 | — | — |
| | 2 | 0 V GND | Reference potential for encoder supply to pin 4 |
| | 3 | — | — |
| | 4 | U ₂ | Encoder supply |
| | 5 | B + | Differential input for B track |
| | 6 | — | — |
| | 7 | N + | Differential input for N track |
| | 8 | A + | Differential input for A track |
| | 9 | — | — |
| | 10 | — | — |
| | 11 | — | — |
| | 12 | U ₂ Sense | Sense connection for regulating the encoder supply |
| | 13 | B - | Inverse differential input for B track |
| | 14 | N - | Inverse differential input for N track |
| | 15 | A - | Inverse differential input for A track |

Tab. 140: X4 connection description for differential TTL incremental encoders

Cable requirements

| Feature | All sizes |
|-------------------|-----------------|
| Max. cable length | 100 m, shielded |

Tab. 141: Maximum cable length [m]

Information

To ensure proper functionality, we recommend using cables from STOBER that are matched to the complete system. If unsuitable cables are used, we reserve the right to reject claims under the warranty.

11.4.7 X5: Brake – Actuation

The brake is connected to X5.


Information

In the parameters F93 and F100, you can set whether the brake is connected directly or indirectly and deactivate brake monitoring there.

Technical data

Note the technical data of the brakes controllable at X5 (see [X5: Brake \[▶ 86\]](#)).

Connection

| | Pin | Designation | Role |
|--|-----|-------------|---------------------|
|  5 6 | 5 | 1BD1 | Brake actuation |
| | 6 | 1BD2 | Reference potential |

Tab. 142: X5 connection description, brake

For the connecting wiring, obey the terminal specification [BLF 5.08HC 180 SN \[▶ 460\]](#).

| Feature | All sizes |
|-------------------|-----------------|
| Max. cable length | 100 m, shielded |

Tab. 143: Maximum cable length [m]

11.4.8 X6 (ST6 option): Brake – Feedback and supply


X6 is used for brake diagnostics and supply. The X6 connection is part of the ST6 safety module.

Technical data

| Electrical data | All types |
|-----------------|---------------------------|
| U_1 | 24 V _{DC} , +20% |
| I_{1max} | 6 A, UL: 4 A |

Tab. 144: X6 electrical data – Brake supply

 Connection

| Terminal | Pin | Designation | Role |
|--|-----|-------------|--|
|  1 2 3 4 | 1 | Feedback | Feedback input of an optional switching amplifier for braking diagnostics; if the brake is connected to SD6 indirectly over a contactor and the switching amplifier is to be monitored, pins 1 and 2 must be connected via an external N/O contact |
| | 2 | 0 V GND | Reference potential for feedback |
| | 3 | + | 24 V _{DC} supply for brake; recommended fuse protection: max. 6 AT ¹⁴ |
| | 4 | - | Reference potential for supply voltage of the brake |

Tab. 145: X6 connection description

For the connecting wiring, obey the terminal specification [BLF 5.08HC 180 SN \[► 460\]](#).

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 146: Maximum core/cable length [m]

¹⁴ For UL-compliance, use a 4 A fuse (time delay). Make sure that the fuse meets certification requirements for DC voltage in accordance with UL 248.

11.4.9 X7 (SE6 option): Brake(s) – Supply


X7 is used to supply the brake(s). The X7 connection is part of the SE6 safety module.

Technical data

| Electrical data | All types |
|-----------------|-------------------------|
| U_1 | 24 V _{DC} +20% |
| I_{1max} | 8 A, UL: 4 A |

Tab. 147: X7 electrical data – Brake supply

 Connection

| | Pin | Designation | Role |
|--|-----|-------------|---|
|  1 2 | 1 | + | 24 V _{DC} supply for brakes at X5 and X8; recommended fuse protection: max. 8 AT ¹⁵ |
| | 2 | - | Reference potential for supply voltage of the brakes |

Tab. 148: X7 connection description

For the connecting wiring, obey the terminal specification [BLF 5.08HC 180 SN |▶ 460](#).

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 149: Maximum core/cable length [m]

¹⁵ For UL-compliance, use a 4 A fuse (time delay). Note that the fuse meets certification requirements for the relevant DC voltage in accordance with UL 248.

11.4.10 X8 (SE6 option): Brake 2 – Safe brake control

X8 serves as the safe brake control for brake 2. The X8 connection is part of the SE6 safety module.


| |
|--------------------|
| Information |
|--------------------|

If you want to use the extended safety technology via terminals, be sure to read the manual for the SE6 safety module (see [Detailed information \[▶ 519\]](#)).

Technical data

Note the technical data of the brakes controllable at X8 (see [X8 \(SE6 option\): Brake \[▶ 86\]](#)).

Connection

| | Pin | Designation | Role |
|--|-----|-------------|------------------------------|
|  3 4 | 3 | SBC+ | Output for brake control 2 + |
| | 4 | SBC- | Output for brake control 2 – |

Tab. 150: X8 connection description

For the connecting wiring, obey the terminal specification [BLF 5.08HC 180 SN \[▶ 460\]](#).

| Feature | All sizes |
|-------------------|--|
| Max. cable length | 100 m; shielded on drive controllers of size 3 |

Tab. 151: Maximum cable length [m]

11.4.11 X10: 230/400 V supply


Terminal X10 serves to connect the drive controller to the supply grid.

Conductor cross-sections for the power connection


When selecting the conductor cross-section, note the line fuse, the maximum permitted conductor cross-section of terminal X10, the routing method and the surrounding temperature.

Connection

Size 0
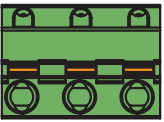
| Terminal | Pin | Designation | Role |
|--|-----|-------------|---------------------|
|  1 2 3 | 1 | L1 | Power supply |
| | 2 | N | Neutral conductor |
| | 3 | PE | Grounding conductor |


Tab. 152: X10 connection description, size 0, 1-phase line connection

| Terminal | Pin | Designation | Role |
|---|-----|-------------|---------------------|
|  1 2 3 4 | 1 | L1 | Power supply |
| | 2 | L2 | |
| | 3 | L3 | |
| | 4 | PE | Grounding conductor |

Tab. 153: X10 connection description, size 0, 3-phase line connection

For the connecting wiring, obey the terminal specification [GFKC 2,5 -ST-7,62 \[▶ 463\]](#).


Size 1
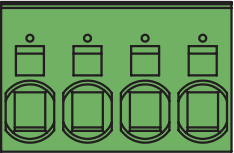
| Terminal | Pin | Designation | Role |
|--|-----|-------------|---------------------|
|  1 2 3 4 | 1 | L1 | Power supply |
| | 2 | L2 | |
| | 3 | L3 | |
| | 4 | PE | Grounding conductor |

Tab. 154: X10 connection description, size 1, 3-phase line connection

For the connecting wiring, obey the terminal specification [SPC 5 -ST-7,62 \[▶ 466\]](#).


Size 2
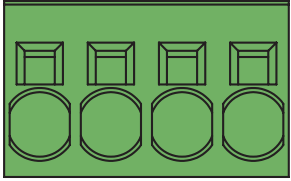
| Terminal | Pin | Designation | Role |
|--|-----|-------------|---------------------|
|  <p>1 2 3 4</p> | 1 | L1 | Power supply |
| | 2 | L2 | |
| | 3 | L3 | |
| | 4 | PE | Grounding conductor |

Tab. 155: X10 connection description, size 2, 3-phase line connection

For the connecting wiring, obey the terminal specification [SPC 16 -ST-10,16 \[▶ 466\]](#).

Size 3
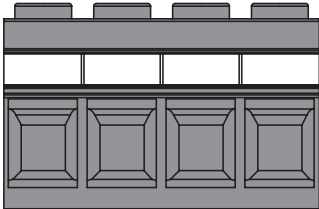
| Terminal | Pin | Designation | Role |
|---|-----|-------------|---------------------|
|  <p>1 2 3 4</p> | 1 | L1 | Power supply |
| | 2 | L2 | |
| | 3 | L3 | |
| | 4 | PE | Grounding conductor |

Tab. 156: X10 connection description, size 3, 3-phase line connection

For the connecting wiring, note the [MKDSP 25 -15,00 \[▶ 465\]](#) terminal specification.

11.4.12 X11: 24 V supply – Control unit

The connection of 24 V_{DC} to X11 is required for the power supply of the control unit.

ATTENTION!

Device damage due to overload!

If the 24 V_{DC} power supply is looped to multiple devices over the terminal, the terminal may be damaged by a current that is too high.

- Make sure that the current over the terminal does not exceed the value 15 A (UL: 10 A for sizes 0 to 2 and 4 A for size 3).

Technical data


| Electrical data | All types |
|---------------------|--------------------------------|
| U _{1CU} | 24 V _{DC} , +20%/-15% |
| I _{1maxCU} | 1.5 A |

Tab. 157: Control unit electrical data

Connection

Information

 The device may not be connected to a DC supply grid. Instead, supply it over a local 24 V_{DC} power supply unit.

| | Pin | Designation | Role |
|---|-----|-------------|---|
|  | 1 | + | 24 V _{DC} supply of the control unit, bridged in the terminal; design in accordance with EN 60204: PELV, secondary grounded; recommended fuse protection: max. 15 AT ¹⁶ . |
| | 2 | | |
| | 3 | - | Reference potential for +24 V _{DC} , bridged in the terminal |
| | 4 | | |

Tab. 158: X11 connection description

For the connecting wiring, obey the terminal specification [BLDF 5.08 180 SN](#) [▶ 460].

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 159: Maximum core/cable length [m]

¹⁶ For UL-compliance, use a 10 A fuse (time delay) for sizes 0 to 2 and a 4 A fuse (time delay) for size 3. Please note that the fuse is approved for DC voltage in accordance with UL 248

11.4.13 X12 (ST6 option): Safety technology

The ST6 safety module adds the STO safety function to the SD6 drive controller via terminal X12.

Information


If you would like to use the STO safety function via terminals, be sure to read the manual for the ST6 safety module (see [Detailed information \[▶ 519\]](#)).

If you do not want to use the safety function, connect STO_a and STO_b to 24 V_{DC} and connect GND to the reference potential, e.g. using a connection with terminal X11.

Technical data

Obey the technical data of the safety options at X12 (see [ST6 safety module \[▶ 64\]](#)).

Connection

| Terminal | Pin | Designation | Role |
|--|-----|----------------|--|
|  1 2 3 4 5 6 7 8 | 1 | STO_a | Input of safety channel 1 |
| | 2 | | |
| | 3 | STO_b | Input of safety channel 2 |
| | 4 | | |
| | 5 | 0 V GND | Reference potential for STO_a and STO_b , internally bridged with pin 7 |
| | 6 | STO_{status} | Feedback signal of safety channels 1 and 2 for diagnostic purposes |
| | 7 | 0 V GND | Reference potential for STO_a and STO_b , internally bridged with pin 5 |
| | 8 | $U_{1status}$ | STO_{status} supply; recommended fuse protection: max. 3.15 AT ¹⁷ |

Tab. 160: X12 connection description

For the connecting wiring, obey the terminal specification [BCF 3,81 180 SN \[▶ 459\]](#).

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 161: Maximum core/cable length [m]

¹⁷ For UL-compliance, use a 3.15 A fuse (time delay). The fuse must be certified for DC voltage in accordance with UL 248.

11.4.14 X14 (SE6 option): Safety technology – Safe inputs


The SE6 safety module adds the extended safety functions to the SD6 drive controller using terminals X14 and X15.

| |
|---|
| Information |
| If you want to use the extended safety technology via terminals, be sure to read the manual for the SE6 safety module (see Detailed information [▶ 519]). |

Technical data

Note the technical data of the safety options at X14 and X15 (see [SE6 safety module](#) [▶ 65]).

Connection

| Terminal | Pin | Designation | Role |
|---|-----|-------------|--|
| <div style="display: flex; align-items: center; justify-content: center;"> 6 7 8 9 10  1 2 3 4 5 </div> | 1 | I0 | Safe digital input |
| | 2 | I1 | Safe digital input |
| | 3 | I2 | Safe digital input |
| | 4 | I3 | Safe digital input |
| | 5 | 0 V GND | Reference potential for digital inputs; internally connected to pin 10 |
| | 6 | I4 | Safe digital input |
| | 7 | I5 | Safe digital input |
| | 8 | I6 | Safe digital input |
| | 9 | I7 | Safe digital input |
| | 10 | 0 V GND | Reference potential for digital inputs; internally connected to pin 5 |

Tab. 162: X14 connection description

For the connecting wiring, note the [DFMC 1.5 -ST-3.5](#) [▶ 461] terminal specification.

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 163: Maximum core/cable length [m]

11.4.15 X15 (SE6 option): Safety technology – Safe outputs, supply for X50

The SE6 safety module adds the extended safety functions to the SD6 drive controller using terminals X14 and X15.

Information

If you want to use the extended safety technology via terminals, be sure to read the manual for the SE6 safety module (see [Detailed information](#) [[▶ 519](#)]).

ATTENTION!


Loss of safety!

Overvoltages $> 40 V_{DC}$ in the coupling between the safety module and safety controller can lead to loss of safety. Exposing the digital 1-pole outputs of the safety module to an overvoltage of the safety controller can cause the deactivated outputs to output a 1 signal. For the safety controller, use a power supply unit with overvoltage protection for the output voltage. The output voltage must be limited to a maximum of $40 V_{DC}$.

Technical data

Note the technical data of the safety options at X14 and X15 (see [SE6 safety module](#) [[▶ 65](#)]).

Connection

| Terminal | Pin | Designation | Role |
|---|-----|----------------|---|
| 5 6 7 8  1 2 3 4 | 1 | +24 V | 24 V _{DC} supply for digital outputs (PELV); fuse protection: max. 4 AT; the supply voltage is also needed if no safe outputs are used |
| | 2 | O0 | Safe digital output |
| | 3 | O1 | Safe digital output |
| | 4 | U ₂ | Power supply voltage for external encoder |
| | 5 | O2 | Safe digital output |
| | 6 | O3 | Safe digital output |
| | 7 | O4 | Safe digital output |
| | 8 | 0 V GND | Reference potential for external encoder |

Tab. 164: X15 connection description

For the connecting wiring, note the [DFMC 1.5 -ST-3.5](#) [[▶ 461](#)] terminal specification.

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |


Tab. 165: Maximum core/cable length [m]

11.4.16 X20: Motor

The motor is connected to X20. For size 3 device types, there is also the connection for the DC link connection and for a braking resistor at terminal X20.

Connection


Size 0

| Terminal | Pin | Designation | Role |
|--|-----|-------------|--------------------------|
|  1 2 3 4 | 1 | U | Motor phase U connection |
| | 2 | V | Motor phase V connection |
| | 3 | W | Motor phase W connection |
| | 4 | PE | Grounding conductor |

Tab. 166: X20 connection description, size 0

For the connecting wiring, obey the terminal specification [GFKC 2,5 -ST-7,62 \[▶ 463\]](#).


Size 1
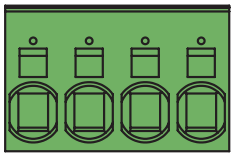
| Terminal | Pin | Designation | Role |
|---|-----|-------------|--------------------------|
|  1 2 3 4 | 1 | U | Motor phase U connection |
| | 2 | V | Motor phase V connection |
| | 3 | W | Motor phase W connection |
| | 4 | PE | Grounding conductor |

Tab. 167: X20 connection description, size 1

For the connecting wiring, obey the terminal specification [SPC 5 -ST-7,62 \[▶ 466\]](#).


Size 2
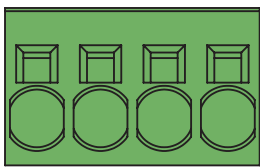
| Terminal | Pin | Designation | Role |
|--|-----|-------------|--------------------------|
|  1 2 3 4 | 1 | U | Motor phase U connection |
| | 2 | V | Motor phase V connection |
| | 3 | W | Motor phase W connection |
| | 4 | PE | Grounding conductor |

Tab. 168: X20 connection description, size 2

For the connecting wiring, obey the terminal specification [SPC 16 -ST-10,16 \[▶ 466\]](#).

Size 3
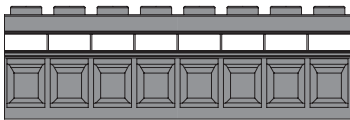
| Terminal | Pin | Designation | Role |
|--|-----|-------------|--------------------------|
|  <p>1 2 3 4 5 6 7 8</p> | 1 | R- | Braking resistor |
| | 2 | R+ | |
| | 3 | W | Motor phase W connection |
| | 4 | V | Motor phase V connection |
| | 5 | U | Motor phase U connection |
| | 6 | D- | DC link connection |
| | 7 | D+ | |
| | 8 | PE | Grounding conductor |

Tab. 169: X20 connection description, size 3

For the connecting wiring, note the [MKDSP 25 -15,00 \[▶ 465\]](#) terminal specification.

| Feature | Size 3 |
|------------------------|-----------------------|
| Max. core/cable length | 3 m, > 30 cm shielded |

Tab. 170: Maximum core/cable length of the braking resistor and DC link connection [m]

Cable requirements

| Motor type | Connection | Size 0 to 2 | Size 3 |
|---|----------------------|-----------------|-----------------|
| Synchronous servo motor, asynchronous motor | Without output choke | 50 m, shielded | 100 m, shielded |
| Synchronous servo motor, asynchronous motor | With output choke | 100 m, shielded | — |

Tab. 171: Maximum cable length of the power cable [m]

Information

To ensure proper functionality, we recommend using cables from STOBER that are matched to the complete system. If unsuitable cables are used, we reserve the right to reject claims under the warranty.

Shielded connection of the power cable

Note the following points for the connection of the power cable:

- Ground the shield of the power cable on the shield contact on the drive controller intended for this.
- Keep the exposed conductors as short as possible. All devices and circuits that are sensitive to EMC must be kept at a distance of at least 0.3 m.

11.4.17 X30: DC link connection, braking resistor


Terminal X30 is available in sizes 0 to 2 for the DC link connection of the drive controller and for the connection of a braking resistor.

Project configuration

For setting up the Quick DC-Link, note the information on project configuration (see [DC link connection \[▶ 99\]](#)).

Connection


Size 0

| Terminal | Pin | Designation | Role |
|--|-----|-------------|-----------------------------|
|  1 2 3 4 | 1 | D- | DC link connection |
| | 2 | D+ | |
| | 3 | R+ | Braking resistor connection |
| | 4 | R- | |

Tab. 172: X30 connection description, size 0

For the connecting wiring, obey the terminal specification [GFKIC 2.5 -ST-7.62 \[▶ 463\]](#).


Size 1
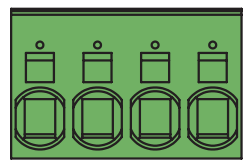
| Terminal | Pin | Designation | Role |
|--|-----|-------------|-----------------------------|
|  1 2 3 4 | 1 | D- | DC link connection |
| | 2 | D+ | |
| | 3 | R+ | Braking resistor connection |
| | 4 | R- | |

Tab. 173: X30 connection description, size 1

For the connecting wiring, obey the terminal specification [SPC 5 -ST-7,62 \[▶ 466\]](#).

Size 2
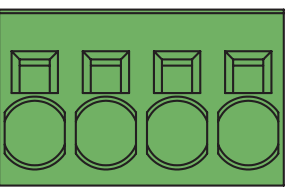
| Terminal | Pin | Designation | Role |
|--|-----|-------------|-----------------------------|
|  1 2 3 4 | 1 | D- | DC link connection |
| | 2 | D+ | |
| | 3 | R+ | Braking resistor connection |
| | 4 | R- | |

Tab. 174: X30 connection description, size 2

For the connecting wiring, obey the terminal specification [ISPC 16 -ST-10,16 \[▶ 464\]](#).

| Feature | Sizes 0 to 2 |
|------------------------|-----------------------|
| Max. core/cable length | 3 m, > 30 cm shielded |

Tab. 175: Maximum core/cable length [m]

Size 3

For size 3 device types, the connections for the braking resistor and Quick DC-Link are part of terminal X20.

Wiring example

The example in the appendix (see [DC link connection](#) [▶ 469]) illustrates the basic connection of multiple SD6 drive controllers based on a DC link connection with a DL6A Quick DC-Link.

11.4.18 X50 (SE6 option): Plausibility encoder


At X50, differential TTL incremental encoders or SSI encoders can be connected. X50 is part of the SE6 safety module. X50 serves as the encoder plausibility check when using asynchronous motors or when using the SLP safety function.

Technical data

Note the technical data of the evaluable encoders at X50 (see [X50 \(SE6 option\): Plausibility encoder](#) [▶ 72]).


Connection

SSI encoders

| Bush | Pin | Designation | Role |
|--|-----|----------------|---|
| 1 3 5 7  2 4 6 8 | 1 | U ₂ | Encoder supply (see terminal X15, pin 4) |
| | 2 | 0 V GND | Reference potential for encoder supply to pin 1 (see terminal X15, pin 8) |
| | 3 | — | — |
| | 4 | Clock + | Differential input for CLOCK |
| | 5 | Clock – | Inverse differential input for CLOCK |
| | 6 | — | — |
| | 7 | Data + | Differential input for DATA |
| | 8 | Data – | Inverse differential input for DATA |

Tab. 176: X50 connection description for SSI encoders

Differential TTL incremental encoders

| Bush | Pin | Designation | Role |
|---|-----|----------------|---|
| 1 3 5 7  2 4 6 8 | 1 | U ₂ | Encoder supply (see terminal X15, pin 4) |
| | 2 | 0 V GND | Reference potential for encoder supply to pin 1 (see terminal X15, pin 8) |
| | 3 | — | — |
| | 4 | A + | Differential input for A track |
| | 5 | A – | Inverse differential input for A track |
| | 6 | — | — |
| | 7 | B + | Differential input for B track |
| | 8 | B – | Inverse differential input for B track |

Tab. 177: X50 connection description for differential TTL incremental encoders

Cable requirements


| Feature | All sizes |
|-------------------|----------------|
| Max. cable length | 50 m, shielded |

Tab. 178: Cable length [m]

11.4.18.1 X50 adapter cable (SE6 option)

The adapter cable with flying leads for connection to X50 is used to connect the plausibility encoder.

Differential TTL incremental encoders
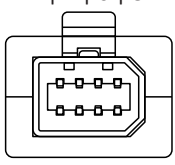
| Connector | Pin | Designation | Color |
|---|-----|----------------|-------|
|  | 1 | U ₂ | WH |
| | 2 | 0 V GND | BN |
| | 3 | N + | GN |
| | 4 | A + | GY |
| | 5 | A - | PK |
| | 6 | N - | YE |
| | 7 | B + | BU |
| | 8 | B - | RD |

Tab. 179: X50 connector description for differential TTL incremental encoders

11.4.19 Connecting a drive controller (ST6 option)

 **WARNING!**

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

Tools and material

You will need:


- Tool for assembling the accessory part and tightening the fastening screws.

Requirements and connection


Bottom of the device:

✓ You have a system circuit diagram describing the connection of the drive controller.

1. Disconnect all terminals on the underside of the drive controller. For size 3 drive controllers, note that terminal X20 cannot be disconnected.
2. Sizes 0 to 2: In order to connect the motor temperature sensor, the control of the brake and the motor itself to the drive controller, wire the cores of the power cables with terminals X2, X5 and X20. Attach the power cable to the EMC shield plate.

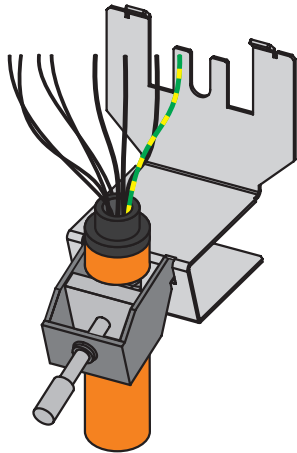

3. Size 3: Start by attaching the power cable to the EMC shield plate. Then wire the cores of the power cable to terminals X2, X5 and X20 in order to connect the motor temperature sensor, the brake control and the motor itself to the drive controller.

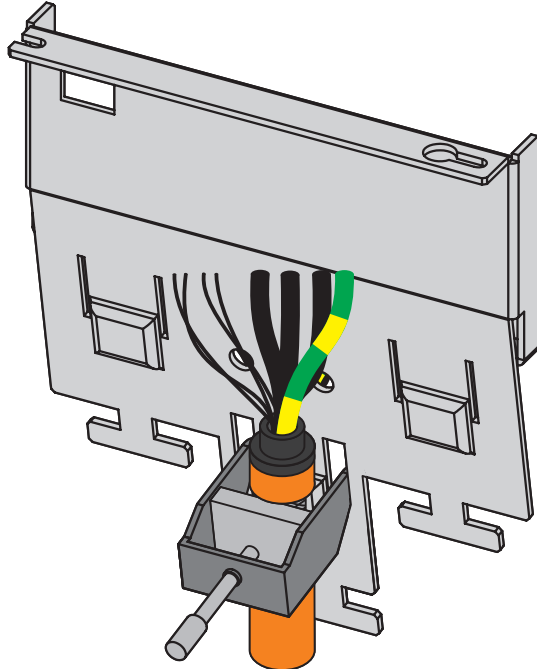

4. Sizes 0 to 2: Attach terminal X20.
5. Connect the supply voltage for the brake to terminal X6 and attach it.
6. Attach terminals X2 and X5.
7. Optional: Connect an encoder to terminal X4.
8. Wire the enable signal (pins 3 and 4) and optional relay 1 (pins 1 and 2) to terminal X1 and attach them.

Top of the device:

- ✓ You have a system circuit diagram describing the connection of the drive controller.
1. Connect the power supply to terminal X10.
 2. Connect the 24 V_{DC} power supply for the control electronics to terminal X11.
 3. Connect terminal X12 according to your safety configuration.
 4. Optional: In order to use the IGB Motion Bus function, connect additional drive controllers to an IGB network via sockets X3A and X3B.
 5. Optional: Connect the EtherCAT, CANopen or PROFINET fieldbuses via the EC6, CA6 or PN6 modules to sockets X200 and X201.

Examples can be found in the appendix (see [Wiring examples](#) [▶ 467]).

11.4.20 Connecting a drive controller (SE6 option)

WARNING!

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

Tools and material

You will need:


- Tool for assembling the accessory part and tightening the fastening screws.

Requirements and connection


Bottom of the device:

- ✓ You have a system circuit diagram describing the connection of the drive controller.
1. Disconnect all terminals on the underside of the drive controller. For size 3 drive controllers, note that terminal X20 cannot be disconnected.

2. Sizes 0 to 2: In order to connect the motor temperature sensor, the brakes and the motor itself to the drive controller, wire the cores of the power cables to terminals X2, X5, X8 and X20. Attach the power cable to the EMC shield plate.

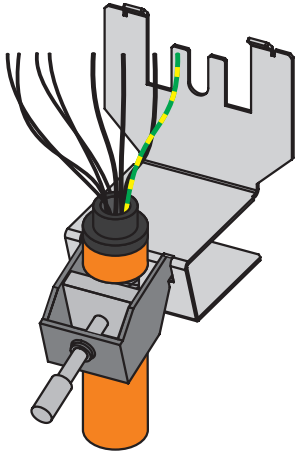

3. Size 3: Start by attaching the power cable to the EMC shield plate. Then wire the cores of the power cable to terminals X2, X5, X8 and X20 in order to connect the motor temperature sensor, the brakes and the motor itself to the drive controller.

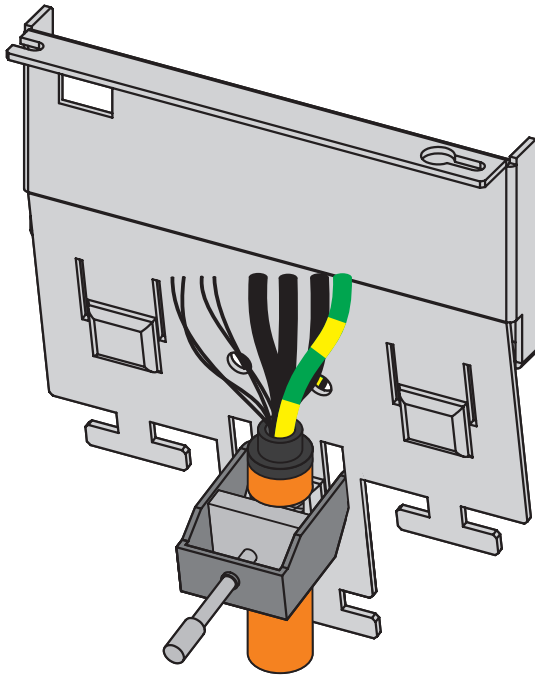

4. Sizes 0 to 2: Attach terminal X20.
5. Connect the supply voltage for the brakes to terminal X7 and attach it.
6. Attach terminals X2, X5 and X8.
7. Optional: Connect an encoder to terminal X4.
8. Wire the enable signal (pins 3 and 4) and optional relay 1 (pins 1 and 2) to terminal X1 and attach them.

Top of the device:

- ✓ You have a system circuit diagram describing the connection of the drive controller.
- 1. Connect the power supply to terminal X10.
- 2. Optional: Connect the 24 V_{DC} power supply for the control electronics to terminal X11.
- 3. Connect terminals X14 and X15 according to your safety configuration and, optionally, connect the plausibility encoder to X50.
- 4. Optional: In order to use the IGB Motion Bus function, connect additional drive controllers to an IGB network via sockets X3A and X3B.
- 5. Optional: Connect the EtherCAT, CANopen or PROFINET fieldbuses via the EC6, CA6 or PN6 modules to sockets X200 and X201.

Examples can be found in the appendix (see [Wiring examples](#) [▶ 467]).

11.5 Braking resistor

WARNING!

Risk of burns! Fire hazard! Material damage!

Chokes and braking resistors can heat up to over 100 °C under permitted operating conditions.

- Take protective measures against accidental and intentional contact with the choke or braking resistor.
- Make sure that no flammable material is in the vicinity of the choke or braking resistor.
- Note the specified minimum clearances for installation.

WARNING!

Fire hazard due to overheating!

Using chokes or braking resistors outside of the nominal data (cable length, current, frequency, etc.) can cause them to overheat.

- Always comply with the maximum nominal data when operating the chokes and braking resistors.

Information

If you are connecting an external braking resistor, take the following into consideration:

- Check whether a braking resistor is parameterized in DriveControlSuite. The brake chopper of the drive controller is active only if a braking resistor has been parameterized.
- For size 3 drive controllers, an externally connected braking resistor works alongside the integrated braking resistor with PTC characteristics.

Housing grounding of the braking resistor

When grounding the housing of the braking resistor, obey the information on how to connect the grounding conductor correctly (see [Connection of the grounding conductor](#) [▶ 150]).

11.5.1 FZMU, FZZMU connection description

The internal connections of the tubular fixed resistor are wired to terminals with heat-resistant, silicone-insulated strands of wire. Also ensure a heat-resistant and sufficiently surge-proof design for the connection!

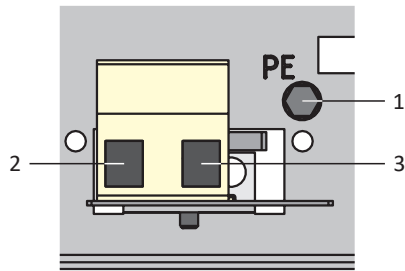


Fig. 42: FZMU connection overview

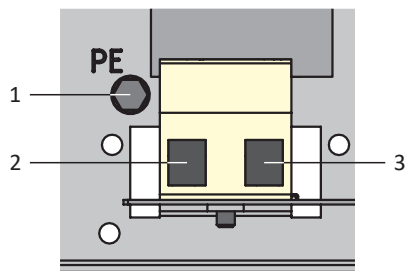


Fig. 43: FZZMU connection overview

Sizes 0 to 2

| No. | Function |
|-----|--|
| 1 | Grounding conductor |
| 2 | RB+ drive controller braking resistor connection: X30, pin 3 |
| 3 | RB- drive controller braking resistor connection: X30, pin 4 |

Tab. 180: Connection description of FZMU, FZZMU to sizes 0 to 2

Size 3

| No. | Function |
|-----|--|
| 1 | Grounding conductor |
| 2 | RB- drive controller braking resistor connection: X20, pin 1 |
| 3 | RB+ drive controller braking resistor connection: X20, pin 2 |

Tab. 181: Connection description of FZMU, FZZMU to size 3

For the connecting wiring of the braking resistor, obey the terminal specification [G 10/2 \[▶ 462\]](#).

11.5.2 GVADU, GBADU connection description

GVADU flat resistors have two red cores for connecting to the drive controller, while GBADU flat resistors have one gray and one white core.

Sizes 0 to 2

| Core color | Function |
|------------|--|
| RD/GY | RB+ drive controller braking resistor connection: X30, pin 3 |
| RD/WH | RB- drive controller braking resistor connection: X30, pin 4 |

Tab. 182: Connection description of GVADU, GBADU to sizes 0 to 2

Size 3

| Core color | Function |
|------------|--|
| GY | RB- drive controller braking resistor connection: X20, pin 1 |
| WH | RB+ drive controller braking resistor connection: X20, pin 2 |

Tab. 183: Connection description of GBADU to size 3

11.5.3 FGFKU connection description

Sizes 0 to 2

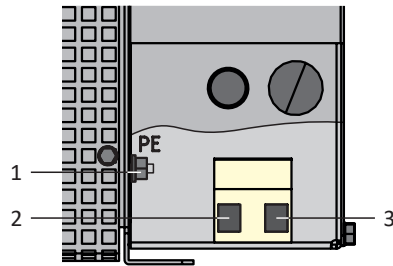


Fig. 44: FGFKU connection overview

| No. | Function |
|-----|--|
| 1 | Grounding conductor |
| 2 | RB+ drive controller braking resistor connection: X30, pin 3 |
| 3 | RB- drive controller braking resistor connection: X30, pin 4 |

Tab. 184: Connection description of FGFKU to sizes 0 to 2

Size 3

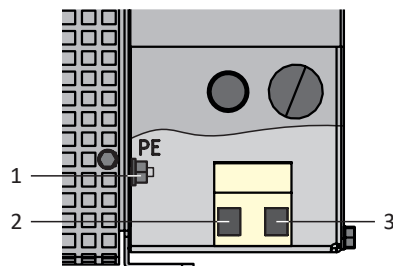


Fig. 45: FGFKU connection overview

| No. | Function |
|-----|--|
| 1 | Grounding conductor |
| 2 | RB- drive controller braking resistor connection: X20, pin 1 |
| 3 | RB+ drive controller braking resistor connection: X20, pin 2 |

Tab. 185: Connection description of FGFKU to size 3

For the connecting wiring of the braking resistor, obey the terminal specification [G 10/2 \[▶ 462\]](#).

11.5.4 RB 5000 connection description

The rear section braking resistor has two red cores for connecting to the drive controller.

Sizes 0 to 2

| Core color | Function |
|------------|--|
| RD | RB+ drive controller braking resistor connection: X30, pin 3 |
| RD | RB- drive controller braking resistor connection: X30, pin 4 |

Tab. 186: Connection description of RB 5000 to sizes 0 to 2

11.6 Power choke

⚠ WARNING!

Risk of burns! Fire hazard! Material damage!

Chokes and braking resistors can heat up to over 100 °C under permitted operating conditions.

- Take protective measures against accidental and intentional contact with the choke or braking resistor.
- Make sure that no flammable material is in the vicinity of the choke or braking resistor.
- Note the specified minimum clearances for installation.

⚠ WARNING!

Fire hazard due to overheating!

Using chokes or braking resistors outside of the nominal data (cable length, current, frequency, etc.) can cause them to overheat.

- Always comply with the maximum nominal data when operating the chokes and braking resistors.

11.6.1 Connection description

| Designation | Function |
|-------------|--|
| 1U1 | Phase L1 drive controller connection: X10, pin 1 |
| 1U2 | Phase L1 network connection |
| 1V1 | Phase L2 drive controller connection: X10, pin 2 |
| 1V2 | Phase L2 network connection |
| 1W1 | Phase L3 drive controller connection: X10, pin 3 |
| 1W2 | Phase L3 network connection |
| PE | Grounding conductor |

Tab. 187: TEP power choke connection description

Choke housing grounding

When grounding the housing of the choke, obey the information on how to connect the grounding conductor correctly (see [Connection of the grounding conductor \[▶ 150\]](#)).

11.7 Output choke

⚠ WARNING!

Risk of burns! Fire hazard! Material damage!

Chokes and braking resistors can heat up to over 100 °C under permitted operating conditions.

- Take protective measures against accidental and intentional contact with the choke or braking resistor.
- Make sure that no flammable material is in the vicinity of the choke or braking resistor.
- Note the specified minimum clearances for installation.

⚠ WARNING!

Fire hazard due to overheating!

Using chokes or braking resistors outside of the nominal data (cable length, current, frequency, etc.) can cause them to overheat.

- Always comply with the maximum nominal data when operating the chokes and braking resistors.

11.7.1 Connection description

| Designation | Function |
|-------------|--|
| 1U1 | Phase U drive controller connection: X20, pin 1 |
| 1U2 | Motor phase U connection |
| 1V1 | Phase V drive controller connection: X20, pin 2 |
| 1V2 | Motor phase V connection |
| 1W1 | Phase W drive controller connection: X20, pin 3 |
| 1W2 | Motor phase W connection |
| 7 | Drive controller grounding conductor: X20, Pin 4 |
| 8 | Power cable grounding conductor |

Tab. 188: TEP output choke connection description

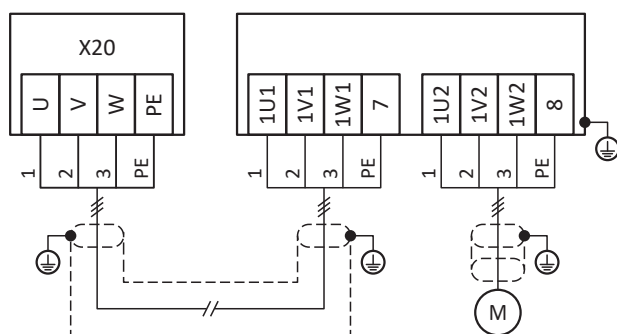


Fig. 46: TEP output choke connection example

Shielded connection of the power cable

Note the following points for the connection of the power cable for a motor with output choke:

- Ground the shield of the power cable over large contact areas in the immediate vicinity of the output choke, for example with electrically conductive metal cable clips on a grounded busbar.
- Keep the exposed conductors as short as possible. All devices and circuits that are sensitive to EMC must be kept at a distance of at least 0.3 m.

The following graphic shows an example of the shielded connection of the power cable.

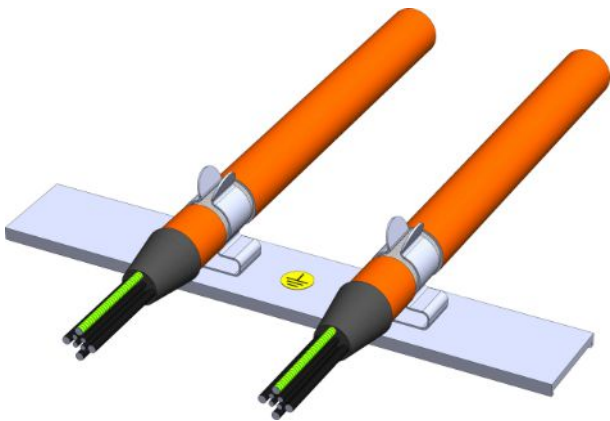


Fig. 47: Shielded connection of the power cable

Choke housing grounding

When connecting the grounding conductor, obey the requirements described (see [Connection of the grounding conductor \[▶ 150\]](#)).

11.8 Communication module

The connection descriptions of the optional communication modules can be found in the following chapters.

11.8.1 EC6: EtherCAT

For the EtherCAT connection, you need the optional EC6 accessory part.

11.8.1.1 Overview

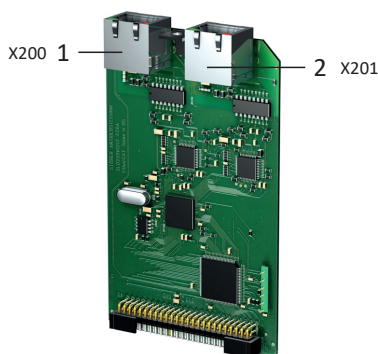


Fig. 48: Connection overview for EC6 communication module


- 1 X200: EtherCAT In
- 2 X201: EtherCAT Out

11.8.1.2 X200, X201: EtherCAT

The drive controllers have both RJ-45 sockets X200 and X201. The sockets are located on top of the device. The associated pin assignment and color coding correspond to the EIA/TIA-T568B standard.

Connection

Connect X200 as an input to the cable coming from the EtherCAT MainDevice. Connect X201 as an output to any subsequent EtherCAT nodes.

| Socket | Pin | Designation | Function |
|--|-----|-------------|---------------|
| 1 2 ... 7 8  | 1 | Tx+ | Communication |
| | 2 | Tx- | |
| | 3 | Rx+ | |
| | 4 | — | — |
| | 5 | — | — |
| | 6 | Rx- | Communication |
| | 7 | — | — |
| | 8 | — | — |

Tab. 189: X200 and X201 connection description

Cable requirements

| |
|--------------------|
| Information |
|--------------------|

To ensure proper functionality, we recommend using cables from STOBER that are matched to the complete system. If unsuitable cables are used, we reserve the right to reject claims under the warranty.

STOBER provides ready-made cables for EtherCAT connection. It is also possible to use cables with the following specification:

Ethernet patch cables or crossover cables meeting the CAT 5e quality level are the ideal cables. The Fast Ethernet technology allows a maximum cable length of 100 m between two nodes.

| |
|--------------------|
| Information |
|--------------------|

Ensure that you only use shielded cables with an SF/FTP, S/FTP or SF/UTP design.

Device addressing and fieldbus connection

For information on device addressing, see [Device addressing \[▶ 479\]](#).

You will find detailed information about the fieldbus connection in the corresponding manual for communication with EtherCAT.

11.8.2 CA6: CANopen

The optional CA6 accessory part is available for the CANopen connection.

11.8.2.1 Overview

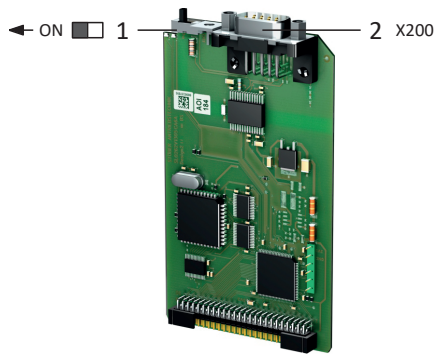


Fig. 49: Connection overview for CA6 communication module

- 1 Terminating resistor; must be activated at the last networked drive controller (slider to "ON")
- 2 X200: CANopen

11.8.2.2 X200: CANopen

In order to be able to connect the drive controllers to further CANopen nodes, the communication module CA6 provides a 9-pin D-sub connector.

Connection

| Connector | Pin | Designation | Function |
|-----------|-----|-------------|---------------------|
| | 1 | — | — |
| | 2 | CAN-L | CAN low wire |
| | 3 | GND | Reference potential |
| | 4 | — | — |
| | 5 | — | — |
| | 6 | — | — |
| | 7 | CAN-H | CAN high wire |
| | 8 | — | — |
| | 9 | — | — |

Tab. 190: X200 connection description

Cable requirements

In order to ensure error-free operation, especially at high transmission rates, we recommend using cables that meet the requirements listed in ISO 11898-2, such as the following:

- Characteristic impedance: 95 – 140 Ω
- Maximum operating capacitance: 60 nF/km
- Conductor resistance: 70 mΩ/m

Device addressing and fieldbus connection

For information on device addressing, see [Device addressing \[▶ 479\]](#).

For detailed information about the fieldbus connection, refer to the corresponding manual (see [Detailed information \[▶ 519\]](#)).

11.8.3 PN6: PROFINET

For a PROFINET connection, you need the optional PN6 accessory part.

11.8.3.1 Overview

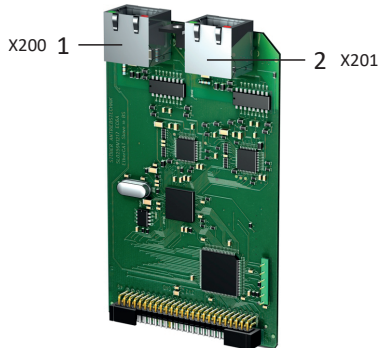


Fig. 50: Connection overview for PN6 communication module

- 1 X200: PROFINET
- 2 X201: PROFINET

11.8.3.2 X200, X201: PROFINET

In order to be able to connect the drive controllers to other PROFINET nodes, an integrated switch with both X200 and X201 RJ-45 sockets is provided. The sockets are located on top of the device. The associated pin assignment and color coding correspond to the EIA/TIA-T568B standard.

Connection

Connect X200 or X201 with the IO controller and the remaining connection with the next drive controller.

| Socket | Pin | Designation | Function |
|--------|-----|-------------|---------------|
| | 1 | Tx+ | Communication |
| | 2 | Tx- | |
| | 3 | Rx+ | |
| | 4 | — | — |
| | 5 | — | — |
| | 6 | Rx- | Communication |
| | 7 | — | — |
| | 8 | — | — |

Tab. 191: X200 and X201 connection description

Cable requirements

The connections between the nodes of a PROFINET network generally consist of symmetrical, shielded copper cables twisted in pairs (shielded twisted pair, CAT 5e quality level). Fiber-optic cables are also a possible means of transmission.

Signals are transmitted according to the 100BASE TX method, i.e. with a transfer rate of 100 Mbps at a frequency of 125 MHz. A maximum of 1440 bytes can be transferred per frame. The maximum cable length is 100 m.

PROFINET cables exist in different versions that are tailored to different application scenarios and ambient conditions.

We recommend using the cables and plug connectors specified in the PROFINET installation guidelines. They are adjusted for use in automation technology with regard to usage, resistance, EMC properties and color coding.

There are type A, B and C cables, differentiated by installation type:

- Type A
4-wire shielded copper cable for fixed installation
- Type B
4-wire shielded copper cable for flexible installation
- Type C
4-wire shielded copper cable for constant movements

Device addressing and fieldbus connection

For information on device addressing, see [Device addressing](#) [▶ 479].

Detailed information about the fieldbus connection can be found in the corresponding manual for communication with PROFINET.

11.9 Terminal module

The connection descriptions of the optional terminal modules can be found in the following chapters.

11.9.1 XI6

11.9.1.1 Overview

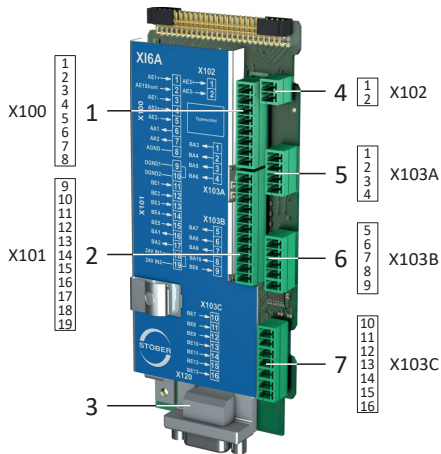


Fig. 51: Connection overview for the XI6 terminal module

 
- 1 X100: AI1 – AI2, AO1 – AO2
- 2 X101: DI1 – DI5, DO1 – DO2
- 3 X120: X120 encoder connection
- 4 X102: AI3
- 5 X103A: DO3 – DO6
- 6 X103B: DI6, DO7 – DO10
- 7 X103C: DI7 – DI13

11.9.1.2 X100: AI1 – AI2, AO1 – AO2

Technical data

For the connection, note the technical data of the terminal module (see [X16 terminal module \[▶ 81\]](#)).

Connection

| Terminal | Pin | Designation | Function |
|--|-----|-------------|---|
|  1 2 3 4 5 6 7 8 | 1 | AI1 + | AI1+ input |
| | 2 | AI1 shunt | Current input; shunt connection pin 2 is to be bridged to pin 1 |
| | 3 | AI1 – | AI1– input |
| | 4 | AI2 + | AI2+ input |
| | 5 | AI2 – | AI2– input |
| | 6 | AO1 | AO1 output |
| | 7 | AO2 | AO2 output |
| | 8 | 0 V AGND | Reference potential |

Tab. 192: X100 connection description

For the connecting wiring, note the [FK-MCP 1,5 -ST-3,5 \[▶ 461\]](#) terminal specification.

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 193: Maximum core/cable length [m]

Connection examples

Potentiometer

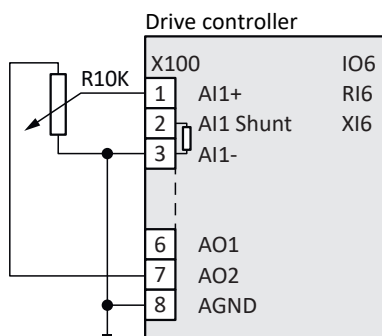


Fig. 52: X100: Potentiometer connection example

Sensor (0 – 20 mA, 4 – 20 mA)

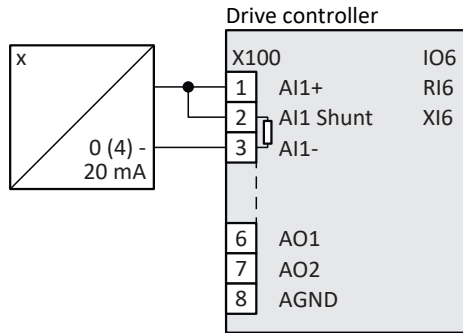


Fig. 53: X100: Sensor connection example 1

Sensor (± 10 V)

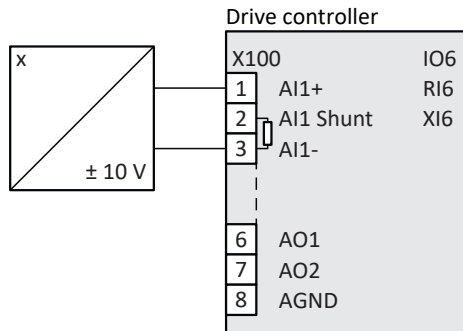


Fig. 54: X100: Sensor connection example 2

Actuator (± 10 V, 0 - 20 mA)

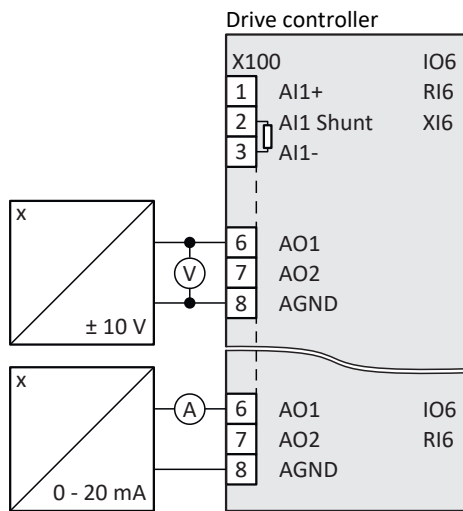



Fig. 55: X100: Actuator connection example

11.9.1.3 X101: DI1 – DI5, DO1 – DO2

X101 for digital signals

For the evaluation of digital signals at X101, observe the technical data of the terminal module (see [X16 terminal module \[▶ 81\]](#)).

Connection

| Terminal | Pin | Designation | Function |
|---|-----|---------------------|---|
|  9 10 11 ... 17 18 19 | 9 | 0 V DGND | Reference potential, internally bridged |
| | 10 | | |
| | 11 | DI1 | Digital inputs |
| | 12 | DI2 | |
| | 13 | DI3 | |
| | 14 | DI4 | |
| | 15 | DI5 | |
| | 16 | DO1 | Digital outputs |
| | 17 | DO2 | |
| | 18 | +24 V _{DC} | |
| 19 | | | |

Tab. 194: X101 connection description for digital signals

For the connecting wiring, note the [FK-MCP 1,5 -ST-3,5 \[▶ 461\]](#) terminal specification.

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 195: Maximum core/cable length [m]

X101 for encoders

If you would like to use X101 as an encoder connection, obey the technical data of the evaluable encoders at X101 (see [X101: Encoder \[▶ 73\]](#)).

 
Connection

Use the digital inputs DI3 to DI5 to evaluate incremental or pulse/direction signals. For the simulation, use the digital outputs DO1 and DO2.

Hall sensors with single-ended HTL signal levels can be connected to digital inputs DI1 through DI3 directly.


¹⁸ For the fuse protection, use a 1 A fuse (time delay). For UL-compliant use, be sure that the fuse meets certification requirements for DC voltage in accordance with UL 248.

Single-ended HTL incremental encoders

| Terminal | Pin | Designation | Function |
|---|-----|---------------------|---|
|  9 10 11 ... 17 18 19 | 9 | 0 V DGND | Reference potential, internally bridged |
| | 10 | | |
| | 11 | DI1 | — |
| | 12 | DI2 | — |
| | 13 | DI3 | Evaluation: N track |
| | 14 | DI4 | Evaluation: A track |
| | 15 | DI5 | Evaluation: B track |
| | 16 | DO1 | Simulation: A track |
| | 17 | DO2 | Simulation: B track |
| | 18 | +24 V _{DC} | |
| 19 | | | |

Tab. 196: X101 connection description for single-ended HTL incremental signals

Single-ended HTL pulse/direction interface


| Terminal | Pin | Designation | Function |
|--|-----|---------------------|---|
|  9 10 11 ... 17 18 19 | 9 | 0 V DGND | Reference potential, internally bridged |
| | 10 | | |
| | 11 | DI1 | — |
| | 12 | DI2 | — |
| | 13 | DI3 | — |
| | 14 | DI4 | Evaluation: Pulse |
| | 15 | DI5 | Evaluation: Direction |
| | 16 | DO1 | Simulation: Pulse |
| | 17 | DO2 | Simulation: Direction |
| | 18 | +24 V _{DC} | |
| 19 | | | |

Tab. 197: X101 connection description for single-ended HTL pulse/direction signals

¹⁹ For the fuse protection, use a 1 A fuse (time delay). For UL-compliant use, be sure that the fuse meets certification requirements in accordance with UL 248.

²⁰ For the fuse protection, use a 1 A fuse (time delay). For UL-compliant use, be sure that the fuse meets certification requirements in accordance with UL 248.

Single-ended HTL Hall sensor

| Terminal | Pin | Designation | Function |
|---|-----|---------------------|---|
|  9 10 11 ... 17 18 19 | 9 | 0 V DGND | Reference potential, internally bridged |
| | 10 | | |
| | 11 | DI1 | HALL A |
| | 12 | DI2 | HALL B |
| | 13 | DI3 | HALL C |
| | 14 | DI4 | Digital inputs |
| | 15 | DI5 | |
| | 16 | DO1 | Digital outputs |
| | 17 | DO2 | |
| | 18 | +24 V _{DC} | External 24 V _{DC} supply; recommended fuse protection: max. 1 A ²¹ |
| 19 | | | |

Tab. 198: X101 connection description for single-ended HTL Hall sensor signals

For the connecting wiring, note the [FK-MCP 1,5 -ST-3,5 \[461\]](#) terminal specification.

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |


Tab. 199: Maximum core/cable length [m]

11.9.1.4 X102: AI3

Technical data

For the connection, note the technical data of the terminal module (see [X16 terminal module \[81\]](#)).

Connection

| | Pin | Designation | Function |
|--|-----|-------------|--|
|  1 2 | 1 | AI3 + | AI3+ input; differential input voltage |
| | 2 | AI3 - | AI3- input |

Tab. 200: X102 connection description

For the connecting wiring, obey the terminal specification [FMC 1,5 -ST-3,5 \[462\]](#).

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 201: Maximum core/cable length [m]


²¹ For the fuse protection, use a 1 A fuse (time delay). For UL-compliant use, be sure that the fuse meets certification requirements for relevant DC voltage in accordance with UL 248.

11.9.1.5 X103A: DO3 – DO6

Technical data

For the connection, note the technical data of the terminal module (see [X16 terminal module \[▶ 81\]](#)).

Connection

| Terminal | Pin | Designation | Function |
|--|-----|-------------|-----------------|
|  1 2 3 4 | 1 | DO3 | Digital outputs |
| | 2 | DO4 | |
| | 3 | DO5 | |
| | 4 | DO6 | |

Tab. 202: X103A connection description

For the connecting wiring, obey the terminal specification [FMC 1,5 -ST-3,5 \[▶ 462\]](#).

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 203: Maximum core/cable length [m]

11.9.1.6 X103B: DI6, DO7 – DO10


Information

In the event of failure of the 24 V_{DC} supply, the digital input DI6 displays the signal state 0, regardless of the physical signal state.

Technical data

For the connection, note the technical data of the terminal module (see [X16 terminal module \[▶ 81\]](#)).

Connection

| Terminal | Pin | Designation | Role |
|--|-----|-------------|-----------------|
|  5 6 7 8 9 | 5 | DO7 | Digital outputs |
| | 6 | DO8 | |
| | 7 | DO9 | |
| | 8 | DO10 | |
| | 9 | DI6 | Digital input |

Tab. 204: X103B connection description

For the connecting wiring, obey the terminal specification [FMC 1,5 -ST-3,5 \[▶ 462\]](#).

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 205: Maximum core/cable length [m]

11.9.1.7 X103C: DI7 – DI13


Information

In the event of failure of the 24 V_{DC} supply, the digital inputs DI7 to DI13 display the signal state 0, regardless of the physical signal state.

Technical data

For the connection, note the technical data of the terminal module (see [X16 terminal module \[▶ 81\]](#)).

Connection

| Terminal | Pin | Designation | Function |
|--|-----|-------------|----------------|
|  <p>10 11 ... 15 16</p> | 10 | DI7 | Digital inputs |
| | 11 | DI8 | |
| | 12 | DI9 | |
| | 13 | DI10 | |
| | 14 | DI11 | |
| | 15 | DI12 | |
| | 16 | DI13 | |

Tab. 206: X103C connection description

For the connecting wiring, obey the terminal specification [FMC 1,5 -ST-3,5 \[▶ 462\]](#).

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 207: Maximum core/cable length [m]

 
11.9.1.8 X120: Encoder

Technical data

Note the technical data of the evaluable encoders at X120 (see [X120: Encoder \[▶ 75\]](#)).


Connection

SSI encoders

| Connector | Pin | Designation | Role |
|---|-----|----------------|---|
|  | 1 | GND Enc | Reference potential for pin 2 to pin 7 |
| | 2 | — | — |
| | 3 | — | — |
| | 4 | Clock - | Inverse differential input/output for CLOCK |
| | 5 | Clock + | Differential input/output for CLOCK |
| | 6 | Data + | Differential input/output for DATA |
| | 7 | Data - | Inverse differential input/output for DATA |
| | 8 | U ₂ | Encoder supply |
| | 9 | 0 V GND | Reference potential for pin 8 |

Tab. 208: X120 connection description for SSI encoders


Differential TTL incremental encoders

| Connector | Pin | Designation | Role |
|---|-----|----------------|---|
|  | 1 | GND Enc | Reference potential for pin 2 to pin 7 |
| | 2 | N + | Differential input/output for N track |
| | 3 | N - | Inverse differential input/output for N track |
| | 4 | A - | Inverse differential input/output for A track |
| | 5 | A + | Differential input/output for A track |
| | 6 | B + | Differential input/output for B track |
| | 7 | B - | Inverse differential input/output for B track |
| | 8 | U ₂ | Encoder supply |
| | 9 | 0 V GND | Reference potential for pin 8 |

Tab. 209: X120 connection description for differential TTL incremental encoders

Differential TTL Hall sensor


The pin assignment corresponds to terminal X301 on the LA6 encoder adapter box (1:1 connection).

| Connector | Pin | Designation | Role |
|---|-----|----------------|--|
|  | 1 | GND Enc | Reference potential for pin 2 to pin 7 |
| | 2 | HALL C + | Differential input for HALL C |
| | 3 | HALL C – | Inverse differential input for HALL C |
| | 4 | HALL A – | Inverse differential input for HALL A |
| | 5 | HALL A + | Differential input for HALL A |
| | 6 | HALL B + | Differential input for HALL B |
| | 7 | HALL B– | Inverse differential input for HALL B |
| | 8 | U ₂ | Encoder supply |
| | 9 | 0 V GND | Reference potential for pin 8 |

Tab. 210: X120 connection description for differential TTL hall sensors

Differential TTL pulse/direction interface

 The pin assignment corresponds to terminal X301 on the LA6 encoder adapter box (1:1 connection).

| Connector | Pin | Designation | Role |
|---|-----|----------------|--|
|  | 1 | GND Enc | Reference potential for pin 2 to pin 7 |
| | 2 | — | — |
| | 3 | — | — |
| | 4 | Pulse – | Inverse differential input for pulses |
| | 5 | Pulse + | Differential input for pulses |
| | 6 | Direction + | Differential input for direction |
| | 7 | Direction – | Inverse differential input for direction |
| | 8 | U ₂ | Encoder supply |
| | 9 | 0 V GND | Reference potential for pin 8 |

Tab. 211: X120 connection description for differential TTL pulse/direction signals

Cable requirements

| Feature | All sizes |
|-------------------|----------------|
| Max. cable length | 50 m, shielded |

Tab. 212: Cable length [m]

11.9.2 RI6

11.9.2.1 Overview

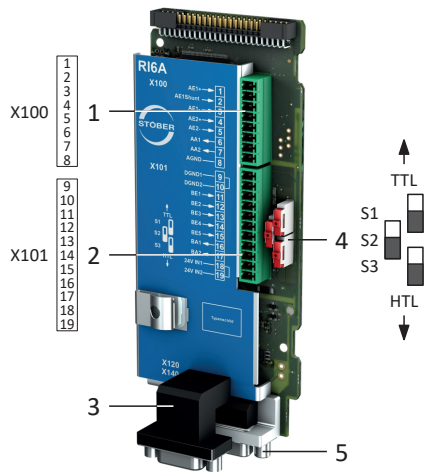


Fig. 56: Connection overview for the RI6 terminal module

 
- 1 X100: AI1 – AI2, AO1 – AO2
- 2 X101: DI1 – DI5, DO1 – DO2
- 3 X120: Encoder connection
- 4 3 sliders for the HTL/TTL level conversion
- 5 X140: Encoder connection

11.9.2.2 X100: AI1 – AI2, AO1 – AO2

Technical data

For the connection, note the technical data of the terminal module (see [RI6 terminal module \[p. 83\]](#)).

Connection

| Terminal | Pin | Designation | Function |
|--|-----|-------------|---|
|  1 2 3 4 5 6 7 8 | 1 | AI1 + | AI1+ input |
| | 2 | AI1 shunt | Current input; shunt connection pin 2 is to be bridged to pin 1 |
| | 3 | AI1 – | AI1- input |
| | 4 | AI2 + | AI2+ input |
| | 5 | AI2 – | AI2- input |
| | 6 | AO1 | AO1 output |
| | 7 | AO2 | AO2 output |
| | 8 | 0 V AGND | Reference potential |

Tab. 213: X100 connection description

For the connecting wiring, note the [FK-MCP 1,5 -ST-3,5 \[p. 461\]](#) terminal specification.

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 214: Maximum core/cable length [m]

Connection examples

Potentiometer

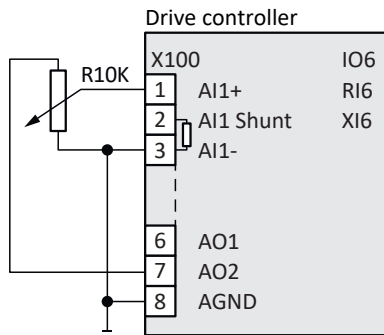


Fig. 57: X100: Potentiometer connection example

Sensor (0 – 20 mA, 4 – 20 mA)

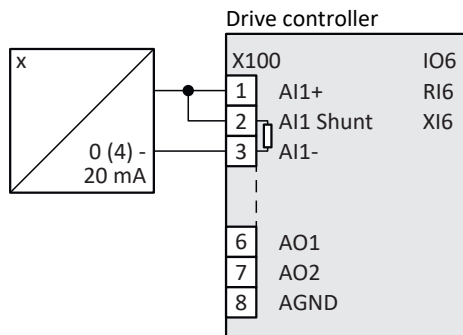


Fig. 58: X100: Sensor connection example 1

Sensor (± 10 V)

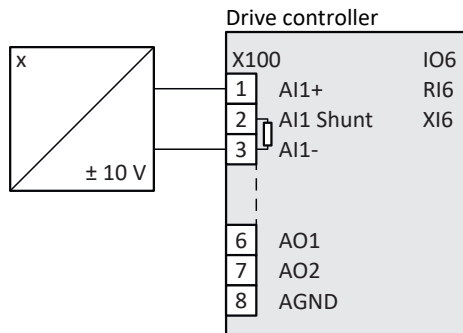


Fig. 59: X100: Sensor connection example 2

Actuator ($\pm 10\text{ V}$, $0 - 20\text{ mA}$)

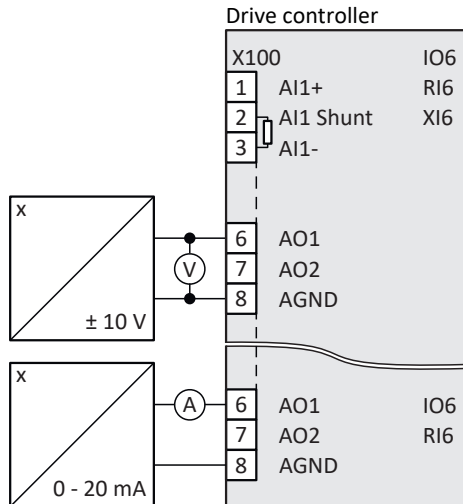



Fig. 60: X100: Actuator connection example

11.9.2.3 X101: DI1 – DI5, DO1 – DO2

X101 for digital signals

For the evaluation of digital signals at X101, observe the technical data of the terminal module (see [RI6 terminal module](#) [▶ 83]).

Connection

| Terminal | Pin | Designation | Function |
|---|-----|---------------------|---|
|  9 10 11 ... 17 18 19 | 9 | 0 V DGND | Reference potential, internally bridged |
| | 10 | | |
| | 11 | DI1 | Digital inputs |
| | 12 | DI2 | |
| | 13 | DI3 | |
| | 14 | DI4 | |
| | 15 | DI5 | |
| | 16 | DO1 | Digital outputs |
| | 17 | DO2 | |
| | 18 | +24 V _{DC} | |
| 19 | | | |

Tab. 215: X101 connection description for digital signals

For the connecting wiring, note the [FK-MCP 1,5 -ST-3,5](#) [▶ 461] terminal specification.

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 216: Maximum core/cable length [m]

²² For the fuse protection, use a 1 A fuse (time delay). For UL-compliant use, be sure that the fuse meets certification requirements for DC voltage in accordance with UL 248.

X101 for encoders

 
If you would like to use X101 as an encoder connection, obey the technical data of the evaluable encoders at X101 (see [X101: Encoder \[▶ 73\]](#)).

Connection

Use the digital inputs DI3 to DI5 to evaluate incremental or pulse/direction signals. For the simulation, use the digital outputs DO1 and DO2.


Hall sensors with single-ended HTL signal levels can be connected to digital inputs DI1 through DI3 directly.

Single-ended HTL and single-ended TTL incremental encoders

| Terminal | Pin | Designation | Function | |
|---|-----|---------------------|---|--|
|  9 10 11 ... 17 18 19 | 9 | 0 V DGND | Reference potential, internally bridged | |
| | 10 | | | |
| | 11 | DI1 | — | |
| | 12 | DI2 | — | |
| | 13 | DI3 | Evaluation: N track | |
| | 14 | DI4 | Evaluation: A track | |
| | 15 | DI5 | Evaluation: B track | |
| | 16 | DO1 | Simulation: A track | |
| | 17 | DO2 | Simulation: B track | |
| | 18 | +24 V _{DC} | | 24 V _{DC} supply, internally bridged; recommended fuse protection: max. 1 A ²³ |
| | 19 | | | |

Tab. 217: X101 connection description for single-ended HTL and single-ended TTL incremental signals

 Single-ended HTL and single-ended TTL pulse/direction interface


| Terminal | Pin | Designation | Function | |
|---|-----|---------------------|---|--|
|  9 10 11 ... 17 18 19 | 9 | 0 V DGND | Reference potential, internally bridged | |
| | 10 | | | |
| | 11 | DI1 | — | |
| | 12 | DI2 | — | |
| | 13 | DI3 | — | |
| | 14 | DI4 | Evaluation: Pulse | |
| | 15 | DI5 | Evaluation: Direction | |
| | 16 | DO1 | Simulation: Pulse | |
| | 17 | DO2 | Simulation: Direction | |
| | 18 | +24 V _{DC} | | 24 V _{DC} supply, internally bridged; recommended fuse protection: max. 1 A ²⁴ |
| | 19 | | | |

Tab. 218: X101 connection description for single-ended HTL and single-ended TTL pulse/direction signals

²³ For the fuse protection, use a 1 A fuse (time delay). For UL-compliant use, be sure that the fuse meets certification requirements in accordance with UL 248.

²⁴ For the fuse protection, use a 1 A fuse (time delay). For UL-compliant use, be sure that the fuse meets certification requirements in accordance with UL 248.

 Single-ended HTL Hall sensor

| Terminal | Pin | Designation | Function |
|---|-----|---------------------|---|
|  9 10 11 ... 17 18 19 | 9 | 0 V DGND | Reference potential, internally bridged |
| | 10 | | |
| | 11 | DI1 | HALL A |
| | 12 | DI2 | HALL B |
| | 13 | DI3 | HALL C |
| | 14 | DI4 | Digital inputs |
| | 15 | DI5 | |
| | 16 | DO1 | Digital outputs |
| | 17 | DO2 | |
| | 18 | +24 V _{DC} | |
| 19 | | | |

Tab. 219: X101 connection description for single-ended HTL Hall sensor signals

For the connecting wiring, note the [FK-MCP 1,5 -ST-3,5 \[461\]](#) terminal specification.

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 220: Maximum core/cable length [m]

 
11.9.2.4 X120: Encoder

Technical data

Note the technical data of the evaluable encoders at X120 (see [X120: Encoder \[75\]](#)).

Connection


SSI encoders

| Connector | Pin | Designation | Role |
|---|-----|----------------|---|
|  1 2 3 4 5 6 7 8 9 | 1 | GND Enc | Reference potential for pin 2 to pin 7 |
| | 2 | — | — |
| | 3 | — | — |
| | 4 | Clock – | Inverse differential input/output for CLOCK |
| | 5 | Clock + | Differential input/output for CLOCK |
| | 6 | Data + | Differential input/output for DATA |
| | 7 | Data – | Inverse differential input/output for DATA |
| | 8 | U ₂ | Encoder supply |
| | 9 | 0 V GND | Reference potential for pin 8 |

Tab. 221: X120 connection description for SSI encoders

²⁵ For the fuse protection, use a 1 A fuse (time delay). For UL-compliant use, be sure that the fuse meets certification requirements for relevant DC voltage in accordance with UL 248.


Differential TTL incremental encoders

| Connector | Pin | Designation | Role |
|---|-----|----------------|---|
|  <p>1 2 3 4 5</p> <p>6 7 8 9</p> | 1 | GND Enc | Reference potential for pin 2 to pin 7 |
| | 2 | N + | Differential input/output for N track |
| | 3 | N – | Inverse differential input/output for N track |
| | 4 | A – | Inverse differential input/output for A track |
| | 5 | A + | Differential input/output for A track |
| | 6 | B + | Differential input/output for B track |
| | 7 | B – | Inverse differential input/output for B track |
| | 8 | U ₂ | Encoder supply |
| | 9 | 0 V GND | Reference potential for pin 8 |

Tab. 222: X120 connection description for differential TTL incremental encoders

Differential TTL Hall sensor

 
The pin assignment corresponds to terminal X301 on the LA6 encoder adapter box (1:1 connection).

| Connector | Pin | Designation | Role |
|--|-----|----------------|--|
|  <p>1 2 3 4 5</p> <p>6 7 8 9</p> | 1 | GND Enc | Reference potential for pin 2 to pin 7 |
| | 2 | HALL C + | Differential input for HALL C |
| | 3 | HALL C – | Inverse differential input for HALL C |
| | 4 | HALL A – | Inverse differential input for HALL A |
| | 5 | HALL A + | Differential input for HALL A |
| | 6 | HALL B + | Differential input for HALL B |
| | 7 | HALL B – | Inverse differential input for HALL B |
| | 8 | U ₂ | Encoder supply |
| | 9 | 0 V GND | Reference potential for pin 8 |

Tab. 223: X120 connection description for differential TTL hall sensors

Differential TTL pulse/direction interface

 The pin assignment corresponds to terminal X301 on the LA6 encoder adapter box (1:1 connection).

| Connector | Pin | Designation | Role |
|---|-----|----------------|--|
|  <p>1 2 3 4 5</p> <p>6 7 8 9</p> | 1 | GND Enc | Reference potential for pin 2 to pin 7 |
| | 2 | — | — |
| | 3 | — | — |
| | 4 | Pulse – | Inverse differential input for pulses |
| | 5 | Pulse + | Differential input for pulses |
| | 6 | Direction + | Differential input for direction |
| | 7 | Direction – | Inverse differential input for direction |
| | 8 | U ₂ | Encoder supply |
| | 9 | 0 V GND | Reference potential for pin 8 |

Tab. 224: X120 connection description for differential TTL pulse/direction signals

Cable requirements

| Feature | All sizes |
|-------------------|----------------|
| Max. cable length | 50 m, shielded |

Tab. 225: Cable length [m]


11.9.2.5 X140: Encoder

Technical data

Note the technical data of the evaluable encoders at X140 (see [X140: Encoder \[▶ 76\]](#)).

Connection

 EnDat 2.1/2.2 digital encoders


| Bush | Pin | Designation | Role |
|---|-----|----------------------|--|
| 8 7 6 5 4 3 2 1 | 1 | — | — |
|  | 2 | 0 V GND | Reference potential for encoder supply to pin 4 |
| | 3 | — | — |
| | 4 | U ₂ | Encoder supply |
| | 5 | Data + | Differential input for DATA |
| | 6 | — | — |
| | 7 | — | — |
| | 8 | Clock + | Differential input for CLOCK |
| | 9 | — | — |
| | 10 | 0 V Sense | Optional reference potential of the Sense connection for regulating the encoder supply |
| | 11 | — | — |
| | 12 | U ₂ Sense | Sense signals for voltage regulation |
| | 13 | Data - | Inverse differential input for DATA |
| | 14 | — | — |
| | 15 | Clock - | Inverse differential input for CLOCK |

Tab. 226: X140 connection description for EnDat 2.1/2.2 digital encoders

Resolvers

Information

 For connecting con.23 resolver cables with a 9-pin D-sub connector, such as the standard design for ED/EK synchronous servo motors, you must use interface adapter AP6A00 (ID No. 56498) or AP6A01 (ID No. 56522, with motor temperature sensor leads), available separately.


| Bush | Pin | Designation | Role |
|---|-----|-------------|-------------------------------|
| 8 7 6 5 4 3 2 1 | 1 | S4 Sin + | Sin input |
|  | 2 | R1 Ref - | Reference potential for pin 6 |
| | 3 | S3 Cos + | Cos input |
| | 4 | — | — |
| | 5 | — | — |
| | 6 | R2 Ref + | Resolver excitation signal |
| | 7 | 1TP1 | Reserve |
| | 8 | — | — |
| | 9 | S2 Sin - | Reference potential for pin 1 |
| | 10 | — | — |
| | 11 | S1 Cos - | Reference potential for pin 3 |
| | 12 | — | — |
| | 13 | — | — |
| | 14 | 1TP2 | Reserve |
| | 15 | — | — |

Tab. 227: X140 connection description for resolvers

EnDat 2.1 sin/cos encoders


Information

 For connecting EnDat 2.1 sin/cos cables with a 15-pin D-sub connector to an integrated motor temperature sensor, you must use the AP6A02 interface adapter (ID No. 56523), available separately, to lead out the temperature sensor cores.

| Bush | Pin | Designation | Role |
|---|-----|----------------------|--|
|  | 1 | B - (Sin -) | Reference potential for sin input |
| | 2 | 0 V GND | Reference potential for encoder supply to pin 4 |
| | 3 | A - (Cos -) | Reference potential for cos input |
| | 4 | U ₂ | Encoder supply |
| | 5 | Data + | Differential input for DATA |
| | 6 | — | — |
| | 7 | 1TP1 | Reserve |
| | 8 | Clock + | Differential input for CLOCK |
| | 9 | B + (Sin +) | Sin input |
| | 10 | 0 V Sense | Optional reference potential of the Sense connection for regulating the encoder supply |
| | 11 | A + (Cos +) | Cos input |
| | 12 | U ₂ Sense | Sense signals for voltage regulation |
| | 13 | Data - | Inverse differential input for DATA |
| | 14 | 1TP2 | Reserve |
| | 15 | Clock - | Inverse differential input for CLOCK |

Tab. 228: X140 connection description for EnDat 2.1 sin/cos encoders

 Sin/cos encoders

| Bush | Pin | Designation | Role |
|---|-----|----------------------|---|
| 8 7 6 5 4 3 2 1 | 1 | B - (Sin -) | Reference potential for sin input |
|  | 2 | 0 V GND | Reference potential for encoder supply to pin 4 |
| | 3 | A - (Cos -) | Reference potential for cos input |
| | 4 | U ₂ | Encoder supply |
| | 5 | — | — |
| | 6 | — | — |
| | 7 | — | — |
| | 8 | — | — |
| | 9 | B + (Sin +) | Sin input |
| | 10 | 0 V Sense | Optional Sense connection for regulating the encoder supply |
| | 11 | A + (Cos +) | Cos input |
| | 12 | U ₂ Sense | Sense signals for voltage regulation |
| | 13 | — | — |
| | 14 | — | — |
| | 15 | — | — |

Tab. 229: X140 connection description for sin/cos encoders

Cable requirements


 
| Feature | All sizes |
|-------------------|-----------------|
| Max. cable length | 100 m, shielded |

Tab. 230: Maximum cable length [m]

11.9.2.6 AP6 interface adapter (resolver)

AP6A00 – Resolver (9-pin to 15-pin)

Interface adapter for connecting the resolver cable with 9-pin D-sub connector to the drive controller.

| Socket ²⁶ | Pin | Designation | Function | Pin | Connector ²⁷ |
|---|-----|-------------|--|-----|---|
|  | 1 | — | — | — |  |
| | 2 | 1TP1 | — | — | |
| | 3 | S2 Sin – | Reference potential for sin input | 9 | |
| | 4 | S1 Cos – | Reference potential for cos input | 11 | |
| | 5 | R1 Ref – | Reference potential for resolver excitation signal | 2 | |
| | 6 | 1TP2 | — | — | |
| | 7 | S4 Sin + | Sin input | 1 | |
| | 8 | S3 Cos + | Cos input | 3 | |
| | 9 | R2 Ref + | Resolver excitation signal | 6 | |


 
Tab. 231: AP6A00 connection description for resolver (9-pin to 15-pin)

²⁶View of 9-pin D-sub for connecting the SDS 4000-compatible resolver cable

²⁷View of 15-pin D-sub for connecting to SD6, terminal X140 (RI6)

AP6A01 – Resolver and motor temperature sensor (9-pin to 15-pin)

Interface adapter with temperature sensor cores led out at the side (core length: approx. 11 cm) for connecting the resolver cable with 9-pin D-sub connector to the drive controller.

| Socket ²⁸ | Pin | Designation | Function | Pin | Connector ²⁹ |
|---|-----|-------------|--|-----|---|
|  1 2 3 4 5 6 7 8 9 | 1 | — | — | — |  1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 |
| | 2 | 1TP1 | Motor temperature sensor connection, if included in the encoder cable connector; routed out for the direct connection to terminal X2 | — | |
| | 3 | S2 Sin – | Reference potential for sin input | 9 | |
| | 4 | S1 Cos – | Reference potential for cos input | 11 | |
| | 5 | R1 Ref – | Reference potential for resolver excitation signal | 2 | |
| | 6 | 1TP2 | Motor temperature sensor connection, if included in the encoder cable connector; routed out for the direct connection to terminal X2 | — | |
| | 7 | S4 Sin + | Sin input | 1 | |
| | 8 | S3 Cos + | Cos input | 3 | |
| | 9 | R2 Ref + | Resolver excitation signal | 6 | |

Tab. 232: AP6A01 connection description for the resolver and motor temperature sensor (9-pin to 15-pin)

 
 
²⁸ View of 9-pin D-sub for connecting the SDS 4000-compatible resolver cable

²⁹ View of 15-pin D-sub for connecting to SD6, terminal X140 (RI6)

11.9.2.7 AP6 interface adapter (EnDat 2.1 sin/cos)

AP6A02 – EnDat 2.1 sin/cos encoder (15-pin to 15-pin)

Interface adapter with temperature sensor cores led out at the side (core length: approx. 11 cm) for connecting the encoder cable to the drive controller.

| Socket ³⁰ | Pin | Designation | Function | Pin | Connector ³¹ |
|---|-----|----------------------|---|-----|---|
|  8 7 6 5 4 3 2 1 15 14 13 12 11 10 9 | 1 | B – (Sin –) | Reference potential for sin input | 1 |  1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 |
| | 2 | 0 V GND | Reference potential for encoder supply | 2 | |
| | 3 | A – (Cos –) | Reference potential for cos input | 3 | |
| | 4 | U ₂ | Encoder supply | 4 | |
| | 5 | Data + | Differential input for DATA | 5 | |
| | 6 | — | — | 6 | |
| | 7 | 1TP1 | Motor temperature sensor connection, if included in the encoder cable; routed out for the direct connection to X2 | — | |
| | 8 | Clock + | Differential input for CLOCK | 8 | |
| | 9 | B + (Sin +) | Sin input | 9 | |
| | 10 | 0 V Sense | Optional reference potential of the Sense connection for regulating the encoder supply | 10 | |
| | 11 | A + (Cos +) | Cos input | 11 | |
| | 12 | U ₂ Sense | Sense signals for voltage excitation | 12 | |
| | 13 | Data – | Inverse differential input for DATA | 13 | |
| | 14 | 1TP2 | Motor temperature sensor connection, if included in the encoder cable; routed out for the direct connection to X2 | — | |
| | 15 | Clock – | Inverse differential input for CLOCK | 15 | |

Tab. 233: AP6A02 connection description for EnDat 2.1 sin/cos encoder and motor temperature sensor (15-pin to 15-pin)

³⁰View of 15-pin D-sub for connecting the SDS 4000-compatible EnDat cable

³¹View of 15-pin D-sub for connecting to SD6, terminal X140 (RI6)

11.9.3 IO6

11.9.3.1 Overview

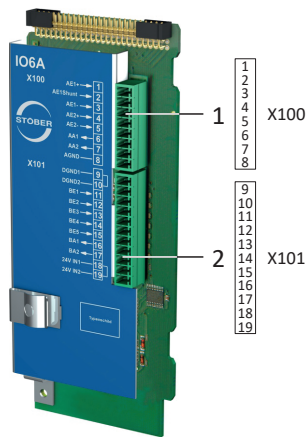


Fig. 61: Connection overview for the IO6 terminal module


- 1 X100: AI1 – AI2, AO1 – AO2
- 2 X101: DI1 – DI5, DO1 – DO2

11.9.3.2 X100: AI1 – AI2, AO1 – AO2

Technical data

For the connection, observe the technical data of the terminal module (see [IO6 terminal module](#) [▶ 84]).

Connection

| Terminal | Pin | Designation | Function |
|--|-----|-------------|---|
|  1 2 3 4 5 6 7 8 | 1 | AI1 + | AI1+ input |
| | 2 | AI1 shunt | Current input; shunt connection pin 2 is to be bridged to pin 1 |
| | 3 | AI1 – | AI1- input |
| | 4 | AI2 + | AI2+ input |
| | 5 | AI2 – | AI2- input |
| | 6 | AO1 | AO1 output |
| | 7 | AO2 | AO2 output |
| | 8 | 0 V AGND | Reference potential |

Tab. 234: X100 connection description

For the connecting wiring, note the [FK-MCP 1,5 -ST-3,5](#) [▶ 461] terminal specification.

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 235: Maximum core/cable length [m]

Connection examples

Potentiometer

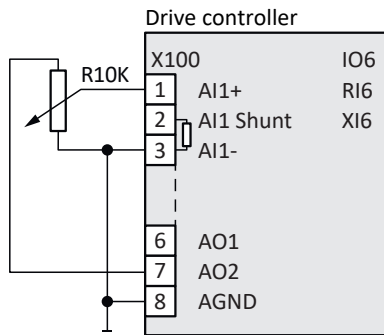


Fig. 62: X100: Potentiometer connection example

Sensor (0 – 20 mA, 4 – 20 mA)

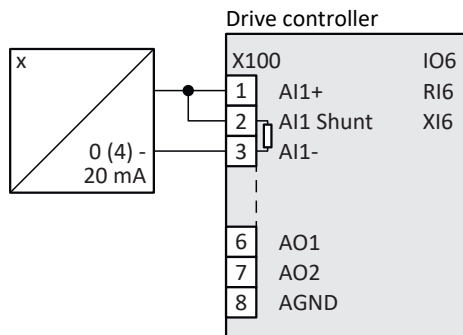


Fig. 63: X100: Sensor connection example 1

Sensor (± 10 V)

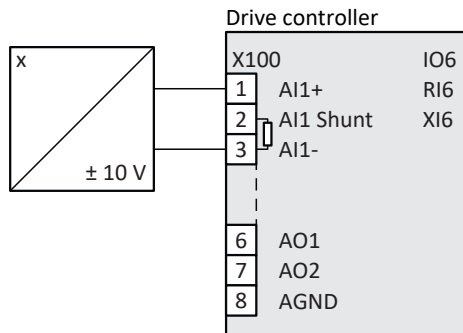


Fig. 64: X100: Sensor connection example 2

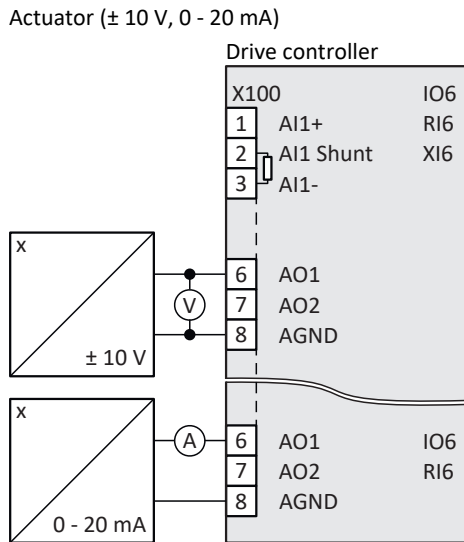



Fig. 65: X100: Actuator connection example

11.9.3.3 X101: DI1 – DI5, DO1 – DO2

X101 for digital signals

For the evaluation of digital signals at X101, observe the technical data of the terminal module (see [IO6 terminal module](#) [[▶ 84](#)]).

Connection

| Terminal | Pin | Designation | Function |
|---|-----|---------------------|---|
|  9 10 11 ... 17 18 19 | 9 | 0 V DGND | Reference potential, internally bridged |
| | 10 | | |
| | 11 | DI1 | Digital inputs |
| | 12 | DI2 | |
| | 13 | DI3 | |
| | 14 | DI4 | |
| | 15 | DI5 | |
| | 16 | DO1 | Digital outputs |
| | 17 | DO2 | |
| | 18 | +24 V _{DC} | |
| 19 | | | |

Tab. 236: X101 connection description for digital signals

For the connecting wiring, note the [FK-MCP 1,5 -ST-3,5](#) [[▶ 461](#)] terminal specification.

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 237: Maximum core/cable length [m]

³² For the fuse protection, use a 1 A fuse (time delay). For UL-compliant use, be sure that the fuse meets certification requirements for DC voltage in accordance with UL 248.

X101 for encoders

 
If you would like to use X101 as an encoder connection, obey the technical data of the evaluable encoders at X101 (see [X101: Encoder \[▶ 73\]](#)).

Use the digital inputs DI3 to DI5 to evaluate incremental or pulse/direction signals. For the simulation, use the digital outputs DO1 and DO2.

Hall sensors with single-ended HTL signal levels can be connected to digital inputs DI1 through DI3 directly.


Connection

Single-ended HTL incremental encoders

| Terminal | Pin | Designation | Function |
|---|-----|---------------------|---|
|  9 10 11 ... 17 18 19 | 9 | 0 V DGND | Reference potential, internally bridged |
| | 10 | | |
| | 11 | DI1 | — |
| | 12 | DI2 | — |
| | 13 | DI3 | Evaluation: N track |
| | 14 | DI4 | Evaluation: A track |
| | 15 | DI5 | Evaluation: B track |
| | 16 | DO1 | Simulation: A track |
| | 17 | DO2 | Simulation: B track |
| | 18 | +24 V _{DC} | External 24 V _{DC} supply; recommended fuse protection: max. 1 A ³³ |
| | 19 | | |

Tab. 238: X101 connection description for single-ended HTL incremental signals

 Single-ended HTL pulse/direction interface


| Terminal | Pin | Designation | Function |
|---|-----|---------------------|---|
|  9 10 11 ... 17 18 19 | 9 | 0 V DGND | Reference potential, internally bridged |
| | 10 | | |
| | 11 | DI1 | — |
| | 12 | DI2 | — |
| | 13 | DI3 | — |
| | 14 | DI4 | Evaluation: Pulse |
| | 15 | DI5 | Evaluation: Direction |
| | 16 | DO1 | Simulation: Pulse |
| | 17 | DO2 | Simulation: Direction |
| | 18 | +24 V _{DC} | External 24 V _{DC} supply; recommended fuse protection: max. 1 A ³⁴ |
| | 19 | | |

Tab. 239: X101 connection description for single-ended HTL pulse/direction signals

³³ For the fuse protection, use a 1 A fuse (time delay). For UL-compliant use, be sure that the fuse meets certification requirements in accordance with UL 248.

³⁴ For the fuse protection, use a 1 A fuse (time delay). For UL-compliant use, be sure that the fuse meets certification requirements in accordance with UL 248.

 Single-ended HTL Hall sensor

| Terminal | Pin | Designation | Function |
|---|-----|---------------------|---|
|  9 10 11 ... 17 18 19 | 9 | 0 V DGND | Reference potential, internally bridged |
| | 10 | | |
| | 11 | DI1 | HALL A |
| | 12 | DI2 | HALL B |
| | 13 | DI3 | HALL C |
| | 14 | DI4 | Digital inputs |
| | 15 | DI5 | |
| | 16 | DO1 | Digital outputs |
| | 17 | DO2 | |
| | 18 | +24 V _{DC} | |
| 19 | | | |

Tab. 240: X101 connection description for single-ended HTL Hall sensor signals

For the connecting wiring, note the [FK-MCP 1,5 -ST-3,5 \[▶ 461\]](#) terminal specification.

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 241: Maximum core/cable length [m]

³⁵ For the fuse protection, use a 1 A fuse (time delay). For UL-compliant use, be sure that the fuse meets certification requirements for relevant DC voltage in accordance with UL 248.

11.10 Encoder adapter box

The differential TTL incremental encoders in combination with a single-ended TTL Hall sensor for determining commutation are connected to the drive controller using the LA6 adapter box. In this process, LA6 is responsible for adjusting the Hall sensor signals. In addition to the adapter box, an XI6, IO6 or RI6 terminal module is required for connecting the Hall sensor to ST6. The incremental encoder is connected to terminal X4 of the drive controller.

The connection of the Hall sensor varies depending on the terminal module as follows:

- XI6: Connection to terminal X120 or X101
- RI6: Connection to terminal X120 or X101
- IO6: Connection to X101

Information

To ensure proper functionality, we recommend using cables from STOBER that are matched to the complete system. If unsuitable cables are used, we reserve the right to reject claims under the warranty.

11.10.1 LA6 for synchronous linear motors

The LA6 adapter box is responsible for converting and transmitting TTL signals from synchronous linear motors to the SD6 drive controller.

11.10.1.1 Overview

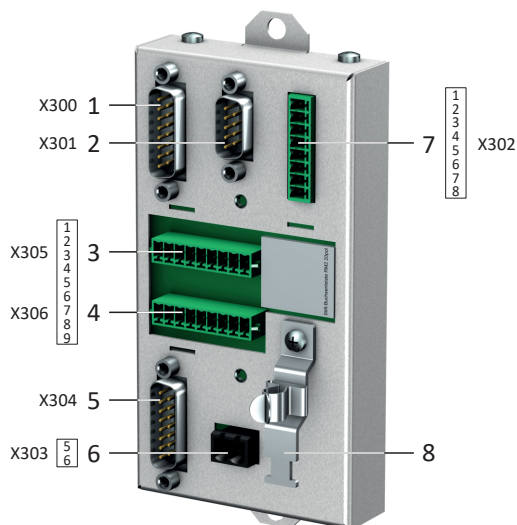


Fig. 66: Connection overview for the LA6 adapter box

- 1 X300: Connection to SD6, terminal X4
- 2 X301: Connection to SD6, terminal X120 on XI6 or RI6 terminal module
- 3 X305: Connection of TTL (incremental encoder and Hall sensor) using loose cable ends
- 4 X306: Connection of TTL (incremental encoder and Hall sensor) using loose cable ends
- 5 X304: Connection of TTL (incremental encoder and Hall sensor) using D-sub connector
- 6 X303: 24 V_{DC} supply
- 7 X302: Connection to SD6, terminal X101 on XI6, RI6 or IO6 terminal module
- 8 Shield connection for encoder for connection using loose cable ends

11.10.1.2 X300: Encoder at X4

X300 transmits differential TTL incremental signals to connection X4 of the drive controller.

 
Technical data

Observe the technical data for the X300 connection (see [X300: Encoder at X4 \[▶ 78\]](#)).

Connection

Differential TTL incremental encoders

The pin assignment corresponds to terminal X4 of the drive controller (1:1 connection). Both the encoder supply and the sense line pass through LA6 to the drive controller.

| Bush | Pin | Designation | Role |
|---|-----|----------------------|--|
|  | 1 | — | — |
| | 2 | 0 V GND | Reference potential for encoder supply to pin 4 |
| | 3 | — | — |
| | 4 | U ₂ | Encoder supply |
| | 5 | B + | Differential output for B track |
| | 6 | — | — |
| | 7 | N + | Differential output for N track |
| | 8 | A + | Differential output for A track |
| | 9 | — | — |
| | 10 | — | — |
| | 11 | — | — |
| | 12 | U ₂ Sense | Sense connection for regulating the encoder supply |
| | 13 | B - | Inverse differential output for B track |
| | 14 | N - | Inverse differential output for the N track |
| | 15 | A - | Inverse differential output for the A track |

Tab. 242: X300 connection description for differential TTL incremental encoders

Cable requirements

| Feature | All sizes |
|--|-----------------|
| Max. cable length, in total (motor to adapter box to drive controller) | 100 m, shielded |

Tab. 243: Cable length [m]

11.10.1.3 X301: Hall sensor at X120

X301 converts single-ended TTL hall sensor signals for the transmission to connection X120 on the XI6 or RI6 terminal module.

 
Technical data

Observe the technical data for the X301 connection (see [X301: Hall sensor at X120 \[► 78\]](#)).

Connection

Differential TTL Hall sensor

The pin assignment corresponds to terminal X120 on terminal module XI6 or RI6 (1:1 connection). The encoder supply passes through LA6 to the drive controller.

| Connector | Pin | Designation | Role |
|---|-----|----------------|--|
|  | 1 | GND Enc | Reference potential for pin 4 to pin 7 |
| | 2 | HALL C + | Differential output for HALL C |
| | 3 | HALL C – | Inverse differential output for HALL C |
| | 4 | HALL A – | Inverse differential output for HALL A |
| | 5 | HALL A + | Differential output for HALL A |
| | 6 | HALL B + | Differential output for HALL B |
| | 7 | HALL B – | Inverse differential output for HALL B |
| | 8 | U ₂ | Encoder supply |
| | 9 | 0 V GND | Reference potential for pin 8 |

Tab. 244: X301 connection description for differential TTL Hall sensors

Cable requirements

| Feature | All sizes |
|-------------------|----------------|
| Max. cable length | 50 m, shielded |

Tab. 245: Cable length [m]

11.10.1.4 X302: Hall sensor at X101


X302 converts single-ended TTL Hall sensor signals for the transmission to connection X101 on the XI6, RI6 or IO6 terminal module.

Technical data

Note the technical data for the X302 connection (see [X302: Hall sensor at X101](#) [▶ 79]).

Connection

Single-ended TTL Hall sensor

| Terminal | Pin | Designation | Function |
|--|-----|-------------|------------------------------------|
|  1 2 3 4 5 6 7 8 | 1 | HALL A | HALL A: Connection to X101, pin 11 |
| | 2 | | |
| | 3 | HALL B | HALL B: Connection to X101, pin 12 |
| | 4 | HALL C | HALL C: Connection to X101, pin 13 |
| | 5 | — | — |
| | 6 | — | — |
| | 7 | — | — |
| | 8 | 0 V DGND | Reference potential |

Tab. 246: X302 connection description for single-ended TTL hall sensors

For the connecting wiring, note the [FK-MCP 1,5 -ST-3,5](#) [▶ 461] terminal specification.

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 247: Maximum core/cable length [m]

11.10.1.5 X303: 24 V supply


The connection of 24 V_{DC} to X303 is required for supplying the adapter box.

Technical data

| Electrical data | Value |
|-------------------|------------------------------|
| U ₁ | 24 V _{DC} +20%/–15% |
| I _{1max} | 100 mA |

Tab. 248: X303 electrical data – Adapter box

Connection

| | Pin | Designation | Role |
|--|-----|-------------|---|
|  1 2 | 1 | + | 24 V _{DC} supply |
| | 2 | – | Reference potential for +24 V _{DC} |

Tab. 249: X303 connection description

For the connecting wiring, obey the terminal specification [BLF 5.08HC 180 SN |▶ 460](#)].

| Feature | All sizes |
|------------------------|-----------|
| Max. core/cable length | 30 m |

Tab. 250: Maximum core/cable length [m]

11.10.1.6 X304: Encoder and Hall sensor via D-sub

Connect the differential TTL incremental encoder to the single-ended TTL Hall sensor at X304 using a D-sub connector.

Technical data

Observe the technical data for the X304 connection (see [X304, X305, X306: Encoder, Hall sensor \[▶ 80\]](#)).

Connection


 **WARNING!**

 Injury to persons and material damage due to electrical voltage!

There is no potential isolation in the LA6 adapter box.

- Signals from motor temperature sensors without potential isolation may not be routed using the LA6 and must be connected directly to the drive controller instead (terminal X2).

Differential TTL incremental encoders with single-ended TTL Hall sensor

| Bush | Pin | Designation | Role |
|--|-----|----------------------|--|
|  | 1 | HALL A | HALL A |
| | 2 | U ₂ | Encoder supply |
| | 3 | N – | Inverse differential input for N track |
| | 4 | B – | Inverse differential input for B track |
| | 5 | A – | Inverse differential input for A track |
| | 6 | U ₂ Sense | Sense connection for regulating the encoder supply |
| | 7 | — | — |
| | 8 | — | — |
| | 9 | HALL B | HALL B |
| | 10 | 0 V GND | Reference potential for encoder supply to pin 2 |
| | 11 | N + | Differential input for N track |
| | 12 | B + | Differential input for B track |
| | 13 | A + | Differential input for A track |
| | 14 | HALL C | HALL C |
| | 15 | — | — |

Tab. 251: X304 connection description for differential TTL incremental encoder with single-ended TTL Hall sensor

Cable requirements

| Feature | All sizes |
|--|-----------------|
| Max. cable length, in total (motor to adapter box to drive controller) | 100 m, shielded |

Tab. 252: Cable length [m]

11.10.1.7 X305, X306: Encoder and Hall sensor via loose cable ends

 
At X305 and X306, you can alternatively connect the differential TTL incremental encoder with the single-ended TTL Hall sensor using loose cable ends.

Technical data


Observe the technical data for the X305 and X306 connection (see [X304, X305, X306: Encoder, Hall sensor \[► 80\]](#)).

Connection

Differential TTL incremental encoders with single-ended TTL Hall sensor

| Terminal | Pin | Designation | Function |
|--|-----|----------------------|--|
|  1 2 3 4 5 6 7 8 9 | 1 | HALL A | HALL A |
| | 2 | U ₂ | Encoder supply |
| | 3 | N – | Inverse differential input for N track |
| | 4 | B – | Inverse differential input for B track |
| | 5 | A – | Inverse differential input for A track |
| | 6 | U ₂ Sense | Sense connection for regulating the encoder supply |
| | 7 | — | — |
| | 8 | — | — |
| | 9 | HALL B | HALL B |

Tab. 253: X305 connection description for differential incremental encoder with single-ended TTL Hall sensor

| Terminal | Pin | Designation | Function |
|--|-----|-------------|--|
|  1 2 3 4 5 6 7 8 9 | 1 | 0 V GND | Reference potential for encoder supply |
| | 2 | N + | Differential input for N track |
| | 3 | B + | Differential input for B track |
| | 4 | A + | Differential input for A track |
| | 5 | HALL C | HALL C |
| | 6 | — | — |
| | 7 | — | — |
| | 8 | — | — |
| | 9 | — | — |

Tab. 254: X306 connection description for differential TTL incremental encoder with single-ended TTL Hall sensor

For the connecting wiring, note the [FK-MCP 1,5 -ST-3,5 \[► 461\]](#) terminal specification.

Cable requirements

| Feature | All sizes |
|--|-----------------|
| Max. cable length, in total (motor to adapter box to drive controller) | 100 m, shielded |

Tab. 255: Cable length [m]

11.11 Cables

Note that the motor, cables and drive controller each have electrical properties which influence one another. Unfavorable combinations could possibly result in impermissible voltage peaks on the motor and drive controller and increased wear as a result.

Take into consideration the following instructions when selecting suitable cables:

- Cable cross-sections for connection to the motor:
Note the permitted stall current I_0 for the motor when making your selection.
- Conductor cross-sections for the power connection:
Note the line fuse, the maximum permitted conductor cross-section for terminal X10, the routing method and the surrounding temperature when making your selection.
- Also pay attention to the trailing and torsional strength of the lines.
- When using a motor brake, pay attention to the voltage drop in the supply voltage on the line.

Information

To ensure proper functionality, we recommend using cables from STOBER that are matched to the complete system. If unsuitable cables are used, we reserve the right to reject claims under the warranty.

Information

When connecting the cables, refer to the motor connection diagram that is delivered with every STOBER motor.

11.11.1 Power cables

The synchronous servo motors and Lean motors are equipped with plug connectors as standard, while asynchronous motors are equipped with terminal boxes.

STOBER provides suitable cables in various lengths, conductor cross-sections and connector sizes.

11.11.1.1 Connection description


Depending on the size of the motor plug connector, power cables are available in the following designs:

- Quick lock for con.15
- speedtec quick lock for con.23 and con.40
- Screw technology for con.58

Information

Observe the designations on the identification clips for the correct connection of the cores.


Motor-side connection

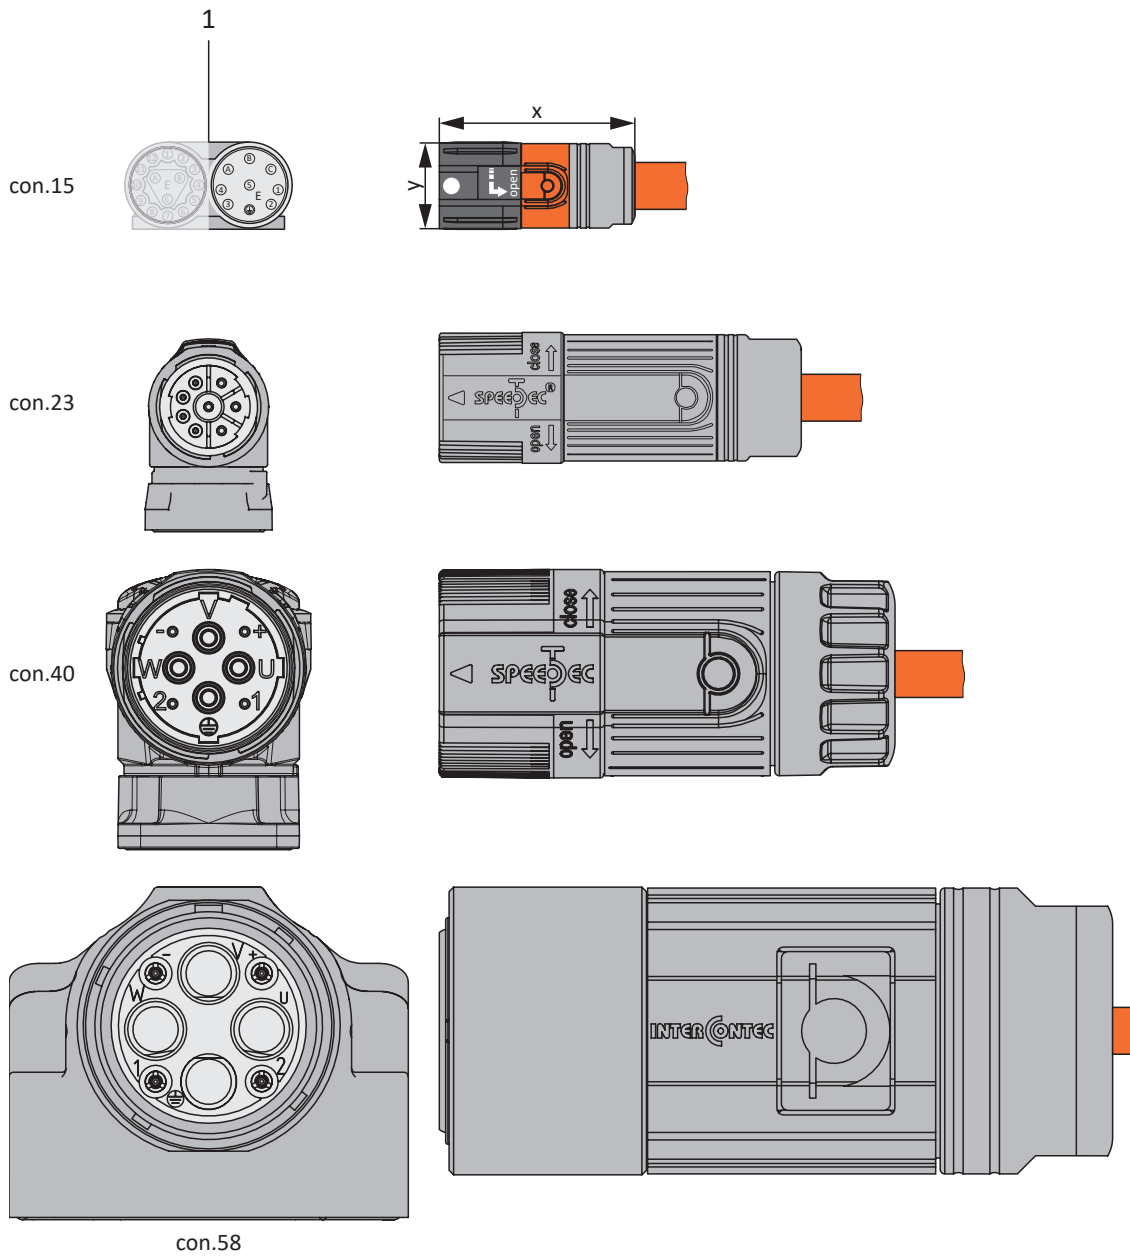


1 Plug connectors

Drive controller-side connection

Sizes 0 to 2

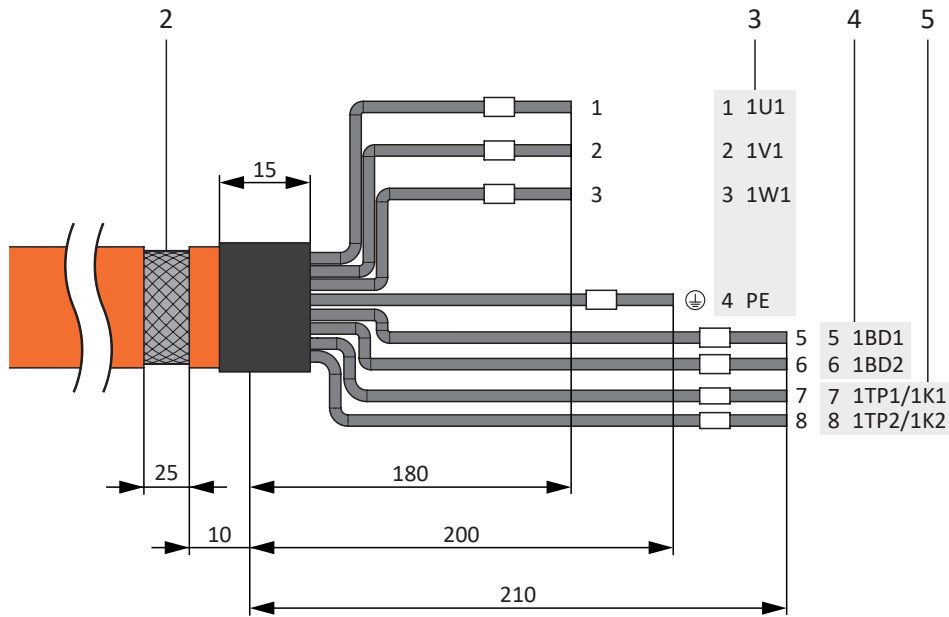

Size 3

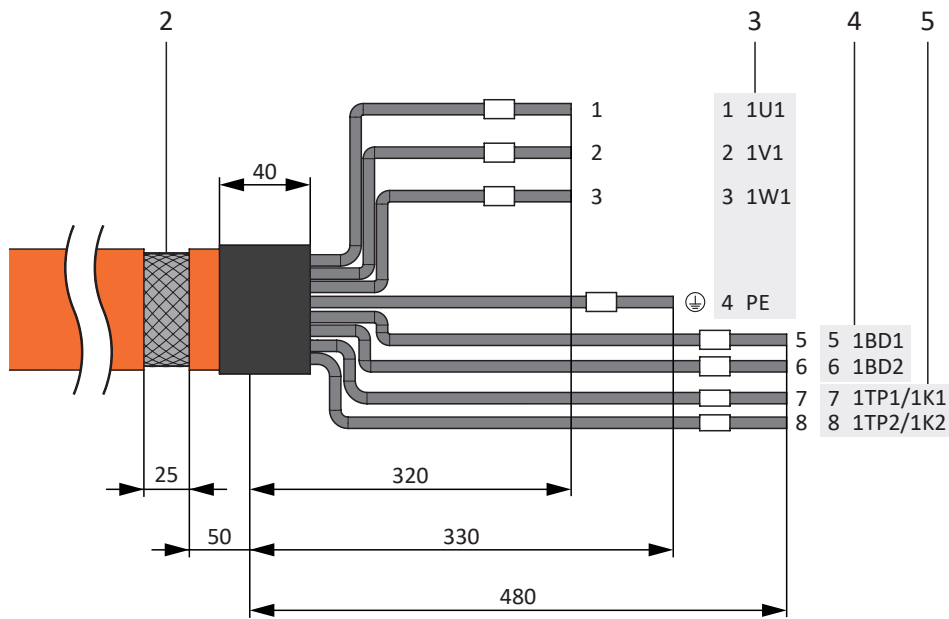

- 2 Power cable with cable shield and shrink tube
- 3 Connection to terminal X20, motor
- 4 Connection of terminal X5, brake
- 5 Connection to terminal X2, temperature sensor

Maximum cable length

| Motor type | Connection | Size 0 to 2 | Size 3 |
|---|----------------------|-----------------|-----------------|
| Synchronous servo motor, asynchronous motor | Without output choke | 50 m, shielded | 100 m, shielded |
| Synchronous servo motor, asynchronous motor | With output choke | 100 m, shielded | — |

Tab. 256: Maximum cable length of the power cable [m]

Power cables – con.15 plug connector


| Motor connection diagram | Motor (1) | | Cable (2) | Drive controller (3) – (5) | | |
|--------------------------|-----------|-------------|----------------------------|----------------------------|--------|--------|
| | Pin | Designation | Identification/ Core color | Pin X20 | Pin X5 | Pin X2 |
| | A | 1U1 | 1 | 1 | — | — |
| | B | 1V1 | 2 | 2 | — | — |
| | C | 1W1 | 3 | 3 | — | — |
| | 1 | 1TP1/1K1 | 7 | — | — | 7 |
| | 2 | 1TP2/1K2 | 8 | — | — | 8 |
| | 3 | 1BD1 | 5 | — | 5 | — |
| | 4 | 1BD2 | 6 | — | 6 | — |
| | 5 | — | — | — | — | — |
| | | PE | GNYE | 4 | — | — |
| | Housing | Shield | — | Shield contact | — | — |

Tab. 257: con.15 power cable pin assignment

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 42 | 18.7 |

Tab. 258: con.15 connector dimensions

Power cables – con.23 plug connector

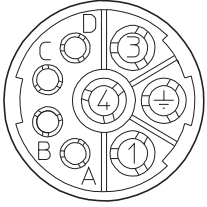
| Motor (1) | | Cable (2) | Drive controller (3) – (5) | | | |
|---|---------|-------------|----------------------------|----------------|--------|--------|
| Motor connection diagram | Pin | Designation | Identification/ Core color | Pin X20 | Pin X5 | Pin X2 |
|  | 1 | 1U1 | 1 | 1 | — | — |
| | 3 | 1V1 | 2 | 2 | — | — |
| | 4 | 1W1 | 3 | 3 | — | — |
| | A | 1BD1 | 5 | — | 5 | — |
| | B | 1BD2 | 6 | — | 6 | — |
| | C | 1TP1/1K1 | 7 | — | — | 7 |
| | D | 1TP2/1K2 | 8 | — | — | 8 |
| | ⊕ | PE | GNYE | 4 | — | — |
| | Housing | Shield | — | Shield contact | — | — |

Tab. 259: con.23 power cable pin assignment

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 78 | 26 |

Tab. 260: con.23 connector dimensions

Power cables – con.40 plug connector
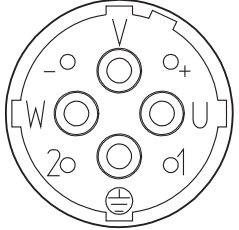
| Motor (1) | | Cable (2) | Drive controller (3) – (5) | | | |
|---|---------|-------------|----------------------------|----------------|--------|--------|
| Motor connection diagram | Pin | Designation | Identification/ Core color | Pin X20 | Pin X5 | Pin X2 |
|  | U | 1U1 | 1 | 1 | — | — |
| | V | 1V1 | 2 | 2 | — | — |
| | W | 1W1 | 3 | 3 | — | — |
| | + | 1BD1 | 5 | — | 5 | — |
| | - | 1BD2 | 6 | — | 6 | — |
| | 1 | 1TP1/1K1 | 7 | — | — | 7 |
| | 2 | 1TP2/1K2 | 8 | — | — | 8 |
| | ⊕ | PE | GNYE | 4 | — | — |
| | Housing | Shield | — | Shield contact | — | — |

Tab. 261: con.40 power cable pin assignment

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 99 | 46 |

Tab. 262: con.40 connector dimensions

Power cables – con.58 plug connectors

| Motor (1) | | Cable (2) | Drive controller (3) – (5) | | | |
|--------------------------|---------|-------------|----------------------------|----------------|--------|--------|
| Motor connection diagram | Pin | Designation | Identification/ Core color | Pin X20 | Pin X5 | Pin X2 |
| | U | 1U1 | 1 | 1 | — | — |
| | V | 1V1 | 2 | 2 | — | — |
| | W | 1W1 | 3 | 3 | — | — |
| | + | 1BD1 | 5 | — | 5 | — |
| | - | 1BD2 | 6 | — | 6 | — |
| | 1 | 1TP1/1K1 | 7 | — | — | 7 |
| | 2 | 1TP2/1K2 | 8 | — | — | 8 |
| | ⊕ | PE | GNYE | 4 | — | — |
| | Housing | Shield | — | Shield contact | — | — |

Tab. 263: con.58 power cable pin assignment

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 146 | 63.5 |

Tab. 264: con.58 connector dimensions

11.11.2 Encoder cables

The motors are equipped with encoder systems and plug connectors as standard.

STOBER provides suitable cables in various lengths, conductor cross-sections and connector sizes.

Depending on the respective motor types, different encoder systems can be used.


11.11.2.1 EnDat 2.1/2.2 digital encoders

Suitable encoder cables are described below.

11.11.2.1.1 Connection description

Depending on the size of the motor plug connector, encoder cables are available in the following designs:


- Quick lock for con.15
- speedtec quick lock for con.17 and con.23

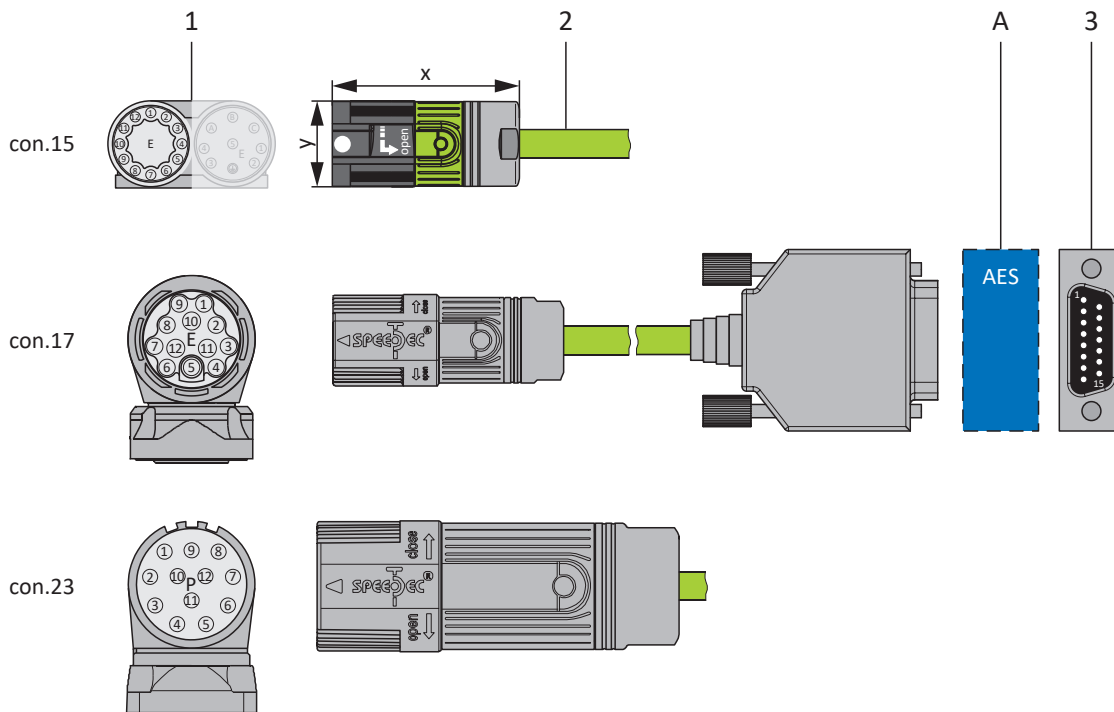

- 1 Plug connectors
- 2 Encoder cables
- A Only con.15 and con.17: Optional Absolute Encoder Support (AES) battery module
- 3 D-sub X4/X140

Encoder cables – con.15 plug connectors

The supply voltage is buffered for EnDat 2.2 digital "EBI 1135" and "EBI 135" inductive encoders with a multi-turn function. In this case, pin 2 and pin 3 of the motor are assigned to the U_{2BAT} buffer battery. Note that the encoder cable must not be connected to the encoder interface of the drive controller, but rather to the AES battery module for these encoders.
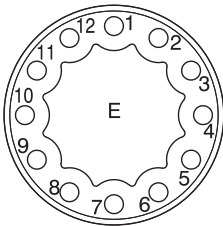
| Motor (1) | | Cable (2) | Drive controller (3) | |
|---|---------|---------------------------|----------------------|------------------|
| Connection diagram | Pin | Designation | Core color | |
|  | 1 | Clock + | YE | Pin X4/X140 8 |
| | 2 | U_{2BAT+} ³⁶ | PK | 12 |
| | 3 | U_{2BAT-} ³⁷ | GY | 3 |
| | 4 | — | — | — |
| | 5 | Data – | BN | 13 |
| | 6 | Data + | WH | 5 |
| | 7 | — | — | — |
| | 8 | Clock – | GN | 15 |
| | 9 | — | — | — |
| | 10 | 0 V GND | BU | 2 |
| | 11 | — | — | — |
| | 12 | U_2 | RD | 4 |
| | Housing | Shield | — | Housing |

Tab. 265: con.15 encoder cable pin assignment, EnDat 2.1/2.2 digital

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 42 | 18.7 |


Tab. 266: con.15 connector dimensions

³⁶ Only relevant for EBI encoders

³⁷ Only relevant for EBI encoders

Encoder cables – con.17 plug connectors

The supply voltage is buffered for EnDat 2.2 digital "EBI 1135" and "EBI 135" inductive encoders with a multi-turn function. In this case, pin 2 and pin 3 of the motor are assigned to the U_{2BAT} buffer battery. Note that the encoder cable must not be connected to the encoder interface of the drive controller, but rather to the AES battery module for these encoders.
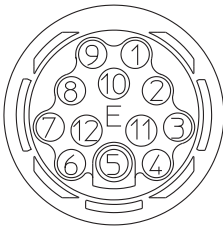
| Motor (1) | | Cable (2) | Drive controller (3) |
|---|---------|---------------------------|----------------------|
| Connection diagram | Pin | Designation | Core color |
|  | 8 | Clock + | YE |
| | 2 | U_{2BAT+} ³⁸ | PK |
| | 3 | U_{2BAT-} ³⁹ | GY |
| | 4 | — | — |
| | 5 | Data - | BN |
| | 6 | Data + | WH |
| | 7 | — | — |
| | 8 | Clock - | GN |
| | 9 | — | — |
| | 10 | 0 V GND | BU |
| | 11 | — | — |
| | 12 | U_2 | RD |
| | Housing | Shield | — |

Tab. 267: con.17 encoder cable pin assignment, EnDat 2.1/2.2 digital


| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 56 | 22 |

Tab. 268: con.17 connector dimensions

³⁸ Only relevant for EBI encoders

³⁹ Only relevant for EBI encoders

Encoder cables – con.23 plug connectors
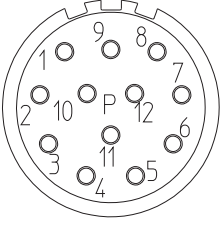
| Motor (1) | | Cable (2) | Drive controller (3) |
|---|---------|------------------------------------|----------------------|
| Connection diagram | Pin | Designation | Core color |
|  | 1 | Clock + | YE |
| | 2 | U ₂ Sense ⁴⁰ | PK |
| | 3 | — | — |
| | 4 | — | — |
| | 5 | Data – | BN |
| | 6 | Data + | WH |
| | 7 | — | — |
| | 8 | Clock – | GN |
| | 9 | — | — |
| | 10 | 0 V GND | BU |
| | 11 | — | — |
| | 12 | U ₂ | RD |
| | Housing | Shield | — |

Tab. 269: con.23 encoder cable pin assignment, EnDat 2.1/2.2 digital

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 58 | 26 |

Tab. 270: con.23 plug dimensions


⁴⁰ Only relevant for ECI 1319 or EQI 1331 encoders

11.11.2.2 SSI encoders

Suitable encoder cables are described below.

11.11.2.2.1 Connection description

The encoder cable is available in plug connector size con.23 with a speedtec quick lock.

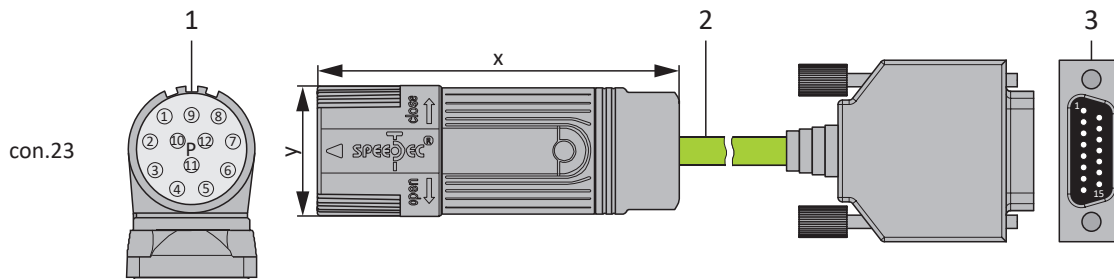

- 1 Plug connectors
- 2 Encoder cables
- 3 D-sub X4

Encoder cables – con.23 plug connectors

| Motor (1) | | Cable (2) | Drive controller (3) | |
|--------------------|---------|----------------------|----------------------|---------|
| Connection diagram | Pin | Designation | Core color | Pin X4 |
| | 1 | Clock + | YE | 8 |
| | 2 | U ₂ Sense | PK | 12 |
| | 3 | — | — | — |
| | 4 | — | — | — |
| | 5 | Data – | BN | 13 |
| | 6 | Data + | WH | 5 |
| | 7 | — | — | — |
| | 8 | Clock – | GN | 15 |
| | 9 | — | — | — |
| | 10 | 0 V GND | BU | 2 |
| | 11 | — | — | — |
| | 12 | U ₂ | RD | 4 |
| | Housing | Shield | — | Housing |

Tab. 271: con.23 encoder cable pin assignment, SSI

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 58 | 26 |


Tab. 272: con.23 plug dimensions

11.11.2.3 Differential HTL incremental encoders

Suitable encoder cables are described below.

11.11.2.3.1 Connection description

The encoder cable is available in plug connector size con.23 with a speedtec quick lock.

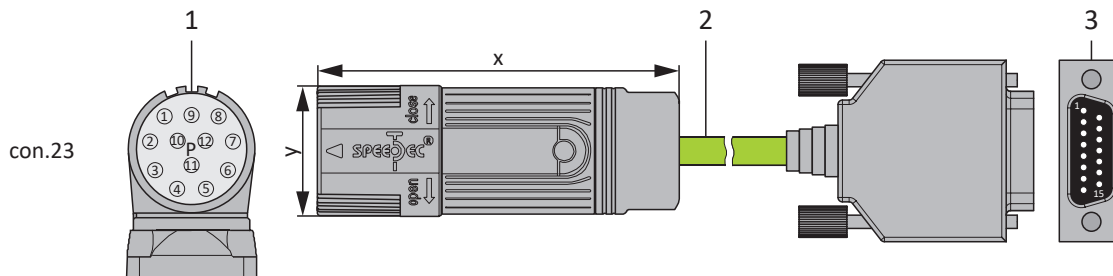

- 1 Plug connectors
- 2 Encoder cables
- 3 D-sub X4

Encoder cables – con.23 plug connectors

| Motor (1) | | Cable (2) | Drive controller (3) | |
|--------------------|---------|----------------|----------------------|-----------------|
| Connection diagram | Pin | Designation | Core color | Pin X4 |
| | 1 | B - | YE | 9 |
| | 2 | — | — | — |
| | 3 | N + | PK | 3 |
| | 4 | N - | GY | 10 |
| | 5 | A + | BN | 6 |
| | 6 | A - | WH | 11 |
| | 7 | — | — | — |
| | 8 | B + | GN | 1 |
| | 9 | — | — | — |
| | 10 | 0 V GND | BU | 2 ⁴¹ |
| | 11 | — | — | — |
| | 12 | U ₂ | RD | 4 |
| | Housing | Shield | — | Housing |

Tab. 273: con.23 encoder cable pin assignment, incremental HTL

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 58 | 26 |

Tab. 274: con.23 plug dimensions

⁴¹ Pin 12 (U₂ Sense) with pin 2 (0 V GND) bridged: The bridge is constructed in the cable connector that is connected to X4.


11.11.2.4 Differential TTL incremental encoders

The encoder cable appropriate for connecting a differential TTL incremental encoder with a single-ended TTL Hall sensor to the LA6 adapter box is described below.

11.11.2.4.1 Connection description

The encoder cable is available in plug connector size con.17 with a speedtec quick lock.

Encoder cables – con.17 plug connectors

| Connection diagram | Motor | | Cables | Adapter box |
|---|---------|----------------|------------|-------------|
| | Pin | Designation | Core color | Pin X304 |
|  | 1 | A - | YE | 5 |
| | 2 | B - | OG | 4 |
| | 3 | N + | BU | 11 |
| | 4 | U ₂ | BNRD | 2 |
| | 5 | Sense | BNYE | 6 |
| | 6 | — | — | — |
| | 7 | — | — | — |
| | 8 | — | — | — |
| | 9 | A + | GN | 13 |
| | 10 | B + | RD | 12 |
| | 11 | N - | GY | 3 |
| | 12 | 0 V GND | BNBU | 10 |
| | 13 | — | — | — |
| | 14 | HALL A | GNRD | 1 |
| | 15 | — | — | — |
| | 16 | HALL B | GNBK | 9 |
| | 17 | HALL C | BNGY | 14 |
| | Housing | Shield | — | Housing |

Tab. 275: con.17 encoder cable pin assignment

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 56 | 22 |

Tab. 276: con.17 connector dimensions


11.11.2.5 Resolver

Suitable encoder cables are described below.

11.11.2.5.1 Connection description

Depending on the size of the motor plug connector, encoder cables are available in the following designs:

- Quick lock for con.15
- speedtec quick lock for con.17 and con.23

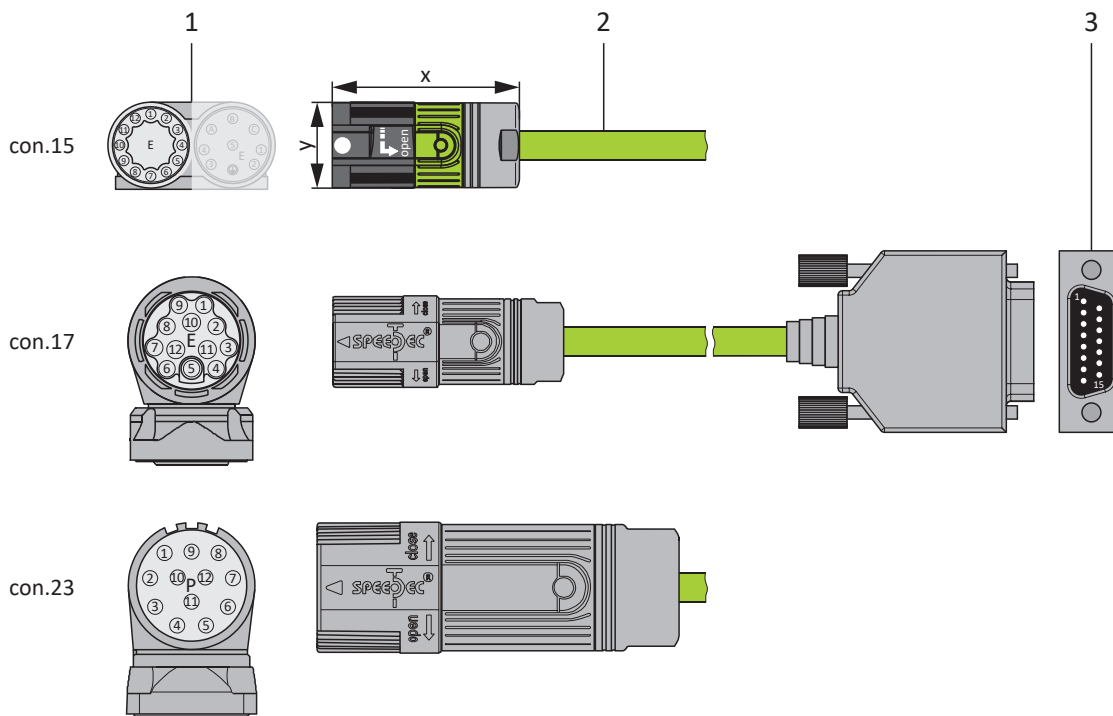

- 1 Plug connectors
- 2 Encoder cables
- 3 D-sub X140/adapter

Information


Note that the cores for the temperature sensor are routed in the power cable as standard. For motors that provide the temperature sensor at the encoder connection, you need an interface adapter to lead out the temperature sensor cores for connecting the cable to the drive controller.

Information

For connecting con.23 resolver cables with a 9-pin D-sub connector, such as the standard design for ED/EK synchronous servo motors, you must use interface adapter AP6A00 (ID No. 56498) or AP6A01 (ID No. 56522, with motor temperature sensor leads), available separately.

11.11.2.5.1.1 Resolver cable with "Motion Resolver" imprint

Encoder cables – con.15 plug connectors

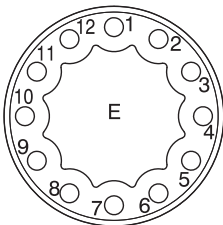
| Motor (1) | | Cable (2) | | Drive controller (3) | |
|---|---------|-------------|------------|----------------------|----------|
| Connection diagram | Pin | Designation | Core color | Pair | Pin X140 |
|  | 1 | S3 Cos + | GN | GN-BK | 3 |
| | 2 | S1 Cos – | BK | GN-BK | 11 |
| | 3 | S4 Sin + | WH | WH-BK | 1 |
| | 4 | S2 Sin – | BK | WH-BK | 9 |
| | 5 | 1TP1 | RD | RD-BK | 7 |
| | 6 | 1TP2 | BK | RD-BK | 14 |
| | 7 | R2 Ref + | BU | BU-BK | 6 |
| | 8 | R1 Ref – | BK | BU-BK | 2 |
| | 9 | – | – | – | – |
| | 10 | – | – | – | – |
| | 11 | – | – | – | – |
| | 12 | – | – | – | – |
| | Housing | Shield | – | – | Housing |

Tab. 277: Encoder cable pin assignment con.15, resolver, "Motion Resolver" cable label

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 42 | 18.7 |

Tab. 278: con.15 connector dimensions

Encoder cables – con.17 plug connectors


| Connection diagram | Motor (1) | | Cable (2) | | Drive controller (3) |
|---|-----------|-------------|------------|-------|----------------------|
| | Pin | Designation | Core color | Pair | Pin X140 |
|  | 1 | S3 Cos + | GN | GN-BK | 3 |
| | 2 | S1 Cos – | BK | GN-BK | 11 |
| | 3 | S4 Sin + | WH | WH-BK | 1 |
| | 4 | S2 Sin – | BK | WH-BK | 9 |
| | 5 | 1TP1 | RD | RD-BK | 7 |
| | 6 | 1TP2 | BK | RD-BK | 14 |
| | 7 | R2 Ref + | BU | BU-BK | 6 |
| | 8 | R1 Ref – | BK | BU-BK | 2 |
| | 9 | – | – | – | – |
| | 10 | – | – | – | – |
| | 11 | – | – | – | – |
| | 12 | – | – | – | – |
| | Housing | Shield | – | – | Housing |

Tab. 279: Encoder cable pin assignment con.17, resolver, "Motion Resolver" cable label

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 56 | 22 |

Tab. 280: con.17 connector dimensions

Encoder cables – con.23 plug connectors
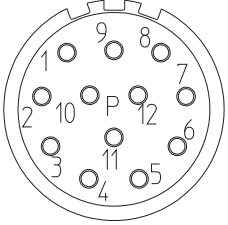
| Connection diagram | Motor (1) | | Cable (2) | | Adapter (3) |
|---|-----------|-------------|------------|-------|---------------------|
| | Pin | Designation | Core color | Pair | Pin 9-pin connector |
|  | 1 | S3 Cos + | GN | GN-BK | 8 |
| | 2 | S1 Cos – | BK | GN-BK | 4 |
| | 3 | S4 Sin + | WH | WH-BK | 7 |
| | 4 | S2 Sin – | BK | WH-BK | 3 |
| | 5 | 1TP1 | RD | RD-BK | 2 |
| | 6 | 1TP2 | BK | RD-BK | 6 |
| | 7 | R2 Ref + | BU | BU-BK | 9 |
| | 8 | R1 Ref – | BK | BU-BK | 5 |
| | 9 | – | – | – | – |
| | 10 | – | – | – | – |
| | 11 | – | – | – | – |
| | 12 | – | – | – | – |
| | Housing | Shield | – | – | Housing |


Tab. 281: Encoder cable pin assignment con.23, resolver, "Motion Resolver" cable label

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 58 | 26 |

Tab. 282: con.23 plug dimensions

11.11.2.5.1.2 Resolver cable with "No. 44206" imprint

Encoder cables – con.15 plug connectors

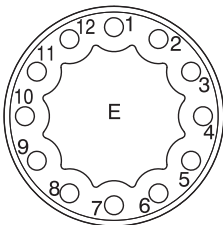
| Connection diagram | Motor (1) | | Cable (2) | Drive controller (3) |
|---|-----------|-------------|------------|----------------------|
| | Pin | Designation | Core color | Pin X140 |
|  | 1 | S3 Cos + | YE | 3 |
| | 2 | S1 Cos – | GN | 11 |
| | 3 | S4 Sin + | WH | 1 |
| | 4 | S2 Sin – | BN | 9 |
| | 5 | 1TP1 | RD | 7 |
| | 6 | 1TP2 | BU | 14 |
| | 7 | R2 Ref + | GY | 6 |
| | 8 | R1 Ref – | PK | 2 |
| | 9 | – | – | – |
| | 10 | – | – | – |
| | 11 | – | – | – |
| | 12 | – | – | – |
| | Housing | Shield | – | Housing |

Tab. 283: Encoder cable pin assignment con.15, resolver, "No. 44206" cable label

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 42 | 18.7 |

Tab. 284: con.15 connector dimensions

Encoder cables – con.17 plug connectors

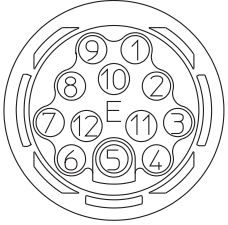
| Connection diagram | Motor (1) | | Cable (2) | Drive controller (3) |
|---|-----------|-------------|------------|----------------------|
| | Pin | Designation | Core color | Pin X140 |
|  | 1 | S3 Cos + | YE | 3 |
| | 2 | S1 Cos – | GN | 11 |
| | 3 | S4 Sin + | WH | 1 |
| | 4 | S2 Sin – | BN | 9 |
| | 5 | 1TP1 | RD | 7 |
| | 6 | 1TP2 | BU | 14 |
| | 7 | R2 Ref + | GY | 6 |
| | 8 | R1 Ref – | PK | 2 |
| | 9 | – | – | – |
| | 10 | – | – | – |
| | 11 | – | – | – |
| | 12 | – | – | – |
| | Housing | Shield | – | Housing |

Tab. 285: Encoder cable pin assignment con.17, resolver, "No. 44206" cable label

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 56 | 22 |

Tab. 286: con.17 connector dimensions

Encoder cables – con.23 plug connectors
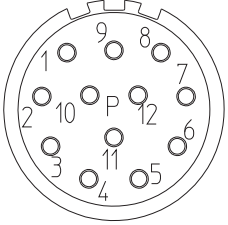
| Connection diagram | Motor (1) | | Cable (2) | Adapter (3) |
|---|-----------|-------------|------------|---------------------|
| | Pin | Designation | Core color | Pin 9-pin connector |
|  | 1 | S3 Cos + | YE | 8 |
| | 2 | S1 Cos - | GN | 4 |
| | 3 | S4 Sin + | WH | 7 |
| | 4 | S2 Sin - | BN | 3 |
| | 5 | 1TP1 | RD | 2 |
| | 6 | 1TP2 | BU | 6 |
| | 7 | R2 Ref + | GY | 9 |
| | 8 | R1 Ref - | PK | 5 |
| | 9 | — | — | — |
| | 10 | — | — | — |
| | 11 | — | — | — |
| | 12 | — | — | — |
| | Housing | Shield | — | Housing |

Tab. 287: Encoder cable pin assignment con.23, resolver, "No. 44206" cable label

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 58 | 26 |

Tab. 288: con.23 plug dimensions


11.11.2.6 EnDat 2.1 sin/cos encoders

Suitable encoder cables are described below.

11.11.2.6.1 Connection description

Depending on the size of the motor plug connector, encoder cables are available in the following designs:

- Quick lock for con.15
- speedtec quick lock for con.17 and con.23

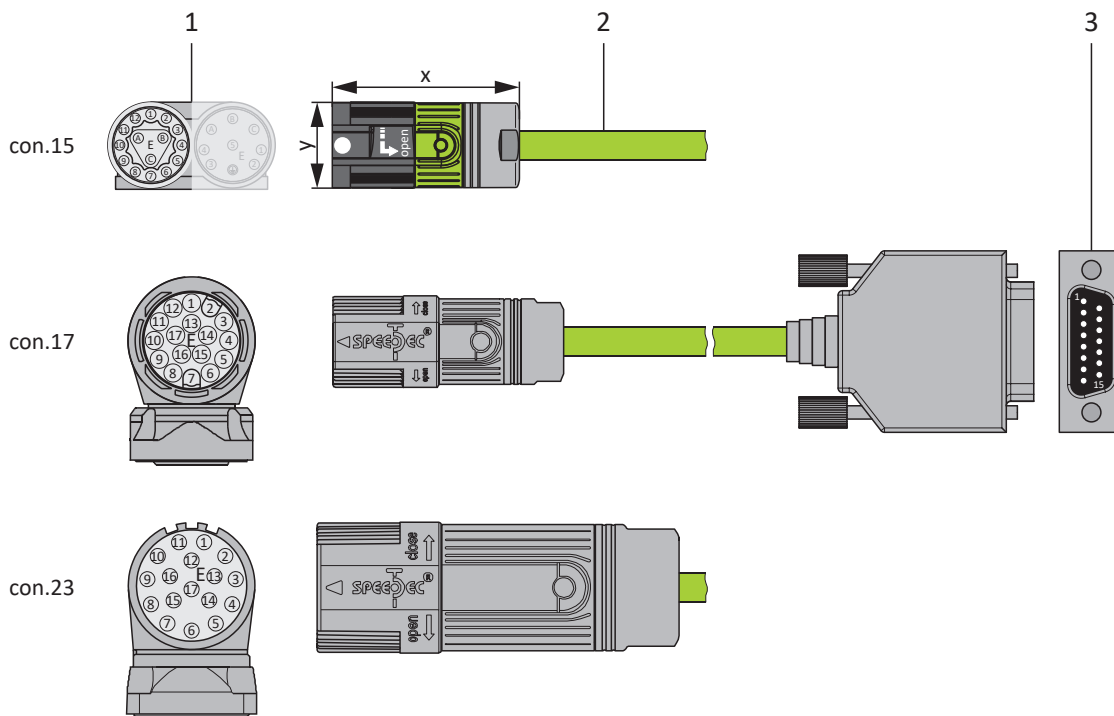

- 1 Plug connectors
- 2 Encoder cables
- 3 D-sub X140

Information

Note that the cores for the temperature sensor are routed in the power cable as standard. For motors that provide the temperature sensor at the encoder connection, you need an interface adapter to lead out the temperature sensor cores for connecting the cable to the drive controller.

Information

For connecting EnDat 2.1 sin/cos cables with a 15-pin D-sub connector to an integrated motor temperature sensor, you must use the AP6A02 interface adapter (ID No. 56523), available separately, to lead out the temperature sensor cores.

Encoder cables – con.15 plug connectors


| Connection diagram | Motor (1) | | Cable (2) | Drive controller (3) |
|--------------------|-----------|----------------------|------------|----------------------|
| | Pin | Designation | Core color | Pin X140 |
| | 1 | U ₂ Sense | GNRD | 12 |
| | 2 | 0 V Sense | GNBK | 10 |
| | 3 | U ₂ | BNRD | 4 |
| | 4 | Clock + | WHBK | 8 |
| | 5 | Clock - | WHYE | 15 |
| | 6 | 0 V GND | BNBU | 2 |
| | 7 | B + (Sin +) | RD | 9 |
| | 8 | B - (Sin -) | OG | 1 |
| | 9 | Data + | GY | 5 |
| | 10 | A + (Cos +) | GN | 11 |
| | 11 | A - (Cos -) | YE | 3 |
| | 12 | Data - | BU | 13 |
| | A | 1TP2 | BNGY | 14 |
| | B | 1TP1 | BNYE | 7 |
| | C | — | — | — |
| Housing | Shield | — | Housing | |

Tab. 289: con.15 encoder cable pin assignment, EnDat 2.1 sin/cos

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 42 | 18.7 |

Tab. 290: con.15 connector dimensions

Encoder cables – con.17 plug connectors

| Connection diagram | Motor (1) | | Cable (2) | Drive controller (3) |
|---|-----------|----------------------|------------|----------------------|
| | Pin | Designation | Core color | Pin X140 |
|  | 1 | U ₂ Sense | GNRD | 12 |
| | 2 | — | — | — |
| | 3 | — | — | — |
| | 4 | 0 V Sense | GNBK | 10 |
| | 5 | 1TP2 | BNGY | 14 |
| | 6 | 1TP1 | BNYE | 7 |
| | 7 | U ₂ | BNRD | 4 |
| | 8 | Clock + | WHBK | 8 |
| | 9 | Clock - | WHYE | 15 |
| | 10 | 0 V GND | BNBU | 2 |
| | 11 | — | — | — |
| | 12 | B + (Sin +) | RD | 9 |
| | 13 | B - (Sin -) | OG | 1 |
| | 14 | Data + | GY | 5 |
| | 15 | A + (Cos +) | GN | 11 |
| | 16 | A - (Cos -) | YE | 3 |
| | 17 | Data - | BU | 13 |
| Housing | Shield | — | Housing | |

Tab. 291: con.17 encoder cable pin assignment, EnDat 2.1 sin/cos

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 56 | 22 |

Tab. 292: con.17 connector dimensions

Encoder cables – con.23 plug connectors

| Motor (1) | | Cable (2) | Drive controller (3) | |
|--------------------|--------|----------------------|----------------------|----------|
| Connection diagram | Pin | Designation | Core color | Pin X140 |
| | 1 | U ₂ Sense | GNRD | 12 |
| | 2 | — | — | — |
| | 3 | — | — | — |
| | 4 | 0 V Sense | GNBK | 10 |
| | 5 | 1TP2 | BNGY | 14 |
| | 6 | 1TP1 | BNYE | 7 |
| | 7 | U ₂ | BNRD | 4 |
| | 8 | Clock + | WHBK | 8 |
| | 9 | Clock – | WHYE | 15 |
| | 10 | 0 V GND | BNBU | 2 |
| | 11 | — | — | — |
| | 12 | B + (Sin +) | RD | 9 |
| | 13 | B – (Sin –) | OG | 1 |
| | 14 | Data + | GY | 5 |
| | 15 | A + (Cos +) | GN | 11 |
| | 16 | A – (Cos –) | YE | 3 |
| | 17 | Data – | BU | 13 |
| Housing | Shield | — | Housing | |

Tab. 293: con.23 encoder cable pin assignment, EnDat 2.1 sin/cos

| Length x [mm] | Diameter y [mm] |
|---------------|-----------------|
| 58 | 26 |

Tab. 294: con.23 plug dimensions

12 Operation

The operating unit of the drive controller consists of a graphic display (LCD) and buttons.

12.1 Overview



Fig. 67: Operating unit of the SD6 drive controller

- OK
 Select levels, parameter groups and parameters or apply modified parameter values
- Esc
 Display parameters of the start display, navigate to a previous level, reject modified parameter values or acknowledge fault
- ^
 Select parameters within a parameter group or change parameter values
- v
- <
 Select a parameter group or select a character position of a parameter
- >
- ✋
 Activate or deactivate local operation; a deactivation causes the enable signal to be cleared
- I/O
 Enable drive in local operation, if parameterized
- 💾
 Store in non-volatile memory: press button for 3 s

12.2 Menu structure and navigation

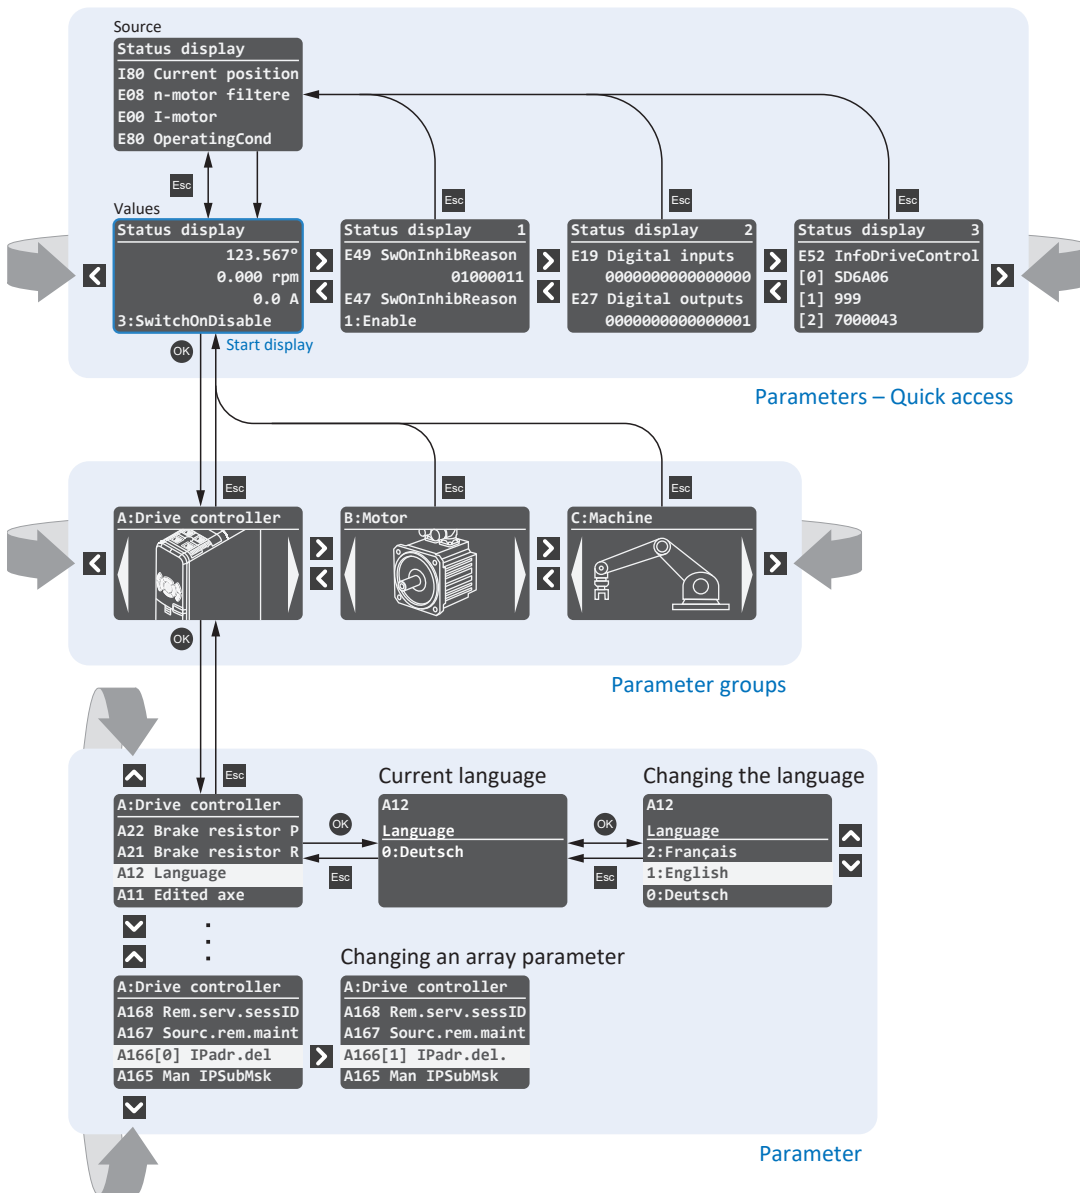


Fig. 68: Menu structure and navigation using the SD6 operating unit

Parameters – Quick access

Using quick access, you get direct access to the status of the most important (diagnostic) parameters. This level consists of the **STATUS DISPLAY** start display and three additional topic-specific overviews: **STATUS DISPLAY 1**, for example, provides information about the causes of a possible switch-on lockout, **STATUS DISPLAY 2** provides information about analog and digital inputs and outputs, **STATUS DISPLAY 3** provides information about the general data of the drive controller, such as type, firmware, integrated option modules, etc. You can navigate within this level using the left and right arrow buttons. You can use the up and down arrow buttons to navigate within the current overview to see more information.

For drive controllers with extended safety technology via the SE6 safety module, a monitoring safety function (e.g. SLI, SLP or SLS) is shown on the display. If a monitoring safety function is active, **STATUS DISPLAY 1** shows the **SAFETY ACTIVE** ticker as long as the status of the safety module = FSRUN (S01, bits 8–15 = 24 hex).

You can access parameters hidden behind the four values on the **STATUS DISPLAY** start display by using [Esc]. These four parameters can be configured individually using parameter A144.

Parameter groups

Parameters are combined into groups by their functional properties, such as "Drive controller", "Motor", "Machine", "Terminal", etc. You can navigate within this level using the right and left arrow buttons; you can select one of the possible groups with [OK].

Parameters

Within a parameter group, you can navigate using the up and down arrow buttons; you can select one of the possible parameters with [OK]. If you would like to change a parameter value, select the corresponding character position using the right and left arrow buttons and select the new value using the up and down arrow buttons. You can apply changes with [OK] or reject them with [Esc].

| |
|--------------------|
| Information |
|--------------------|

Note that modified values can be stored in non-volatile memory via an operating unit using the save button or parameter A00.

13 What you should know before commissioning

The following chapters provide a quick introduction to the structure of the program interface and accompanying window designations as well as relevant information about parameters and generally saving your project configuration.

13.1 DS6 program interface

Using the graphical interface of the DriveControlSuite commissioning software (DS6), you can project, parameterize and commission your drive project quickly and efficiently. In case of service, you can evaluate diagnostic information such as operating states, fault memories and fault counters of your drive project using DriveControlSuite.

Information

The program interface of DriveControlSuite is available in German, English and French. To change the language of the program interface, select Settings > Language.

Information

The DriveControlSuite help in the menu bar can be reached via Help > Help for DS6 or via the [F1] key on your keyboard. When you press [F1] in an area of the program, the corresponding help topic opens.

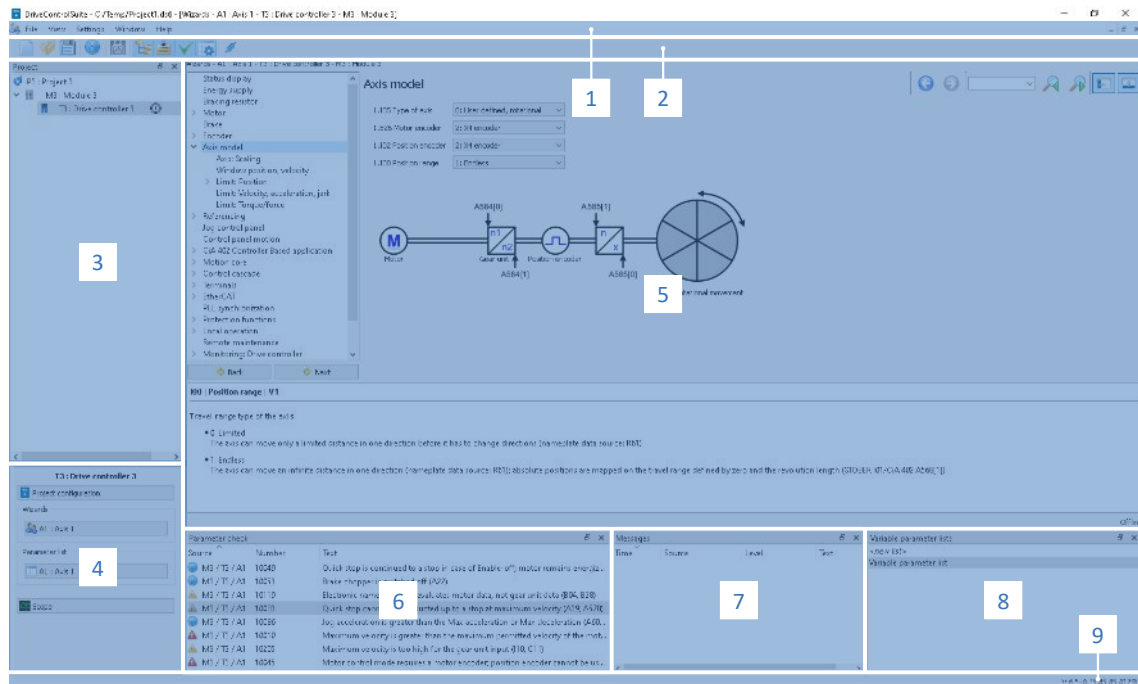


Fig. 69: DS6: Program interface


| No. | Area | Description |
|-----|--------------------------|--|
| 1 | Menu bar | Using the File, View, Settings and Window menus, you can open and save projects, display and hide program windows, select the interface language and access level and change between different windows in the workspace. |
| 2 | Toolbar | The toolbar enables quick access to frequently needed functions, like opening and saving projects and hiding and displaying windows in the program interface. |
| 3 | Project tree | The project tree forms the structure of your drive project in the form of modules and drive controllers. Select an element using the project tree first in order to edit it using the project menu. |
| 4 | Project menu | The project menu offers you various functions for editing the project, module and drive controller. The project menu adapts to the element that you selected in the project tree. |
| 5 | Workspace | The different windows which can be used to edit your drive project, such as the configuration dialog, wizards, the parameter list or the scope analysis tool, open in the workspace. |
| 6 | Parameter check | The parameter check points out irregularities and inconsistencies that were detected in the plausibility check of calculable parameters. |
| 7 | Messages | The entries in the messages log the connection and communication status of the drive controllers, incorrect inputs caught by the system, errors when opening a project or rule violations in the graphical programming. |
| 8 | Variable parameter lists | You can use variable parameter lists to compile any parameters in individual parameter lists for a quick overview. |
| 9 | Status bar | In the status bar, you can find the specifications of the software version and get additional information about the project file, the devices and the progress of the process during processes such as loading projects. |

13.2 Meaning of parameters

You can use parameters to adapt the function of the drive controller to your individual application. In addition, parameters visualize the current actual values (actual velocity, actual torque, etc.) and trigger actions such as Save values, Test phase, etc.

Interpretation of parameter identification

Parameter identification consists of the following elements, where short forms are also possible, i.e. only specifying a coordinate or the combination of coordinate and name.

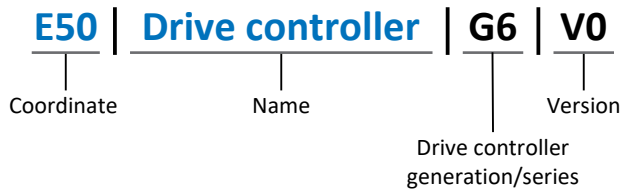

13.2.1 Parameter groups

Parameters are assigned to individual groups by topic. The drive controllers differentiate between the following parameter groups.

| Group | Topic |
|-------|--|
| A | Drive controllers, communication, cycle times |
| B | Motor |
| C | Machine, velocity, torque/force, comparators |
| D | Set value |
| E | Display |
| F | Terminals, analog and digital inputs and outputs, brake |
| G | Technology – Part 1 (application-dependent) |
| H | Encoder |
| I | Motion (all motion settings) |
| J | Motion blocks |
| K | Control panel |
| L | Technology – Part 2 (application-dependent) |
| M | Profiles (application-dependent) |
| N | Additional functions (application-dependent; e.g. extended cam control unit) |
| P | Customer-specific parameters (programming) |
| Q | Customer-specific parameters, instance-dependent (programming) |
| R | Production data for the drive controller, motor, brakes, motor adapter, gear unit and geared motor |
| S | Safety (safety technology) |
| T | Scope |
| U | Protection functions |
| Z | Fault counter |

Tab. 295: Parameter groups

13.2.2 Parameter types and data types

In addition to topic-based sorting in individual groups, all parameters belong to a certain data type and parameter type. The data type of a parameter is displayed in the parameter list, properties table. The connections between parameter types, data types and their value range can be found in the following table.

| Data type | Parameter type | Length | Value range (decimal) |
|---|------------------------------------|-----------------------------------|--|
| INT8 | Integer or selection | 1 byte (signed) | -128 – 127 |
| INT16 | Integer | 2 bytes (1 word, signed) | -32768 – 32767 |
| INT32 | Integer or position | 4 bytes (1 double word, signed) | -2 147 483 648 – 2 147 483 647 |
| BOOL | Binary number | 1 bit (internal: LSB in 1 byte) | 0, 1 |
| BYTE | Binary number | 1 byte (unsigned) | 0 – 255 |
| WORD | Binary number | 2 bytes (1 word, unsigned) | 0 – 65535 |
| DWORD | Binary number or parameter address | 4 bytes (1 double word, unsigned) | 0 – 4 294 967 295 |
| REAL32 (single type according to IEE754) | Floating-point number | 4 bytes (1 double word, signed) | $-3.40282 \times 10^{38} - 3.40282 \times 10^{38}$ |
| STR8 | Text | 8 characters | — |
| STR16 | Text | 16 characters | — |
| STR80 | Text | 80 characters | — |

Tab. 296: Parameters: Data types, parameter types, possible values

Parameter types: Use

- Integer, floating-point number
For general computing processes
Example: Set and actual values
- Selection
Numeric value to which a direct meaning is assigned
Example: Sources for signals or set values
- Binary number
Bit-oriented parameter information that is collected in binary
Example: Control and status words
- Position
Integer combined with associated units and decimal places
Example: Actual and set values of positions
- Velocity, acceleration, deceleration, jerk
Floating-point number combined with associated units
Example: Actual and set values for velocity, acceleration, deceleration, jerk
- Parameter address
Referencing of a parameter
Example: In F40 AO1 source, for example, E08 n-motor filtered can be parameterized
- Text
Outputs or messages

13.2.3 Parameter types


The following types of parameters are differentiated.

| Parameter type | Description | Example |
|-------------------|---|---|
| Simple parameters | Consist of one group and one line with a defined value. | A21 Brake resistor R: Value = 100 ohms |
| Array parameters | Consist of a group, a line and multiple sequential (listed) elements, which have the same properties but different values. | A10 Access level <ul style="list-style-type: none"> ▪ A10[0] access level: Value = Access level via operating unit ▪ A10[2] access level: Value = Access level via CANopen and EtherCAT ▪ A10[4] access level: Value = Access level via PROFINET |
| Record parameters | Consist of a group, a line and multiple sequential (listed) elements, which can have different properties and different values. | A00 Save values <ul style="list-style-type: none"> ▪ A00[0] Start: Value = Start action ▪ A00[1] Progress: Value = Display action progress ▪ A00[2] Result: Value = Display action result |

Tab. 297: Parameter types

13.2.4 Parameter structure

Every parameter has specific coordinates with the following structure.

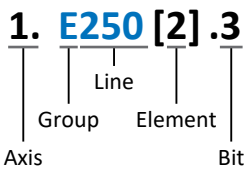

- **Axis (optional)**
In case of multiple axes, the one to which a parameter is assigned; not applicable for global parameters (value range: 1 – 4).
- **Group**
The thematic group to which a parameter belongs (value range: A – Z).
- **Line**
Distinguishes the parameters within a parameter group (value range: 0 – 999).
- **Element (optional)**
Elements of an array or record parameter (value range: 0 – 16000).
- **Bit (optional)**
Selection of a single bit for complete data addressing; depends on the data type (value range: 0 – 31).

13.2.5 Parameter visibility

The visibility of a parameter is controlled by the access level you set in DriveControlSuite and by the properties you project for the respective drive controller (e.g. hardware, firmware and application). A parameter can also be shown or hidden depending on other parameters or settings. For example, the parameters of an additional function are only shown as soon as you activate the relevant additional function.

Access level

The access options for the individual software parameters are ranked hierarchically and divided into individual levels. This means that parameters can be hidden for a specific purpose and, relatedly, their configuration options can be locked starting from a specific level.

Each parameter has one access level for read access (visibility) and one access level for write access (editability). The following levels are present:

- Level 0
Elementary parameters
- Level 1
Important parameters of an application
- Level 2
Important parameters for service with extensive diagnostic options
- Level 3
All parameters needed for commissioning and optimizing an application

The parameter A10 Access level controls general access to parameters:

- Over the drive controller display (A10[0])
- Over CANopen or EtherCAT (A10[2])
- Over PROFINET (A10[3])

Information

It is not possible to write to or read the parameter hidden in DriveControlSuite during communication via fieldbus.

Hardware

Which parameters are available to you in DriveControlSuite is determined by which series you select in the configuration dialog for the drive controller, for example, or whether you project an option module. Basically, the only parameters that are displayed are the ones you need to parameterize the configured hardware.

For example, a drive controller can evaluate an encoder using terminal X120, provided that a corresponding terminal module has been installed. The accompanying evaluation is activated using parameter H120. However, this parameter is visible only if the terminal module was initially selected during the drive project configuration.

Firmware

Due to the further development and updating of functions for the drive controllers, new parameters and also new versions of existing parameters are continuously being implemented in DriveControlSuite and in the firmware. The parameters are displayed in the software according to the DriveControlSuite version used and the configured firmware version of the respective drive controller.

Applications

Applications generally differ in terms of functions and their control. For this reason, different parameters are available with each application.

13.3 Signal sources and process data mapping

The transmission of control signals and set values in DriveControlSuite meets the following principles.

Signal sources

Drive controllers are controlled either over a fieldbus, using mixed operation consisting of a fieldbus system and terminals or exclusively using terminals.

You can use the corresponding selection parameters, referred to as signal sources, to configure whether the control signals and set values of the application are obtained over a fieldbus or using terminals.

In case of activation over a fieldbus, parameters that are selected as data sources for control signals or set values must be part of the subsequent process data mapping. In the case of activation using terminals, the respective analog or digital inputs are specified directly.

Process data mapping

If you are working with a fieldbus system and have selected the source parameters for control signals and set values, configure the fieldbus-specific settings, e.g. the assignment of the process data channels for transmitting receive and transmit process data, as the last step. The respective procedure can be found in the accompanying fieldbus manuals.

13.4 Non-volatile memory

All project configurations, parameterizations and related changes to parameter values are in effect after transmission to the drive controller, but are only stored in volatile memory.

Saving to a drive controller

To save the configuration in non-volatile memory on a drive controller, you have the following options:

- Saving the configuration using the *Save values wizard*:
Project menu > Wizards area > Projected axis > Save values wizard: Select the Save values action
- Saving the configuration using the parameter list:
Project menu > Parameter list area > Projected axis > Group A: Drive controller > A00 Save values: Set the parameter A00[0] to the value 1: Active
- Saving the configuration using the operating unit:
Drive controller with operating unit: Press the save button for 3 s

Saving to all drive controllers within a project

To save the configuration in non-volatile memory on several drive controllers, you have the following options:

- Saving the configuration using the toolbar:
Toolbar > Save values icon: Click the Save values icon
- Saving the configuration using the Online functions window:
Project menu > Online connection button > Online functions window: Click on Save values (A00)

Information

Do not shut off the drive controller while saving. If the supply voltage to the control unit is interrupted while saving, the drive controller will start without an executable configuration the next time it is switched on. To successfully complete the saving procedure, the configuration must be stored again on the drive controller and in non-volatile memory.

14 Commissioning

The following chapters describe how to commission your drive system using the DriveControlSuite commissioning software.

Information on system requirements and software installation can be found in the appendix (see [DriveControlSuite \[▶ 480\]](#)).

For the components of your axis model, **as an example**, we require a synchronous servo motor with EnDat 2.1/2.2 digital encoder and optional brake. These motors are saved along with all relevant data for the project configuration in the DriveControlSuite motor database and in the electronic nameplate.

Upon selecting the motor from the database, such as when reading out the nameplate, all data is transferred to the corresponding parameters. There is no need for complex parameterization of the motor, brake or encoder.

For asynchronous motors, the motor data relevant for project configuration is also taken from the motor database. All other motor types, as well as motors from third-party manufacturers, need to have their parameters configured manually.

Make sure that the system nodes are wired and supplied with control voltage before commissioning.

Information

The commissioning process described below is particularly suitable for quick initial commissioning of your drive system with subsequent testing of your projected axis model. Since steps or their sequence may vary depending on the application, refer to the corresponding application manual for detailed information.

Information

Always perform the steps described below in the specified order!

Some parameters are interdependent and do not become accessible to you until you have first configured certain settings. Follow the steps in the specified sequence so that you can finish the parameterization completely.

14.1 Initiating the project

In order to be able to configure all drive controllers and axes of your drive system using DriveControlSuite, you must record them as part of a project.

14.1.1 Projecting the drive controller and axis

Create a new project and project the first drive controller along with the accompanying axis.

Information

Make sure that you project the correct series in the *Drive controller* tab. The projected series cannot be changed afterwards.

Creating a new project

1. Start DriveControlSuite.
2. On the start screen, click *Create new project*.
 - ⇒ The new project is created and the configuration dialog for the first drive controller opens.
 - ⇒ The *Drive controller* button is active.

Projecting the drive controller

1. Properties tab:

Establish the relationship between your circuit diagram and the drive controller to be projected in DriveControlSuite.

1.1. Reference:

Define the reference code (equipment code) of the drive controller.

1.2. Designation:

Give the drive controller a unique name.

1.3. Version:

Version your project configuration.

1.4. Description:

If necessary, save additional supporting information (e.g., the change history).

2. Drive controller tab:

Select the series and device type of the drive controller.

3. Option modules tab:

Project the option modules of the drive controller.

3.1. Communication module:

If you control the drive controller via a fieldbus, select the corresponding communication module.

3.2. Terminal module:

If you are controlling the drive controller via analog and digital inputs, select the corresponding terminal module.

3.3. Safety module:

If the drive controller is part of a safety circuit, select the corresponding safety module.

4. Device control tab:

Project the basic control of the drive controller.

4.1. Device control:

Select the device control that defines the underlying activation signals of the drive controller.

4.2. Rx process data, Tx process data:

If you use a fieldbus to control the drive controller, select the corresponding receive and transmit process data.

Projecting the axis

1. Click Axis 1.
2. Properties tab:
Establish the relationship between your circuit diagram and the axis to be projected in DriveControlSuite.
 - 2.1. Reference:
Define the reference code (equipment code) of the axis.
 - 2.2. Designation:
Give the axis a unique name.
 - 2.3. Version:
Version your project configuration.
 - 2.4. Description:
If necessary, save additional supporting information (e.g., the change history).
3. Application tab:
Select the desired controller-based or drive-based application.
4. Motor tab:
Select the type of motor you operate with this axis. If you are working with motors from third-party suppliers, enter the accompanying motor data later.
5. Confirm with OK.

14.1.2 Configuring safety technology

If the drive controller is part of a safety circuit, you must configure the safety technology in accordance with the commissioning steps outlined in the corresponding manual in the next step (siehe [Detailed information \[► 519\]](#)).

14.1.3 Creating other modules and drive controllers

We recommend sorting all drive controllers of your project in DriveControlSuite either functionally by groups and combining a group under a module, or organizing several drive controllers in corresponding modules based on their distribution to different control cabinets.

1. Select your P1 project in the project tree > Context menu Create new module.
⇒ Your M2 module is created in the project tree.
2. Select your M2 module in the project tree > Context menu Create new drive controller.
⇒ Your T2 drive controller is created in the project tree.
3. Mark your T2 drive controller in the project tree.
4. Change to the project menu and click Project configuration.
5. Project the drive controller and specify the newly created module.
6. Repeat the steps for all other drive controllers and modules of your project.

14.1.4 Projecting the module

Give your module a unique name, enter the reference code and, as an option, store additional information like the version and change history of the module.

1. Select the module in the project tree and click on **Project configuration** in the project menu.
 - ⇒ The configuration dialog for the module opens.
2. Establish the relationship between your circuit diagram and the module in DriveControlSuite.
 - 2.1. **Reference:**
Define the reference code (equipment code) of the module.
 - 2.2. **Designation:**
Give the module a unique name.
 - 2.3. **Version:**
Version the module.
 - 2.4. **Description:**
If necessary, save additional supporting information (e.g., the change history).
3. Confirm with **OK**.

14.1.5 Projecting the project

Give your project a unique name, enter the reference code and, as an option, store additional information like the version and change history of the project.

1. Select the project in the project tree and click on **Project configuration** in the project menu.
 - ⇒ The configuration dialog for the project opens.
2. Establish the relationship between your circuit diagram and the project in DriveControlSuite.
 - 2.1. **Reference:**
Define the reference code (equipment code) of the project.
 - 2.2. **Designation:**
Give the project a unique name.
 - 2.3. **Version:**
Version the project.
 - 2.4. **Description:**
If necessary, save additional supporting information (e.g., the change history).
3. Confirm with **OK**.

14.2 Mapping the mechanical axis model

To be able to put your real drive train with one or more drive controllers into operation, you must map your complete mechanical environment in DriveControlSuite.

14.2.1 Parameterizing the motor

You have projected a synchronous servo motor with EnDat 2.1/2.2 digital encoder and optional brake.

By projecting the corresponding motor, limiting values for currents and torques as well as associated temperature data are automatically transferred to the respective parameters of the individual wizards. All additional data on the brake and encoder is transferred at the same time.

Motor protection

The drive controller has an i²t model of the motor, a computational model for thermal monitoring of the motor. To activate it and set up the protective function, configure the following settings (deviating from the presets): U10 = 2: Warning and U11 = 1.00 s. This model can be used instead of or in addition to motor temperature monitoring.

14.2.2 Parameterizing the axis model

Parameterize the setup of your drive in this order:

- Define the axis model
- Scale the axis
- Parameterize the position and velocity window
- Limit the axis (optional)
 - Limit the position
 - Limit the velocity, acceleration and jerk
 - Limit the torque and force

14.2.2.1 Define the axis model

1. Select the relevant drive controller in the project tree and click on the desired projected axis in the Project menu > Wizard area.
2. Select the Axis model wizard.
3. I05 Type of axis:
Define whether the axis type is rotational or translational.
 - 3.1. If you would like to configure the units of measure and the number of decimal places individually for specifying and displaying positions, velocities, accelerations and jerk, select 0: User defined, rotational or 1: User defined, translational.
 - 3.2. If the units of measure and the number of decimal places for specifying and displaying positions, velocities, accelerations and jerk are to be fixed, select 2: Rotational or 3: Translational.
4. B26 Motor encoder:
Define the interface to which the motor encoder is connected.
5. I02 Position encoder (optional):
Define the interface to which the position encoder is connected.
6. I00 Position range:
Define whether the travel range of the axis is limited or endless (modulo).
7. If you select I00 = 1: Endless, parameterize a revolution length when you scale the axis.

Information

When you parameterize I05 Type of axis, you can either use selection 0: User defined, rotational or 1: User defined, translational to configure units of measure and the number of decimal places for the axis model individually or use selections 2: Rotational and 3: Translational to revert to preset values.

Selection 0: User defined, rotational and selection 1: User defined, translational let you configure the unit of measure (I09) and the decimal places (I06) individually. Velocity, acceleration and jerk are represented as the derivative of the unit of measure with respect to time.

Selection 2: Rotational sets the following units of measure for the axis model: position in $^{\circ}$, velocity in rpm, acceleration in rad/s^2 , jerk in rad/s^3 .

Selection 3: Translational sets the following units of measure for the axis model: position in mm, velocity in m/s, acceleration in m/s^2 , jerk in m/s^3 .

Information

If you do not parameterize it differently for I02 Position encoder, B26 Motor encoder is used for position control as standard.

14.2.2.2 Scale the axis

1. Select the relevant drive controller in the project tree and click on the desired projected axis in the Project menu > Wizard area.
2. Select the Axis model wizard > Axis: Scaling.
3. Scale the axis by configuring the overall gear ratio between the motor and output.
To simplify this scaling for you, you are provided with the scaling calculator Conversion of positions, velocities, accelerations, torque/force, which calculates the effects of changed motion variables on the entire system.
4. I01 Circular length:
If you have selected 1: Endless for I00 Position range, enter the revolution length.
5. I06 Decimal places position (optional):
If you have selected 0: User defined, rotational or 1: User defined, translational for I05 Type of axis, define the desired number of decimal places.
6. I09 Measure unit (optional):
If you have selected 0: User defined, rotational or 1: User defined, translational for I05 Type of axis, define the desired unit of measure.
7. Application-dependent parameter:
Use the polarity to specify the direction of interpretation between the axis movement and motor movement.

Information

A change to parameter I06 moves the decimal separator for all axis-specific position values! Ideally, define I06 before parameterizing other position values and then check them.

If the axis receives set value specifications from a controller or follows the master values of a master, the resolution of position values directly impacts the smooth operation of the axis. Therefore, you should define a sufficient number of decimal places appropriate for your application.

Information

Parameter I297 Maximum speed position encoder must be parameterized according to your application case. If I297 is set too low, the permitted maximum speed is exceeded even at normal operating speeds. On the other hand, if I297 is set too high, measuring errors of the encoder can be overlooked.

I297 depends on the following parameters: I05 Type of axis, I06 Decimal places position, I09 Measure unit as well as I07 Distance factor numerator position and I08 Distance factor denominator position or A585 Feed constant for CiA 402. If you have made changes to one of the parameters listed, select I297 accordingly as well.

14.2.2.3 Parameterize the position and velocity window

Enter position limits and velocity zones for set values. To do so, parameterize boundary values for reaching a position or velocity.

1. Select the **Axis model wizard > Window position, velocity**.
2. **C40 Velocity window:**
Parameterize a tolerance window for velocity tests.
3. **I22 Target window:**
Parameterize a tolerance window for position tests.
4. **I87 Actual position in window time:**
Parameterize how long a drive must stay in the specified position window before a corresponding status message is output.
5. **Application-dependent parameter:**
Parameterize a tolerance window for lag tests.

14.2.2.4 Limiting the axis

As an option, you can limit the maximum permitted motion variables of position, velocity, acceleration, jerk and torque/force according to your application.

| |
|--------------------|
| Information |
|--------------------|

To simplify the scaling and limiting of the axis, the **Axis model wizard > Axis: Scaling** provides you with the **Conversion of position, velocities, accelerations, torque/force** scaling calculator, which calculates the effects of changed motion variables on the entire system. You can use the scaling calculator to enter values for motion variables of the motor, gear unit output and axis in order to convert the values to all other locations in the axis model.

Limiting the position

To secure the travel range of the axis, you have the option to limit the permitted positions using a software or hardware limit switch.

1. Select the relevant drive controller in the project tree and click on the desired projected axis in the **Project menu > Wizard area**.
2. Select the **Axis model wizard > Limit: Position**.
3. **I101 Source positive /limit switch, I102 Source negative /limit switch:**
To limit the travel range of the axis via hardware limit switches, select the source of the digital signal that is used to evaluate a limit switch at the positive or negative end of the travel range.
 - 3.1. If a fieldbus is the source, select **2: Parameter**.
 - 3.2. If a digital input (direct or inverted) acts as the source, select the corresponding input.
4. **I50 Software stop positive, I51 Software stop negative:**
To limit the travel range of the axis via software limit switches, define the largest or smallest permitted position for software position limiting.

Limiting velocity, acceleration, jerk

As an option, you can limit the motion variables of velocity, acceleration and jerk and define the quick stop deceleration according to your application. The default values are designed for slow velocities without gear units.

1. Select the **Motor wizard**.
2. **B83 v-max motor**:
Determine the maximum permitted velocity of the motor.
3. Select the **Axis model wizard > Axis: Scaling**.
4. **Conversion of positions, velocities, accelerations, torque/force area**:
Use the scaling calculator to determine the maximum permitted velocity of the output using the maximum permitted velocity of the motor.
5. Select the **Axis model wizard > Limit: Velocity, acceleration, jerk**.
6. **I10 Maximal speed**:
Define the maximum permitted velocity for the output.
7. **I11 Maximal acceleration**:
Define the maximum permitted acceleration for the output.
8. **I16 Maximal jerk**:
Define the maximum permitted jerk for the output.
9. **I17 Quickstop deceleration**:
Define the desired quick stop deceleration for the output.

Limiting torque/force

As an option, you can limit the torque/force according to your application. The default values take into account the rated operation together with the overload reserves.

1. Select the **Axis model wizard > Limit: Torque/force**.
2. **C03 Maximum positive torque/force, C05 Maximum negative torque/force**:
Define the maximum permitted set torque/maximum permitted set force.
3. **C08 Maximum torque/force for quick stop**:
Define the maximum permitted set torque/maximum permitted set force in case of a quick stop and in case of drive-controlled emergency stop SS1, SS1 and SS2.

14.3 Transmitting and saving a configuration

In order to transmit and save the configuration to one or more drive controllers, you must connect your PC and the drive controllers over the network.

WARNING!

Injury to persons and material damage due to axis movement!

If there is an online connection between DriveControlSuite and the drive controller, changes to the configuration can lead to unexpected axis movements.

- Only change the configuration if you have visual contact with the axis.
- Make sure that no people or objects are within the travel range.
- For access via remote maintenance, there must be a communication link between you and a person on site with eye contact to the axis.

Information

During the search, all drive controllers within the broadcast domain are found via IPv4 limited broadcast.

Requirements for finding a drive controller in the network:

- Network supports IPv4 limited broadcast
- All drive controllers and the PC are in the same subnet (broadcast domain)

14.3.1 Transmitting the configuration

The steps for transmitting the configuration vary depending on the safety technology.

Drive controller without SE6 option (advanced safety technology)

- ✓ The drive controllers are switched on and can be found in the network.
- 1. In the project tree, select the module under which you have recorded your drive controller and click **Online connection** in the project menu.
 - ⇒ The **Add connection** dialog box opens. All drive controllers found via IPv4 limited broadcast are displayed.
- 2. **Direct connection** tab, **IP address** column:
Activate the IP addresses in question and confirm your selection with **OK**.
 - ⇒ The **Online functions** window opens. All drive controllers connected through the selected IP addresses are displayed.
- 3. Select the module and the drive controller to which you would like to transfer the configuration. Change the selection of transmission type from **Read** to **Send**.
- 4. Change the selection **Create new drive controller**:
Select the configuration that you would like to transfer to the drive controller.
- 5. Repeat steps 3 and 4 for all other drive controllers to which you would like to transfer your configuration.
- 6. **Online** tab:
Click **Establish online connections**.
 - ⇒ The configurations are transferred to the drive controllers.

Drive controller with SE6 option (advanced safety technology)

- ✓ The drive controllers are switched on and can be found in the network.
- 1. In the project tree, select the module under which you have recorded your drive controller and click **Online connection** in the project menu.
 - ⇒ The **Add connection** dialog box opens. All drive controllers found via IPv4 limited broadcast are displayed.
- 2. **Direct connection** tab, IP address column:
Activate the IP addresses in question and confirm your selection with **OK**.
 - ⇒ The **Online functions** window opens. All drive controllers connected through the selected IP addresses are displayed.
- 3. Select the module and the drive controller to which you would like to transfer the configuration. Change the selection of transmission type from **Read** to **Send**.
- 4. Change the selection **Create new drive controller**:
Select the configuration that you would like to transfer to the drive controller.
- 5. Repeat steps 3 and 4 for all other drive controllers to which you would like to transfer your configuration.
- 6. **Online** tab:
Click **Establish online connections**.
 - ⇒ The configurations are transferred to the drive controllers.
 - ⇒ The **PASmotion Safety Configurator** configuration tool opens.
- 1. In the project administration, navigate from **PASmotion Safety Configurator** to the safety module for the drive controller and double-click to open it.
 - ⇒ The wizard for device synchronization opens.
 - ⇒ The project configuration and device configuration are checked against each other.
- 2. If the configurations match, click **Done** after device synchronization has finished.
- 3. **Optional**: If the configurations do not match, click **Next** after device synchronization has finished.
 - 3.1. Confirm the serial number of the safety module and click **Next**.
 - 3.2. Enter the password for the configuration on the safety module and click **Next**.
 - 3.3. Click **Download**.
 - ⇒ The project configuration is transferred to the safety module.
 - 3.4. After the successful transfer, click **Done**.
- 4. **Home page, CRC safety configuration**:
Document the checksum of the safety functions in the machine documentation.
- 5. Repeat the steps for each additional safety module in your project.
- 6. Exit **PASmotion Safety Configurator**.
 - ⇒ Transfer of the configuration is completed.

Information

If you do not know the password for the configuration on the safety module and would like to send a new safety configuration, you can delete the safety configuration on the safety module in **DriveControlSuite** using parameter **S33**.

14.3.2 Saving the configuration

- ✓ You have successfully transferred the configuration.
- 1. Online functions window, Online tab, Actions for drive controller in online operation area:
Click Save values (A00).
 - ⇒ The Save values (A00) window opens.
- 2. Select on which drive controllers you want to save the configuration.
- 3. Click Start action.
 - ⇒ The configuration is stored on the drive controllers in non-volatile memory.
- 4. Close the Save values (A00) window.

Information

For the configuration to take effect on the drive controller, a restart is required: for example, after the configuration is saved on the drive controller for the first time or when changes are made to the firmware or process data mapping.

Restarting a drive controller

- ✓ You have stored the configuration on the drive controller in non-volatile memory.
- 1. Online functions window, Online tab:
Click Restart (A09).
 - ⇒ The Restart (A09) window opens.
- 2. Select which of the connected drive controllers you want to restart.
- 3. Click Start action.
- 4. Confirm the safety note with OK.
 - ⇒ The Restart (A09) window closes.
- ⇒ The fieldbus communication and connection between DriveControlSuite and drive controllers are interrupted.
- ⇒ The selected drive controllers restart.

14.4 Testing the configuration

After you have transferred the configuration to the drive controller, first check your projected axis model and the parameterized electrical and mechanical data for plausibility before continuing with the parameterization.

You can test the configuration quickly and easily via DriveControlSuite or, as an alternative, directly via the operating unit of the drive controller.

14.4.1 Testing the configuration via DriveControlSuite

Jog control panel provides various commands for jog mode which you can use to test the configuration of your projected axis model for plausibility.

Information

Make sure that the values of the control panel are compatible with your projected axis model in order to obtain useful test results that you can use to optimize your configuration for the respective axis.

The scaling calculator is available under the *Axis model wizard > Axis: Scaling* to recalculate the values for the control panel according to your projected axis model.

WARNING!

Injury to persons and material damage due to axis movement!

When you activate the control panel, DriveControlSuite gives you sole control of the motions of the axis. If you are using a controller, it no longer monitors the axis movements after the control panel is activated. The controller cannot intervene to prevent collisions. The controller takes over control again when the control panel is deactivated, which can cause unexpected axis movements.

- Do not switch to other windows when the control panel is active.
- Only use the control panel if you have visual contact with the axis.
- Make sure that no people or objects are within the travel range.
- For access via remote maintenance, there must be a communication link between you and a person on site with eye contact to the axis.

Testing the configuration using the jog control panel

- ✓ There is an online connection between DriveControlSuite and the drive controller.
 - ✓ You have successfully stored the configuration on the drive controller.
 - ✓ No safety function is active.
1. Select the relevant drive controller in the project tree and click on the desired projected axis in the Project menu > Wizard area.
 2. Select the Jog control panel wizard.
 3. Click Control panel on and then Enable.
 - ⇒ The axis is monitored via the active control panel.
 4. Check the default values of the control panel and adjust them to your projected axis model if necessary.
 5. To test the configuration of your projected axis for direction of motion, velocity, etc., move the axis gradually using the Jog+, Jog-, Jog step+ and Jog step- buttons.
 6. Use your test results to optimize your configuration as necessary.
 7. To deactivate the control panel, click on Control panel off.

Information

Jog+ and Jog- cause a continual manual movement in the positive or negative direction. Jog step+ and Jog step- move the axis relative to the current actual position by the increment specified in I14.

Jog+ and Jog- have a higher priority than Jog step+ and Jog step-.

14.4.2 Testing the configuration via the operating unit

You have connected the drive controller along with its accessories as described and would like to test the components in the group for correct wiring and functionality. The standard parameterization enables an initial function test if you are operating the drive controller together with a STOBER synchronous servo motor and an EnDat encoder. In this case, the electronic nameplate of the motor is read out when the device starts and the accompanying data is transferred into the drive controller.

14.4.2.1 Schematic test sequence

Schematic test sequence

The following illustration shows the schematic sequence of the wiring and function test.

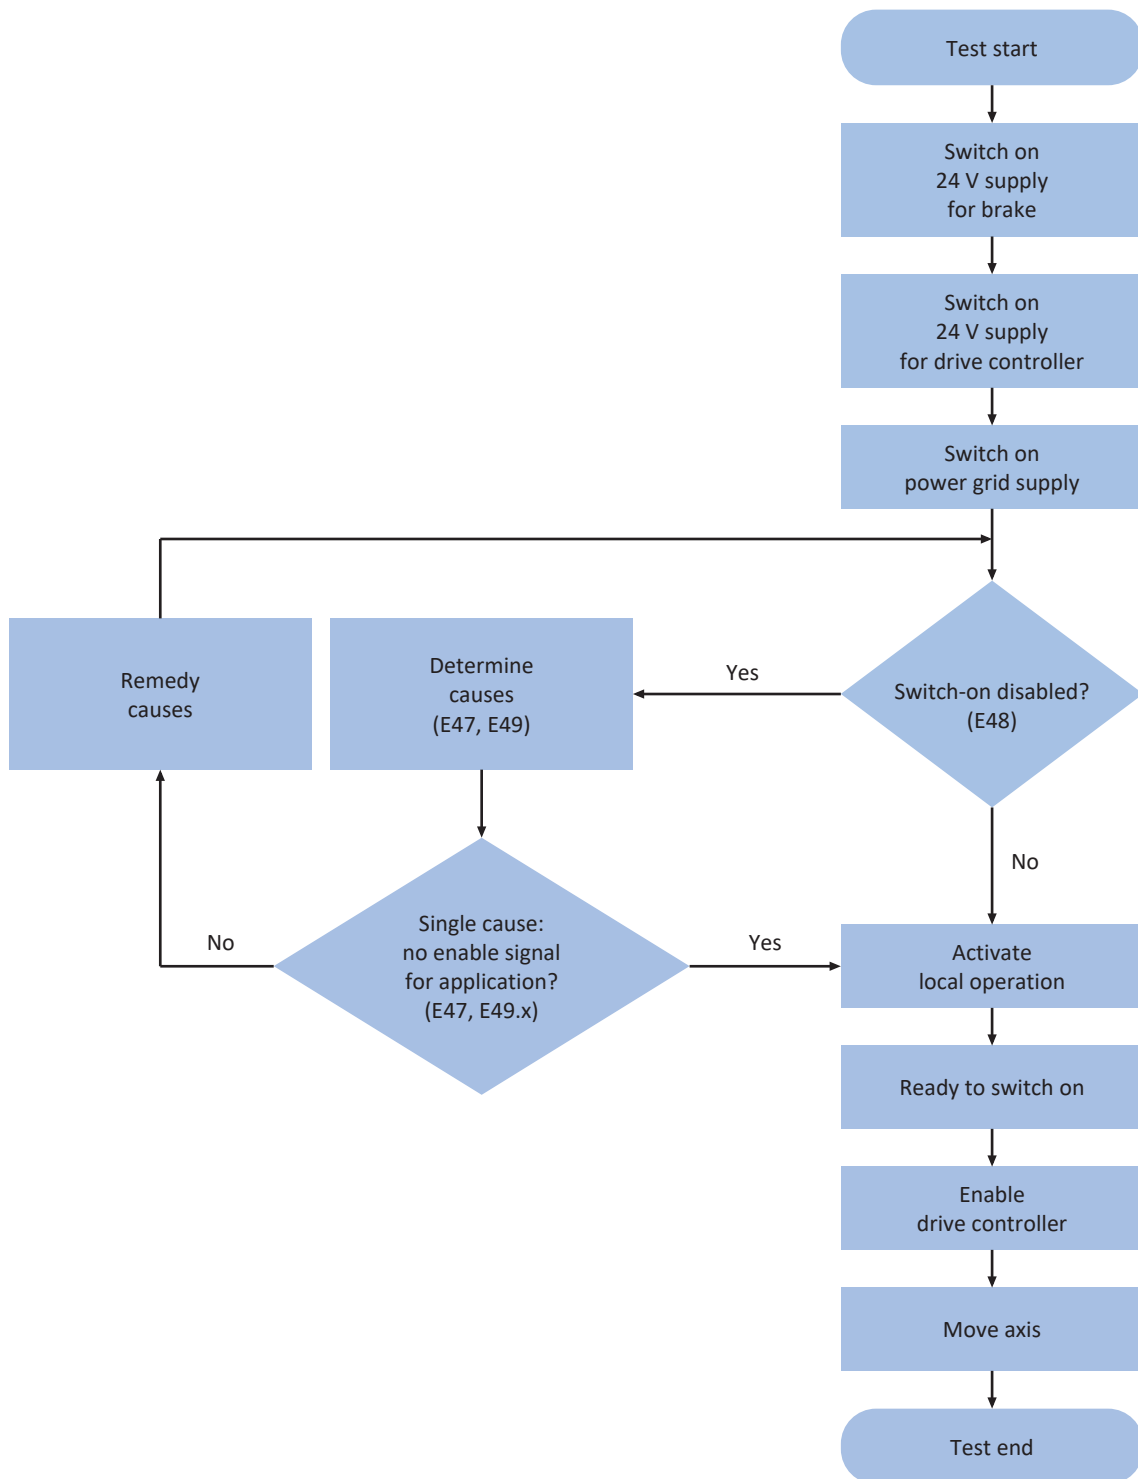


Fig. 70: Schematic test sequence for wiring and function test

14.4.2.2 Practical test sequence

DANGER!

Risk of fatal injury due to moving parts!

Motor shaft rotates during the wiring and function test described below!

- Clear the danger area before the test.
- Do not connect any downstream mechanical parts to the motor or gear unit until the test has finished.
- Make sure that components attached to the motor, such as feather keys or coupling elements, are sufficiently secured against centrifugal forces.

Perform the individual steps in the specified order.

Preparing for the test

1. Switch on the 24 V_{DC} supply of the brake.
 2. Switch on the 24 V_{DC} supply of the drive controller.
 3. Switch on the power supply.
 4. Optional: If you use the ST6 safety module, deactivate the STO safety function, such as by connecting STO_a and STO_b to 24 V_{DC} and GND to the reference potential (terminal X12).
 5. Optional: If you use the SE6 safety module, deactivate the STO safety function by connecting terminals X14 and X15 in accordance with your safety configuration.
- ⇒ The drive controller either switches to the "ready to switch on" or "locked" state.

Performing the test

✓ Drive controller is ready to switch on:

1. Activate local operation using the [Hand] button.
 2. Enable the drive controller using the [I/O] button.
 3. Rotate the motor axis using the left and right arrow buttons at the velocity and acceleration configured in parameter I12.
- ⇒ You have correctly wired all components; the function test completed successfully.

✓ Drive controller is locked (display = 1: Switch-on disable, parameter E48):

1. Determine the causes for the switch-on lockout and remedy them:
Parameter E49 outputs possible causes in code and parameter E47 shows them in plain text.
2. Then, carry out the test (see the section "Drive controller is ready to switch on").

Information

If the lack of enable signal for the CiA 402 application is the sole cause for the switch-on lockout, switch to local operation directly and carry out the test (see the section "Drive controller is ready to switch on").

Finishing the test

1. Lock the drive controller using the [I/O] button.
2. Switch to normal operation using the [Hand] button.

14.5 Preparing for a case of service

For drive controllers with the SE6 safety module, affix a sticker with the CRC checksum (S09[2]) to the front of the device to avoid confusion during installation or replacement. In addition, document the CRC checksum in your machine documentation.

14.6 Testing the safety configuration

Check the interfaces, limit values and reaction times of the safety functions. Document the test results using the scope functions of DriveControlSuite, for example. Detailed information on the safety functions can be found in the manual for the safety module.

Information

With extended safety technology using the SE6 safety module, changes to the safety configuration result in a change to the CRC checksum. After completing the tests, if necessary, update the CRC checksum of the safety functions that was documented during commissioning.

14.7 Safety technology for series machines

In the case of series machines, check the CRC checksum of the safety functions (S09[2]) instead of checking the individual safety functions. A prerequisite for the CRC checksum is extended safety technology through the SX6 safety module.

Check whether the CRC checksum of the safety functions stored in the machine documentation matches the checksum in the drive controller:

- Manual comparison: The checksum is shown on the drive controller display or in DriveControlSuite.
- Automated comparison: Monitor the checksum of the safety functions in the control system. If the checksum does not meet expectations, do not operate the machine.

15 Communication

The following options are available for communicating with the SD6 drive controller:

- Communication between drive controller and controller
 - Fieldbus
 - Terminals
- Communication between drive controllers for synchronous operation
 - IGB motion bus
- Communication between drive controller and PC for commissioning, optimization and diagnostics
 - Direct connection
 - Fieldbus
 - Remote maintenance

The DriveControlSuite project configuration and commissioning software installed on the PC is able to handle multiple direct connections and remote maintenance sessions simultaneously.

Information

Note that an IGB network can never be addressed via remote maintenance and direct connection at the same time.

15.1 Direct connection

A direct connection is a network connection in which all nodes are in the same network.

In its simplest form, a direct connection is a point-to-point cable connection between the network interface of the PC where DriveControlSuite is installed and the network interface of the drive controller. Switches or routers can also be used in place of a simple network cable.

The IP address required for direct connection is either assigned automatically by DriveControlSuite or using DHCP, or it is specified manually.

Requirements

| Type of direct connection | Requirements |
|---------------------------|--|
| Automatic | The A166 parameter in DriveControlSuite must be set to 2: DHCP + DS6 for the direct connection to be established automatically. In addition, the network adapter used on the PC side should be set to "Obtain IP address automatically". |
| Manual | If the IP address of the drive controller was specified manually, the socket of the gateway device and the network connection of the PC must have IP addresses from the same subnet. |

Tab. 298: Requirements for a direct connection

Observe the requirements for communication (see [Communication requirements \[▶ 482\]](#)) and the information on establishing a connection (see [Establishing a connection \[▶ 484\]](#)).

Virtual machines

If you want to connect STOBER drive controllers to DriveControlSuite from a virtual machine, pay attention to the configuration information (see [Configuring virtual machines \[▶ 491\]](#)).

15.2 Remote maintenance

By remote maintenance, we are referring to indirectly connecting a PC to a drive controller over a local network, intranet or the Internet for the purpose of maintenance or support. Remote maintenance allows you to run all of the functions that are possible over a direct connection. It is also possible to transfer and run files or firmware updates. You can follow along on the screen with all of the actions taken by our service employee.

STOBER provides a separate teleserver for remote maintenance.

STOBER remote maintenance

STOBER remote maintenance is an indirect communication connection between the drive controller and PC using a teleserver operated by STOBER and secured over the Internet.

15.3 IGB motion bus

For more detailed information on communication over IGB motion bus, refer to the Drive Based Synchronous application manual (see [Detailed information \[▶ 519\]](#)).

15.4 Fieldbus

For detailed information about the fieldbus connection, refer to the corresponding manual (see [Detailed information \[▶ 519\]](#)).

16 Optimizing the control cascade

The following chapters describe the structure of the control cascade first as a basis, as well as the general procedure for optimizing it. Then, you learn how you can check your control cascade based on a few parameters for nearly 80% of all applications and, if necessary, optimize the pre-set values for your specific application case. Special cases are addressed at the end of the chapter.

16.1 Structure of the control cascade

The control cascade triggers the appropriate electrical actuation of the motor for a requested movement. The structure of the control cascade depends on the control mode set in B20.

The following graphic shows the control cascade using a motor with encoder in vector-controlled operation as an example. The representation of the control cascade follows the signal course: Position controller > Velocity controller > Current controller.

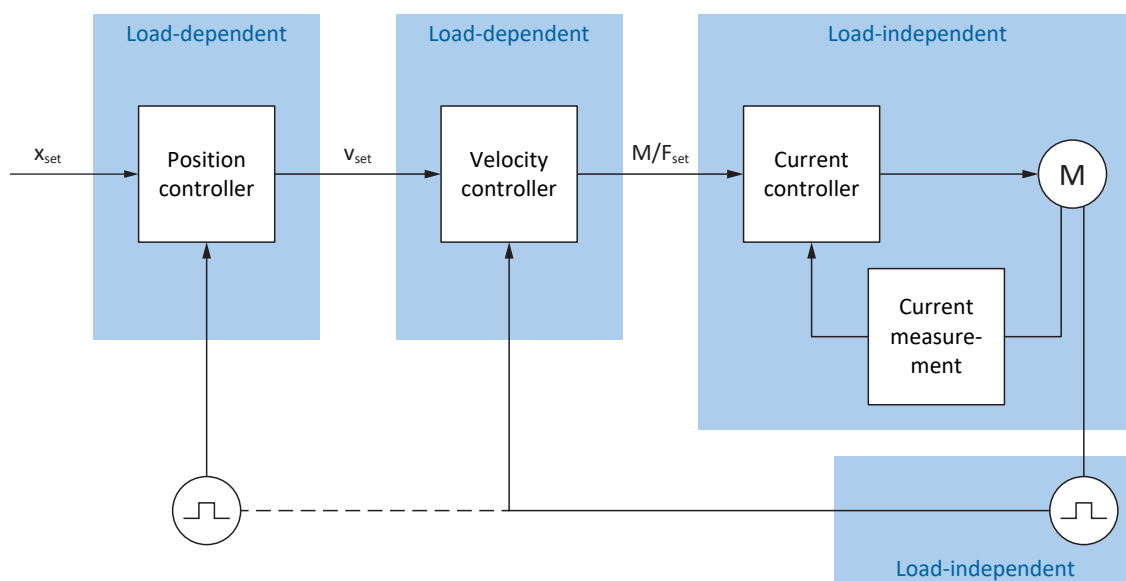


Fig. 71: Structure of the control cascade

Position controller

The position controller is a P controller (proportional controller) with feedforward control. The settings for the position controller are load-dependent.

The following applications use position control:

- Drive Based applications for the following commands:
 - MC_MoveAbsolute
 - MC_MoveRelative
 - MC_MoveAdditive
 - MC_MoveVelocity
- CiA 402 application in the following operating modes:
 - Cyclic synchronous position mode
 - Profile position mode
- Application-independent with position control in jog mode

Velocity controller

The velocity controller is a PI controller (proportional-integral controller). The settings for the velocity controller are load-dependent. Velocity control is always required for vector control.

Current controller

The current controller is a PID controller (proportional-integral-differential controller). The settings for the current controller are load-independent. The current controller is always required for vector control.

16.2 General procedure

Before making changes to your control cascade, observe the following information on the general procedure for optimization.

Defining the optimization goal

First, define the goal that you want to reach through optimization:

- High dynamics
- High energy efficiency
- Positioning accuracy
- Smooth operation
- Minimum control difference
- High velocity

Some goals can only be combined under certain conditions or are mutually exclusive.

Hardware components as possible limits of optimization

An optimal drive train always consists of a coordinated system of all hardware components (gear unit, motor, encoder, drive controller and cable). Consequently, optimization depends not only on your parameter settings, but also on the hardware components used.

Drive controller presets

If you use components from STOBER, all data is transmitted to the corresponding parameters when reading out the electronic nameplate or upon selection of the motor from the motor database – eliminating the need for complex parameterization of the motor, encoder and brake. These default values are carefully selected and checked, and generally deliver good results. Only change the default values when necessary, taking the following points into consideration:

1. First, record the current behavior of your drive train with a scope image.
2. Carry out the optimization of your control cascade in the opposite order of the signal path: Current controller > velocity controller > position controller, i.e. from the motor back to the set value specification. However, do not make adjustments to the current controller if you are using components from STOBER.
3. If adjustments are necessary, only ever change one setting and then check every change with a scope image.

16.3 Example project

The optimization described in the following chapters is based on the following general conditions and settings.

Specified goal

High dynamics with the highest possible velocity, but without the system overshooting.

System components

- 6th generation drive controller
- Synchronous servo motor with absolute encoder and electronic nameplate
- DriveControlSuite commissioning software
- Load supplied to the motor

Application and device control

- Drive Based application
- Drive Based device control

16.3.1 Scope settings

For the scope image at the beginning and after each adjustment, we recommend the settings described below to be able to compare the different results with each other.

General settings

- Sampling time: 250 μ s
- Pre-trigger: 5%

Channels

Using the `Parameter` selection and the associated picklists, define the relevant parameters for the scope image.

Trigger condition

- Simple trigger
- Source: Parameter E15 v-motor-encoder
- Absolute value: Yes
- Condition: Greater
- Edge: Yes
- Comparison value: 5.0 rpm

16.3.2 Jog settings

During optimization, test each change using the Jog control panel with the following settings:

- I26 Jog control mode:
 - Optimization of the velocity controller: Select 0: Velocity control to receive pure velocity control without a higher-level position controller with the Jog+ and Jog– bit.
 - Optimization of the position controller: Select 1: Position control with the Jog step+ und Jog step– bit.
- I14 Jog step:
Define the increment.
- I12 Jog velocity:
Define the jog velocity.
- I13 Jog acceleration:
For the jog acceleration, select a value that is higher than the velocity by a factor of 10.
- I45 Jog deceleration:
For the jog deceleration, select a value that is higher than the velocity by a factor of 10.
- I18 Jog jerk:
For the jog jerk, select a value that is higher than the acceleration by a factor of 10.

16.4 Schematic sequence

The following graphic shows the schematic sequence for optimizing the control cascade. The specific steps that are required depend on the control mode. The information on optimization assumes the following control modes:

- B20 = 64: SSM - vector control for synchronous servo motors
- B20 = 2: ASM - vector control for asynchronous motors

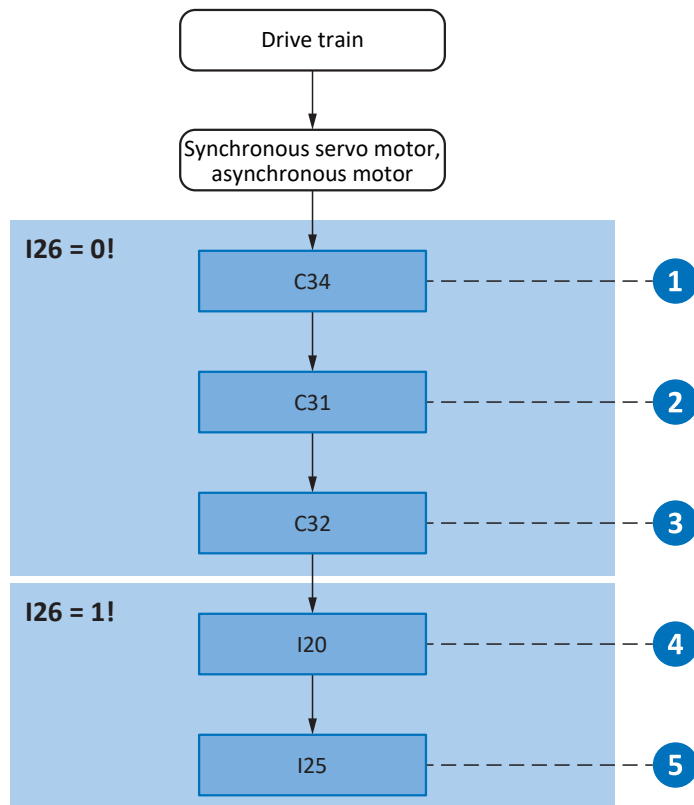


Fig. 72: Schematic sequence of optimization based on relevant parameters

- 1 Velocity controller – Defining filters for the actual velocity
- 2 Velocity controller – Defining the proportional coefficient
- 3 Velocity controller – Defining the integral coefficient
- 4 Position controller – Defining the proportional coefficient
- 5 Position controller – Defining the feedforward control of the velocity controller

16.5 Current controller – Notes

The current controller settings depend exclusively on the motor type, not on the load or application.

Do not make any changes to the current controller if you are using components from STOBER!

The data of a STOBER motor is part of the DriveControlSuite motor database as well as the electronic nameplate. This data is transferred to the respective parameters during project configuration or when reading out the nameplate. All additional data on the brake and encoder is transferred at the same time. These settings were calibrated in the STOBER test bay and no longer need to be adjusted.

16.6 1: Velocity controller – Actual velocity filters

The following graphic shows the influence of the lowpass filter time constant on the velocity controller.

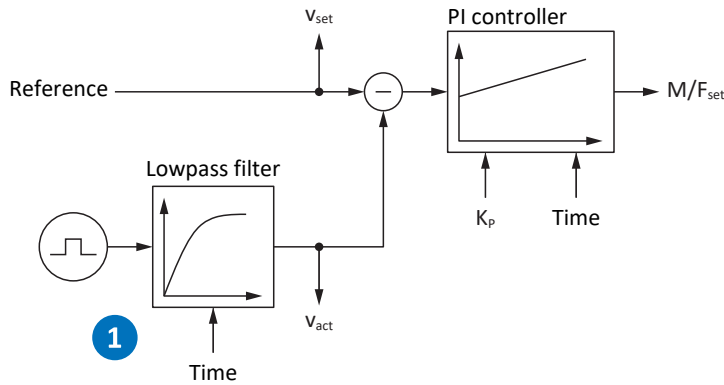


Fig. 73: Velocity controller – Filters for the actual velocity

The lowpass filter time constant for the actual velocity of the motor encoder is defined in C34.

Effects

C34 affects the smooth operation of the motor and the dynamics that can be achieved with the drive; as C34 increases, smooth operation rises and the dynamics drop.

Furthermore, C34 also has a direct influence on the maximum possible coefficient, since a large filter time also requires a large downtime.

Procedure

Select a value for C34 that is large enough to minimize the measurement and quantization noise, but is as small as possible to avoid unnecessary downtime, since this makes the system unstable and reduces dynamics.

Guide values for C34 can be found in the following table.

| Encoder model | Encoder interface | Guide value C34 [ms] |
|---------------|-------------------|----------------------|
| EBI 135 | EnDat 2.2 digital | 0.4 – 0.6 |
| EBI 1135 | EnDat 2.2 digital | 0.4 – 0.6 |
| ECI 119 | EnDat 2.2 digital | 0.4 – 0.6 |
| ECI 1118-G1 | EnDat 2.1 digital | 1.4 – 1.8 |
| ECI 1118-G2 | EnDat 2.2 digital | 0.4 – 0.6 |
| ECI 1119 | EnDat 2.2 digital | 0.4 – 0.6 |
| ECI 1319 | EnDat 2.1 digital | 1.2 – 1.8 |
| ECN 1113 | EnDat 2.1 digital | 0.8 – 1.2 |
| ECN 1123 | EnDat 2.2 digital | 0.2 – 0.4 |
| ECN 1313 | EnDat 2.1 digital | 0.8 – 1.2 |
| ECN 1313 | EnDat 2.1 sin/cos | 0.2 – 0.8 |
| ECN 1325 | EnDat 2.2 digital | 0.0 – 0.2 |
| EDM 35 | HIPERFACE DSL | 0.4 – 0.6 |
| EDS 35 | HIPERFACE DSL | 0.4 – 0.6 |
| EKM 36 | HIPERFACE DSL | 0.4 – 0.6 |
| EKS 36 | HIPERFACE DSL | 0.4 – 0.6 |

| Encoder model | Encoder interface | Guide value C34 [ms] |
|---|----------------------------|----------------------|
| EQI 1130 | EnDat 2.1 digital | 1.4 – 1.8 |
| EQI 1131 | EnDat 2.2 digital, EnDat 3 | 0.4 – 0.6 |
| EQI 1329 | EnDat 2.1 digital | 1.2 – 1.8 |
| EQI 1331 | EnDat 2.1 digital | 1.2 – 1.8 |
| EQN 425 | EnDat 2.1 | 0.8 – 1.2 |
| EQN 425 | SSI | 0.8 – 1.2 |
| EQN 1125 | EnDat 2.1 digital | 0.8 – 1.2 |
| EQN 1125 | EnDat 2.1 sin/cos | 0.4 – 0.8 |
| EQN 1135 | EnDat 2.2 digital | 0.2 – 0.4 |
| EQN 1325 | EnDat 2.1 digital | 0.8 – 1.2 |
| EQN 1325 | EnDat 2.1 sin/cos | 0.2 – 0.8 |
| EQN 1337 | EnDat 2.2 digital | 0.0 – 0.2 |
| Incremental; 1024 increments/revolution | HTL/TTL | 2.0 |
| Incremental; 2048 increments/revolution | HTL/TTL | 1.4 |
| Incremental; 4096 increments/revolution | HTL/TTL | 0.8 |
| Resolver; 2 poles | Analog | 1.4 – 2.0 |
| Resolver; 4 poles | Analog | 1.2 – 1.8 |
| Resolver; 6 poles | Analog | 1.0 – 1.6 |
| Resolver; 8 poles | Analog | 0.8 – 1.4 |

Tab. 299: Guide values for C34

Scope image

Requirements:

- I26 = 0: Velocity control
- C34 = Guide value or value taken from firmware

Parameter for the scope image:

- E06 V-reference motor
- E15 v-motor-encoder

16.7 2: Velocity controller – Proportional coefficient

The following graphic shows the influence of the proportional coefficient on the velocity controller.

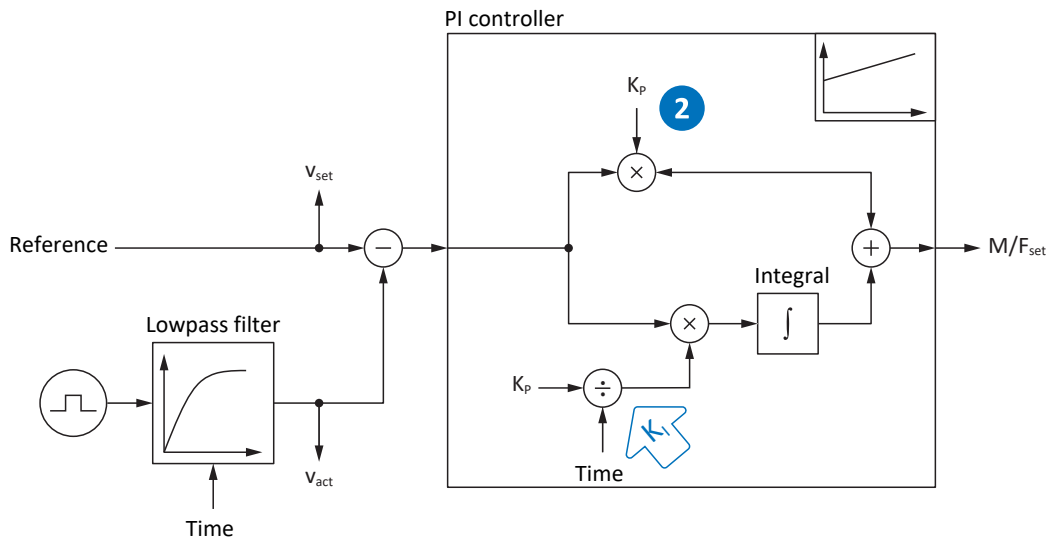


Fig. 74: Velocity controller – Proportional coefficient

The proportional coefficient K_p of the velocity controller can be defined in C31.

Effects

An adjustment of the P-share always has an effect on the I-share as well. The reason for this is the following dependency:

The integral coefficient K_i of the velocity controller results from the proportional coefficient K_p and reset time T_i ($K_i = K_p \div T_i = C31 \times C35 \div C32$).

Procedure

1. Start with the default value for C31.
2. First, enter the value 0 ms for the reset time in C32 to deactivate the I-share initially.
3. Increase the value of C31 up to the stability limit.
4. Define the value of C31 approximately 10% below the stability limit.

Scope image

Requirements:

- I26 = 0: Velocity control
- C34 = Guide value or value taken from firmware
- C32 = 0 ms
- C31 = e.g. 10, 20, 50, 150 and 200%

Parameter for the scope image:

- E06 V-reference motor
- E15 v-motor-encoder

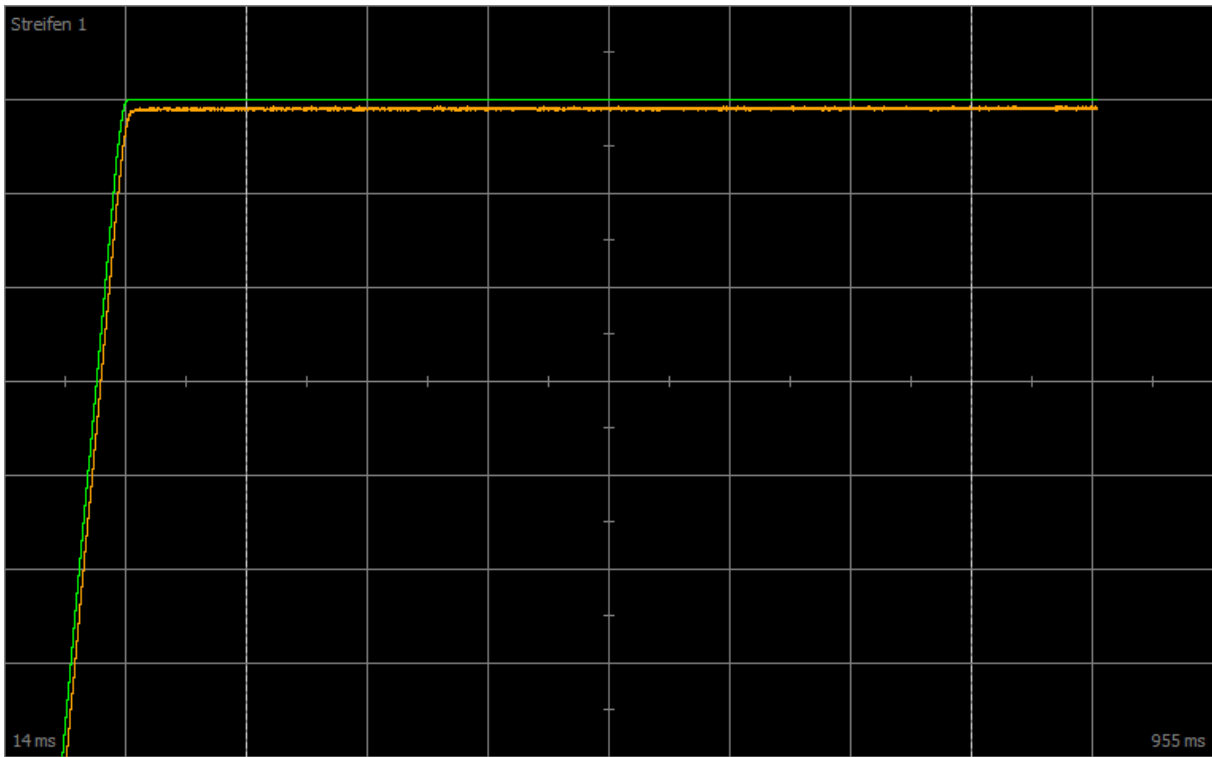


Fig. 75: Scope – Proportional coefficient of the velocity controller (C31), default value

Green Set value
Brown Actual value with default value

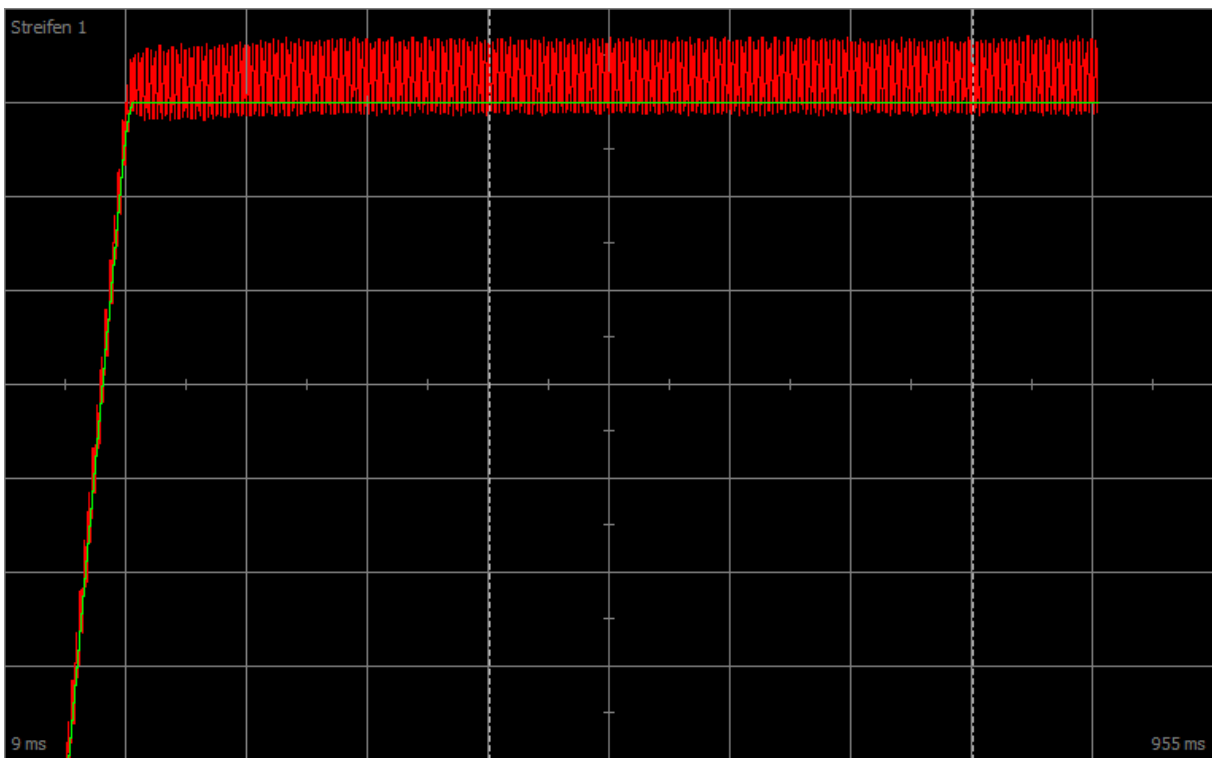


Fig. 76: Scope – Proportional coefficient of the velocity controller (C31), continuous oscillations

Green Set value
Red Actual value that exhibits continuous oscillation upon reaching the stability limit

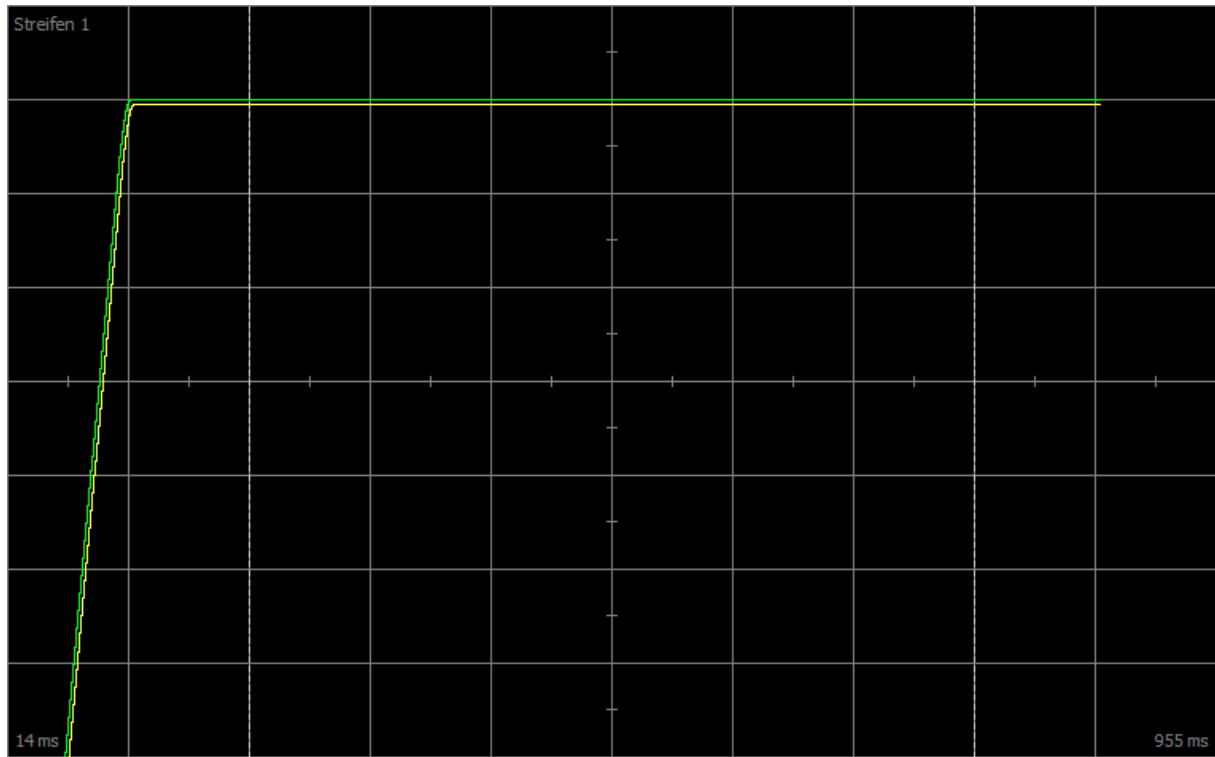


Fig. 77: Scope – Proportional coefficient of the velocity controller (C31), optimized value

Green Set value
Yellow Actual value with optimized coefficient

The zoom factor was increased for the following scope image to show overshooting based on additional values, which devolves into continuous oscillations upon reaching the stability limit.

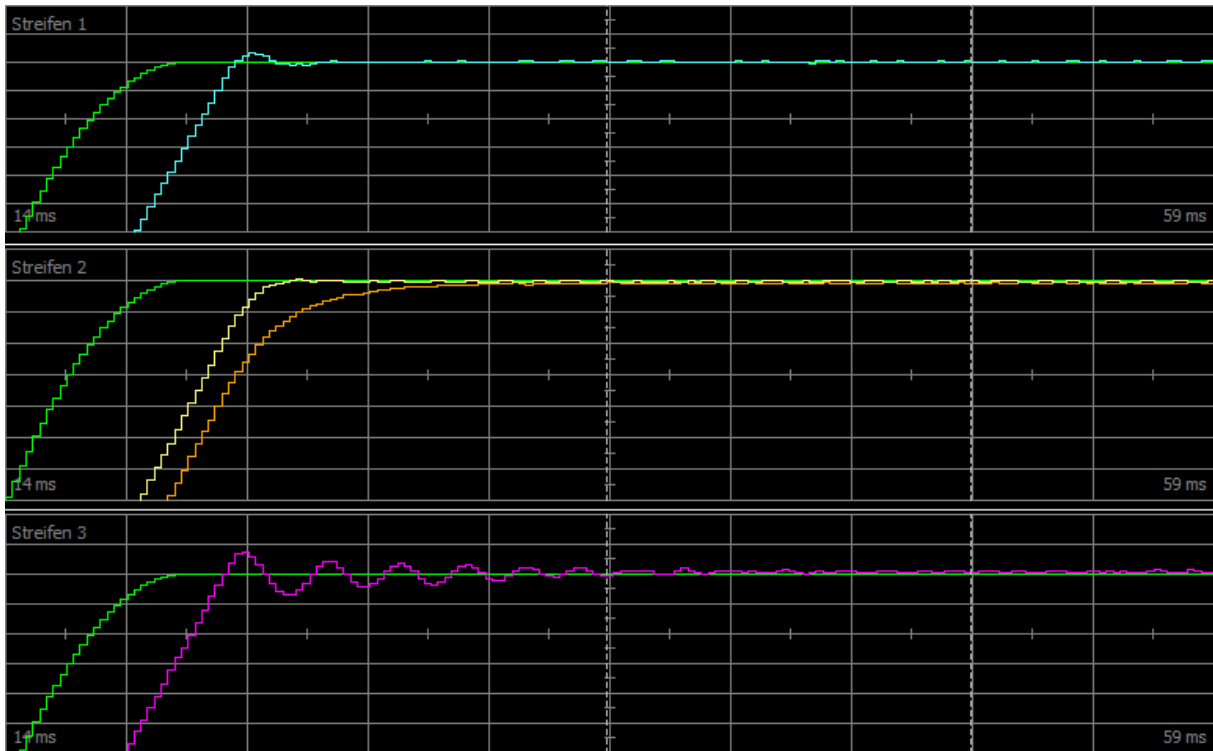


Fig. 78: Scope – Proportional coefficient of the velocity controller (C31), overshooting

- Green Set value
- Turquoise Actual value that shows brief overshooting
- Yellow Actual value with optimized coefficient
- Brown Actual value with default value
- Pink Actual value that shows long overshooting with phase-out

16.8 3: Velocity controller – Integral coefficient

The following graphic shows the influence of the integral coefficient on the velocity controller.

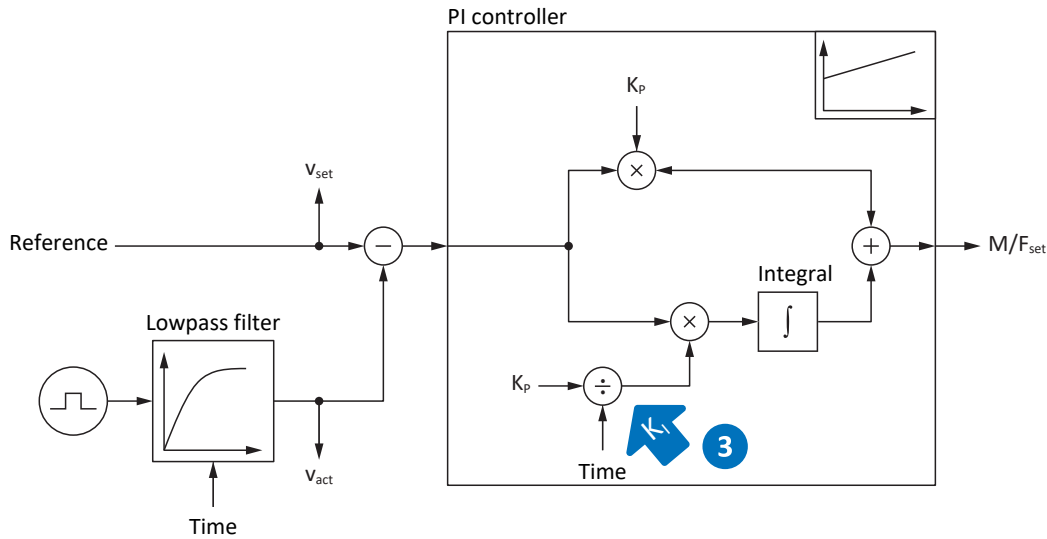


Fig. 79: Velocity controller – Integral coefficient

The integral coefficient K_i of the velocity controller results from the proportional coefficient K_p and reset time T_i ($K_i = K_p \div T_i = C31 \times C35 \div C32$).

Effects

Since the value of C31 was already optimized in the previous step, the integral coefficient is optimized in this step by adjusting the reset time in C32.

Procedure

1. Start with the default value for C32.
2. Reduce the value of C32 in order to recover more quickly. In this process, note that if $C32 \leq 1$ ms, the I-share is deactivated.
3. Increase the value of C32 up to the stability limit.
4. Define the value of C32 approximately 10% above the stability limit.

Scope image

Requirements:

- I26 = 0: Velocity control
- C34 = Guide value or value taken from firmware
- C31 = Already optimized value
- C32 = e.g. 0, 5, 10 and 50 ms

Parameter for the scope image:

- E06 V-reference motor
- E15 v-motor-encoder

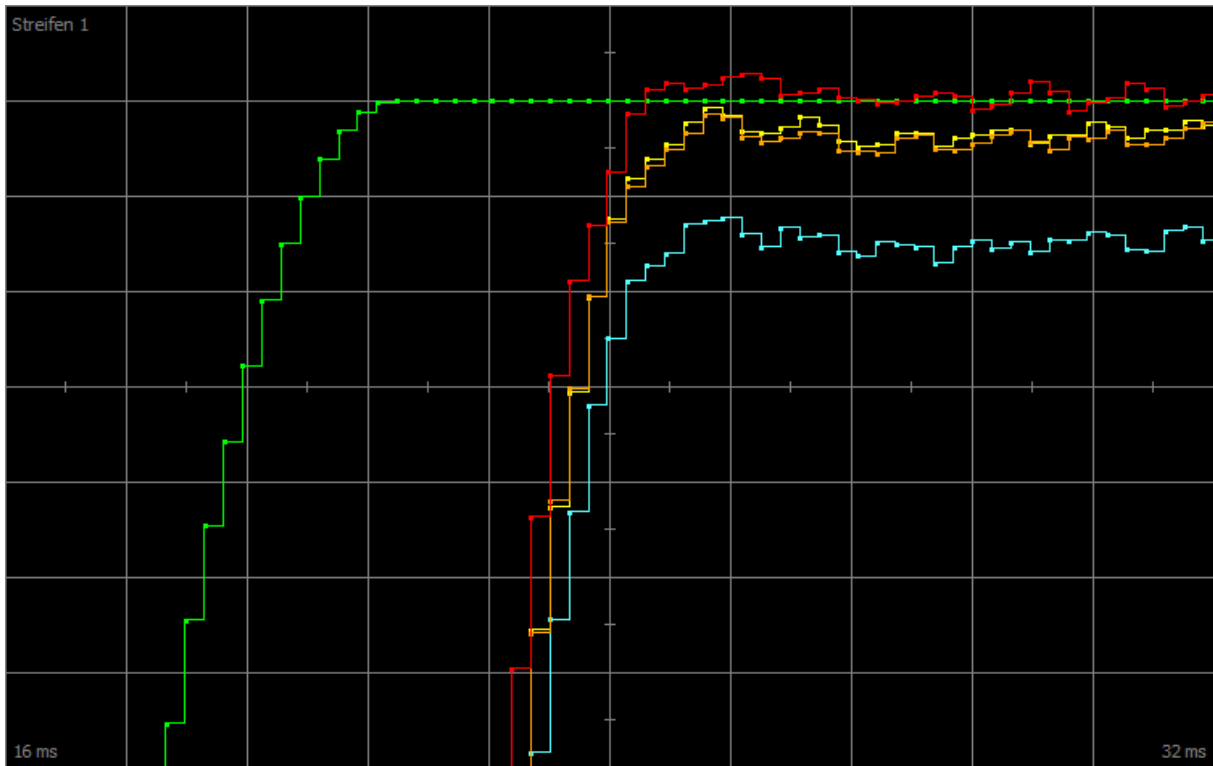


Fig. 80: Scope – Integral coefficient of the velocity controller (C32)

| | |
|-----------|--|
| Green | Set value |
| Red | Actual value that exhibits overshooting |
| Yellow | Actual value with optimized coefficient |
| Brown | Actual value with default value |
| Turquoise | Actual value with deactivated coefficient (≤ 1) |

16.9 Velocity controller – Summary

In summary, the following conclusions can be drawn for the optimization of the velocity controller:

- Simple encoders must be filtered more heavily.
- The maximum possible coefficient is lower with heavier filtering.
- The default coefficient is sufficient in simpler applications.
- You only require a higher coefficient in case of higher dynamics.
- Without the integral coefficient, you do not maintain any stationary accuracy, since the set velocity is not reached.

16.10 4: Position controller – Proportional coefficient

The following graphic shows the influence of the proportional coefficient on the position controller.

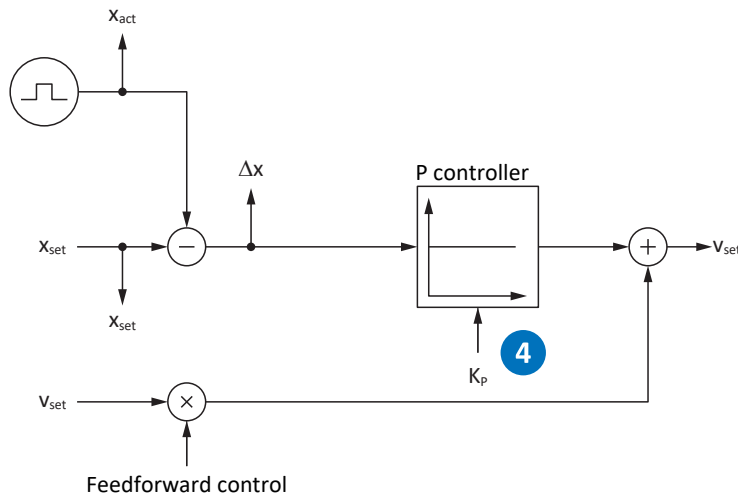


Fig. 81: Position controller – Proportional coefficient

The proportional coefficient K_p of the position controller can be defined in I20.

Effects

A higher coefficient produces a lower following error, but the system becomes more sensitive.

Procedure

1. Start with the default value for I20.
2. Increase the value of I20 up to the stability limit.
3. Define the value of I20 approximately 10% below the stability limit.

Scope image

Prerequisites:

- I26 = 1: Position control
- C34 = Guide value or value taken from firmware
- C31 = Already optimized value
- C32 = Already optimized value
- I20 = e.g. 10, 20, and 50

Parameter for the scope image:

- I96 Reference position
- I80 Current position
- I84 Following error
- E06 V-reference motor
- E15 v-motor-encoder

16.11 5: Position controller – Velocity controller feedforward control

The following graphic shows the influence of the feedforward control on the position controller.

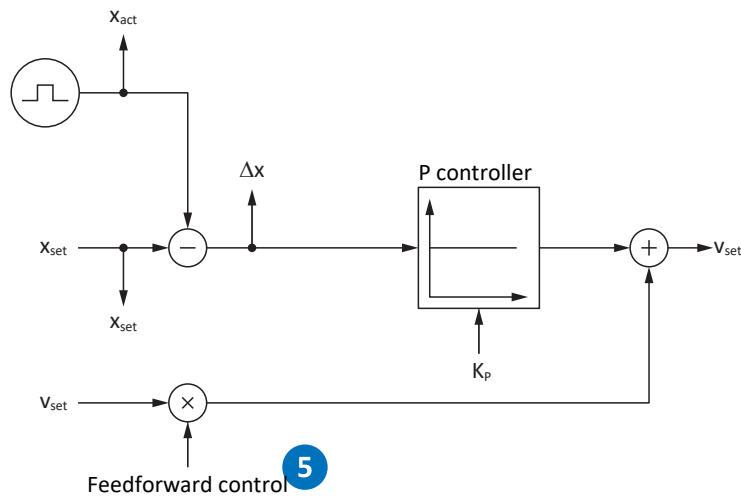


Fig. 82: Position controller – Feedforward control of the velocity controller

In case of external controller-generated or internal drive-generated feedforward control, the set velocity is also calculated in addition to the set position. In I25, you can define how much of that is directly communicated to the velocity controller.

Effects

Feedforward control reduces the load of the position controller and reduces the following error; however, stronger feedforward control makes the system more sensitive.

Procedure

1. Start with the default value of 95% for I25.
2. Reduce the value of I25 if the system is oscillating.

Scope image

Requirements:

- I26 = 1: Position control
- C34 = Guide value or value taken from firmware
- C31 = Already optimized value
- C32 = Already optimized value
- I20 = Already optimized value
- I25 = e.g. 50 and 95%

Parameter for the scope image:

- I96 Reference position
- I80 Current position
- I84 Following error
- E06 V-reference motor
- E15 v-motor-encoder

16.12 Position controller – Summary

In summary, the following conclusions can be drawn for the optimization of the position controller:

- If the velocity controller is optimized, only small adjustments are required for the position controller.

16.13 Special cases

In the cases described below, additional parameters are relevant for optimization.

16.13.1 Current controller – Motor reaches saturation

Synchronous servo motors show a saturation effect at high currents.

Effects

Upon reaching the saturation limits, a higher motor current no longer generates higher field strength and it begins to fluctuate if the current continues to increase.

Procedure

1. Carry out the action B41 Calibrate motor.
 - ⇒ The electrical data of the motor is calibrated and the coefficients of the saturation characteristic are defined (B60).
2. Activate current control tracking in B59.
 - ⇒ The controller coefficients are tracked according to the saturation characteristic of the motor.

Scope image

Parameter for the scope image:

- E166 Iq-ref
- E93 Iq

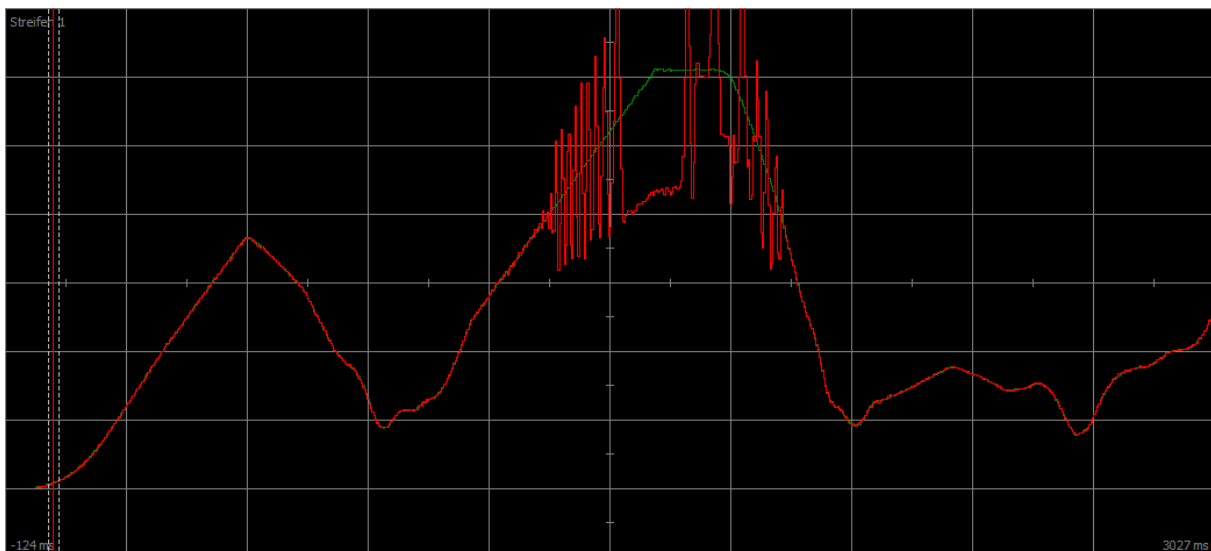


Fig. 83: Scope – Motor reaches saturation without tracking (B59)

| | |
|-------|----------------|
| Green | Set current |
| Red | Actual current |

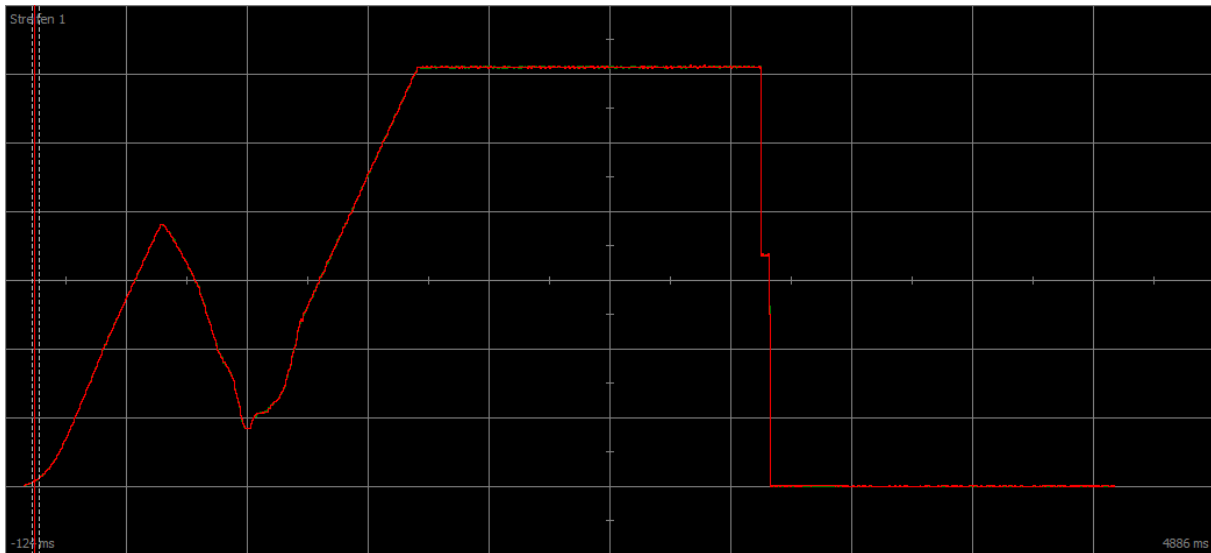


Fig. 84: Scope – Motor reaches saturation with tracking (B59)

Green Set current
 Red Actual current

16.13.2 Velocity controller – High set torque

C36 Reference torque/force low pass:

If the set torque becomes very high, such as in case of maximum utilization of the drive controller, the set torque can be filtered using this parameter. The filter prevents the overshooting of the torque and thus the occurrence of overcurrents. The effect of C36 is defined using C37.

16.13.3 Position controller – Friction or play

I23 Position controller deadband:

To prevent control oscillations due to friction or play in the mechanics, the position control can be deactivated in a narrow range using this parameter.

16.13.4 Position controller – Poor resolution

C33 Lowpass reference speed:

Using this parameter, the set velocity can be smoothed if the calculation of the set or actual position is too rough due to one of the following conditions:

- In case of controller-based applications with poor or low quantization of the set value
- In case of drive-based applications with poor resolution of the master encoder

17 Brake

The SD6 drive controller offers an option for both functional and safe brake management.

In combination with the ST6 option, the drive controller provides a functional brake test for the brake.

With the SE6 option, the drive controller offers safe brake management. Safe brake management fulfills the recommendations for gravity-loaded axes of DGUV Division Information Sheet 005/2021. It also fulfills the requirements for securing gravity-loaded axes from EN ISO 16090-1 from 2018.

The following chapters describe the basic brake settings using the DriveControlSuite commissioning software and functional, non-safe brake management with one brake.

For detailed information on safe brake management, refer to the manual for the SE6 safety module (see [Detailed information \[▶ 519\]](#)).

| Safety module | Application | Terminal(s) |
|---------------|--|-------------|
| ST6 | Functional, non-safe brake management with one brake | X5 |
| SE6 | Functional, non-safe brake management with one brake | X5 |
| SE6 | Safe brake management with one brake | X8 |
| SE6 | Safe brake management with two brakes | X5 and X8 |

Tab. 300: Application cases for brake management

Gravity-loaded axis with brake

| |
|--------------------|
| Information |
|--------------------|

If you use a gravity-loaded axis with a brake, always switch off the drive using a controlled stop, e.g. quick stop. This prevents the load from dropping until the brake is fully engaged.

For more detailed information on the application, refer to the corresponding manual (see [Detailed information \[▶ 519\]](#)).

17.1 Activating and selecting the brake

You activate the brakes in parameter F00. You then select the brakes in F01.

1. Select the relevant drive controller in the project tree and click on the desired projected axis in the Project menu > Wizard area.
2. Select the Brake wizard.
3. F00 Brake:
Select 1: Active if you are operating the motor in a regulated control mode and if the torque is to be saved at the time that the brake engages. In this case, the saved torque is restored before releasing the brakes. Select this option for gravity-loaded axes, for example.
However, select 2: Do not save torque/force if only motor magnetization is to be restored when the brakes are released.
4. F01 Utilized brakes:
Select 1: Brake 1 if the brake is connected to terminal X5.
If the brake is connected to X8, select 2: Brake 2 (prerequisite: SE6 safety module).
The 4: Brake 1 + 2 low frequency option is available if brakes are connected to X5 and X8 (prerequisite: SE6 safety module).
5. If necessary, store the release and engaging times of the brakes (see [Brake release time and brake engaging time \[► 317\]](#)).

17.2 Activating functional brake management

- ✓ The brake is activated.
1. Select the relevant drive controller in the project tree and click on the desired projected axis in the Project menu > Wizard area.
 2. Select the Brake wizard > Brake control.
 3. B310 Brake management:
Select 1: Active.
 4. B311 Timeout for brake test:
Enter the time after which the drive controller is to output a message that a brake test is needed. You can set a maximum of 1 year = 52 weeks or 8760 hours of operating time.
 5. Transmit the configuration to the drive controller and save it in non-volatile memory (A00).
- ⇒ Brake management is activated.

17.3 Calibrate brake

You can calibrate the release and engaging times for brakes with unknown release and engaging times.

For more detailed information on the requirements as well as the exact procedure, see [Calibrating the brake](#) [▶ 320].

DANGER!

Risk of fatal injury due to gravity-loaded vertical axis!

During this action, the brakes are released and movement starts. The motor cannot generate any or can only generate limited torque/force during this time. This can cause a gravity-loaded vertical axis to drop.

- Make sure that safe movement in the specified travel range is possible.
- Secure the area extending beyond the travel range for the case of further lowering of the gravity-loaded vertical axis.

-
- ✓ There is an online connection between DriveControlSuite and drive controllers.
 - ✓ The drive controller is ready to switch on (E48 = 2: Ready for switch-on).
 - ✓ The brake is activated.
1. Select the relevant drive controller in the project tree and click on the desired projected axis in the Project menu > Wizard area.
 2. Select the Brake wizard > Test brake.
 3. B306 Permitted direction for actions of the brake:
Define the permitted travel direction. Calibration only takes place in one travel direction. If both directions of rotation are permitted, travel proceeds in the positive direction.
 4. B307 Standstill window brake test:
Enter the angle of rotation that the drive evaluates as a standstill.
 5. Select the Brake wizard > Calibrate brake.
 6. Click Calibrate release/engaging time for brake.
 - ⇒ Calibration of the brake is executed.
 - ⇒ The determined times are stored in F04 and F05.
 - ⇒ F96[1] indicates the progress.
 - ⇒ F96[2] outputs the result of the action.
 7. Afterwards, save the determined values in non-volatile memory (A00).

With 2 brakes, the release and engaging times of both brakes are calibrated.

17.4 Testing a functional brake

Using the brake test, check whether the brake can still apply the required holding torque or holding force.

For more information on the test and calculation of test torques, see [Brake test \[▶ 322\]](#) and [Torque calculation \[▶ 323\]](#).

DANGER!

Risk of fatal injury due to gravity-loaded vertical axis!

During this action, the closed brake is loaded with a specified test torque or a specified test force. If the test torque or test force exceeds the holding torque or holding force of the brake, this results in movement of the axis. This can cause a gravity-loaded vertical axis to drop.

- Make sure that safe movement is possible.

- ✓ There is an online connection between DriveControlSuite and drive controllers.
 - ✓ The drive controller is ready to switch on (E48 = 2: Ready for switch-on).
 - ✓ The brake is activated.
1. Select the relevant drive controller in the project tree and click on the desired projected axis in the Project menu > Wizard area.
 2. Select the Brake wizard > Test brake.
 3. B304 Positive torque/force limit for brake test:
Enter the test torque or test force that that brake must hold in case of a positive direction of rotation.
 4. B305 Negative torque/force limit for brake test:
Enter the test torque or test force that that brake must hold in case of a negative direction of rotation.
 5. E65 Current maximum positive torque/force:
Make sure that the limit in the drive controller permits the value stored in B304.
 6. E66 Current maximum negative torque/force:
Make sure that the limit in the drive controller permits the value stored in B305.
 7. B306 Permitted direction for actions of the brake:
Define the permitted travel direction. If both directions of rotation are permitted, travel first proceeds in the positive direction.
 8. B307 Standstill window brake test:
Enter the permitted standstill window.
 9. Click on Test brake.
- ⇒ The brake test is executed.
 - ⇒ B300[1] indicates the progress.
 - ⇒ B300[2] outputs the result of the action.

With 2 brakes, both brakes are tested.

17.5 Bedding in the brake

By bedding in the brake, any deposits on the friction surface are removed that can negatively influence the holding function of the brake. For more information, see [Bedding in the brake \[▶ 325\]](#).

DANGER!

Risk of fatal injury due to gravity-loaded vertical axis!

During this action, the brakes are released and movement starts. The motor cannot generate any or can only generate limited torque/force during this time. This can cause a gravity-loaded vertical axis to drop.

- Make sure that safe movement in the specified travel range is possible.
- Secure the area extending beyond the travel range for the case of further lowering of the gravity-loaded vertical axis.

- ✓ There is an online connection between DriveControlSuite and drive controllers.
 - ✓ The drive controller is ready to switch on (E48 = 2: Ready for switch-on).
 - ✓ The brake is activated.
1. Select the relevant drive controller in the project tree and click on the desired projected axis in the Project menu > Wizard area.
 2. Select the Brake wizard > Bend in brake.
 3. B306 Permitted direction for actions of the brake:
Define the permitted travel direction. If both directions of rotation are permitted, travel first proceeds in the positive direction.
 4. B308 Number of intervals for grind:
Enter how often the brake is to engage when rotating in one direction.
 5. B309 Number of cycles for grind:
Enter how often the drive is to bed in in any direction.
 6. Click on Bed in brake.
- ⇒ The bedding in of the brake is executed.
 - ⇒ B301[1] indicates the progress.
 - ⇒ B301[2] outputs the result of the action.

17.6 Bedding in brake 2

By bedding in the brake, any deposits on the friction surface are removed that can negatively influence the holding function of the brake. For more information, see [Bedding in the brake \[▶ 325\]](#).

Brake 2 is available exclusively in combination with the SE6 safety module.



Risk of fatal injury due to gravity-loaded vertical axis!

During this action, the brakes are released and movement starts. The motor cannot generate any or can only generate limited torque/force during this time. This can cause a gravity-loaded vertical axis to drop.

- Make sure that safe movement in the specified travel range is possible.
- Secure the area extending beyond the travel range for the case of further lowering of the gravity-loaded vertical axis.

-
- ✓ There is an online connection between DriveControlSuite and drive controllers.
 - ✓ The drive controller is ready to switch on (E48 = 2: Ready for switch-on).
 - ✓ Brake 2 is activated.
1. Select the relevant drive controller in the project tree and click on the desired projected axis in the Project menu > Wizard area.
 2. Select the Brake wizard > Bend in brake 2.
 3. B306 Permitted direction for actions of the brake:
Define the permitted travel direction. If both directions of rotation are permitted, travel first proceeds in the positive direction.
 4. B308 Number of intervals for grind:
Enter how often the brake is to engage when rotating in one direction.
 5. B309 Number of cycles for grind:
Enter how often the drive is to bed in in any direction.
 6. Click on Bed in brake 2.
- ⇒ The bedding in of the brake is executed.
 - ⇒ B302[1] indicates the progress.
 - ⇒ B302[2] outputs the result of the action.

17.7 More about the brake?

The following chapters summarize the important terms and settings.

17.7.1 Direct and indirect brake connection

The SD6 drive controller provides the option of directly connecting 24 V_{DC} brakes with a current draw of up to 3 A (X5) or 3.6 A (X8). Brakes with a different supply voltage or higher current draw can be connected indirectly, e.g. through a contactor.

Drive controller with ST6 option

You have the following options for connection:

- Directly to X5 (with or without monitoring)
- Indirectly to X5 (with or without feedback via X6)

Define the connection type and monitoring of the brake at X5 in parameter F93.

Drive controller with SE6 option

In combination with the SE6 safety module you have the following options:

- Directly to X5 (with or without monitoring)
- Indirectly to X5 (without feedback)
- Directly to X8 (with or without monitoring)
- Indirectly to X8 (with or without feedback via X14)

Define the connection type and monitoring of the brake at X5 in parameter F100. Define the connection type for X8 in PASmotion Safety Configurator.

17.7.2 Release override

You have the option of permanently releasing the brakes with internal brake control using an override function, e.g. for commissioning or service work. You define the release override in parameter F06 (signal: F07).



Risk of fatal injury due to gravity-loaded vertical axis!

When you use the release override, the brake is released. This can cause a gravity-loaded axis to fall in an uncontrolled manner.

- Only use the release override for gravity-free axes or secure them externally.

17.7.3 Internal and external brake control

With internal brake control, the drive controller controls the brakes and the release and engaging times are taken into account. For controller-based applications, you have the option of switching from internal (automatic) brake control through the drive controller to external brake control through a controller.

17.7.3.1 Internal brake control

With internal brake control, the drive controller controls the brakes and the release and engaging times are taken into account. You activate the internal brake control in parameter F00. You select the brakes in F01.

Brake 2 is available exclusively in combination with the SE6 safety module. If using 2 brakes or using brake 2, read the manual for the SE6 safety module (see [Detailed information](#) [▶ 519]).

Information

To protect the holding brake, avoid engaging a brake when an axis is moving:

- Avoid uncontrolled stopping of a moving axis.
- If you would like to deactivate the enable signal for a moving axis, select A44 = 1: Active (default) so that a quick stop is carried out with Enable-off.
- As a fault reaction, always select a quick stop (A29 = 1: Active, default) or emergency braking (U30 = 1: Active).

17.7.3.1.1 Operation with 1 brake (F01 = 1: Brake 1)

After Enable-on, the brake releases along with the first command and remains released until one of the following events occurs:

- Event with fault reaction:
 - Power unit is locked
 - Quick stop (brake only engages at the end of the quick stop)
 - Emergency braking
- Enable-off
- Quick stop signal (brake only engages at the end of the quick stop)
- Brake is engaged at the end of the motion command (Drive Based applications: J27/J53; parameter depends on selected operating mode):
 - 1: MC_MoveAbsolute
 - 2: MC_MoveRelative
 - 3: MC_MoveAdditive
 - 5: MC_Stop
 - 6: MC_Home (requirement: I30 ≠ 5: Define home)
 - 11: MC_Halt
- STO with optional engaging of brake (prerequisite: SE6)

The brake can be permanently released for commissioning or for service work by means of a release override. This must be defined in parameter F06 (signal: F07).

The behavior of the brake can be parameterized for the STO safety function. A requirement for this is the parameterization of the SS1 safety function in the SE6 safety module.

Information

In combination with the SE6 safety module, the brake can only be released via release override with STO if this is permitted by the settings of the SS1 safety function. For more information, refer to the manual for the SE6 safety module (see [Detailed information \[▶ 519\]](#)).

The brake is monitored for short-circuits, cable breaks and undervoltage of the brake control. Monitoring can be set or deactivated in F93 or F100 (prerequisite: SE6). Furthermore, the brake connection to terminal X5 is checked for plausibility.

17.7.3.1.2 Operation with 1 brake (F01 = 2: Brake 2)

In combination with the SE6 safety module, you also have the option of using brake 2 as the only brake. This is only relevant if only one brake is available and it must be safely controlled and monitored.

Information

For the use of 2 brakes or of brake 2, the SBC safety function must be parameterized in PASMotion Safety Configurator. For more information, refer to the manual for the SE6 safety module (see [Detailed information \[▶ 519\]](#)).

The release of brake 2 depends on the parameterization in PASMotion Safety Configurator:

- If the **coupling is inactive**, the brake is released when STO is deactivated
- If the **coupling is active**, the brake is released after Enable-on together with the first command

If the coupling is active, brake 2 remains released until one of the following events occurs:

- Event with fault reaction:
 - Power unit is locked
 - Quick stop (brake only engages at the end of the quick stop)
 - Emergency braking
- Enable-off
- Quick stop signal (brake only engages at the end of the quick stop)
- Brake is engaged at the end of the motion command (Drive Based applications: J27/J53; parameter depends on selected operating mode):
 - 1: MC_MoveAbsolute
 - 2: MC_MoveRelative
 - 3: MC_MoveAdditive
 - 5: MC_Stop
 - 6: MC_Home (requirement: I30 ≠ 5: Define home)
 - 11: MC_Halt
- STO

Brake 2 cannot be released by a release override with STO and is controlled by the SE6 safety module.

17.7.3.1.3 Operation with 2 brakes (F01 = 4: Brake 1 + 2 low frequency)

In conjunction with the SE6 safety module, there is the option for implementing a concept with 2 brakes for safety-relevant applications.

Brake 1, typically the motor holding brake, is used for frequent and fast switching during stalled motion. Brake 2, usually an external additional brake with significantly higher switching times, remains open as a rule and is closed only in cases of exception. In this case, brake 1 is engaged for any intermediate stops required during working mode and brake 2 additionally ensures a secure hold during a prolonged stop, switched-off enable signal, STO or fault. Since the switching frequency of brake 2 can be substantially lower than the switching frequency of brake 1 as a result, a higher value can be achieved for the mean time to dangerous failure (MTTF_b).

Information

For the use of 2 brakes or of brake 2, the SBC safety function must be parameterized in PASmotion Safety Configurator. For more information, refer to the manual for the SE6 safety module (see [Detailed information](#) [▶ 519]).

The release of brake 2 depends on the parameterization in PASmotion Safety Configurator:

- If the **coupling is inactive**, the brake is released when STO is deactivated
- For **active coupling**, the brake is released after Enable-on

If the coupling is active, brake 2 remains released until one of the following events occurs:

- Event with fault reaction:
 - Power unit is locked
 - Quick stop (brake only engages at the end of the quick stop)
 - Emergency braking
- Enable-off
- Quick stop signal (brake only engages at the end of the quick stop)
- Motion detected despite brake 1 being engaged
- STO

After Enable-on, brake 1 releases along with the first command and remains released until one of the following events occurs:

- Event with fault reaction:
 - Power unit is locked
 - Quick stop (brake only engages at the end of the quick stop)
 - Emergency braking
- Enable-off
- Quick stop signal (brake only engages at the end of the quick stop)
- Brake is engaged at the end of the motion command (Drive Based applications: J27/J53; parameter depends on selected operating mode):
 - 1: MC_MoveAbsolute
 - 2: MC_MoveRelative
 - 3: MC_MoveAdditive
 - 5: MC_Stop
 - 6: MC_Home (requirement: I30 ≠ 5: Define home)
 - 11: MC_Halt
- STO with optional engaging of brake (prerequisite: SE6)

The drive controller has a monitoring function that checks the standstill of the axis. If it is determined that the position has been left after brake 1 is engaged, then brake 2 engages as quickly as possible. Define the standstill window in parameter B307. In the event of a fault or emergency braking at the rotating axis, both brakes will engage at different times to prevent a shaft break caused by too much force from both brakes acting simultaneously.

17.7.3.1.4 Internal brake control based on control mode

The following chapters show the brake control depending on the control mode (B20) for 1 to 2 brakes with internal brake control through the drive controller.

17.7.3.1.4.1 B20 = 0 or 1

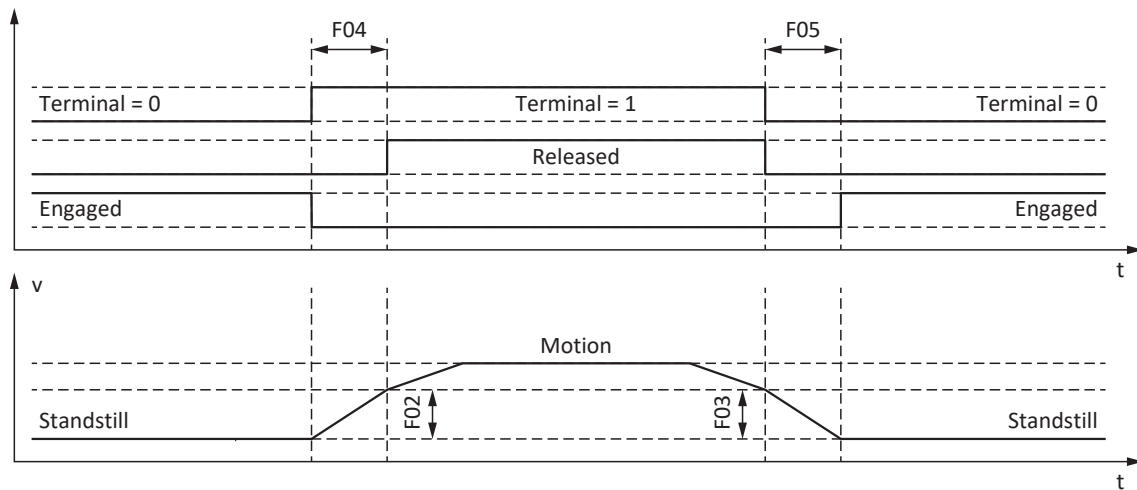


Fig. 85: Brake control for control mode B20 = 0: ASM - V/f-control or 1: ASM - V/f-slip compensated

In these control modes for asynchronous motors without a motor encoder, the axis is controlled to move within the release time F04.

Here, F02 is the velocity of the asynchronous motor that is built up during the release time F04. F03 is the velocity starting from which the brakes are controlled to engage.

During the release process, a set acceleration calculated from the velocity and release time takes effect (F02, F04). During the engaging process, a set deceleration calculated from the velocity and engaging time takes effect (F03, F05).

17.7.3.1.4.2 B20 = 2

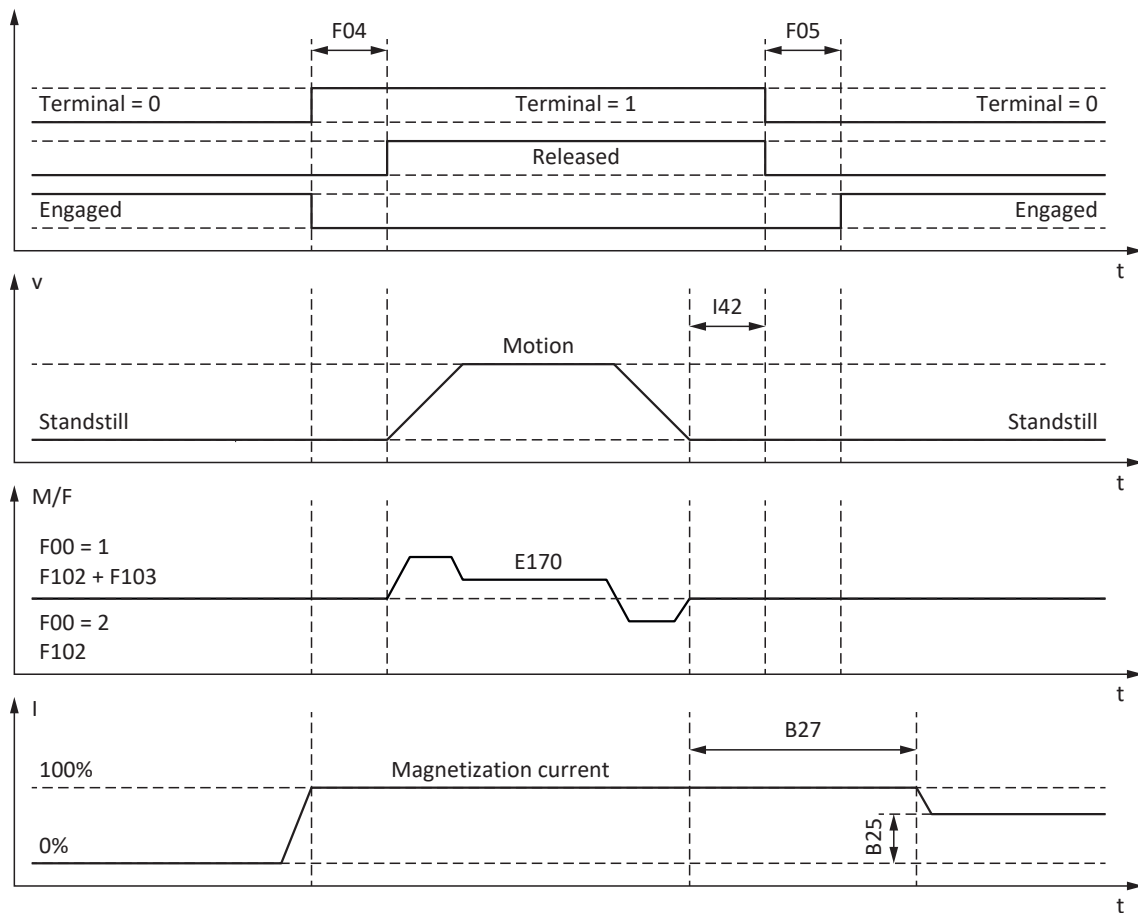


Fig. 86: Brake control for control mode B20 = 2: ASM - vector control

In this control mode for asynchronous motors with a motor encoder, the axis is controlled to move after the release time F04 has expired.

In the motion block and command operating modes, you can define a wait time for the brake to engage at the end of the motion command in parameter I42 (J27, J53). When this is done, multiple motion commands can be executed in succession without interruption from the brake engaging.

For specification of torque/force, E170 is the currently required set torque or the currently required set force M/F_{set} of the motor control (limit: E65, E66).

In F102, define a static feedforward control for torque/force for the velocity controller if you would like to set a base load for gravity-loaded axes. Depending on the boundary conditions of the machine, it may make sense to use different settings. For commissioning recommendations for gravity-loaded axes, see [Special case of load changes when the power unit is switched off](#) |▶ 326].

With the setting F00 = 1: Active, the torque or force for the next brake release process (F103) is determined automatically and stored in non-volatile memory. The torque or force is not saved if F00 = 2: Do not save torque/force.

F103 is determined only for steady-state control and a completely released brake (F09). F103 is determined if the actual velocity of the motor encoder is less than the velocity window ($|E15| < |C40|$).

The hold magnetization B25 ensures that the motor is still supplied with current when the brake is engaged. The magnetization is reduced as soon as the motor has come to a standstill and the wait time B27 has expired.

B25 influences the thermal machine utilization. The thermal machine utilization is reduced as B25 decreases, but the reaction time simultaneously increases as the brakes are released.

17.7.3.1.4.3 B20 = 3

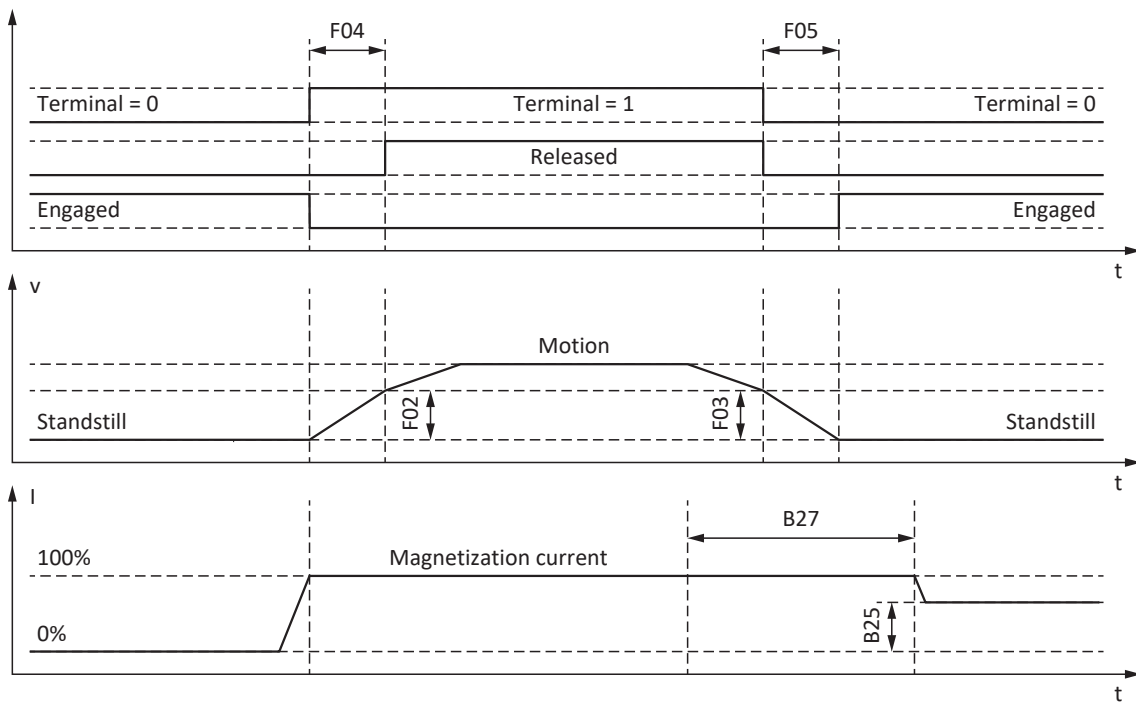


Fig. 87: Brake control for control mode B20 = 3: ASM - sensorless vector control

In this control mode for asynchronous motors without a motor encoder, the axis is controlled to move within the release time F04.

Here, F02 is the velocity of the asynchronous motor that is built up during the release time F04. F03 is the velocity starting from which the brakes are controlled to engage.

During the release process, a set acceleration calculated from the velocity and release time takes effect (F02, F04). During the engaging process, a set deceleration calculated from the velocity and engaging time takes effect (F03, F05).

The hold magnetization B25 ensures that the motor is still supplied with current when the brake is engaged. The magnetization is reduced as soon as the motor velocity has undershot the brake-engaging velocity F03 and the wait time B27 has expired.

B25 influences the thermal machine utilization. The thermal machine utilization is reduced as B25 decreases, but the reaction time simultaneously increases as the brakes are released.

17.7.3.1.4.4 B20 = 48, 64 or 70

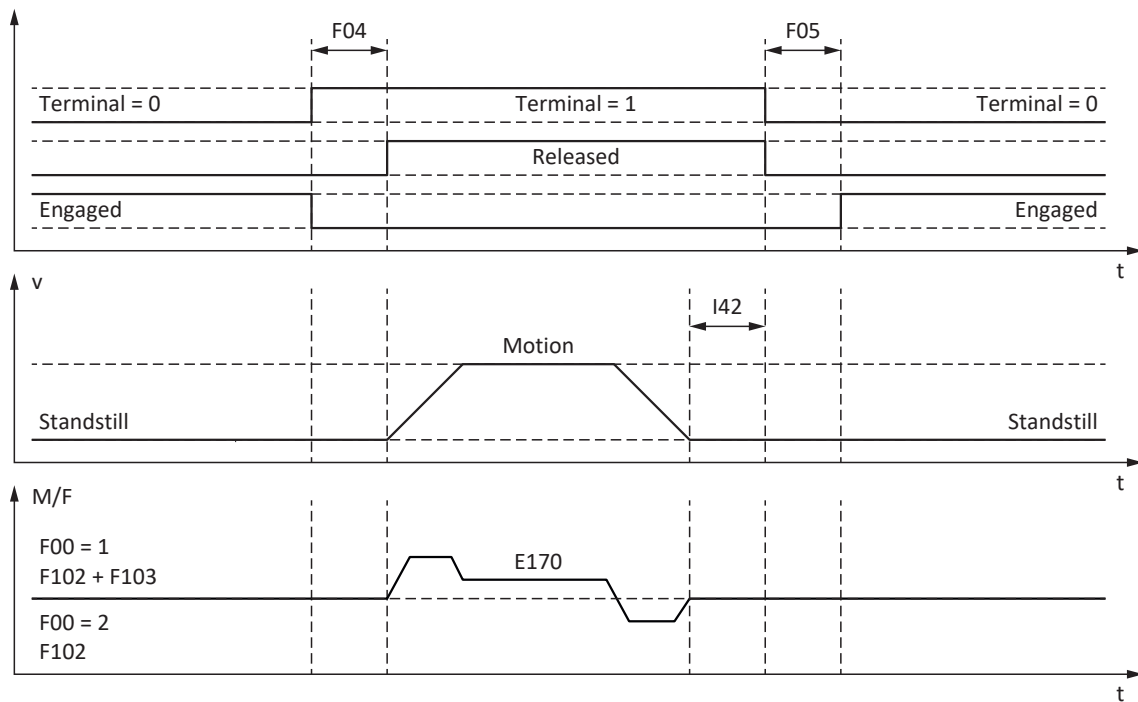


Fig. 88: Brake control for control mode B20 = 48: SSM-vector control incremental encoder, 64: SSM - vector control or 70: SLM - vector control

In these control modes for synchronous servo motors or synchronous linear motors with a motor encoder, the axis is controlled to move after the release time F04 has expired.

In the motion block and command operating modes, you can define a wait time for the brake to engage at the end of the motion command in parameter I42 (J27, J53). When this is done, multiple motion commands can be executed in succession without interruption from the brake engaging.

For specification of torque/force, E170 is the currently required set torque or the currently required set force M/F_{set} of the motor control (limit: E65, E66).

In F102, define a static feedforward control for torque/force for the velocity controller if you would like to set a base load for gravity-loaded axes. Depending on the boundary conditions of the machine, it may make sense to use different settings. For commissioning recommendations for gravity-loaded axes, see [Special case of load changes when the power unit is switched off](#) [▶ 326].

With the setting F00 = 1: Active, the torque or force for the next brake release process (F103) is determined automatically and stored in non-volatile memory. The torque or force is not saved if F00 = 2: Do not save torque/force.

F103 is determined only for steady-state control and a completely released brake (F09). F103 is determined if the actual velocity of the motor encoder is less than the velocity window ($|E15| < |C40|$).

Commutation finding process using Wake and Shake in combination with a brake

 DANGER!**Risk of fatal injury due to gravity-loaded vertical axis!**

Gravity-loaded axes can sink during a commutation finding process using Wake and Shake because the brake for the commutation finding process has to be released.

- Use the 48: SSM-vector control incremental encoder and 70: SLM - vector control control modes in combination with a commutation finding process using Wake and Shake only for axes without a gravity load.
 - For gravity-loaded axes, use motors with an absolute encoder.
-

 DANGER!**Risk of fatal injury due to gravity-loaded vertical axis!**

Gravity-loaded axes can sink during a commutation finding process using Wake and Shake because the brake for the commutation finding process has to be released.

- Use the 48: SSM-vector control incremental encoder and 70: SLM - vector control control modes in combination with a commutation finding process using Wake and Shake only for axes without a gravity load.
 - For gravity-loaded axes, use motors with an absolute encoder.
-

For more information on commutation finding via Wake and Shake, see [Commutation finding](#) [▶ 478].

17.7.3.2 External brake control

For the CiA 402 application, parameter F92[0] offers the option of switching from internal (automatic) brake control through the drive controller to external brake control through a controller.

With external brake control, brake 2 behaves like brake 1, i.e. the control always makes both brakes release and engage together.

In combination with the SE6 safety module, the extended safety technology can intervene even for external brake control. For all other cases:

 **WARNING!**

Injury to persons and material damage due to axis movement!

For external brake control, the brake does not engage automatically in the event of faults or Enable-off. For Enable-on or the start of a motion, the brake is not automatically released. The external brake control is independent of the device state and motion core through the controller.

- Guarantee a suitable process in the controller and take suitable measures to ensure safety.
- When releasing the brake, also take into account the motor-side requirements (e.g. required time for building up magnetization in the case of asynchronous motors or for position determination in the case of Lean motors).

In parameter F06, define the source of the digital signal through which the brakes are released unconditionally. In the CiA 402 application, F06 = 2: Parameter is preset.

The controller can check whether the brakes are engaged or released (E201, bits 3 and 4) before set values for position and velocity are specified.

The following table shows the correlation between parameters F92[0] and F06.

| F92[0] (brake control) | F06 (release override signal source) | Type of brake control |
|-------------------------|--------------------------------------|---|
| 0: Internal (automatic) | 3: DI1 – 28: DI13 inverted | Internal automatic system; release override through terminal input (source: E19) |
| 1: External (plc) | 3: DI1 – 28: DI13 inverted | Externally through terminal input (source: E19); no release override |
| 0: Internal (automatic) | 2: Parameter | Internal automatic system; release override through parameter (Drive Based source: A180, bit 6; CiA 402 source: A515, bit 14) |
| 1: External (plc) | 2: Parameter | Externally through parameter (CiA 402 source: A515, bit 14); no release override |

Tab. 301: Correlation between F92[0] and F06

For external brake control, bit 14 of parameter A515 is the source of F92[1] in the CiA 402 application (prerequisite: F92[0] = 1: External (plc) and F06 = 2: Parameter).

F92[2] shows the current setting of the brake control.

17.7.4 Brake release time and brake engaging time

The release times of the connected brakes are defined in parameter F04, the engaging times are defined in parameter F05:

- F04[0]: release time for brake 1
- F04[1]: release time for brake 2
- F05[0]: engaging time for brake 1
- F05[1]: engaging time for brake 2

When a movement is started, the movement and status signals are delayed by the time F04 to prevent movement against a brake that is not yet fully open.

When the brake engages, the control still remains active for the time F05 to prevent a gravity-loaded axis from sinking. For STO, the brake engages immediately. The behavior for deactivation of the enable signal can be defined with A44 (brake engages immediately or after a quick stop).

Motors with an electronic nameplate

In motors with an electronic nameplate, the values during initial coupling of the motor and drive controller or when the action B06 is started are taken over from the electronic nameplate (prerequisite: B04 = 64: Active).

If the electronic nameplate also contains the release time and engaging time of the brakes integrated into the motor adapter (ServoStop), then these are also taken into account. The following additional setting is required for this, up to and including firmware V 6.5-H: B28 = 1: All data.

Sources for the values from the electronic nameplate:

- R50: nameplate release time of the motor brake
- R51: nameplate engaging time of the motor brake
- R67: nameplate release time of the motor adapter brake
- R68: nameplate engaging time of the motor adapter brake

Motors without an electronic nameplate

Depending on the connection type, you have to calculate the release time and engaging time of the brake differently.

For a direct connection of the brake, take into account a safety factor of 1.3 for the release and engaging times when transferring the values to the drive controller.

Guide values:

- $F04 = 1.3 \times t_{2B}$
- $F05 = 1.3 \times t_{1B}$

For an indirect connection of the brake, e.g. through a contactor, take into account $1.2 \times$ the switching time of the contactor in addition to the guide value for direct connection for both the release time and engaging time.

If you do not know the release time and engaging time of the brake, you can calibrate these using the action F96.

17.7.5 Time between 2 release processes

Information

The time between two brake release processes must be at least 1 s. If this is not observed, the 2nd release process will be delayed.

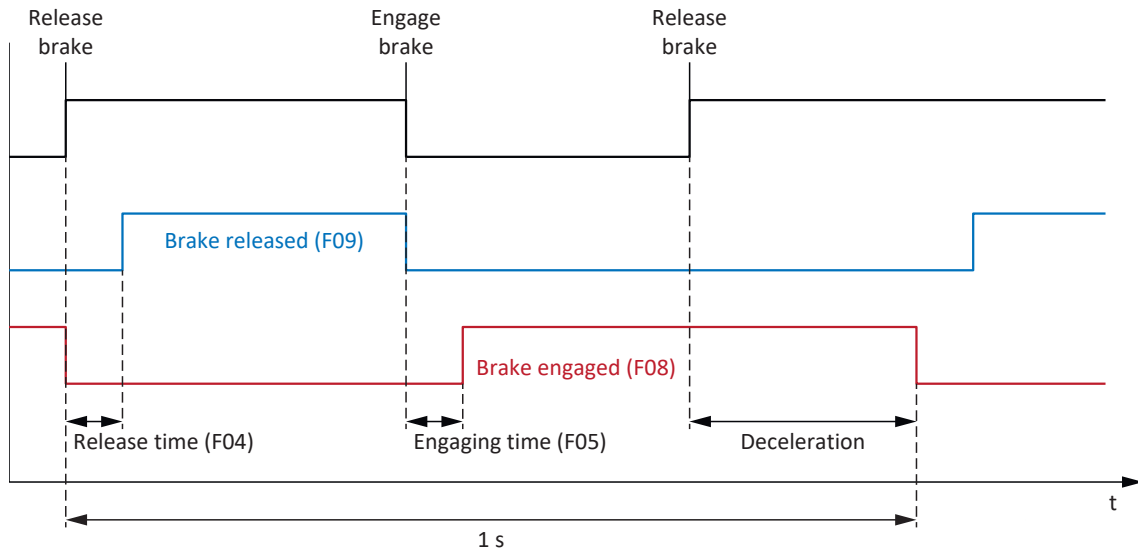


Fig. 89: Minimum time between 2 release processes for the brake

17.7.6 Functional brake management

The functional brake management monitors the regular performance of brake tests to check whether the brake is functioning properly.

The drive controller offers the following options through the axis management:

- **Single-axis operation:**
One axis projected in the DriveControlSuite is used on a connected motor
- **Multi-axis operation:**
Two, three or four axes projected in the DriveControlSuite are used on a connected motor

Information

For **multi-axis operation**, you have to configure all settings in the parameters of Axis 1 in DriveControlSuite and select Axis 1 for actions.

The brake management can be used only if the following requirements are met:

- Brakes are used that are applied in the de-energized state
- The drive has an encoder

For detailed information on safe brake management, refer to the manual for the SE6 safety module (see [Detailed information \[▶ 519\]](#)).

17.7.6.1 State machine of brake management

Brake management functions with the following state machine:

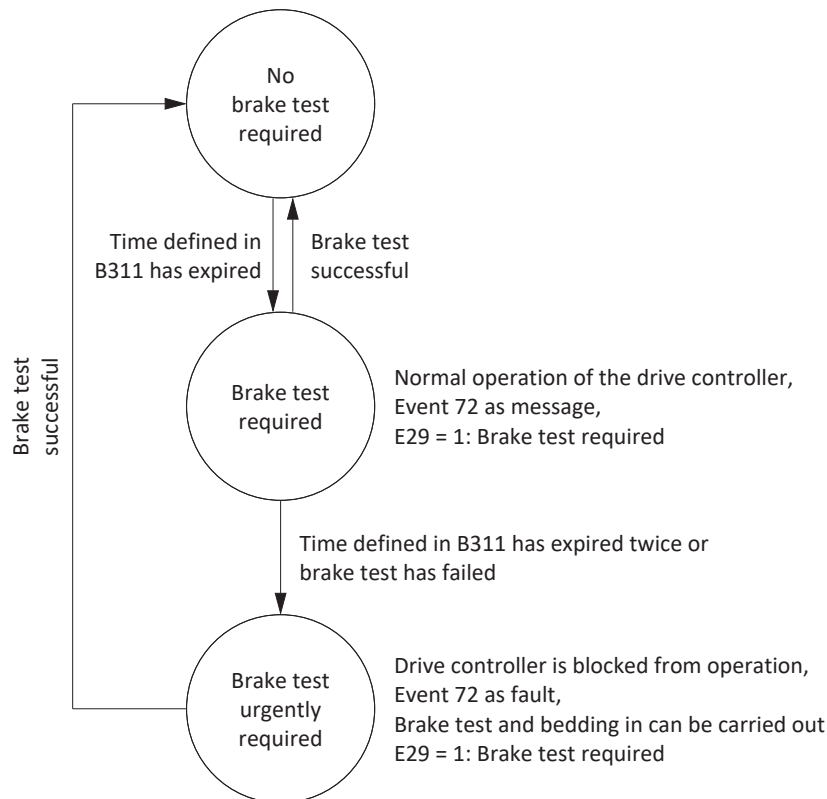


Fig. 90: State machine of brake management

The maximum permitted duration between 2 brake tests is defined in B311. This time begins to run from the time of activation. The time that has passed since the last brake test is shown in parameter E177. After the time expires, the brake management switches to the **Brake test required** state (E29 = 1: Brake test necessary, Event 72 with Cause 3 as message). If you carry out a brake test successfully in this state, the brake management switches back to the **No brake test required** state (E29 = 0: Inactive) and the cycle B311 starts over.

If the state is **Brake test required** and the time B311 expires again without a brake test or the brake test was unsuccessful, the brake management switches to the **Brake test urgently required** state (fault E29 = 1: Brake test necessary, Event 72 with Cause 1 as fault). To avoid interruption of the production process, the fault is not generated until the enable signal is switched off. The fault can be acknowledged to allow performance of the brake test and bedding in of the brake. However, if the brake test is not carried out successfully within 5 minutes after acknowledgment, the brake management switches back to the **Brake test urgently required** state. A successful brake test automatically leads back to the **No brake test required** state, and the cycle B311 starts over.

If a brake test is unsuccessful in the **Brake test urgently required** state, you can bed in the brakes and carry out the brake test again. If this brake test fails, too, then you have to replace the brake or the motor. The brake management remains in the **Brake test urgently required** state until a brake test has been carried out successfully after replacement of the brake or motor.

17.7.7 Calibrating the brake

The release and engaging times of the brake can be calibrated using the action F96. This action is not required for motors with an electronic nameplate because these values are taken over from the electronic nameplate during initial coupling of the motor for the drive controller.



Risk of fatal injury due to gravity-loaded vertical axis!

During this action, the brakes are released and movement starts. The motor cannot generate any or can only generate limited torque/force during this time. This can cause a gravity-loaded vertical axis to drop.

- Make sure that safe movement in the specified travel range is possible.
- Secure the area extending beyond the travel range for the case of further lowering of the gravity-loaded vertical axis.

Prerequisites

The action F96 is only available in the following control modes (B20):

- 2: ASM - vector control
- 3: ASM - sensorless vector control
- 48: SSM-vector control incremental encoder
- 64: SSM - vector control
- 70: SLM - vector control

F96 can be carried out also for loaded axes. In this case, the velocity controller should be optimized and the load must not be more than 2/3 of the maximum torque or force currently permitted (E65, E66).

Required parameters

Define the permitted direction of motion for calibrating the brake in parameter B306, the standstill window in parameter B307.

The travel range with unloaded axis is approx. 2 motor revolutions (synchronous linear motors: approx. 2 m). To determine the travel path exactly, please include the gear unit and feed in the calculation.

Sequence of the action

During the action, the axis rotates at a fixed set speed of 20 rpm (set velocity for synchronous linear motors: 2 m/min). Initially, for a released brake, a measurement run is carried out for the duration of 1 s. Then the axis moves against the engaging brake. After detection of the brake engaging (timeout 2 s), the axis stops. This is followed by a standstill of 2 s (recovery phase). Then the axis moves against the releasing brake. After detection of the brake release (timeout 2 s), the axis continues moving for 0.5 s and then stops.

If two brakes are connected, the action F96 is always carried out for both brakes.

The determined times are stored in F04 and F05:

- F04[0]: release time for brake 1
- F04[1]: release time for brake 2
- F05[0]: engaging time for brake 1
- F05[1]: engaging time for brake 2

Saving values

For the measured values to be saved in non-volatile memory, the action A00 has to be carried out after this.

Alternatively, the action B06 can be used to retrieve the values from the electronic nameplate, provided that it contains the brake data.

Results

After the action F96 is started, the progress can be observed in parameter F96[1], and after the action is completed, F96[2] can be used to call up the results of calibrating.

The action F96 evaluates the measured time with the safety factor of 1.2. This means that the values entered in F04 and F05 are 1.2 times greater than the actually measured values.

17.7.8 Brake test

The action B300 Test brake checks whether the brake can still apply the required holding torque or holding force.



Risk of fatal injury due to gravity-loaded vertical axis!

During this action, the closed brake is loaded with a specified test torque or a specified test force. If the test torque or test force exceeds the holding torque or holding force of the brake, this results in movement of the axis. This can cause a gravity-loaded vertical axis to drop.

- Make sure that safe movement is possible.

Requirements

The action B300 requires a position encoder and is permitted only in the following control modes (B20):

- 2: ASM - vector control
- 48: SSM-vector control incremental encoder
- 64: SSM - vector control
- 70: SLM - vector control

If you use a safety module with SBT safety function, then B300 and associated parameters are hidden and replaced by S18 as soon as the drive controller is online.

Required parameters

Enter the test torque or test force in the parameters B304 and B305:

- B304[0]: Positive set torque/positive set force for brake 1
- B304[1]: Positive set torque/positive set force for brake 2
- B305[0]: Negative set torque/negative set force for brake 1
- B305[1]: Negative set torque/negative set force for brake 2

Define the permitted travel direction in B306. If both directions of rotation are permitted, travel first proceeds in the positive direction. Enter the angle of rotation of the motor that the drive evaluates as a standstill in B307.

To define the test torques or test forces, note that the motor is limited to the values in C03 and C05. If larger values are entered in B304 and B305, they cannot be achieved. In addition, make sure that no device-specific limitations take effect. To do so, check the parameters E65 and E66 during the brake test.

Travel path for brake test

- Synchronous servo motors and asynchronous motors: If the brake can hold the test torque, then the maximum travel path is 0.125 motor revolutions.
- Synchronous linear motors: If the brake can hold the test force, then the maximum travel path is 0.8 mm.

Sequence of the action

If the brake is released, then the encoder is tested first. For the encoder test, the motor rotates at approximately 60 rpm at a maximum of 45° in both directions of rotation. Then the brake engages and a parameterizable test torque or test force is applied to the drive in each permitted direction of rotation. If the drive detects motion, then the brake was unable to apply the required holding torque or holding force and the test has failed.

If two brakes are connected, the action B300 is always carried out for both brakes.

Results

After the action B300 is started, the progress can be observed in parameter B300[1], and after the action is completed, B300[2] can be used to call up the test results.

17.7.9 Torque calculation

In the following chapters, you will find information for calculating the torques that you have to enter in B304 and B305 for the brake test.

17.7.9.1 Torques for synchronous servo motors

To calculate the torques, you need the following values:

- M_B : Select the braking torque that you have designed and that is required for your application. M_{Bstat}
- M_0 : Stall torque
- I_0 : Stall current
- $I_{2N,PU}$: Nominal output current of the drive controller

In the first step, calculate the ratio of torques as a percentage:

$$K = \frac{M_B}{M_0} \times 100 \%$$

In the next step, determine the current for M_B :

$$I = I_0 \times K$$

Compare I to $I_{2N,PU}$ of the drive controller:

If $I \leq 2 \times I_{2N,PU}$, then:

$$B304 = K \text{ and } B305 = -K$$

If $I > 2 \times I_{2N,PU}$, then the drive controller cannot generate the test torque that you have designed.

Example

- $M_B = 10 \text{ Nm}$
- $M_0 = 6.6 \text{ Nm}$
- $I_0 = 4.43 \text{ A}$
- $I_{2N,PU} = 6 \text{ A}$

$$K = \frac{10 \text{ Nm}}{6,6 \text{ Nm}} \times 100 \% = 151 \%$$

$$I = 4.43 \text{ A} \times 151 \% = 6.69 \text{ A}$$

$$I_{2N,PU} \times 2 = 12 \text{ A}$$

$$6.69 \text{ A} < 12 \text{ A}$$

Results: B304 = 151% and B305 = -151%

17.7.9.2 Torques for asynchronous motors

To calculate the torques, you need the following values:

- M_B : Select the braking torque that you have designed and that is required for your application. Alternatively, perform a calculation with the nominal braking torque of the motor brake $M_{N,B}$
- M_N : Nominal torque of the motor
- M_k : Breakdown torque of the motor
- $I_{2N,PU}$: Nominal output current of the drive controller
- $I_{d,ref}$ (E171): Magnetization-generating reference current in the d/q coordinate system
- $I_{q,ref}$ (E172): Torque/force-generating reference current in the d/q coordinate system

To obtain the correct values from E171 and E172, complete the project configuration of the motor, transfer the project to the drive controller and save it. Then read out the values in online operation.

In the first step, calculate the ratio of torques as a percentage:

$$K = \frac{M_B}{M_N} \times 100 \%$$

In the next step, determine the current for M_B :

$$I = \sqrt{I_{d,ref}^2 + (K \times I_{q,ref})^2}$$

Compare I to $I_{2N,PU}$ of the drive controller:

If $I \leq 1.8 \times I_{2N,PU}$, then:

$B304 = K$ and $B305 = -K$

If $I > 1.8 \times I_{2N,PU}$, then the drive controller cannot generate the test torque that you have designed.

Check whether the motor can apply the required test torque:

$$M_k/M_B > 1$$

Example

- $M_B = 10 \text{ Nm}$
- $M_N = 5.12 \text{ Nm}$
- $M_k = 11.8 \text{ Nm}$
- $I_{2N,PU} = 2.3 \text{ A}$
- $I_{d,ref} = 1.383 \text{ A}$
- $I_{q,ref} = 1.581 \text{ A}$

$$K = \frac{10 \text{ Nm}}{5.12 \text{ Nm}} \times 100 \% = 195 \%$$

$$I = \sqrt{(1.383 \text{ A})^2 + (195 \% \times 1.581 \text{ A})^2} = 3.38 \text{ A}$$

$$I_{2N,PU} \times 1.8 = 4.14 \text{ A}$$

$$3.38 \text{ A} < 4.14 \text{ A}$$

$$M_k/M_B = 1.18$$

$$1.18 > 1$$

Results: $B304 = 195\%$ and $B305 = -195\%$

17.7.10 Bedding in the brake

For the actions B301 Grind brake and B302 Brake 2 grind, the brake repeatedly engages for approximately 0.7 s and then is released for approximately 0.7 s while the motor rotates at approximately 20 rpm. This grinds off any deposits on the friction surface that can negatively influence the holding function of the brake.

Brake 2 is available exclusively in combination with the SE6 safety module.

DANGER!

Risk of fatal injury due to gravity-loaded vertical axis!

During this action, the brakes are released and movement starts. The motor cannot generate any or can only generate limited torque/force during this time. This can cause a gravity-loaded vertical axis to drop.

- Make sure that safe movement in the specified travel range is possible.
 - Secure the area extending beyond the travel range for the case of further lowering of the gravity-loaded vertical axis.
-

Required parameters

You can define the following parameters:

- How often the brake engages while rotating in one direction (B308)
- How often the drive should rotate in each direction (B309)
- Whether a direction of rotation is blocked (B306)

Set speed/velocity and travel range

- Synchronous servo motors and asynchronous motors:
 - Fixed set speed: 20 rpm
 - Travel range: $B308 \times 0.5$ motor revolutions
- Synchronous linear motors:
 - Fixed set velocity: 20 m/min
 - Travel range: $B308 \times 0.5$ m

Results

After the action is started, the progress can be observed in parameter B301[1] for brake 1 and in B302[1] for brake 2. After the action is completed, the result for brake 1 can be called up in B301[2] and for brake 2 in B302[2].

17.7.11 Special case of load changes when the power unit is switched off

Depending on the boundary conditions of the machine, it may make sense to use different settings.

Recommendation for commissioning with gravity-loaded axes

If load changes occur only when the power unit is switched on, leave the presets.

On the other hand, if load changes also occur when the power unit is switched off, reduce the correcting process when the brakes are released:

1. F00 Brake:
Select 2: Do not save torque/force to save F103 only in volatile memory.
2. F102 Torque/force feed forward:
Enter the determined value for the base load so that only the load difference needs to be adjusted when the load changes.
3. Reduce the correcting process when releasing the brakes by optimizing the velocity controller.

Determining the base load

1. F102 Torque/force feed forward:
Set the value to 0.0%.
2. Load the axis with the base load.
3. Select the Jog control panel wizard.
4. Enable the axis and let it stand in one position with released brakes in active position control.
5. Determine a stable value for E02 using a scope image; this value corresponds to the base load.
6. Select the Jog control panel wizard.
7. Deactivate the enable signal of the axis.
8. F102 Torque/force feed forward:
Enter the determined base load.
9. A00 Save values:
Save the value in non-volatile memory.

18 Predictive Maintenance

Predictive Maintenance (PMR) in the context of Industry 4.0 enables a machine to predict and signal the optimal time when components should be serviced or replaced.

Especially in industrial automation technology, geared motors are system-relevant components and therefore very important for predictive analysis. One way to infer the service life of a geared motor is based on the loads to which the gear unit is subjected during its lifetime.

The Predictive Maintenance function in the drive controller monitors your connected geared motor. Its life performance is calculated using a model-based analysis procedure and mapped in parameters. These parameters can be displayed via the higher-level controller or in the DriveControlSuite commissioning software. This allows you to plan maintenance optimally and proactively. The solution includes 3 essential components. The load matrix is a solid data base for recording the real-world load situations of your machine and improving quality and economic efficiency. The life performance indicator is the value for the calculated life performance of the geared motor. The recommendation to replace the geared motor can be displayed in DriveControlSuite and is also provided to the controller as a parameter that can be read out.

Predictive Maintenance is automatically active for geared motors with an electronic nameplate as of production date 04/2022. For geared motors without an electronic nameplate or for older geared motors, monitoring can be activated manually in the DriveControlSuite commissioning software by using a wizard (V 6.5-G and later and associated firmware in V 6.5-G and later).

Your advantages at a glance

- Prognosis of the optimal time for maintenance
- Extension of the maintenance intervals
- Reduction of spare part inventories through controlled procurement
- Service concepts

Predictive Maintenance requires no additional external sensors, no additional wiring and no additional components.

18.1 Legal disclaimer

As of 2022 in DriveControlSuite in V 6.5-G or later, functions that estimate the aging and wear of the components used have been implemented in our drive systems.

The estimates are used to make various kinds of predictions to provide support for decisions about preventative replacement. This computer-based support is usually called Predictive Maintenance or something similar.

As development matures, this support is expected to become increasingly precise. On the one hand, this is partly due to our growing statistical knowledge. On the other hand, the algorithms are also refined over time and the number of sensors used increases.

Nevertheless, statistical errors are to be expected. In principle, there are two types of errors:

- False positive: The algorithm predicts failure in the future, although damage has already occurred in the system.
- False negative: The algorithm recommends replacement although the service life is evidently still long.

By using this function, it is acknowledged that the occurrence of statistical errors is typical of the system and is not cause for any liability on the part of the manufacturer. There is no entitlement to compensation for damages due to a miscalculation by the algorithm.

18.2 Displaying the state

Open the corresponding wizard in DriveControlSuite if you want to check the state of Predictive Maintenance and the relevant parameters.

- ✓ There is an online connection between DriveControlSuite and the drive controller or reverse documentation is available.
- 1. Select the respective drive controller in the project tree and click on the configured axis whose monitoring you would like to check in the Project menu > Wizard area.
- 2. Select the Predictive Maintenance wizard.
- ⇒ The state is displayed directly as an icon with a corresponding note.
- ⇒ R100 PRM state:
Displays the state of Predictive Maintenance. If R100 = 0: Inactive, you must configure Predictive Maintenance manually.
- ⇒ R101 PRM life performance indicator:
Displays the calculated life performance of the geared motor; from a value $\geq 90\%$, replacement of the geared motor is recommended.
- ⇒ R112 PRM gear unit designation:
Displays the type designation of the geared motor being monitored in Predictive Maintenance.

18.3 Configuring Predictive Maintenance

Predictive Maintenance is automatically active for geared motors with an electronic nameplate as of production date 04/2022. Configure monitoring in DriveControlSuite only in the following cases:

- Geared motors with a manufacturing date prior to 04/2022
- Geared motors without an electronic nameplate

In the cases mentioned above, Predictive Maintenance is inactive. First check the status of Predictive Maintenance with an existing online connection (see [Displaying the state](#) [▶ 328]). If R100 = 0: Inactive, you can then carry out the manual configuration in offline mode.

Configuring Predictive Maintenance via the serial number

- ✓ You have the serial number of the gear unit.
1. Select the relevant drive controller in the project tree and click on the first projected axis in the Project menu > Wizard area.
 2. Select the Predictive Maintenance wizard.
 3. Click Configure Predictive Maintenance (Internet).
 - ⇒ The Configure Predictive Maintenance (Internet) dialog box opens.
 4. Click Proxy settings.
 - ⇒ The Proxy settings dialog box opens.
 5. Select the desired option for the proxy setting.
For manual proxy configuration:
 - 5.1. If you are using a proxy server, specify the name of the proxy server or the IP address in the address field and the port of the proxy server in the Port field.
 - 5.2. If you are using a proxy server with a login, also specify the username and password for login.
 - 5.3. Use Test connection to make sure that a connection to the proxy server is possible.
 6. Confirm with OK.
 - ⇒ The Proxy settings dialog box closes.
 7. Enter the serial number of your gear unit in the Configure Predictive Maintenance (Internet) dialog box.
 8. Click Start download.
 - ⇒ The data is downloaded and automatically written to the associated parameters.
 9. After a successful download, confirm with OK
 - ⇒ You have activated Predictive Maintenance.

Then transfer the configuration to the drive controller, save it and restart the drive controller (see Transmitting and saving the configuration).

Configuring Predictive Maintenance manually

If automatic configuration via the serial number fails, you can alternatively configure Predictive Maintenance manually.

Information

The required information can be found in the order confirmation for your gear unit, for example. Alternatively, you can scan the QR code on the nameplate or retrieve it online using the serial, delivery note or invoice number at: <https://id.stober.com>.

- ✓ The order confirmation is available to you or you have access to the electronic product ID of your gear unit.
- 1. Select the relevant drive controller in the project tree and click on the first projected axis in the Project menu > Wizard area.
- 2. Select the Predictive Maintenance wizard.
- 3. Click Configure Predictive Maintenance (local).
 - ⇒ The Configure Predictive Maintenance (local) dialog box opens.
- 4. Select the series of your gear unit.
- 5. Select the size of your gear unit.
- 6. Then select your gear unit from the list.
- 7. Confirm with OK.
 - ⇒ You have activated Predictive Maintenance.


Then transfer the configuration to the drive controller, save it and restart the drive controller (see Transmitting and saving the configuration).

Configuring Predictive Maintenance using the database file

If STOBER has provided you with a database containing your specific gear unit data, you can load it into DriveControlSuite and then configure your gear unit manually.

Information

The required information can be found in the order confirmation for your gear unit, for example. Alternatively, you can scan the QR code on the nameplate or retrieve it online using the serial, delivery note or invoice number at: <https://id.stober.com>.

- ✓ You have saved the database containing your gear unit data locally.
- ✓ The order confirmation is available to you or you have access to the electronic product ID of your gear unit.
- 1. Select the relevant drive controller in the project tree and click on the first projected axis in the Project menu > Wizard area.
- 2. Select the Predictive Maintenance wizard.
- 3. Click the  button.
 - ⇒ The Open PRM database dialog box opens.
- 4. Navigate to the directory, select the database and open it.
 - ⇒ The Configure Predictive Maintenance (local) dialog box opens.
- 5. Select the series of your gear unit.
- 6. Select the size of your gear unit.
- 7. Then select your gear unit from the list.
- 8. Confirm with OK.
 - ⇒ You have activated Predictive Maintenance.

Then transfer the configuration to the drive controller, save it and restart the drive controller (see Transmitting and saving the configuration).

18.4 Sending the load matrix

Open the associated wizard in DriveControlSuite and send the load matrix to STOBER if you need assistance with data analysis, for example. With an existing online connection, the load matrix is read from the drive controller and sent as a JSON file. In offline mode, you can send a load matrix already exported in JSON format.

Information

It is not possible to infer specific machine cycles based on the load matrix. The load matrix contains only highly condensed, statistical features.

Sending the load matrix (drive controller)

- ✓ Predictive Maintenance is active (R100 = 1: Active).
 - ✓ There is an online connection between DriveControlSuite and the drive controller or reverse documentation is available.
1. Select the relevant drive controller in the project tree and click on the projected axis whose load matrix you want to send in the project menu > Wizard area.
 2. Select the Predictive Maintenance wizard > Load matrix.
 3. Fill in the required fields.
 4. Click Send load matrix (drive controller).
 - ⇒ The Send load matrix (drive controller) dialog box opens.
 - ⇒ The source, destination and amount of data of the current load matrix are displayed.
 5. Click Proxy settings.
 - ⇒ The Proxy settings dialog box opens.
 6. Select the desired option for the proxy setting.
For manual proxy configuration:
 - 6.1. If you are using a proxy server, specify the name of the proxy server or the IP address in the address field and the port of the proxy server in the Port field.
 - 6.2. If you are using a proxy server with a login, also specify the username and password for login.
 - 6.3. Use Test connection to make sure that a connection to the proxy server is possible.
 7. Confirm with OK.
 - ⇒ The Proxy settings dialog box closes.
 8. In the Send load matrix (drive controller) dialog box, click Send.
 - ⇒ The sending process starts and the data is transmitted to STOBER.
 9. Close the dialog box after sending has been completed successfully.

Sending the load matrix (directory)

- ✓ You have exported the load matrix in JSON format.
- 1. Select the relevant drive controller in the project tree and click on the projected axis whose exported load matrix you want to send to STOBER in the project menu > Wizard area.
- 2. Select the Predictive Maintenance wizard > Load matrix.
- 3. Click Send load matrix (directory).
 - ⇒ The dialog box for selecting the file opens.
- 4. Navigate to the load matrix previously exported in JSON format and select it.
- 5. Click Open.
 - ⇒ The Send load matrix (directory) dialog box opens.
 - ⇒ The source, destination and data volume of the current load matrix are displayed in the dialog box.
- 6. Click Proxy settings.
 - ⇒ The Proxy settings dialog box opens.
- 7. Select the desired option for the proxy setting.
For manual proxy configuration:
 - 7.1. If you are using a proxy server, specify the name of the proxy server or the IP address in the address field and the port of the proxy server in the Port field.
 - 7.2. If you are using a proxy server with a login, also specify the username and password for login.
 - 7.3. Use Test connection to make sure that a connection to the proxy server is possible.
- 8. Confirm with OK.
 - ⇒ The Proxy settings dialog box closes.
- 9. In the Send load matrix (directory) dialog box, click Send.
 - ⇒ The sending process starts and the data is transmitted to STOBER.
- 10. Close the dialog box after sending has been completed successfully.

18.5 Exporting the load matrix

If you want to check or analyze the data, use the associated DriveControlSuite wizard to export the load matrix. With an existing online connection, the load matrix is read directly from the drive controller for export. If the data in your project is already available in DriveControlSuite, you can also export the data in offline mode.

- ✓ Predictive Maintenance is active (R100 = 1: Active).
 - ✓ There is an online connection between DriveControlSuite and the drive controller or reverse documentation is available.
1. Select the relevant drive controller in the project tree and in the Project menu > Wizard area click on the projected axis whose load matrix you want to export.
 2. Select the Predictive Maintenance wizard > Load matrix.
 3. Fill in the required fields.
 4. Click Export load matrix (directory).
 - ⇒ The Export load matrix (directory) dialog box opens.
 5. Select the directory to which you want to export the load matrix.
 6. Select the desired file type (JSON or CSV).
 7. Assign a file name and select `.json` or `.csv` as the file extension.
 8. Confirm with Save.
- ⇒ The load matrix is saved as a JSON or CSV file (*.json, *.csv).

18.6 Resetting the load matrix

The load matrix is stored in non-volatile memory on the Paramodul along with the life performance indicator every 30 minutes.

You can manually reset the load matrix as necessary.

If the Paramodul is inserted, the existing load matrix is moved to a backup folder before the reset. During the reset, both the load matrix on the Paramodul and the load matrix stored in volatile memory in the drive controller are reset.

- ✓ Predictive Maintenance is active (R100 = 1: Active).
1. Select the relevant drive controller in the project tree and click on the projected axis whose load matrix you want to reset in the Project menu > Wizard area.
 2. Select the Predictive Maintenance wizard > Load matrix > Reset load matrix.
 3. Click Reset load matrix.
- ⇒ The load matrix is reset.
 - ⇒ R105[1] indicates the progress.
 - ⇒ R105[2] outputs the result of the action.

18.7 Displaying a 3D load matrix

The load matrix represents the frequency distribution of speeds and torques that occurred at the output of the monitored geared motor. If you want to check the speeds and torques that have occurred, open the associated wizard in DriveControlSuite for a three-dimensional, rotatable display of the load matrix. With an existing online connection, the load matrix is read directly from the drive controller for the display. If the data in your project is already available in DriveControlSuite, the load matrix can also be displayed in offline mode.

- ✓ Predictive Maintenance is active (R100 = 1: Active).
 - ✓ There is an online connection between DriveControlSuite and the drive controller or reverse documentation is available.
1. Select the relevant drive controller in the project tree and click on the projected axis whose load matrix you want to display in the Project menu > Wizard area.
 2. Select the Predictive Maintenance wizard > Load matrix > Load matrix 3D.
 - ⇒ The load matrix is displayed as a 3D column diagram.
 3. Customize the display by changing the default settings for time and scaling according to your needs.

For more information on operation, see [3D load matrix](#) [▶ 339].

18.8 Resetting the life performance indicator

The life performance indicator is stored in non-volatile memory in the drive controller every 10 minutes, and on the Paramodul together with the load matrix every 30 minutes.

In certain cases, you may need to manually reset the life performance indicator:

- After replacing a geared motor without an electronic nameplate with an identical geared motor
- After servicing a geared motor (with or without electronic nameplate)

In both cases, monitoring remains active for the entire period. However, since the life performance indicator of the replaced or serviced geared motor has the value 0%, you must also reset the life performance indicator in the drive controller.

Information

Resetting the life performance indicator also resets the operating time of the gear unit and the counter for instances of exceeding the torque for Predictive Maintenance (R123, R124).

- ✓ Predictive Maintenance is active (R100 = 1: Active).
1. Select the relevant drive controller in the project tree and click on the first projected axis whose life performance indicator must be reset in the Project menu > Wizard area.
 2. Select the Predictive Maintenance wizard > Reset life performance indicator.
 3. Click Reset life performance indicator.
 - ⇒ The life performance indicator is reset.
 - ⇒ R104[1] indicates the progress.
 - ⇒ R104[2] outputs the result of the action.
 - ⇒ R101 displays the life performance indicator.

18.9 Information on activation, operation and replacement

Pay attention to the following information on activating Predictive Maintenance and for operating and replacing components.

Activation

The following requirements apply for successful activation of Predictive Maintenance:

- STOBER system (consisting of drive controllers and geared motors from STOBER)
- Automatic activation for geared motors with a manufacturing date as of 04/2022
- Manual configuration required for geared motors with an older manufacturing date or geared motors without an electronic nameplate
- Inserted Paramodul for non-volatile storage of the load matrix
- No linear motor (control mode B20 ≠ 70: SLM - vector control)
- Gear units not connected in series, as this is not supported by the life performance indicator

Operation

Predictive Maintenance is continued without interruption after restarting the drive controller if the following requirements are met:

- Paramodul permanently inserted in the drive controller
- Uninterrupted connection of drive controller and geared motor
- Constant gear ratio of the gear unit (Drive Based: C15, C16; CiA 402: A584)

Replacement

After the drive controller has been replaced, monitoring can be continued without interruption by transferring the data from the Paramodul.

After replacing a geared motor with an electronic nameplate, the existing data is not overwritten if it is replaced with a new motor, but a new data record is created. With the original data, the drive controller is able to continue monitoring the geared motor after the geared motor has been replaced.

In certain cases, you may need to manually reset the life performance indicator:

- After replacing a geared motor without an electronic nameplate with an identical geared motor
- After servicing a geared motor (with or without electronic nameplate)

In both cases, monitoring remains active for the entire period. However, since the life performance indicator of the replaced or serviced geared motor has the value 0%, you must also reset the life performance indicator in the drive controller.

18.10 More about Predictive Maintenance?

The following chapters summarize the essential terms of Predictive Maintenance and provide you with further relevant information on the subject.

18.10.1 Load matrix

The load matrix represents the data base for recording the real-world load situations of machines and improving the quality and economic efficiency. It represents the frequency distribution of speeds and torques that occurred at the output of the geared motor. The load matrix and other information are stored in DriveControlSuite in parameter R118. The information relevant for Predictive Maintenance is also made available to the controller via this parameter.

| |
|--------------------|
| Information |
|--------------------|

For performance reasons, parameter R118 is not displayed in the parameter list of DriveControlSuite. The parameter data can be accessed indirectly via the load matrix wizard or via acyclic fieldbus communication.

| |
|--------------------|
| Information |
|--------------------|

The load matrix is only recorded if the axis is enabled (A900 = 1).

Structure and scope

The load matrix divides speed and torque into equidistant classes. For the speed, 21 classes are available for both directions of rotation. The speed range covers -150% to +150% of the nominal speed. For the torque, 31 classes are available for the torque range from -250% to +250% of the nominal torque.

The nominal speed and nominal torque of the load matrix refer to the gear unit output of the geared motor.

The speed range includes:

$$-1.5 \times n_{2N} \text{ to } +1.5 \times n_{2N}$$

The speed is stored in rpm.

The torque range includes:

$$-2.5 \times M_{2N} \text{ to } +2.5 \times M_{2N}$$

The torque is stored in %. The reference value for the percentage torque value is C09.

Torques and speeds outside the respective specified range are assigned to the outermost class:

Values that fall below the lower limit are sorted into the lowest class. Values that exceed the upper limit are sorted into the highest class.

Scaling

The recorded speed classes are scaled as follows, with the label representing the average of the two class limits in each case:

 


Fig. 91: Scaling of the recorded speed classes

The recorded torque classes are scaled as follows, with the label representing the average of the two class limits in each case:

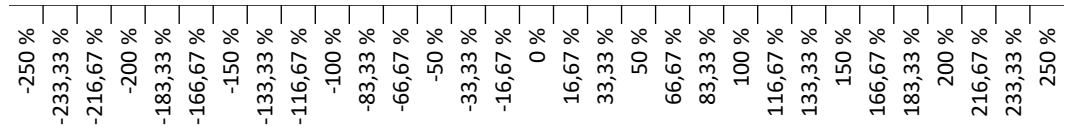


Fig. 92: Scaling of the recorded torque classes

Data export or data transmission

From the DriveControlSuite commissioning software, the load matrix can be exported in JSON data format (*.json) or in CSV data format (*.csv).

Alternatively, you can send the load matrix to STOBER for analysis (see [Reading out and transmitting the load matrix \[▶ 348\]](#)).

18.10.1.1 3D load matrix






The Load matrix 3D wizard shows a graphical display of the load matrix as a 3D column diagram. You can customize the display according to your needs.

3D display

| Button | Role | Description |
|----------------------|--------|---|
| [Left mouse button] | Select | Left-clicking on a column: Selects or deselects a column in the diagram for the Zoom to button button. Selected columns are displayed in turquoise, deselected columns in blue. |
| [Right mouse button] | Rotate | Holding down the right mouse button anywhere on the 3D display and moving the mouse pointer: Rotates the 3D display. |
| [Mouse wheel] | Zoom | Turning the mouse wheel forwards or backwards anywhere on the 3D display: Enlarges or reduces the 3D display. |

Toolbar of the workspace

| Picklist | Option | Description |
|------------|-------------|---|
| Scaling | Linear | Columns are displayed linearly scaled. |
| | Logarithmic | Columns are displayed logarithmically scaled. |
| Time basis | Seconds | Columns are shown in the respective unit. |
| | Minutes | |
| | Hours | |
| | Days | |
| | Months | |
| | Years | |

| Button | Description |
|---|--|
|  | Updates the 3D display (prerequisite: online connection between DriveControlSuite and drive controller). |
|  | Zooms in on the column when selected and rotates the display accordingly or resets the display when the column is not selected (100% scaling, standard angle). |
|  | Reduces the size of the 3D display (zoom out). |
|  | Sets the 3D display to 100% scaling. |
|  | Enlarges the 3D display (zoom in). |

18.10.1.2 Information on the load matrix

The load matrix is stored in DriveControlSuite in parameter R118 along with the life performance indicator in JSON data format. The parameter contains all the information necessary to understand the load matrix.

| |
|--------------------|
| Information |
|--------------------|

For performance reasons, parameter R118 is not displayed in the parameter list of DriveControlSuite. The parameter data can be accessed indirectly via the load matrix wizard or via acyclic fieldbus communication.

| Key | Value | Description |
|---------------------------|------------------|--|
| "version" | String | Version name of the JSON format |
| "id" | String | ID for the type of JSON document |
| "ds6-username" | String | User name that is entered by DriveControlSuite when exporting or sending |
| "ds6-email" | String | Email address that is entered by DriveControlSuite when exporting or sending |
| "ds6-company" | String | Company name that is entered by DriveControlSuite when exporting or sending |
| "ds6-comment" | String | Comment that is entered by DriveControlSuite when exporting or sending |
| "ds6-date" | String | Date on which the file was exported or sent |
| "database-id" | Number | Database ID of the parameterized geared motor |
| "paramodul-sn" | String | Number on the SD card (generated upon first use and acts as identification) |
| "encoder-type" | Number | Type of the connected encoder (0: none, 1: incremental, 2: SSI, 3: EnDat 2.x, 4: HIPERFACE, 5: Resolver, 6: EnDat 3.x) |
| "garmotor-type" | String | Geared motor type |
| "drive-controller-type" | String | Drive controller type |
| "reference" | String | Reference of the drive controller |
| "motor-type" | String | Motor type |
| "axis-number" | Number | Axis number (0/1) |
| "gear-ratio" | Number | Gear ratio of the geared motor |
| "operating-time-h" | Number | Hour value of the operating time |
| "operating-time-m" | Number | Minute value of the operating time |
| "operating-time-s" | Number | Seconds value of the operating time |
| "motor-serial-number" | Number | Serial number of the motor |
| "gearbox-serial-number" | Number | Serial number of the gear unit |
| "encoder-serial-number" | Number | Encoder serial number |
| "drive-production-number" | Number | Production number of the drive controller according to nameplate (S/N) |
| "t-reference" | Number | Reference torque for "t-average" and "t-limits" |
| "t-reference-unit" | String | Unit of reference torque for "t-average" and "t-limits" |
| "t-limits" | Array of numbers | Load matrix: upper limits of the torque classes |
| "t-limit-unit" | String | Load matrix: unit of the upper limits of the torque classes |
| "n-limits" | Array of numbers | Load matrix: upper limits of the speed classes |

| Key | Value | Description |
|--------------------------|------------------|--|
| "n-limit-unit" | String | Load matrix: unit of the upper limits of the speed classes |
| "t-average" | Array of numbers | Load matrix: mean value of the class limits of the torque classes |
| "t-average-unit" | String | Load matrix: unit of the mean value of the class limits of the speed classes |
| "n-average" | Array of numbers | Load matrix: mean value of the class limits of the speed classes |
| "n-average-unit" | String | Load matrix: unit of the mean value of the class limits of the torque classes |
| "t-bucket-count" | Number | Load matrix: number of torque classes |
| "n-bucket-count" | Number | Load matrix: number of speed classes |
| "time-resolution" | String | Load matrix: resolution |
| "m2>m2not-counter" | Number | Number of times 90% of the maximum emergency off torque was exceeded M_{2NOT} |
| "garmotor-run-time" | Number | Operating time of the geared motor |
| "garmotor-run-time-unit" | Number | Unit for the operating time of the geared motor |
| "life-work-indicator" | Number | Value of the life performance indicator |
| "load-matrix" | Array of numbers | Two-dimensional array containing the load matrix; torque is applied to the rows and speed to the columns |

Tab. 302: Information on the load matrix

The following characters or control characters are not allowed in the values of the load matrix:

| Symbol | Description |
|--------|--------------------------|
| " | Quotation marks |
| \ | Backslash |
| \b | Backspace |
| \f | Form feed |
| \n | Line feed |
| \r | Carriage return |
| \t | Horizontal tab character |

Tab. 303: Load matrix: Impermissible characters or control characters

18.10.1.3 Example of a load matrix in JSON format

The following example shows a load matrix in JSON format.

```

{
  "version": "1.1",
  "id": "LoadMatrix",
  "ds6-username": "unknown-username",
  "ds6-email": "unknown-email",
  "ds6-company": "unknown-company",
  "ds6-comment": "unknown-comment",
  "ds6-date": "unknown-date",
  "database-id": 3156,
  "paramodul-sn": "123456789123",
  "encoder-type": 3,
  "garmotor-type": "PH932_0400",
  "drive-controller-type": "SD6A36",
  "reference": "T1",
  "motor-type": "EZ805U",
  "axis-number": 0,
  "gear-ratio": 40.0,
  "operating-time-h": 129,
  "operating-time-m": 13,
  "operating-time-s": 24,
  "motor-serial-number": 123456789,
  "gearbox-serial-number": 123456789,
  "encoder-serial-number": 123456789,
  "drive-production-number": 1234567,
  "t-reference": 2644.0,
  "t-reference-unit": "Nm",
  "t-limits": [-2.417, -2.250, -2.083, -1.917, -1.750, -1.583, -1.417, -1.250,
-1.083, -0.917, -0.750, -0.583, -0.417, -0.250, -0.083, 0.083, 0.250, 0.417, 0.583,
0.750, 0.917, 1.083, 1.250, 1.417, 1.583, 1.750, 1.917, 2.083, 2.250, 2.417,
2.583],
  "t-limit-unit": "%",
  "n-limits": [-71.250, -63.750, -56.250, -48.750, -41.250, -33.750, -26.250,
-18.750, -11.250, -3.750, 3.750, 11.250, 18.750, 26.250, 33.750, 41.250, 48.750,
56.250, 63.750, 71.250, 78.750],
  "n-limit-unit": "rpm",
  "t-average": [-2.500, -2.333, -2.167, -2.000, -1.833, -1.667, -1.500, -1.333,
-1.167, -1.000, -0.833, -0.667, -0.500, -0.333, -0.167, 0.000, 0.167, 0.333, 0.500,
0.667, 0.833, 1.000, 1.167, 1.333, 1.500, 1.667, 1.833, 2.000, 2.167, 2.333,
2.500],
  "t-average-unit": "%",
  "n-average": [-75.000, -67.500, -60.000, -52.500, -45.000, -37.500, -30.000,
-22.500, -15.000, -7.500, 0.000, 7.500, 15.000, 22.500, 30.000, 37.500, 45.000,
52.500, 60.000, 67.500, 75.000],
  "n-average-unit": "rpm",
  "t-bucket-count": 31,
  "n-bucket-count": 21,
  "time-resolution": "1us",
  "m2>m2not-counter": 0,
  "garmotor-run-time": 0,
  "garmotor-run-time-unit": "s",
  "life-work-indicator": 0.000280,
  "load-matrix": [
    [0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
    [0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
    [0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
    [0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
    [0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
    [0, 0, 0, 0, 1000, 3000, 4000, 4000, 3000, 4000, 1000, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
    [0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
    [0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 2000, 4000, 4000, 3000, 4000, 3000, 0, 0, 0, 0, 0],
    [0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
    [0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
    [0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
    [0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0]
  ]
}

```

```
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 20000, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 41000, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 20000, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 3000, 4000, 4000, 3000, 4000, 2000, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 1000, 4000, 4000, 3000, 4000, 3000, 1000, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0],
[0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0, 0]
]
```

18.10.1.4 Memory requirement of the load matrix

The maximum required memory space is 16 KiB (Kibibyte) per load matrix in JSON format.

The load matrix is saved in duplicate to prevent data loss. Consequently, the maximum memory requirement on the Paramodul of the drive controller is 32 KiB.

When a geared motor is replaced by a new geared motor, new JSON files are generated for it. Accordingly, the required memory space for each new geared motor increases by a maximum of 32 KiB.

The required memory space per day depends on the application, but is within the maximum required memory space.

18.10.1.5 Export of the load matrix

You can export the load matrix as a JSON or CSV file.

The load matrix in JSON format is particularly suitable for simple evaluation, comparison and display of the load matrix using programming languages such as Python, C#, C++ or Java and for use in IIoT applications.

The load matrix in CSV format can be displayed and evaluated as a diagram using spreadsheet programs such as Microsoft Excel.

18.10.1.5.1 Load matrix in JSON format

The data of the load matrix in JSON format corresponds to the data of parameter R118.

For information on the individual elements, see [Information on the load matrix](#) [▶ 340].

Evaluation

The data in the JSON file can be analyzed as a diagram using Python and Matplotlib.

Prerequisites:

- Python programming language in V 3.0 or later
- Matplotlib program library in V 1.0.0 or later
- NumPy program library in V 1.0.0 or later

Example

```
# Import required libraries
import json
import matplotlib.pyplot as plt
import numpy as np

# File path for the JSON file
file_path = r"C:\Temp\LoadMatrix_20230912_095707.json"

# Open and read data from the JSON file
with open(file_path, 'r') as file:
    data = json.load(file)

# Create a 3D plot
fig, ax = plt.subplots(subplot_kw={"projection": "3d"})

# Extract and prepare data from the JSON file
speeds = np.array(data["n-average"])
torques = np.array(np.multiply(data["t-average"], data["t-reference"]))

# Set axis labels
ax.set(ylabel="torque in Nm", xlabel="speed in rpm", zlabel="amount in min")

# Define the number of ticks on the axes
plt.locator_params(axis='x', nbins=data["n-bucket-count"])
plt.locator_params(axis='y', nbins=data["t-bucket-count"])

# Prepare data for the 3D surface
speeds, torques = np.meshgrid(speeds, torques)
loads_us = np.array(data["load-matrix"])
loads_minutes = np.divide(loads_us, 1000 * 1000 * 60)

# Draw the 3D surface
ax.plot_surface(speeds, torques, loads_minutes, cmap=plt.cm.coolwarm, linewidth=0,
               antialiased=True)

# Display the plot
plt.show()
```

Information

If copying and pasting the example, correct the syntax indentation after pasting if necessary.

18.10.1.5.2 Load matrix in CSV format

The CSV file contains the Metadata and Load-Matrix sections.

For information on the individual elements, see [Information on the load matrix](#) [▶ 340].

Metadata

The metadata includes all the information required to identify the axis within the machine. It also contains information on the operating time of the axis, the serial numbers of motor, gear unit and encoder components, and the production number of the drive controller. The axis labels of the load matrix, the units in which the load matrix is recorded, and the life performance indicator can also be found in the metadata.

Load-Matrix

The Load-Matrix section contains the data and axis labels of the load matrix. The speed axis label is in the first row after `Start Load-Matrix`; the torque axis label follows in the first column. The speeds can be found in the line `n-average` and the corresponding unit in the line `n-average-unit`. The torques are the result of multiplying `t-average` and `t-reference`. The corresponding unit can be found in the line `t-reference-unit`.

Evaluation

Proceed as follows to create a 3D column chart in Microsoft Excel from the load matrix data:

1. Open the CSV file in Excel.
 2. Select all cells with content between the rows `Start Load-Matrix` and `End Load-Matrix`.
 3. On the **Insert** tab, select **Charts > Insert column or bar chart > 3D column**.
- ⇒ The 3D column diagram is inserted.

18.10.2 Life performance indicator

The life performance indicator is the value for the calculated life performance of the geared motor. No additional external sensor is required to determine it. In DriveControlSuite, the life performance indicator is displayed in the Predictive Maintenance wizard (R101). Values below 100% mean that the geared motor is being operated within its life performance. For values above 100%, the probability of failure increases. From a value of 90%, it is recommended to replace the geared motor and a corresponding message is output in parameter R100.

| |
|--|
| Information |
| Increasing values do not mean that there is damage to the geared motor. Operation of the geared motor is also possible at values > 100%. |

| |
|--|
| Information |
| The life performance indicator is calculated and updated only if the axis is enabled (A900 = 1). |

The life performance indicator increases monotonically: faster with greater load, slower with lesser load.

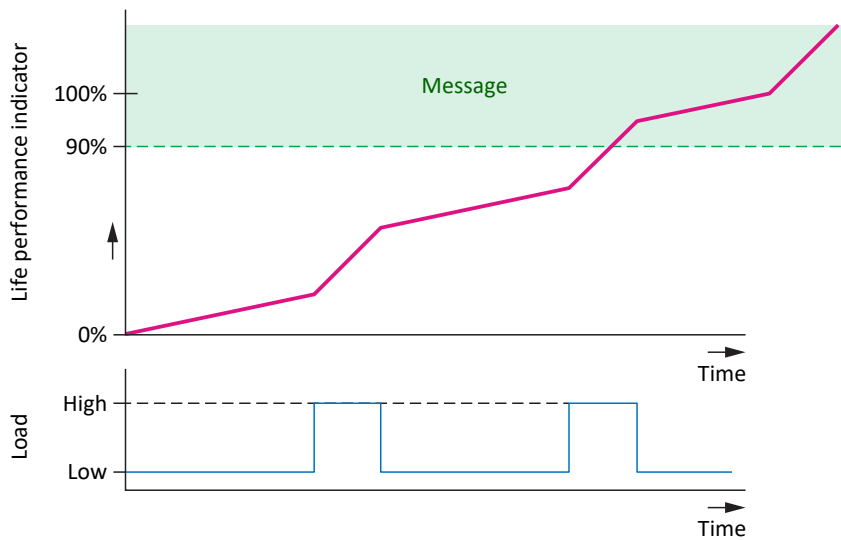


Fig. 93: Signaling area

The algorithm for the life performance indicator is continuously being further developed.

18.10.3 Update and storage cycles

The action A00 Save values has no influence on the saving of Predictive Maintenance data.

Load matrix

The load matrix is stored in non-volatile memory on the Paramodul along with the life performance indicator every 30 minutes.

The data for the load matrix (speeds and torques) is sampled with the cycle time set in A150.

In the drive controller, the load matrix is updated with the cycle time set in A150.

If the drive controller is switched off before the load matrix data is automatically saved every 30 minutes, the data will be lost.

Life performance indicator

The life performance indicator is stored in non-volatile memory in the drive controller every 10 minutes, and on the Paramodul together with the load matrix every 30 minutes.

The value of the life performance indicator is updated in the drive controller twice per minute.

Unlike for the load matrix, a Paramodul is not absolutely necessary for the life performance indicator because of the non-volatile storage in the drive controller.

18.10.4 Recommendation for geared motor replacement

The recommendation to replace the geared motor is displayed in DriveControlSuite in the Predictive Maintenance wizard (R100). The recommendation is triggered when Predictive Maintenance is active and the life performance indicator reaches a value $\geq 90\%$ (R101).

18.10.5 Reading out and transmitting the load matrix

Would you like to know more about the real-world load situation of your machine and its optimization potential? Would you like to support the further development of our algorithm? If you send us your load matrix, we will help you in analyzing or visualizing your data. We will also be able to take your specific machine behavior into consideration for further development.

Information

It is not possible to infer specific machine cycles based on the load matrix. The load matrix contains only highly condensed, statistical features.

Reading out data

The following graphic describes the 3 options for reading out the data.

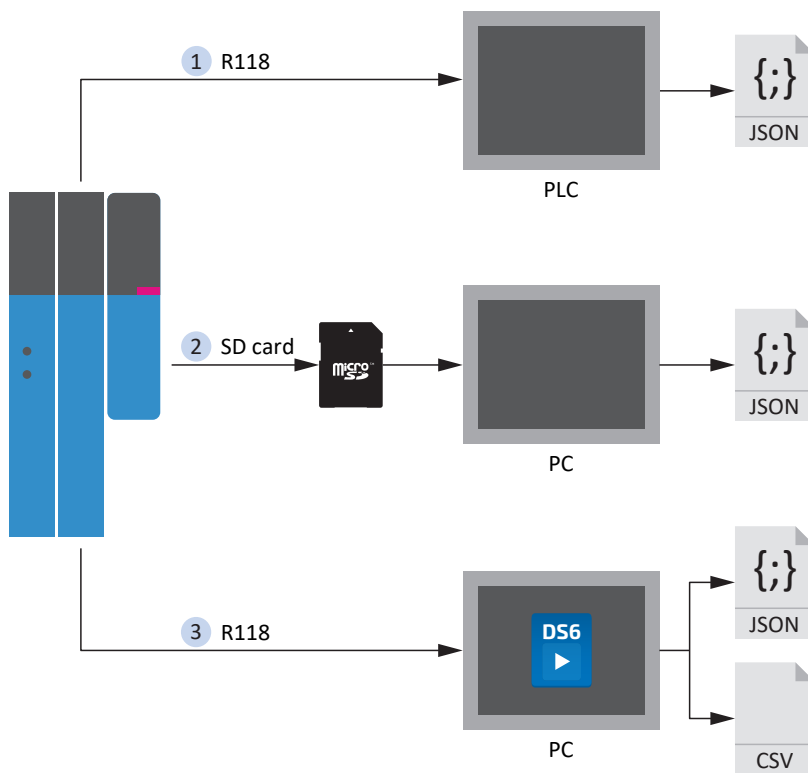


Fig. 94: Predictive Maintenance: Options for readout

1. Via the controller (in preparation)

Function blocks for controllers are in preparation that will enable the controller to read the parameter R118 and write the data to a JSON file.

2. From the SD card

You can read out the data on your PC directly from the SD card in the Paramodul.

The JSON files are stored in the following form:

- If a serial number is available for the motor, it is used for the file name.
- If no serial number is available for the motor, the file name consists of 8 characters (hexadecimal) which are generated from the CRC checksum of B00.

| File name | Example |
|-------------------------|--------------|
| PRM\[Serial number].PXX | 03774434.P00 |
| PRM\[8 characters].PXX | 0BB5A846.P00 |

Tab. 304: Predictive Maintenance files on SD card

To avoid data loss, the files are each stored twice on the SD card.

The file extensions have the following meaning:

| File extension | Meaning |
|----------------|--------------------|
| P00 | JSON |
| P01 | JSON (backup file) |

Tab. 305: Meaning of file extensions on SD card

3. Via DriveControlSuite

Use the associated wizard in DriveControlSuite to export the load matrix. For the export, parameter R118 is read out from the drive controller directly if an online connection exists or from your project in offline mode.

Transmitting the data

You can provide the data to STOBER via upload through DriveControlSuite or by email to prm_data@stober.de.

19 Diagnostics

LEDs on the top and front give you initial information about the device state as well as the states of the physical connection and the communication. In the event of an error or fault, you will receive detailed information through the DriveControlSuite commissioning software.

19.1 Drive controllers

The drive controllers have diagnostic LEDs that visually indicate the state of the drive controller as well as the states of the physical connection and communication.

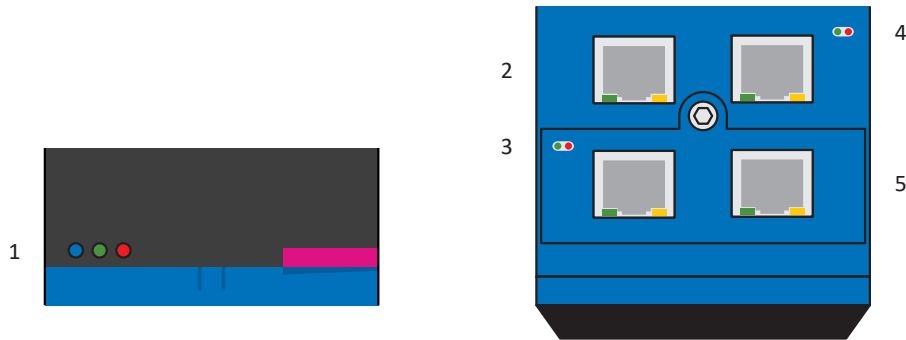


Fig. 95: Positions of the diagnostic LEDs on the front and top of the drive controller

- 1 Drive controller state
- 2 Service network connection
- 3 Fieldbus state
- 4 IGB state
- 5 Fieldbus network connection

19.1.1 Drive controller state: LEDs

3 LEDs on the front of the device provide information about the state of the drive controller.

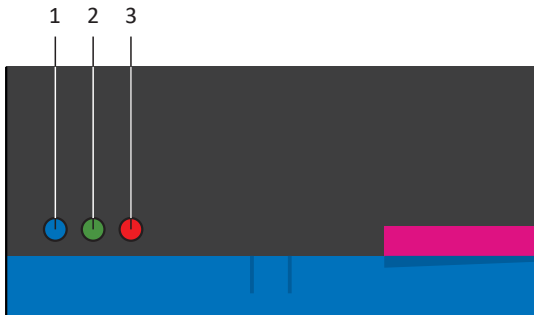


Fig. 96: LEDs for the state of the drive controller on the front of the SD6

- 1 Blue: REMOTE
- 2 Green: RUN
- 3 Red: ERROR

| Blue LED | Conduct | Description |
|----------|--------------|--|
| | Off | Remote maintenance not active |
| | Single blink | Connection established to the teleserver |
| | Flashing | Drive controller waits for connection to DriveControlSuite |
| | On | Remote maintenance is active |

Tab. 306: Meaning of the blue LED (REMOTE)

| LEDs: Green/Red | Conduct | Description |
|---|----------------|--|
|  | Off | No supply voltage |
|  | Off | |
|  | Single blink | STO active |
|  | Off | |
|  | Flashing | Ready to switch on |
|  | Off | |
|  | On | Operation enabled |
|  | Off | |
|  | Rapid flashing | Data is written to internal memory and the SD card |
|  | Off | |
|  | On | Warning in the 4: Enabled device state |
|  | Flashing | |
|  | Flashing | Warning in the 2: Ready for switch-on device state |
|  | Flashing | |
|  | Off | Faults |
|  | On | |
|  | Off | No configuration active |
|  | Rapid flashing | |

Tab. 307: Meaning of the green and red LED (RUN)

19.1.2 Drive controller state: Display

Event displays on the display give you additional information about the state of the drive controller.

For a listing of all events with descriptions, see [Events \[► 365\]](#).

Display of the reaction

If the event is parameterized as **Message**, it appears flashing in the lower display. An application is not affected by a message; that is, the operation continues. A message is not acknowledged, but remains pending until the cause disappears.

A **Warning** is displayed by the corresponding, flashing words. In addition, the display shows the event and time remaining until the cause is remedied. If the cause disappears within this time, the warning is reset. An application is not affected by a warning. If the cause is not remedied, the warning becomes a fault after the defined time expires.

If an event occurs with the **Fault** level, this is indicated by the corresponding, flashing words. The drive controller immediately changes to the fault reaction device state. The event is shown on the display. A fault must be acknowledged. For many events, the drive controller provides information about the cause. This is additionally output on the display and is indicated by a number:



Fig. 97: Appearance of a fault on the display

Causes that are not documented in the event descriptions with a number are not shown on the display. In this case, the documentation only provides information about potential errors.

Events during active configuration

Once the device start-up is completed and the configuration is active, the events identified by a number monitor the operation. For some of these events, acknowledgment is possible on the operating unit or can be programmed via digital input. Communication and operation of the drive controller are not affected. For further diagnostics, the occurrence of an event is noted by a counter. You can find the Fault counter in parameter group Z. Some of these events can be parameterized, e.g. Event 39: Overtemperature drive controller i2t.

Error when the drive controller is started

When the drive controller is started, the configuration from the SD card/Paramodul is loaded. Then the configuration is started. During both steps, detailed error messages can be generated that can be output on the display and indicated by an * . You can find more information about the cause and the required measures in the corresponding event descriptions.

19.1.2.1 *NoConfiguration

Error when the drive controller is started:

- The power unit remains switched off
- The brakes remain engaged
- The brake chopper remains switched off

ParaModul Error

| Cause | | Check and action |
|--------------------|---|--|
| 1:Read Error | Control unit was switched off while saving (A00) | Transfer the drive controller configuration to the drive controller from a project file using DS6 and save the configuration on the SD card/in the Paramodul (A00); fault cannot be acknowledged |
| | SD card(s)/Paramodul empty or not inserted | |
| | SD card(s)/Paramodul defective or unformatted | Replace the Paramodul; fault cannot be acknowledged |
| 3:Update Firmware! | The configuration on the SD card/in the Paramodul cannot be executed with the current firmware because it uses unknown configuration memory areas | Update the firmware; fault cannot be acknowledged |

Tab. 308: *NoConfiguration, Cause: ParaModul Error – Causes and actions

ConfigStartError

| Cause | | Check and action |
|----------------------|---|--|
| 1:Parameters lost | Control unit was switched off while saving (A00) | Transfer the drive controller configuration to the drive controller from a project file using DS6 and save the configuration on the SD card/in the Paramodul (A00); fault cannot be acknowledged |
| 4:Non-volatile lost | Save (A00) was not carried out | Transfer the drive controller configuration to the drive controller from a project file using DS6 and save the configuration on the SD card/in the Paramodul (A00); fault cannot be acknowledged |
| 5:Unknown Block | The configuration saved on the SD card/ in the Paramodul comes from a newer firmware that knows more system blocks | Update the firmware; fault cannot be acknowledged |
| 6:Unknown String | The configuration saved on the SD card/ in the Paramodul comes from newer firmware that knows more texts (e.g. names of the system default block parameters) | |
| 7:Unknown Scale | The configuration saved on the SD card/ in the Paramodul comes from newer firmware that knows more scaling functions | |
| 8: Unknown Limit | The configuration saved on the SD card/ in the Paramodul comes from newer firmware that knows more limit value functions | |
| 9:Unknown Post-Wr | The configuration saved on the SD card/ in the Paramodul comes from newer firmware that knows more post-write functions | |
| 10:Unknown Pre-Read | The configuration saved on the SD card/ in the Paramodul comes from newer firmware that knows more pre-read functions (mapping of firmware parameters to configuration parameters) | |
| 11:Unknown Hiding | The configuration saved on the SD card/ in the Paramodul comes from newer firmware that knows more hiding functions (hiding of parameters that should be visible depending on other parameters) | |
| 12:Unknown Post-Read | The configuration saved on the SD card/ in the Paramodul comes from newer firmware that knows more post-read functions | |
| 13:Unknown Pre-Write | The configuration saved on the SD card/ in the Paramodul comes from newer firmware that knows more pre-write functions (mapping of firmware parameters to configuration parameters) | |

Tab. 309: *NoConfiguration, Cause: ConfigStartError – Causes and actions

Configuration Stopped

| Cause | Check and action |
|---|--|
| Transfer of the configuration through DS6 was interrupted | Switch the drive controller off and back on to load the previous configuration from the SD card/Paramodul; fault cannot be acknowledged |
| | Transfer the drive controller configuration to the drive controller from a project file using DS6 and save the configuration on the SD card/in the Paramodul (A00); fault cannot be acknowledged |

Tab. 310: *NoConfiguration, Cause: Configuration Stopped – Causes and actions

19.1.3 Service network connection

The LEDs at X3A and X3B on the top of the device indicate the state of the service network connection.

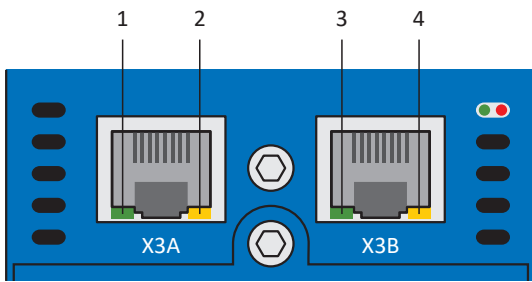


Fig. 98: LEDS for the state of the service network connection on the top of the SD6

- 1 LINK at X3A
- 2 ACTIVITY at X3A
- 3 LINK at X3B
- 4 ACTIVITY at X3B

| Green LED | Conduct | Description |
|-----------|---------|--|
| | Off | Physical connection not available |
| | On | Physical connection to the network is available and link is set up |

Tab. 311: Meaning of the green LED (LINK)

| Yellow LED | Conduct | Description |
|------------|----------|--|
| | Off | Physical connection not available |
| | Flashing | Individual data packets are sent or received |
| | On | Continuous data communication |

Tab. 312: Meaning of the yellow LED (ACTIVITY)

19.1.4 Fieldbus state

The LEDs for the diagnostics of the fieldbus state vary depending on the implemented fieldbus system or communication module.

19.1.4.1 EtherCAT state

The 2 LEDs on the top of the drive controller provide information about the connection between the EtherCAT MainDevice and SubDevice and the state of the data exchange. This information can also be read out in parameter A255.

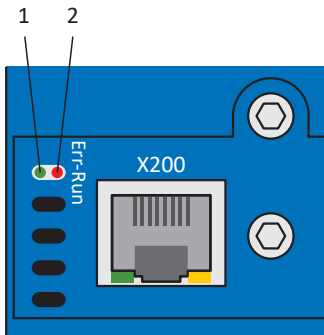







Fig. 99: LEDs for the EtherCAT state

- 1 Green: Run
- 2 Red: Error

| Green LED | Conduct | Operating state | Description |
|-----------|--------------|------------------|---|
| | Off | Init | No communication between the EtherCAT MainDevice and SubDevice; the configuration starts, saved values are loaded |
| | Flashing | Pre-operational | No PDO communication; the EtherCAT MainDevice and SubDevice exchange application-specific parameters via SDOs |
| | Single flash | Safe-operational | The EtherCAT SubDevice sends the current actual values to the EtherCAT MainDevice, ignores its set values and refers to internal default values |
| | On | Operational | Normal operation: The EtherCAT MainDevice and SubDevice exchange set and actual values |

Tab. 313: Meaning of the green LED (Run)

| Red LED | Conduct | Error | Description |
|---|--------------|--------------------------------|--|
|  | Off | No Error | No error |
|  | Flashing | Invalid Configuration | Invalid configuration |
|  | Single flash | Unsolicited State Change | The EtherCAT SubDevice changed operating states by itself |
|  | Double flash | Application Watchdog Timeout | The EtherCAT SubDevice did not receive new PDO data during the configured watchdog timeout |
|  | On | Application controller failure | Error between EtherCAT SubDevice Controller and CPU; switch device off and on again |

Tab. 314: Meaning of the red LED (error)

19.1.4.2 PROFINET state

There are 2 LEDs on the front of the drive controller that provide information about the connection between the controller and drive controller and about the state of the data exchange. This information can also be read out in parameter A271 PN state.

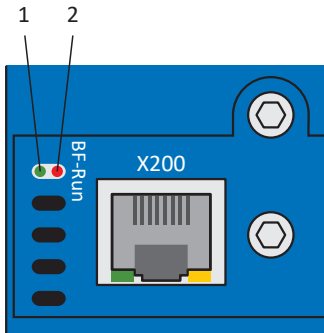










Fig. 100: LEDs for the PROFINET state

- 1 Red: BF (bus error)
- 2 Green: Run

| Red LED | Conduct | Description |
|---|----------------|--|
|  | Off | No error |
|  | Rapid flashing | Data exchange with controller not active |
|  | On | No network connection |

Tab. 315: Meaning of the red LED (BF)

| Green LED | Conduct | Description |
|---|-----------------------|---|
|  | Off | No connection |
|  | Single blink | Connection is set up to controller |
|  | Single blink, inverse | Controller activates DHCP signal service |
|  | Flashing | Existing connection to controller; data exchange expected |
|  | On | Existing connection to controller |

Tab. 316: Meaning of the green LED (Run)

19.1.4.3 CANopen state

There are 2 LEDs on the top of the drive controller that provide information about the connection between the CANopen master and slave and about the state of the data exchange. This information can also be read out in parameter A245.

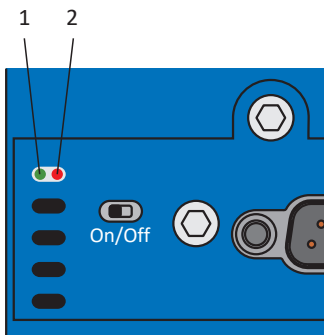


Fig. 101: LEDs for the CAN status

- 1 Green: Run
- 2 Red: Error

| Green LED | Conduct | NMT state | Description |
|-----------|----------|-----------------|---|
| | Off | Initialization | No communication between the CANopen master and slave; CAN bus is initialized, the configuration starts and saved values are loaded |
| | Flashing | Pre-operational | No PDO communication between the CANopen master and slave; CAN bus is active, the drive controller can be parameterized for operation via SDO |
| | 1x flash | Stopped | Communication services are stopped (exception: guarding, heartbeat) |
| | On | Operational | Normal operation: CAN bus is active, all communication services are in operation |

Tab. 317: Meaning of the green LED (Run)

| Red LED | Conduct | Error | Description |
|---------|----------|--|---|
| | Off | No error, no warning | No error |
| | 1x flash | Communication error in the operational state (Warning level) | Check the connection and shielding and correct if necessary |
| | 2x flash | Life guarding event | Check guarding configuration of the controller |
| | 3x flash | SYNC error | Check SYNC configuration of the controller |
| | On | Bus-off | No network connection |

Tab. 318: Meaning of the red LED (error)

19.1.5 IGB state

2 LEDs on the top of the device indicate the IGB state.

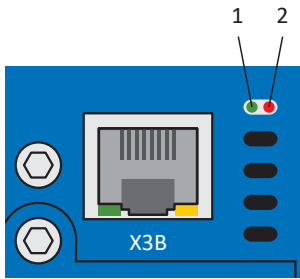


Fig. 102: LEDs for the IGB state on the top of the device

- 1 Green: RUN
- 2 Red: ERROR

| Green LED | Conduct | Description |
|-----------|----------|-----------------------------------|
| | Off | IGB is not active |
| | Flashing | The IGB state is 2: IGB running |
| | On | The IGB state is 3: IGB-motionbus |

Tab. 319: Meaning of the green LED (RUN)

| Red LED | Conduct | Description |
|---------|---------|---|
| | Off | IGB Motion Bus is not used or works correctly |
| | On | The IGB state is 4: IGB-Motionbus Error |

Tab. 320: Meaning of the red LED (ERROR)

19.1.6 Fieldbus network connection

The LEDs for communication diagnostics vary depending on implemented fieldbus system or communication module.

19.1.6.1 EtherCAT network connection

The LEDs LA_{EC}IN and LA_{EC}OUT at X200 and X201 on the top of the device display the state of the network connection.

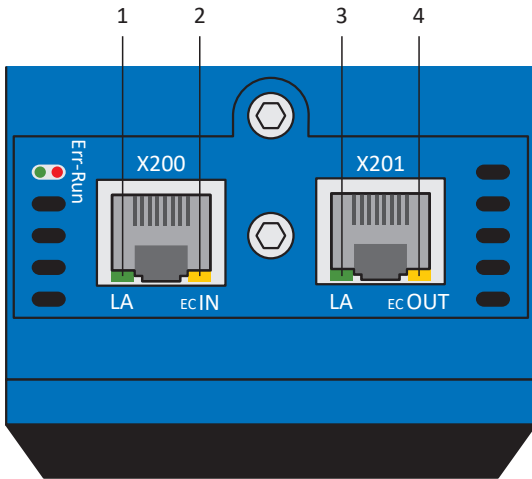


Fig. 103: LEDs for the state of the EtherCAT network connection

- 1 Green: LA_{EC}IN at X200
- 2 Yellow: No function
- 3 Green: LA_{EC}OUT at X201
- 4 Yellow: No function

| Green LED | Conduct | Description |
|-----------|----------|--|
| | Off | No network connection |
| | Flashing | Active data exchange with other EtherCAT nodes |
| | On | Network connection exists |

Tab. 321: Meaning of the green LEDs (LA)

19.1.6.2 PROFINET network connection

The Act. and Link LEDs at X200 and X201 on the top of the device indicate the state of the PROFINET network connection.

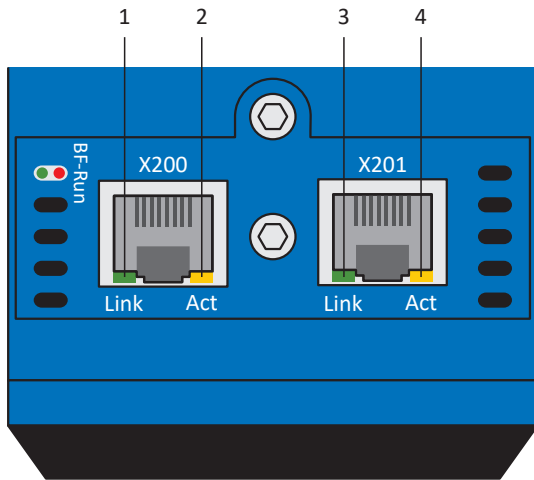






Fig. 104: LEDs for the state of the PROFINET network connection

- 1 Green: Link at X201
- 2 Yellow: Activity at X201
- 3 Green: Link at X200
- 4 Yellow: Activity at X200

| Green LED | Behavior | Description |
|---|----------|---------------------------|
|  | Off | No network connection |
|  | On | Network connection exists |

Tab. 322: Meaning of the green LEDs (Link)

| Yellow LED | Behavior | Description |
|---|----------|---|
|  | Off | No data exchange |
|  | Flashing | Active data exchange with IO controller |

Tab. 323: Meaning of the yellow LEDs (Act.)

19.1.7 Events

The drive controller has a self-monitoring system that uses test rules to protect the drive system from damage. Violating the test rules triggers a corresponding event. There is no possible way for you as the user to intervene in some events, such as the Short/ground event. In others, you can influence the effects and responses.

Possible effects include:

- **Message:** Information that can be evaluated by the controller
- **Warning:** Information that can be evaluated by the controller and becomes a fault after a defined time span has elapsed without the cause being resolved
- **Fault:** Immediate drive controller response; the power unit is disabled and axis movement is no longer controlled by the drive controller or the axis is brought to a standstill by a quick stop or emergency braking

Depending on the event, there are various measures you can take to rectify the cause. As soon as the cause has been successfully rectified, you can usually acknowledge the event immediately. If the drive controller has to be restarted, a corresponding note can be found in the measures.

ATTENTION!

Damage to property due to interruption of a quick stop or emergency braking!

If, when executing a quick stop or emergency braking, a fault occurs or STO is active, the quick stop or emergency braking is interrupted. In this case, the machine can be damaged by the uncontrolled axis movement.

Information

To make it easier for control programmers to set up the human-machine interface (HMI), a list of events and their causes can be found in the STOBER download center at <http://www.stoerber.de/en/downloads/> by searching for `Events`.

19.1.7.1 Overview

The following table shows the possible events at a glance.

| Event |
|--|
| Event 31: Short/ground [▶ 367] |
| Event 32: Short/ground internal [▶ 367] |
| Event 33: Overcurrent [▶ 368] |
| Event 34: Hardware fault [▶ 369] |
| Event 35: Watchdog [▶ 370] |
| Event 36: High voltage [▶ 370] |
| Event 37: Motor encoder [▶ 371] |
| Event 38: Temperature drive controller sensor [▶ 374] |
| Event 39: Overtemperature drive controller i2t [▶ 375] |
| Event 40: Invalid data [▶ 376] |
| Event 41: Temp.MotorTMP [▶ 377] |
| Event 42: TempBrakeRes [▶ 378] |
| Event 43: AI1 wire break [▶ 379] |
| Event 44: External fault 1 [▶ 380] |
| Event 45: Overtemp.motor i2t [▶ 381] |

| Event |
|--|
| Event 46: Low voltage [▶ 382] |
| Event 47: Torque/force-max. limit [▶ 383] |
| Event 48: Brake release monitoring [▶ 384] |
| Event 49: Brake [▶ 385] |
| Event 50: Safety module [▶ 386] |
| Event 51: Virtual master software limit switch [▶ 387] |
| Event 52: Communication [▶ 388] |
| Event 53: Limit switch [▶ 390] |
| Event 54: Following error [▶ 391] |
| Event 55: Option module [▶ 392] |
| Event 56: Overspeed [▶ 394] |
| Event 57: Runtime requirement [▶ 395] |
| Event 58: Encoder simulation [▶ 396] |
| Event 59: Overtemperature drive controller i2t [▶ 397] |
| Event 60: Application event 0 – Event 67: Application event 7 [▶ 398] |
| Event 68: External fault 2 [▶ 399] |
| Event 69: Motor connection [▶ 400] |
| Event 70: Parameter consistency [▶ 401] |
| Event 71: Firmware [▶ 402] |
| Event 72: Brake test timeout – Event 75: Axis 4 brake test timeout [▶ 403] |
| Event 76: Position encoder [▶ 404] |
| Event 77: Master encoder [▶ 407] |
| Event 78: Position limit cyclic [▶ 409] |
| Event 79: Motor/position encoder plausibility [▶ 410] |
| Event 80: Illegal action [▶ 410] |
| Event 81: Motor allocation [▶ 411] |
| Event 82: Hall sensor [▶ 412] |
| Event 83: Failure of one/ all phases (mains) [▶ 413] |
| Event 84: Drop in network voltage when power section active [▶ 414] |
| Event 85: Excessive jump in reference value [▶ 415] |
| Event 88: Control panel [▶ 416] |
| Event 90: Motion block [▶ 417] |

Tab. 324: Events

19.1.7.2 Event 31: Short/ground

The drive controller has a **fault**:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The behavior of the brakes depends on the configuration of the safety module and an optional release override (F06)

The brake chopper is switched off.

ATTENTION!

Material damage due to repeated activation and deactivation or new enable signal!

Repeated activation and deactivation or a new enable signal with an existing short-circuit can lead to a device fault.

- Before the new activation or enable signal, the cause must be found and corrected.

| Cause | Check and action |
|--|--|
| Connection error at the motor | Check the connection and correct it if necessary |
| Defective power cable | Check the cable and replace it if necessary |
| Short-circuit in the motor winding | Check the motor and replace it if necessary |
| Short-circuit in the braking resistor | Check the braking resistor and replace it if necessary |
| Short-circuit/ground fault inside the device | Check whether the fault occurs when switching on the power unit and replace the drive controller if necessary; the fault can only be acknowledged after 30 s |

Tab. 325: Event 31 – Causes and actions

19.1.7.3 Event 32: Short/ground internal

The drive controller has a **fault**:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The behavior of the brakes depends on the configuration of the safety module and an optional release override (F06)

The brake chopper is switched off.

ATTENTION!

Material damage due to repeated activation and deactivation!

Repeated activation and deactivation with an existing short-circuit can lead to a device fault.

- Before the new activation or enable signal, the cause must be found and corrected.

| Cause | Check and action |
|--|--|
| Short-circuit/ground fault inside the device | Replace the drive controller; the fault cannot be acknowledged |

Tab. 326: Event 32 – Causes and actions

19.1.7.4 Event 33: Overcurrent

The drive controller has a **fault** if:

- U30 = 0: Inactive

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with emergency braking** if:

- U30 = 1: Active and
- A29 = 1: Active for Drive Based device controller
or
- U30 = 1: Active and
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by emergency braking
- The brakes are applied in the event of an inactive release override (F06)
- At the end of emergency braking, the power unit is disabled and axis movement is no longer controlled by the drive controller

Information

Emergency braking is only possible for synchronous servo motors, torque motors and synchronous linear motors.

| Cause | | Check and action |
|--|-------------------------------|--|
| Switch-off condition fulfilled (E00 > R04 × R26) | Short acceleration times | Check the actual current using the scope image and reduce the acceleration values if necessary (E00); the fault can only be acknowledged 3 s after the cause has been corrected |
| | Large torque/force limits | Check the actual current using the scope image (E00) and reduce the torque/force limits if necessary (C03, C05); the fault can only be acknowledged 3 s after the cause has been corrected |
| | Wrong drive controller design | Check the design and change the drive controller type if necessary; the fault can only be acknowledged 3 s after the cause has been corrected |
| | Short-circuit/ground fault | Check whether there is a short circuit/ground fault |

Tab. 327: Event 33 – Causes and actions

19.1.7.5 Event 34: Hardware fault

The drive controller has a **fault**:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The behavior of the brakes depends on the configuration of the safety module and an optional release override (F06)

| Cause | | Check and action |
|---|---|---|
| 1: FPGA, 2: NOV control unit, 3: NOV-Power Unit, 6: NOV safety module, 7: Current measurement, 8: power supply, 9: power supply, 10: power supply, 11: power supply, 12: Timer control board | Defective drive controller | Exchange drive controller; fault cannot be acknowledged |
| 13: Communication module adress-/databus, 14: Communication module signal lines, 15: Communication module clock error, 16: Communication module voltage missing, 17: Communication module databus | Defective or incorrectly installed communication module or defective drive controller | Removal and installation of the communication module; replace the communication module or drive controller if necessary; fault cannot be acknowledged |
| 18: Terminal module adress-/ databus, 19: Terminal module signal lines, 20: Terminal module clock error, 21: Terminal module voltage is missing, 22: Terminal module databus | Defective or incorrectly installed terminal module or defective drive controller | Removal and installation of the terminal module; replace the terminal module or drive controller if necessary; fault cannot be acknowledged |
| 23: FPGA, 24: FPGA, 25: FPGA, 26: CPU, 27: CPU, 28: CPU, 29: Communication | Defective drive controller | Exchange drive controller; fault cannot be acknowledged |
| 30: power supply | Defective drive controller | Check encoder power consumption; replace defective or incorrectly selected component; fault cannot be acknowledged |
| | Defective encoder | |
| | Power output of encoder interface outside specification | |

Tab. 328: Event 34 – Causes and actions

19.1.7.6 Event 35: Watchdog

The drive controller has a **fault**:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The behavior of the brakes depends on the configuration of the safety module and an optional release override (F06)

The brake chopper and brake release override are non-functional while the runtime system restarts.

| Cause | | Check and action |
|-------------------------|-----------------------------|--|
| 1: Core 0, 2: Core 1 | Microprocessor at full load | Check the runtime utilization using the scope image (E191) and reduce it using a longer cycle time if necessary (A150) |
| | Microprocessor faulty | Check the connection and shielding and correct them if necessary; replace the drive controller if necessary |

Tab. 329: Event 35 – Causes and actions

19.1.7.7 Event 36: High voltage

The drive controller has a **fault**:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The behavior of the brakes depends on the configuration of the safety module and an optional release override (F06)

| Cause | Check and action |
|--|---|
| Short delay times | Check the DC link voltage during the braking operation using the scope image (E03) and, if necessary, reduce the delay values, use a (larger) braking resistor or connect a DC link |
| Brake chopper deactivated | Check the values of the parameterized braking resistor and correct it if necessary (A21, A22, A23) |
| Braking resistor connection error | Check the connection to the braking resistor and drive controller and correct them if necessary |
| Pulse power of the braking resistor is too low | Check that the braking resistor pulse power is suitable for the application; replace the braking resistor if necessary |
| Brake chopper is defective | Check the DC link voltage during the braking operation using the scope image (E03); the brake chopper is defective if the DC link voltage exceeds the on limit of the brake chopper (R31) without the DC link voltage dropping; replace the drive controller if necessary |
| Supply voltage exceeded | Check the supply voltage for an overrun of the permitted input voltage and adjust it if necessary |

Tab. 330: Event 36 – Causes and actions

19.1.7.8 Event 37: Motor encoder

The drive controller has a **fault** if:

- U30 = 0: Inactive

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with emergency braking** if:

- U30 = 1: Active and
- A29 = 1: Active for Drive Based device controller
or
- U30 = 1: Active and
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by emergency braking
- The brakes are applied in the event of an inactive release override (F06)
- At the end of emergency braking, the power unit is disabled and axis movement is no longer controlled by the drive controller

Information

Emergency braking is only possible for synchronous servo motors, torque motors and synchronous linear motors.

| Cause | | Check and action |
|---------------------------|-----------------------------------|---|
| 1: Parameter <-> encoder | Inconsistent parameterization | Compare the specification of the connected encoder to the corresponding values of the H parameters and correct them if necessary |
| 2: Maximum speed | Exceeded encoder maximum velocity | Check the actual velocity during a movement using the scope image (I88) and adjust the permitted encoder maximum velocity if necessary (I297) |
| | Connection error | Check the connection and shielding and correct them if necessary |
| 6: X4 EnDat encoder found | Inconsistent parameterization | Compare the connected encoder to the parameterized encoder and correct it if necessary (H00) |
| 7: X4 A track/Incremental | Connection error | Check the connection and correct it if necessary |

| Cause | | Check and action |
|---|---------------------------------|--|
| 8: X4 no encoder found | Connection error | Check the connection and correct it if necessary; restart the drive controller to switch the encoder supply back on |
| | Defective encoder cable | Check the cable and replace it if necessary; restart the drive controller to switch the encoder supply back on |
| | Faulty supply voltage | Check the encoder supply voltage and correct it if necessary; restart the drive controller to switch the encoder supply back on |
| | Inconsistent parameterization | Compare the connected encoder to the parameterized encoder and correct it if necessary (H00); restart the drive controller to switch encoder supply back on |
| 10: X4 A track/Clk, 11: X4 B track/Dat, 12: X4 N track | Defective encoder cable | Check the cable and replace it if necessary |
| 13: X4-EnDat alarm | Defective EnDat encoder | Replace the motor; EnDat 2.1 digital, EnDat 2.2 digital: Fault cannot be acknowledged |
| 14: X4 EnDat CRC, 15: X4 double transmission | Connection error | Check the connection and correct it if necessary |
| | Electromagnetic interference | Take EMC recommendations into account [▶ 151] and, if necessary, increase the fault tolerance (B298) |
| 16: X4 busy | Synchronization error | Update firmware |
| 17: EBI encoder low battery | Battery in battery module weak | Replace the battery; reference remains intact |
| 18: EBI encoder battery empty | Battery in battery module empty | Replace the battery |
| | Initial connection | – |
| | Connection error | Check the connection and correct it if necessary |
| | Defective encoder cable | Check the cable and replace it if necessary |
| | Faulty battery module | Check the battery module and replace it if necessary |
| 19: Alarm bit | Encoder fault | Check the specification of the encoder regarding the alarm bit |
| 20: Resolver carrier, 21: Resolver sin/cos undervoltage, 22: Resolver sin/cos overvoltage | Defective encoder cable | Check the cable and replace it if necessary |
| | Incompatible encoder | Compare the specification of the encoder with the corresponding specifications from STOBER and replace the encoder or motor if necessary; fault cannot be acknowledged |
| 24: Resolver failure | Defective encoder cable | Check the cable and replace it if necessary |
| 30: X120 wire break | Defective encoder cable | Check the cable and replace it if necessary |

| Cause | | Check and action |
|------------------------------|----------------------------------|--|
| 35: X120 double transmission | Defective encoder cable | Check the cable and replace it if necessary; fault cannot be acknowledged |
| | Inconsistent double transmission | Check the specification of the connected encoder and deactivate the double transmission (H128) or replace the encoder if necessary |
| | Incompatible encoder | Compare the specification of the encoder with the corresponding specifications from STOBER and replace the encoder or motor if necessary |
| 36: X120 busy | Defective encoder cable | Check the cable and replace it if necessary |
| | Inconsistent parameterization | Compare the connected encoder to the parameterized encoder and correct it if necessary (H120) |
| | Incompatible encoder | Compare the specification of the encoder with the corresponding specifications from STOBER and replace the motor if necessary |
| 43: X140 EnDat alarm | Defective EnDat encoder | Replace the motor |
| 44: X140 EnDat CRC | Connection error | Check the connection and shielding and correct them if necessary |
| | Electromagnetic interference | Take EMC recommendations into account [► 151] and, if necessary, increase the fault tolerance (B298) |

Tab. 331: Event 37 – Causes and actions

19.1.7.9 Event 38: Temperature drive controller sensor

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|---|--|
| Surrounding temperatures too high or too low | Check the surrounding temperature of the drive controller and adjust it to the operating conditions of the drive controller if necessary; the fault can only be acknowledged 30 s after the cause has been corrected |
| Too little air circulation in the control cabinet | Check the minimum clearances and adjust them if necessary; the fault can only be acknowledged 30 s after the cause has been corrected |
| Defective or blocked fan | Switch on control unit supply; check that the fan starts and replace the drive controller if necessary; the fault can only be acknowledged 30 s after the cause has been corrected |
| Assembly protection film | Remove the assembly protection film |
| Wrong drive controller design | Check the design and change the drive controller type if necessary; the fault can only be acknowledged 30 s after the cause has been corrected |
| Increased or reduced mechanical friction | Check the service status of the mechanical system of all axes and service them if necessary; the fault can only be acknowledged 30 s after the cause has been corrected |
| Mechanical block | Check the output of all axes and remove the block if necessary |
| Short deceleration/acceleration times | Check the actual current during the braking process using the scope image (E00); reduce the deceleration and acceleration values if necessary; the fault can only be acknowledged 30 s after the cause has been corrected |
| Clock frequency too high | Check the utilization of the drive, taking into account derating and the configured clock frequency (E20, B24); reduce the configured clock frequency or replace the drive controller if necessary; the fault can only be acknowledged 30 s after the cause has been corrected |

Tab. 332: Event 38 – Causes and actions

19.1.7.10 Event 39: Overtemperature drive controller i2t

The i²t value of the drive controller (E22) has reached 100%. The maximum output current I_{2max} is limited to 100% of the nominal output current I_{2N,PU} (R04). If the i²t value increases to 105%, event 59: Overtemperature drive controller i2t is triggered.

The possible effects depend on the configured level (U02):

- 0: Inactive
- 1: Message
- 2: Warning
- 3: Fault

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|--|--|
| Wrong drive controller design | Check the design and change the drive controller type if necessary |
| Increased or reduced mechanical friction | Check the service status of the mechanical system of all axes and service them if necessary |
| Mechanical block | Check the output of all axes and remove the block if necessary |
| Short deceleration/acceleration times | Check the actual current during the braking process using the scope image (E00); reduce the deceleration and acceleration values if necessary |
| Clock frequency too high | Check the utilization of the drive, taking into account derating and the configured clock frequency (E20, B24); reduce the configured clock frequency or replace the drive controller if necessary |

Tab. 333: Event 39 – Causes and actions

19.1.7.11 Event 40: Invalid data

The drive controller has a **fault**:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The behavior of the brakes depends on the configuration of the safety module and an optional release override (F06)

| Cause | | Check and action |
|---|--|---|
| 1: Fault, 2: Block missing, 3: Data security, 4: Checksum, 5: Read only, 6: Read error, 7: Block missing, 8: Wrong/illegal serial number | Invalid data in the internal memory of the drive controller or option module | Determine the affected memory (Z730) and, based on that, replace the drive controller, option module or motor; fault cannot be acknowledged |
| 32: Electronic nameplate | No data available in the electronic nameplate | Deactivate the evaluation of the nameplate or replace the motor (B04); fault cannot be acknowledged |
| 33: Electronic nameplate limit | Invalid data in the electronic nameplate | Deactivate the evaluation of the nameplate or replace the motor (B04); fault cannot be acknowledged |
| 48: Reverse documentation | Defective memory in Paramodul | Replace the Paramodul; fault cannot be acknowledged |

Tab. 334: Event 40 – Causes and actions

19.1.7.12 Event 41: Temp.MotorTMP

The possible effects depend on the configured level (U15):

- 2: Warning
- 3: Fault

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|--|---|
| Motor temperature sensor connection error | Check the connection and correct it if necessary |
| Wrong motor design | Check the design and change the motor type if necessary |
| Surrounding temperatures at the motor too high | Check the surrounding temperature and adjust it if necessary |
| Mechanical block of the motor | Check the output and remove the block if necessary |
| Increased or reduced mechanical friction | Check the service status of the mechanical system and service them if necessary |

Tab. 335: Event 41 – Causes and actions

19.1.7.13 Event 42: TempBrakeRes

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|---------------------------------------|--|
| Short deceleration/acceleration times | Check the DC link voltage during the braking process using the scope image (E03); reduce the deceleration and acceleration values if necessary |
| Braking resistor too low | Check that the maximum permitted braking resistor power loss is suitable for the application and replace the braking resistor if necessary |

Tab. 336: Event 42 – Causes and actions

19.1.7.14 Event 43: All wire break

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|-------------------------------|--|
| Connection error | Check the connection and correct it if necessary |
| Inconsistent parameterization | Check wire break monitoring, taking into account the configured operating mode, and correct it if necessary (F15, F16) |

Tab. 337: Event 43 – Causes and actions

19.1.7.15 Event 44: External fault 1

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|----------------------|----------------------|
| Application-specific | Application-specific |

Tab. 338: Event 44 – Causes and actions

19.1.7.16 Event 45: Overtemp.motor i2t

The possible effects depend on the parameterized level (U10):

- 0: Inactive
- 1: Message
- 2: Warning
- 3: Fault

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|--|---|
| Wrong motor design | Check the design and change the motor type if necessary |
| Mechanical block of the motor | Check the output and remove the block if necessary |
| Increased or reduced mechanical friction | Check the service status of the mechanical system and service them if necessary |

Tab. 339: Event 45 – Causes and actions

19.1.7.17 Event 46: Low voltage

The possible effects depend on the configured level (U00):

- 0: Inactive
- 1: Message
- 2: Warning
- 3: Fault

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|---|--|
| Supply voltage does not correspond to the configured supply voltage | Check the supply voltage, parameterized supply voltage and undervoltage limit and correct them if necessary (A36, A35) |
| Supply voltage below undervoltage limit | Check undervoltage limit and correct it if necessary (A35) |

Tab. 340: Event 46 – Causes and actions

19.1.7.18 Event 47: Torque/force-max. limit

The possible effects depend on the configured level (U20):

- 0: Inactive
- 1: Message
- 2: Warning
- 3: Fault

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|--|--|
| Incorrectly selected torque/force limits | Check the general machine limit and adjust it if necessary (C03, C05); check the application limits and the parameters dependent on the operating mode and adjust them if necessary (Drive Based C132, C133 or CiA 402 A559) |
| Wrong motor design | Check the design and change the motor type if necessary |
| Mechanical block | Check the output and remove the block if necessary |
| Brake closed | Check the connection, supply voltage and parameterization and correct them if necessary (F00) |
| Connection error at the motor | Check the connection and correct it if necessary |
| Connection error at the encoder | Check the connection and correct it if necessary |
| Wrong encoder measurement direction | Compare the attachment and measurement direction of the encoder with the corresponding values of the H parameters and correct them if necessary |

Tab. 341: Event 47 – Causes and actions

19.1.7.19 Event 48: Brake release monitoring

The possible effects depend on the configured level (U26).

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|---------------------------------|--|
| Connection error | Check the connection and correct it if necessary |
| Release monitoring not adjusted | Adjust release monitoring |

Tab. 342: Event 48 – Causes and actions

19.1.7.20 Event 49: Brake

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | | Check and action |
|---|---------------------------------|---|
| 1: Brake supply voltage too low | Supply voltage connection error | Check the connection and correct it if necessary |
| | Supply voltage too low | Compare the specification of the supply voltage with the corresponding specifications of STOBER and replace the voltage source if necessary |
| 2: Brake 1: no feedback | Feedback connection error | Check the connection and configured brake connection and correct them if necessary (F93) |
| | Wrong contact type | Check the contact type and use an N/O contact if necessary |
| 3: Brake 1: short circuit, 4: Brake 1: open load | Connection error | Check the connection and correct it if necessary |
| | Defective power cable | Check the cable and replace it if necessary |
| | Indirect brake connection | Check the connection and configured brake connection and correct them if necessary (F93) |
| 5: Brake 2: no feedback | Feedback connection error | Check the connection and configured brake connection and correct them if necessary (F93) |
| 6: Brake 2: short circuit, 7: Brake 2: open load | Connection error | Check the connection and correct it if necessary |
| | Defective power cable | Check the cable and replace it if necessary |
| | Indirect brake connection | Check the connection and configured brake connection and correct them if necessary (F93) |
| 9: Brake 1 slips | Wrong brake design | Check the design and change the brake type or motor type if necessary |
| | Brake wear | Check the brake for wear and replace it if necessary |

Tab. 343: Event 49 – Causes and actions

19.1.7.21 Event 50: Safety module

The drive controller has a **fault**:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The behavior of the brakes depends on the configuration of the safety module and an optional release override (F06)

| Cause | | Check and action |
|---|--|---|
| 1: Inconsistent request (single channel) | Connection error | Check the connection and correct it if necessary; error cannot be acknowledged until both STO channels have been requested for at least 100 ms |
| 2: Wrong safety module | The projected E53 safety module does not match the E54[0] detected by the system | Check the project configuration and drive controller and correct the project configuration or exchange the drive controller if necessary; fault cannot be acknowledged |
| 3: Internal error | Defective safety module | Exchange drive controller; fault cannot be acknowledged |
| 4: PowerUp sequence error | Defective safety module | Exchange drive controller; fault cannot be acknowledged |
| 6: Fatal error | Safety module is in an error state | Determine offset and index from the active error code (see S02, S03) and take the appropriate measures [▶ 418]; fault cannot be acknowledged |
| 8: Safety module startup error | Faulty synchronization between drive controller and safety module when starting the device | Check the drive controller firmware and, if necessary, update to version 6.3-E or higher, then restart the drive controller; fault cannot be acknowledged |
| 10: Safety config. missing in ParaModul | No safety configuration available on the SD card/in the Paramodul | Save safety configuration (A00) |
| 11: Safety config. from ParaModul activated | New safety configuration activated from the SD card/Paramodul | – |
| 12: Safety config. missing in Paramodul&safety module | No valid safety configuration available in safety module and SD card/Paramodul | Create a safety configuration in PASmotion Safety Configurator, use DriveControlSuite to transfer it to the drive controller and save it there (A00); fault cannot be acknowledged |
| 13: Safety module activation error | Faulty activation of the safety configuration | Restart the drive controller and activate the safety configuration or start the drive controller without the SD card/Paramodul, then create a new safety configuration in PASmotion Safety Configurator, use DriveControlSuite to transfer it to the drive controller and save it there (A00); fault cannot be acknowledged |
| 15: Safety module error | Safety module is in an error state | Determine offset and index from the active error code (PASmotion Safety Configurator Error stack or S02, S03) and take the appropriate measures [▶ 418] |

Tab. 344: Event 50 – Causes and actions

19.1.7.22 Event 51: Virtual master software limit switch

The possible effects depend on the configured level (U24).

- 0: Inactive
- 1: Message
- 3: Fault

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

Event 51: Virtual master software limit switch only affects the device control of the axis. A quick stop of the virtual master can also be triggered with G57.

| Cause | | Check and action |
|---|--|--|
| 1: SW-limit switch positive, 2: SW-limit switch negative | End of the travel range reached | Move in the travel range in the direction opposite the limit switch |
| | Travel range too small | Check the positions of the software limit switch and correct them if necessary (G146, G147) |
| 3: +/- 31 bit computing limit reached | Computing limit of the data type reached | Check the command sequences for multiple successive 3: MC_MoveAdditive commands without a breakpoint and the number of decimal places of the axis model and reduce them if necessary (G46) |

Tab. 345: Event 51 – Causes and actions

19.1.7.23 Event 52: Communication

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | | Check and action |
|-----------------------------------|---|--|
| 1: CAN Life Guarding Event | Missing Remote Transmission Request (RTR) | Check the guarding settings for the CANopen master and drive controller and correct them if necessary (A203, A204) |
| 4: PZD-Timeout | Missing process data | Check the cycle time in the controller and tolerated failure time for monitoring the PZD communication in the drive controller and correct if necessary (A109) |
| 5: Wrong or missing X3 firmware | Firmware error | Replacing the drive controller |
| 6: EtherCAT PDO-Timeout | Missing process data | Check the task cycle time in the EtherCAT MainDevice and the timeout time in the drive controller and correct them if necessary (A258) |
| 7: Reserved | Synchronization error | Check the synchronization settings in the EtherCAT MainDevice and correct them if necessary |
| | Connection error | Check the connection and shielding and correct them if necessary |
| 8: IGB µC failure | Microprocessor faulty | Check the connection and shielding and correct them if necessary; replace the drive controller if necessary |
| 9: IGB serie lost frames | Connection error | Check the connection and correct it if necessary; restart the drive controller to update IGB |
| | Defective IGB connecting cable | Check the cable and replace it if necessary; restart the drive controller to update IGB |
| 10: IGB partner serie lost frames | Error at other node (cause: 9: IGB serie lost frames) | Eliminate error at affected node |

| Cause | | Check and action |
|---------------------------------|--------------------------------|--|
| 11: IGB synchronization error | Connection error | Check the connection and correct it if necessary; restart the drive controller to update IGB |
| | Defective IGB connecting cable | Check the cable and replace it if necessary; restart the drive controller to update IGB |
| 14: PZD parameter figure faulty | Missing mapping | Check the mapping for unmappable parameters and correct them if necessary |

Tab. 346: Event 52 – Causes and actions

19.1.7.24 Event 53: Limit switch

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | | Check and action |
|---|---|--|
| 1: Hardware-Limit-Switch positive, 2: Hardware-Limit-Switch negative | End of the travel range reached | Move in the travel range in the direction opposite the limit switch |
| | Connection error | Check the connection and source parameters and correct them if necessary (I101, I102) |
| | Defective cable | Check the cable and replace it if necessary |
| 3: SW-limit switch positive, 4: SW-limit switch negative | End of the travel range reached | Move in the travel range in the direction opposite the limit switch |
| | Travel range too small | Check the positions of the software limit switches and correct them if necessary (Drive Based I50, I51 or CiA A570[0], A570[1]) |
| 5: +/- 31 bit computing limit reached | Computing limit of the data type reached | Check the command sequences for multiple successive 3: MC_MoveAdditive commands without a breakpoint and the number of decimal places of the axis model and reduce them if necessary (I06) |
| 6: Linear motor moving range | Axis is 200 m away from the commutation reference point | Check the axis model and correct it if necessary |
| 7: Both limit switches not connected | Connection error | Check the connection and source parameters and correct them if necessary (I101, I102) |
| | Defective cable | Check the cable and replace it if necessary |

Tab. 347: Event 53 – Causes and actions

19.1.7.25 Event 54: Following error

The possible effects depend on the configured level (U22).

- 0: Inactive
- 1: Message
- 2: Warning
- 3: Fault

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|--|--|
| Incorrectly selected torque/force limits | Check the general machine limit and adjust it if necessary (C03, C05); check the application limits and adjust them if necessary (Drive Based: C132, C133 and the parameters dependent on the operating mode; CiA 402: A559) |
| Maximum permitted lag is too small | Check the maximum permitted following error and correct it if necessary (Drive Based: I21; CiA 402: A546) |
| Mechanical block | Check the output and remove the block if necessary |
| Brake closed | Check the connection, supply voltage and parameterization and correct them if necessary (F00) |

Tab. 348: Event 54 – Causes and actions

19.1.7.26 Event 55: Option module

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | | Check and action |
|---|--|---|
| 1: Communication module wrong/ missing | No communication module or wrong type installed | Compare the projecting with the installation; correct the projecting or installation if necessary; fault cannot be acknowledged |
| 2: EC6 failure, 3: CA6 failure, 5: PN6 failure | Defective or incorrectly installed communication module | Removal and installation of the communication module; replace the communication module if necessary; fault cannot be acknowledged |
| 6: Communication module incompatible | Outdated communication module hardware | Install a communication module with the right hardware version; fault cannot be acknowledged |
| 7: Terminal module wrong/ missing | No terminal module or wrong type installed | Compare the projecting with the installation; correct the projecting or installation if necessary; fault cannot be acknowledged |
| 8: IO6 failure, 9: RI6 failure, 10: XI6 failure | Defective or incorrectly installed terminal module | Removal and installation of the terminal module; replace the terminal module if necessary; fault cannot be acknowledged |
| 11: XI6 encoder simulation initialization | Zero offset initialization for incremental encoder simulation failed | Correct project configuration or replace terminal module; fault cannot be acknowledged |
| 11: XI6 encoder simulation initialization | Zero offset initialization for incremental encoder simulation failed | Correct project configuration or replace terminal module; fault cannot be acknowledged |

| Cause | | Check and action |
|----------------------------------|-----------------------------------|---|
| 12: XI6 24V supply | Connection error | Check the connection and correct it if necessary |
| | Defective cable | Check the cable and replace it if necessary |
| | Supply voltage too low | Check the voltage source and increase the voltage if necessary |
| 13: Terminal module incompatible | Outdated terminal module hardware | Install the terminal module with the right hardware version; fault cannot be acknowledged |

Tab. 349: Event 55 – Causes and actions

19.1.7.27 Event 56: Overspeed

The drive controller has a **fault** if:

- U30 = 0: Inactive

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with emergency braking** if:

- U30 = 1: Active and
- A29 = 1: Active for Drive Based device controller
or
- U30 = 1: Active and
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by emergency braking
- The brakes are applied in the event of an inactive release override (F06)
- At the end of emergency braking, the power unit is disabled and axis movement is no longer controlled by the drive controller

| | |
|---|--|
| Information | |
| Emergency braking is only possible for synchronous servo motors, torque motors and synchronous linear motors. | |

| | |
|---|--|
| Information | |
| The event is only triggered if the checking rules for Enable-on are violated. | |

| Cause | | Check and action |
|--|--------------------------------------|---|
| 1: Motor encoder, 2: Position encoder, 3: Motor & position encoder | Maximum permitted velocity too small | Check the maximum permitted velocity and increase it if necessary (I10); event is triggered if actual velocity > I10 × 1.111 |
| | Overshooting control system | Check the actual velocity using the scope image (Sensing time: 250 μs, actual motor velocity: E15, E91; actual position velocity I88) and, if necessary, reduce the gain of the control system (I20, C31) |
| 1: Motor encoder, 3: Motor & position encoder | Wrong commutation offset | Check the commutation offset using the Test phase action (B40) |
| | Faulty motor encoder | Check the velocity display of the encoder at a standstill (E15, E91) and replace the encoder if necessary |
| 2: Position encoder, 3: Motor & position encoder | Faulty position encoder | Check the velocity display of the encoder at a standstill (I88) and replace the encoder if necessary |

Tab. 350: Event 56 – Causes and actions

19.1.7.28 Event 57: Runtime requirement

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | | Check and action |
|------------------------------|--------------------------|--|
| 3: RT3, 4: RT4, 5: RT5 | Exceeding the cycle time | Check the utilization (E191) and increase the cycle time if necessary (A150) |

Tab. 351: Event 57 – Causes and actions

19.1.7.29 Event 58: Encoder simulation

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | | Check and action |
|-----------------------|-------------------------|---|
| 1: Maximum speed | Input velocity too high | Check the source of the velocity being simulated and adjust it if necessary (H80) |
| 3: X120 channel A/Clk | Defective encoder cable | Check the cable and replace it if necessary |

Tab. 352: Event 58 – Causes and actions

19.1.7.30 Event 59: Overtemperature drive controller i2t

The i²t value of the drive controller (E22) has reached 105%.

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|--|--|
| Wrong drive controller design | Check the design and change the drive controller type if necessary; the fault can only be acknowledged 30 s after the cause has been corrected |
| Increased or reduced mechanical friction | Check the service status of the mechanical system and service them if necessary; the fault can only be acknowledged 30 s after the cause has been corrected |
| Short deceleration/acceleration times | Check the actual current during the braking process using the scope image (E00); reduce the deceleration and acceleration values if necessary; the fault can only be acknowledged 30 s after the cause has been corrected |
| Clock frequency too high | Check the utilization of the drive, taking into account derating and the configured clock frequency (E20, B24); reduce the configured clock frequency or replace the drive controller if necessary; the fault can only be acknowledged 30 s after the cause has been corrected |

Tab. 353: Event 59 – Causes and actions

19.1.7.31 Event 60: Application event 0 – Event 67: Application event 7

The possible effects depend on the configured level (U100, U110, U120, U130, U140, U150, U160, U170):

- 0: Inactive
- 1: Message
- 2: Warning
- 3: Fault

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|----------------------|----------------------|
| Application-specific | Application-specific |

Tab. 354: Events 60 – 67 – Causes and actions

19.1.7.32 Event 68: External fault 2

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|----------------------|----------------------|
| Application-specific | Application-specific |

Tab. 355: Event 68 – Causes and actions

19.1.7.33 Event 69: Motor connection

The possible effects depend on the configured level (U12).

- 0: Inactive
- 3: Fault

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | | Check and action |
|---|---|--|
| 2: No motor connected | Connection error | Check the connection and correct it if necessary |
| | Defective power cable | Check the cable and replace it if necessary |
| | Nominal speed too high (asynchronous motor) | Check the speed of the motor and reduce the value if necessary (B13) |
| 3: Wake and Shake failed (Commutation finding with Wake and Shake failed) | Increased or reduced mechanical friction | Check the service status of the mechanical system and service them if necessary |
| | Mechanical block | Check the output and remove the block if necessary |
| | Axis with large mass inertia | Increase minimum wait time between Wake and Shakes (B33) |
| 4: Brake (Commutation finding with Wake and Shake failed) | Brake engaged | Check the control of the brakes and engage the brakes during Wake and Shake using release override if necessary (F06), see Commutation finding [▶ 478] |

Tab. 356: Event 69 – Causes and actions

19.1.7.34 Event 70: Parameter consistency

The drive controller has a **fault**:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The behavior of the brakes depends on the configuration of the safety module and an optional release override (F06)

| Information |
|-------------|
|-------------|

The event is only triggered if the checking rules for Enable-on are violated.

| Cause | | Check and action |
|--------------------------------------|---|--|
| 1: Wrong encoder model | Encoder model unsuitable for control type | Check the control mode, motor encoder and encoder and correct them if necessary (B20, B26, H parameters) |
| 2: X120 data direction | Use of the X120 interface for evaluation and simulation at the same time | Check the evaluation against the simulation and correct it if necessary (motor: B26; position: I02; H120) |
| 3: B12<->B20 | Nominal current of the motor exceeds the drive controller nominal current (4 kHz) | Check the motor nominal current against 150% of the drive controller nominal current at a clock frequency of 4 kHz and, if necessary, reduce the motor nominal current or change the drive controller type (B12, R04[0]) |
| 4: B10<->H31 | Unsupported combination of resolver/motor number of poles | Check number of poles of the resolver and number of poles of the motor and correct them if necessary (H08, H148, B10) |
| 5: Negative slip frequency | Negative slip | Check the nominal velocity, nominal frequency and number of poles of the motor and, if necessary, correct them (B13, B15, B10) |
| 8: v-max (I10) exceeds maximum (B83) | Maximum permitted velocity exceeds the maximum motor velocity | Check the maximum permitted velocity and the maximum motor velocity and correct them if necessary (I10, B83) |
| 11: Reference retaining | Conditions for reference without tracking not met | Check that the reference is retained and that the measurement range covers the travel range and make corrections if necessary (I46, limited travel range I00: Software limit switch must be parameterized; infinite travel range I00: Measurement range must correspond to the revolution length Drive Based I01 or CiA 402 A568[1] or an entire multiple) |
| 12: Type of axis | Rotational axis model not suitable for synchronous linear motor | Correct the axis type of the axis model (I00) |
| 16: I10 > C11 | Maximum permitted velocity is above maximum gear unit input speed | Check the maximum permitted velocity and the maximum gear unit input speed and correct them if necessary (I10, C11) |

Tab. 357: Event 70 – Causes and actions

19.1.7.35 Event 71: Firmware

Cause 1:

The drive controller has a **fault**:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The behavior of the brakes depends on the configuration of the safety module and an optional release override (F06)

Cause 3:

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | | Check and action |
|-----------------------|----------------------------|--|
| 1: Firmware defective | Defective firmware | Update the firmware; fault cannot be acknowledged |
| | Defective drive controller | Exchange drive controller; fault cannot be acknowledged |
| 3: CRC-error | Defective firmware | Update the firmware; fault cannot be acknowledged |
| | Defective drive controller | Check for repeated triggering of the event after a restart; if necessary, replace the drive controller |

Tab. 358: Event 71 – Causes and actions

19.1.7.36 Event 72: Brake test timeout – Event 75:
Axis 4 brake test timeout

The possible effects depend on the cause. Cause 1 and 2 lead to a fault, cause 3 is output as a message.

The drive controller has a **fault**:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The behavior of the brakes depends on the configuration of the safety module and an optional release override (F06)

| Cause | | Check and action |
|-----------------------------------|--|--|
| 1: B311timeout:B300 mandatory | Brake management is active and the timeout for the brake test runs out twice | Test the brake (B300, S18); can be acknowledged for a period of 5 min in order to be able to carry out the test brake action |
| 2: Brake defective:B300 mandatory | Test holding torque not met during the test brake action | Bed in the brake (B301, B302) and repeat the brake test (B300, S18); can be acknowledged for a period of 5 min in order to be able to carry out the brake test |
| | Faulty encoder test run during test brake action | Replace the encoder or motor and repeat the brake test (B300, S18); can be acknowledged for a time period of 5 min in order to be able to carry out the brake test |
| 3: Brake test necessary | Brake management is active and the timeout for the brake test runs out once | Carry out the test brake action (B300, S18); can be acknowledged for a period of 5 min in order to be able to carry out the brake test |

Tab. 359: Events 72 – 75 – Causes and actions

19.1.7.37 Event 76: Position encoder

The drive controller has a **fault** if:

- U30 = 0: Inactive and
- A29 = 0: Inactive for Drive Based device controller
or
- U30 = 1: Active and
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with emergency braking** if:

- U30 = 1: Active and
- A29 = 1: Active for Drive Based device controller
or
- U30 = 1: Active and
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by emergency braking
- The brakes are applied in the event of an inactive release override (F06)
- At the end of emergency braking, the power unit is disabled and axis movement is no longer controlled by the drive controller

| |
|--------------------|
| Information |
|--------------------|

Emergency braking is only possible for synchronous servo motors, torque motors and synchronous linear motors.

The reference is deleted (I86).

| Cause | | Check and action |
|---|-----------------------------------|--|
| 1: Parameter <-> encoder | Inconsistent parameterization | Compare the specification of the connected encoder to the corresponding values of the H parameters and correct them if necessary |
| 2: Maximum speed | Exceeded encoder maximum velocity | Check the actual velocity during a movement using the scope image (I88) and adjust the permitted encoder maximum velocity if necessary (I297) |
| | Connection error | Check the connection and shielding and correct them if necessary |
| 6: X4 EnDat encoder found | Inconsistent parameterization | Compare the connected encoder to the parameterized encoder and correct it if necessary (H00) |
| 7: X4 A track/Incremental | Connection error | Check the connection and correct it if necessary |
| 8: X4 no encoder found | Connection error | Check the connection and correct it if necessary; restart the drive controller to switch the encoder supply back on |
| | Defective encoder cable | Check the cable and replace it if necessary; restart the drive controller to switch the encoder supply back on |
| | Faulty supply voltage | Check the encoder supply voltage and correct it if necessary; restart the drive controller to switch the encoder supply back on |
| | Inconsistent parameterization | Compare the connected encoder to the parameterized encoder and correct it if necessary (H00); restart the drive controller to switch encoder supply back on |
| 10: X4 A track/Ck, 11: X4 B track/Dat, 12: X4 N track | Defective encoder cable | Check the cable and replace it if necessary |
| 13: X4-EnDat alarm | Defective EnDat encoder | Replace the motor; EnDat 2.1 digital, EnDat 2.2 digital: Fault cannot be acknowledged |
| 14: X4 EnDat CRC, 15: X4 double transmission | Connection error | Check the connection and correct it if necessary |
| | Electromagnetic interference | Take EMC recommendations into account [▶ 151] and, if necessary, increase the fault tolerance (I298) |
| 16: X4 busy | Synchronization error | Update firmware |
| 17: EBI encoder low battery | Battery in battery module weak | Replace the battery; reference is not deleted by the event |
| 18: EBI encoder battery empty | Battery in battery module empty | Replace the battery |
| | Initial connection | – |
| | Connection error | Check the connection and correct it if necessary |
| | Defective encoder cable | Check the cable and replace it if necessary |
| | Faulty battery module | Check the battery module and replace it if necessary |
| 19: Alarm bit | Encoder fault | Check the specification of the encoder regarding the alarm bit |
| 20: Resolver carrier, 21: Resolver sin/cos undervoltage, 22: Resolver sin/cos overvoltage | Defective encoder cable | Check the cable and replace it if necessary |
| | Incompatible encoder | Compare the specification of the encoder with the corresponding specifications from STOBER and replace the encoder or motor if necessary; fault cannot be acknowledged |
| 24: Resolver failure | Defective encoder cable | Check the cable and replace it if necessary |

| Cause | | Check and action |
|------------------------------|----------------------------------|--|
| 30: X120 wire break | Defective encoder cable | Check the cable and replace it if necessary |
| 35: X120 double transmission | Defective encoder cable | Check the cable and replace it if necessary; fault cannot be acknowledged |
| | Inconsistent double transmission | Check the specification of the connected encoder and deactivate the double transmission (H128) or replace the encoder if necessary |
| | Incompatible encoder | Compare the specification of the encoder with the corresponding specifications from STOBER and replace the encoder or motor if necessary |
| 36: X120 busy | Defective encoder cable | Check the cable and replace it if necessary |
| | Inconsistent parameterization | Compare the connected encoder to the parameterized encoder and correct it if necessary (H120) |
| | Incompatible encoder | Compare the specification of the encoder with the corresponding specifications from STOBER and replace the encoder or motor if necessary |
| 43: X140 EnDat alarm | Defective EnDat encoder | Replace encoder or motor |
| 44: X140 EnDat CRC | Connection error | Check the connection and shielding and correct them if necessary |
| | Electromagnetic interference | Take EMC recommendations into account [▶ 151] and, if necessary, increase the fault tolerance (I298) |

Tab. 360: Event 76 – Causes and actions

19.1.7.38 Event 77: Master encoder

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The reference is deleted (G89).

| Cause | | Check and action |
|---------------------------|-----------------------------------|---|
| 1: Parameter <-> encoder | Inconsistent parameterization | Compare the specification of the connected encoder to the corresponding values of the H parameters and correct them if necessary |
| 2: Maximum speed | Exceeded encoder maximum velocity | Check the actual velocity during a movement using the scope image (G105) and adjust the permitted encoder maximum velocity if necessary (G297) |
| | Connection error | Check the connection and shielding and correct them if necessary |
| 6: X4 EnDat encoder found | Inconsistent parameterization | Compare the connected encoder to the parameterized encoder and correct it if necessary (H00) |
| 7: X4 A track/Incremental | Connection error | Check the connection and correct it if necessary |
| 8: X4 no encoder found | Connection error | Check the connection and correct it if necessary; restart the drive controller to switch the encoder supply back on |
| | Defective encoder cable | Check the cable and replace it if necessary; restart the drive controller to switch the encoder supply back on |
| | Faulty supply voltage | Check the encoder supply voltage and correct it if necessary; restart the drive controller to switch the encoder supply back on |
| | Inconsistent parameterization | Compare the connected encoder to the parameterized encoder and correct it if necessary (H00); restart the drive controller to switch encoder supply back on |

| Cause | | Check and action |
|---|----------------------------------|--|
| 10: X4 A track/Clk, 11: X4 B track/Dat, 12: X4 N track | Defective encoder cable | Check the cable and replace it if necessary |
| 13: X4-EnDat alarm | Defective EnDat encoder | Replace the motor; EnDat 2.1 digital, EnDat 2.2 digital: Fault cannot be acknowledged |
| 14: X4 EnDat CRC, 15: X4 double transmission | Connection error | Check the connection and correct it if necessary |
| | Electromagnetic interference | Take EMC recommendations into account [▶ 151] and, if necessary, increase the fault tolerance (G298) |
| 16: X4 busy | Synchronization error | Update firmware |
| 17: EBI encoder low battery | Battery in battery module weak | Replace the battery; reference is not deleted by the event |
| 18: EBI encoder battery empty | Battery in battery module empty | Replace the battery |
| | Initial connection | – |
| | Connection error | Check the connection and correct it if necessary |
| | Defective encoder cable | Check the cable and replace it if necessary |
| | Faulty battery module | Check the battery module and replace it if necessary |
| 19: Alarm bit | Encoder fault | Check the specification of the encoder regarding the alarm bit |
| 20: Resolver carrier, 21: Resolver sin/cos undervoltage, 22: Resolver sin/cos overvoltage | Defective encoder cable | Check the cable and replace it if necessary |
| | Incompatible encoder | Compare the specification of the encoder with the corresponding specifications from STOBER and replace the encoder or motor if necessary; fault cannot be acknowledged |
| 24: Resolver failure | Defective encoder cable | Check the cable and replace it if necessary |
| 30: X120 wire break | Defective encoder cable | Check the cable and replace it if necessary |
| 35: X120 double transmission | Defective encoder cable | Check the cable and replace it if necessary; fault cannot be acknowledged |
| | Inconsistent double transmission | Check the specification of the connected encoder and deactivate the double transmission (H128) or replace the encoder if necessary |
| | Incompatible encoder | Compare the specification of the encoder with the corresponding specifications from STOBER and replace the encoder or motor if necessary |
| 36: X120 busy | Defective encoder cable | Check the cable and replace it if necessary |
| | Inconsistent parameterization | Compare the connected encoder to the parameterized encoder and correct it if necessary (H120) |
| | Incompatible encoder | Compare the specification of the encoder with the corresponding specifications from STOBER and replace the encoder if necessary |

Tab. 361: Event 77 – Causes and actions

19.1.7.39 Event 78: Position limit cyclic

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | | Check and action |
|-------------------------------------|--|---|
| 1: Illegal direction | Cyclical set position outside of the software limit switch | Check the set position in the controller and software limit switch in the drive controller and correct it if necessary (CiA 402: A570) |
| 2: Reference value invalid | Cyclical set position outside of the travel range | Check the set position in the controller and travel range in the drive controller and correct it if necessary (CiA 402: A568) |
| 3: Extrapolation time I423 exceeded | Missing update of the cyclical set position or cyclical set velocity | Check the task cycle time in the fieldbus MainDevice of the controller and maximum permitted extrapolation in the drive controller and correct it if necessary (I423) |

Tab. 362: Event 78 – Causes and actions

19.1.7.40 Event 79: Motor/position encoder plausibility

The possible effects depend on the configured level (U28).

- 0: Inactive
- 1: Message
- 3: Fault

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|-------------------|--|
| Connection error | Check the connection and shielding and correct them if necessary |
| Slip | Check the mechanics between the motor and position encoder and maximum permitted slip and correct them if necessary (I291, I292) |
| Mechanical damage | Check the mechanics between the motor and position encoder and correct any damage if necessary |

Tab. 363: Event 79 – Causes and actions

19.1.7.41 Event 80: Illegal action

The drive controller has a **fault**:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The behavior of the brakes depends on the configuration of the safety module and an optional release override (F06)

| Cause | Check and action |
|------------|---|
| 1: Illegal | Not supported by the control type Check the control type and correct it if necessary (B20) |
| 2: Brake | Loaded axis Remove the axis load and start the action again |

Tab. 364: Event 80 – Causes and actions

19.1.7.42 Event 81: Motor allocation

The possible effects depend on the configured level (U04):

- 0: Inactive
- 1: Message
- 3: Fault

The drive controller has a **fault**:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The behavior of the brakes depends on the configuration of the safety module and an optional release override (F06)

Depending on the cause, data for the motor (in the case of a change to the motor or motor type), current controller (in the case of a change to the motor type), brake (in the case of a change to the brake or motor type), temperature sensor (in the case of a change to the temperature sensor or motor type) or motor adapter, gear unit and geared motor (in the case of a change to the gear unit type) are read out of the electronic nameplate and entered in the respective parameters. In the event of a change to the motor, motor type or even just the commutation, the commutation offset (B05) is reset.

| Cause | | Check and action |
|--|--|---|
| 1: Different motor type | Modified motor assignment | Check the change to the motor assignment and save the new motor assignment if necessary (A00) |
| | Modified gear unit assignment | Check the change to the gear unit assignment and save the new assignment if necessary (A00) |
| 32: Different motor, 33: Different motor & brake, 34: Different motor & temperature sensor, 35: Different motor & brake & temperature sensor, 38: Different motor, temperature sensor & gear unit, 64: Different commutation, 65: Different commutation & brake, 66: Different commutation & temperature sensor, 67: Different commutation & brake & temperature sensor, 129: Different brake, 130: Different temperature sensor, 131: Different brake & temperature sensor | Modified motor assignment | Check the change to the motor assignment and save the new assignment if necessary (A00) |
| 36: Different motor & gear unit 37: Different motor, brake & gear unit, 39: Different motor, brake, temperature sensor & gear unit | Modified motor and gear unit assignment | Check the change to the motor and gear unit assignment and save the new assignment if necessary (A00) |
| 150: Temperature sensor unknown | Motor with unknown temperature sensor type | Update the firmware or change the motor |

Tab. 365: Event 81 – Causes and actions

19.1.7.43 Event 82: Hall sensor

The drive controller has a **fault** if:

- U30 = 0: Inactive

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with emergency braking** if:

- U30 = 1: Active and
- A29 = 1: Active for Drive Based device controller
or
- U30 = 1: Active and
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by emergency braking
- The brakes are applied in the event of an inactive release override (F06)
- At the end of emergency braking, the power unit is disabled and axis movement is no longer controlled by the drive controller

Information

Emergency braking is only possible for synchronous servo motors, torque motors and synchronous linear motors.

| Cause | | Check and action |
|------------------------|--|---|
| 1: Invalid sample | Connection error | Check the connection and correct it if necessary |
| | Signal levels do not correspond to any sector | Check the Hall distance and correct it if necessary (B08) |
| 2: Invalid sequence | Connection error | Check the connection and correct it if necessary |
| | Direct change between two non-adjacent sectors | Check the Hall distance and correct it if necessary (B08) |
| 3: Signal edge missing | Missing signal change within pole pitch | Check the pole pitch and correct it if necessary (B16) |
| | Defective Hall sensor | Replace the Hall sensor |
| 4: X120 wire break | Defective encoder cable | Check the cable and replace it if necessary |

Tab. 366: Event 82 – Causes and actions

19.1.7.44 Event 83: Failure of one/ all phases (mains)

Upon the occurrence of an event, a warning is output initially, becoming a fault after a 10 s warning period.

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|-----------------------------------|--|
| Failure of one or all line phases | Check the line fuse and connection and correct them if necessary |

Tab. 367: Event 83 – Causes and actions

19.1.7.45 Event 84: Drop in network voltage when power section active

The event is triggered if the drive controller cannot recharge itself quickly enough via the charging resistors after a line drop when the power supply returns.

If the voltage falls below the undervoltage limit before the power supply returns, event 46: Low voltage is triggered; if the tolerance time of 10 s expires before the power supply returns, the drive controller goes into fault mode with event 83: Failure of one/ all phases (mains).

The drive controller has a **fault** if:

- U30 = 0: Inactive and
- A29 = 0: Inactive for Drive Based device controller
or
- U30 = 1: Active and
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with emergency braking** if:

- U30 = 1: Active and
- A29 = 1: Active for Drive Based device controller
or
- U30 = 1: Active and
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by emergency braking
- The brakes are applied in the event of an inactive release override (F06)
- At the end of emergency braking, the power unit is disabled and axis movement is no longer controlled by the drive controller

| |
|--------------------|
| Information |
|--------------------|

Emergency braking is only possible for synchronous servo motors, torque motors and synchronous linear motors.

A quick stop is not possible when the power supply returns.

| Cause | Check and action |
|---------------------------------------|--|
| Decrease in supply voltage under load | Check the supply voltage for load stability and stabilize the network if necessary |
| Sporadic power failures | Check the supply voltage for stability and stabilize the network if necessary |

Tab. 368: Event 84 – Causes and actions

19.1.7.46 Event 85: Excessive jump in reference value

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|-------------|---|
| 1: Position | Fast set position change leads to acceleration that cannot be performed Check the current set acceleration against the maximum permitted acceleration in the drive controller (E64, E69) and reduce the set value change in the controller or change the motor type if necessary |
| 2: Velocity | Fast set velocity change leads to acceleration that cannot be performed Check the current set acceleration against the maximum permitted acceleration in the drive controller (E64, E69) and reduce the set value change in the controller or change the motor type if necessary |

Tab. 369: Event 85 – Causes and actions

19.1.7.47 Event 88: Control panel

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | Check and action |
|--|--|
| Commissioning and parameterization computer heavily loaded | Check and, if necessary, reduce the number of open windows (DS6) and the number of active programs |
| Connection error | Check the connection and correct it if necessary |
| Defective network cable | Check the cable and replace it if necessary |
| Faulty network connection | Check the network settings and, if applicable, the switch, router or wireless connections and correct them or contact your network service provider if necessary |

Tab. 370: Event 88 – Causes and actions

19.1.7.48 Event 90: Motion block

The drive controller has a **fault** if:

- A29 = 0: Inactive for Drive Based device controller
or
- A540 = 0: Disable drive motor coasting for CiA 402 device controller

Response:

- The power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

The drive controller has a **fault with a quick stop** if:

- A29 = 1: Active for Drive Based device controller
or
- A540 = 2: Slow down on quick stop ramp for CiA 402 device controller

Response:

- The axis is stopped by a quick stop
- During the quick stop, the brakes remain released
- At the end of the quick stop, the power unit is disabled and axis movement is no longer controlled by the drive controller
- The brakes are applied in the event of an inactive release override (F06)

| Cause | | Check and action |
|---|---|---|
| 1: Next motion block missing | Subsequent motion block for motion block with final velocity is missing | Define buffered subsequent motion block |
| 2: Target Position in reverse direction | Set position is in the opposite direction | A change of travel direction by the subsequent motion block is not permitted for motion blocks with final velocity; adjust the set position |
| | Set position cannot be reached without reversing | Check limiting values for velocity, deceleration and jerk and adjust if necessary |

Tab. 371: Event 90 – Causes and actions

19.2 SE6 safety module

In case of a fault, the two diagnostic parameters S02 and S03 supply detailed information about the type of fault or the corresponding cause using error codes.

19.2.1 Parameters

The following parameters are available for diagnosing the safety technology in combination with the SE6 safety module.

- S02 Safety module SE6 active error code channel A
- S03 Error code channel B

19.2.2 Error codes

The SE6 safety module has an extensive internal diagnostic system.

The table only lists error codes that you can influence. Internal errors which you have no influence over can only be acknowledged by restarting the drive controller. If such an error occurs repeatedly, please contact our System Support.

| |
|--|
| Information |
| <p>Make sure that your EtherCAT system is running without errors. If necessary, rectify errors involving the EtherCAT system first (see EtherCAT state [▶ 358]).</p> |

The code specified in column 1 corresponds to the first four digits of the error code.

| Code | Cause | Check and action |
|----------|--|--|
| 0101 hex | SS1 – Limit value violation of configured brake ramp monitoring | Check configured position error for brake ramp monitoring |
| 0201 hex | SS2 – Limit value violation of configured standstill monitoring | <ul style="list-style-type: none"> ▪ Check configured position window for standstill ▪ Prevent movements if SOS is active |
| 0202 hex | SS2 – Limit value violation of configured brake ramp monitoring | Check configured position error for brake ramp monitoring |
| 0301 hex | SOS – Limit value violation of configured standstill monitoring | <ul style="list-style-type: none"> ▪ Check configured position window for standstill ▪ Prevent movements if SOS is active |
| 0401 hex | SLS – Limit value violation of configured velocity or tolerance range (tolerance time) | <ul style="list-style-type: none"> ▪ Check configured limit value of velocity and tolerance time (t_1) ▪ Ensure that the current velocity of the axis does not exceed the limit value |
| 0402 hex | SLS – Limit value violation of configured tolerance range (tolerance period) | <ul style="list-style-type: none"> ▪ Check configured tolerance period (t_2) ▪ Ensure that the current velocity of the axis does not exceed the tolerance time |
| 0403 hex | SLS – Limit value violation of the configured tolerance range (tolerance window) | <ul style="list-style-type: none"> ▪ Check configured tolerance window (To_{win}) ▪ Ensure that the current velocity of the axis does not exceed the tolerance window |

| Code | Cause | Check and action |
|----------|--|---|
| 0406 hex | SLI – Limit value violation of the increment | <ul style="list-style-type: none"> Check configured lower and upper position limit Ensure that the increment of the motor does not exceed the limit value |
| 0408 hex | SLP – Limit value violation of configured position range | <ul style="list-style-type: none"> Check configured lower and upper position limit Check the absolute position of the motor |
| 0501 hex | SSR – Limit value violation of configured velocity range or tolerance range (tolerance time) | <ul style="list-style-type: none"> Check configured lower and upper velocity limit and tolerance time (t_1) Ensure that the current velocity of the axis does not leave the defined velocity range |
| 0502 hex | SSR – Limit value violation of configured tolerance range (tolerance period) | Check configured tolerance period (t_2) |
| 0503 hex | SSR – Limit value violation of configured tolerance range (tolerance window) | Check configured tolerance window (Tol_{win}) |
| 0601 hex | SDI – Limit value violation of direction of motion (positive) | <ul style="list-style-type: none"> Check the motor's direction of motion Monitor the desired direction of motion Check configured window of standstill position |
| 0602 hex | SDI – Limit value violation of direction of motion (negative) | <ul style="list-style-type: none"> Check the motor's direction of motion Monitor the desired direction of motion Check configured window of standstill position |
| 0701 hex | SBT – Limit value violation of standstill position BD1/BD2 (brake 1) | <ul style="list-style-type: none"> Ensure that the brake is functioning properly Ensure that the test current is set correctly |
| 0702 hex | SBT – Limit value violation of standstill position SBC+/- (brake 2) | <ul style="list-style-type: none"> Ensure that the brake is functioning properly Ensure that the test current is set correctly |
| 0703 hex | SBT – Limit value violation of standstill position (e.g. wait time) | <ul style="list-style-type: none"> Ensure that the brakes are wired properly Ensure that the brakes are functioning properly Ensure that the drive controller engages its brake as expected |
| 0704 hex | SBT – Limit value violation of configured test current within the test step | <ul style="list-style-type: none"> Ensure that the wiring of the motor is free from errors Check drive controller settings (e.g. parameter for current and velocity control) |
| 0705 hex | SBT – Faulty brake state | <ul style="list-style-type: none"> Ensure that the brakes are wired properly Check settings of SBC function and brake test Check drive controller settings (e.g. parameter for current and velocity control) |
| 0706 hex | SBT – Brake test cancellation | Carry out brake test again |

| Code | Cause | Check and action |
|----------|--|---|
| 0707 hex | SBT – Brake test cancellation by the drive controller | <ul style="list-style-type: none"> Carry out brake test again Check drive controller settings (e.g. parameter for current and velocity control) |
| 0708 hex | SBT – Timeout of configured test period | <ul style="list-style-type: none"> Check test period and tolerance time Carry out brake test |
| 0709 hex | SBT – Timeout of configured total time | <ul style="list-style-type: none"> Check configuration of brake test Check drive controller settings (e.g. parameter for current and velocity control) |
| 070A hex | SBT – Timeout in communication with the drive controller | <ul style="list-style-type: none"> Check configuration of brake test Check drive controller settings (e.g. parameter for current and velocity control) |
| 070B hex | SBT – Brake test not configured | Check settings of brake test for activated test steps |
| 0801 hex | SBC – Timeout of configured time in feedback control (FBK) | <ul style="list-style-type: none"> Check the configured activation delay (Ton), deactivation delay (Toff) of the feedback control Check correct connection of brake output and feedback signal |
| 0802 hex | SBC – Faulty feedback status | <ul style="list-style-type: none"> Check settings of SBC safety function for correct type (1: normally open (N/O), 2: normally closed (N/C)) Check correct connection of brake output and feedback signal |
| 1201 hex | Error in the plausibility check of the motor encoder due to current signal | <ul style="list-style-type: none"> Check reactive current settings Check drive controller settings (e.g. parameter for current and velocity control) Check the system for possible interference frequencies (power supply unit, transformer, etc.) and for correct shielding Prevent external influences on the system that may result in adjustment of the motor, for example, and thus current peaks Check motor encoder for proper function |
| 1202 hex | Error in the plausibility check of the motor encoder due to current signal | <ul style="list-style-type: none"> Check reactive current settings Check drive controller settings (e.g. parameter for current and velocity control) Check the system for possible interference frequencies (power supply unit, transformer, etc.) and for correct shielding Prevent external influences on the system that may result in adjustment of the motor, for example, and thus current peaks Check motor encoder for proper function |

| Code | Cause | Check and action |
|----------|--|--|
| 1203 hex | Error in the plausibility check of the motor encoder due to current signal (direction of motion) | <ul style="list-style-type: none"> ▪ Check drive controller settings (e.g. parameter for current and velocity control) ▪ Check settings of motion and acceleration profiles (change of direction of motion may be too fast) ▪ Check motor encoder for proper function |
| 1301 hex | Error in the plausibility check of external encoder | Check settings and function of the external encoder |
| 1302 hex | Error due to signal overrun in the motor encoder or in the external encoder | Adjust the mechanical travel range and permitted value range of the encoder |
| 1303 hex | Error in the plausibility check of velocity | <ul style="list-style-type: none"> ▪ Check settings of the safety module (motor, encoder, etc.) ▪ Check motor encoder for proper function |
| 1305 hex | Error in the plausibility check of external encoder | Check settings and function of the external encoder |
| 1308 hex | Error in the plausibility check of external encoder velocity | <ul style="list-style-type: none"> ▪ Check settings and function of the external encoder ▪ Check settings of the safety module (motor, encoder, etc.) |
| 1309 hex | Error in the plausibility check of external encoder absolute position | <ul style="list-style-type: none"> ▪ Check settings and function of the external encoder ▪ Check settings of the safety module (motor, encoder, etc.) |
| 130A hex | Error in the settings of the external encoder | <ul style="list-style-type: none"> ▪ Check settings and function of the external encoder ▪ Check settings of the drive controller and safety module |
| 1401 hex | No match for number of poles | Check number of poles in the configuration of the safety module and drive controller |
| 1402 hex | No match for motor type | Check motor type in the configuration of the safety module and drive controller |
| 1403 hex | No match for motor brake | Check settings of the brake of the safety module and drive controller |
| 1404 hex | No match for number of drive axes | <ul style="list-style-type: none"> ▪ Check project configuration ▪ Check safety configuration |
| 1501 hex | Faulty configuration file; file cannot be opened | Check safety configuration |
| 1502 hex | Faulty configuration file; file cannot be opened | Check safety configuration |
| 1503 hex | Faulty configuration file; file has an invalid format | Check safety configuration |
| 1504 hex | Faulty configuration file; parameter specification missing | Check safety configuration |
| 1505 hex | Faulty configuration file; parameter specification invalid | Check safety configuration |
| 1506 hex | Faulty configuration file; parameter check fails | Check safety configuration |
| 1507 hex | Faulty configuration file; invalid number of safety functions | Check safety configuration |

| Code | Cause | Check and action |
|----------|--|--|
| 1508 hex | Faulty configuration file; maximum number of safety functions exceeded | Check safety configuration |
| 1509 hex | Faulty configuration file; parameter check fails | Check safety configuration |
| 150A hex | Faulty configuration file; file does not exist | Download configuration |
| 150B hex | Timeout when downloading the configuration file | Check safety configuration |
| 150C hex | Faulty configuration file; file is too large | Check safety configuration |
| 150E hex | Faulty configuration file; module description not available | Check module description |
| 150F hex | Faulty configuration file; multiple module descriptions | Check module description |
| 1510 hex | Faulty configuration file; invalid checksum | Check safety configuration |
| 1511 hex | Faulty configuration file; invalid checksum | Check safety configuration |
| 1512 hex | Device replacement failed | Perform process again and proceed exactly according to instructions |
| 1513 hex | Timeout for device replacement; confirmation by user not entered in time | Perform process again and confirm the device replacement within the specified time |
| 1514 hex | Faulty user input during device replacement | Perform process again and proceed exactly according to instructions |
| 1515 hex | Cancellation of device replacement during user confirmation | Perform process again and do not cancel the device replacement |
| 1516 hex | Faulty configuration file; invalid safety function entry | Download configuration |
| 1601 hex | A subsequent fault has occurred | Rectify error which occurred first |
| 1607 hex | Incorrect material or serial number | <ul style="list-style-type: none"> ▪ Carry out download again ▪ Check material and serial number |
| 160A hex | Error when starting the safety module | Restart |
| 1704 hex | Faulty synchronization with drive controller | Check whether the valid, appropriate drive controller firmware is present (E52[3]) |
| 1901 hex | Error when writing to memory (FLASH) | Carry out procedure again |
| 1902 hex | Error when deleting the memory (FLASH) | Carry out procedure again |
| 1903 hex | Error when writing to memory (EEPROM) | Carry out procedure again |
| 1904 hex | Error when reading from memory (EEPROM) | Carry out procedure again |
| 1A14 hex | Invalid FSoE SubInstance address | Check FSoE address of the SubInstance (valid value range: 1-254) |
| 1A16 hex | Error during FSoE communication; FSoE error occurred | Check FSoE watchdog time |
| 1D01 hex | Error in a digital input | Ensure that the connection wiring of the input is free from errors |
| 1D02 hex | Error in a digital output | <ul style="list-style-type: none"> ▪ Ensure that there is no short-circuit, cross-circuit fault or wire break in the connecting wiring of the output ▪ Restart |
| 1D03 hex | Error when reading back a digital output | Ensure that there is no short-circuit, cross-circuit fault or wire break in the connecting wiring of the output |

| Code | Cause | Check and action |
|----------|--|---|
| 1D04 hex | Error in an SBC output | Ensure that there is no short-circuit, cross-circuit fault or wire break in the connecting wiring of the output |
| 1D05 hex | Error when reading back an SBC output | Ensure that there is no short-circuit, cross-circuit fault or wire break in the connecting wiring of the output |
| 1D06 hex | Faulty supply voltage | Check supply voltage of the safety module |
| 1D07 hex | Faulty supply voltage | Check supply voltage of the safety module |
| 1D08 hex | Supply voltage of digital outputs is not present | Check supply voltage of the outputs |
| 1D09 hex | Supply voltage test for digital outputs failed | Check supply voltage of the outputs |
| 1D0A hex | Faulty supply voltage | Check supply voltage of the safety module |
| 1D0C hex | Faulty supply voltage | Check supply voltage of the safety module |

Tab. 372: Error list of the SE6 safety module

19.3 Acknowledging faults

There are several options for acknowledging faults. As a rule, an acknowledgement is also transmitted to the safety module.

Application-independent

Independent of the application, you can acknowledge faults directly on the drive controller using the [Esc] button or alternatively in DriveControlSuite using the control panels.

Drive Based application

In the Drive Based application, the following options for acknowledging are available in DriveControlSuite:

- By defining the source of the signal in A61 (source: digital input or control byte A180, bit 1)
- By enabling the drive controller via F75 (source for relay 1, terminal X1) and/or using an additional enable signal via A60 (source: digital input or control byte A180, bit 0)

The drive controller has a configurable restart (A34) in the Drive Based application.

WARNING!

Injury to persons and material damage due to unexpected motor startup!

Only activate autostart if the standards and regulations applicable to the system or machine in question permit a direct switch to the Ready to switch on device state.

- In accordance with EN 61800-5-1, clearly mark an activated autostart on the system and in the associated system documentation.

CiA 402 application

In the CiA 402 application, you can acknowledge faults in DriveControlSuite using control word A515, bit 3 (Enable operation) or bit 7 (Fault reset).

Information on extended safety technology

The control unit of the drive controller can also send an acknowledgement exclusively to the SE6 safety module without acknowledging its own fault.

The source (digital input or control byte A180, bit 1) is defined in S31 independent of the application. The reaction of the safety module to an acknowledgement by the drive controller is set in PASmotion Safety Configurator:

- NOP: No reaction
- ACK ERR: Error acknowledgement without restart of the safety module
- RESTART: Error acknowledgement with restart of the safety module

20 Analysis

Scope and multi-axis scope in DriveControlSuite are two analysis tools that help you commission single axes or entire machines and troubleshoot.

You can select and record up to 12 parameters from the entire pool of drive controller parameters. The sampling time can be set from 250 μ s to several seconds to be able to observe both highly dynamic as well as very slow processes. Like for an actual oscilloscope, there are a variety of trigger options and many statistical evaluation functions for the recorded data (minimum value, maximum value, average, RMS value, standard deviation, etc.).

| Tool | Objectives | Application cases |
|------------------|--|---|
| Scope | Create multiple scope images of a single drive controller at different times. | Optimize or diagnose a drive controller |
| | Create multiple scope images with the same settings (channels, trigger, pre-trigger, sampling time), but differing values for individual parameters. | |
| | Combine multiple scope images for the analysis. | |
| | Create a temporary direct image. | |
| Multi-axis scope | Create individual scope images of multiple drive controllers or axes at the same time. | Check the machine utilization or diagnosis in synchronous operation |
| | Create an individual scope image with the same settings or individual settings (for each axis or for individual axes). | |

Tab. 373: Application cases for scope and multi-axis scope

20.1 Scope and multi-axis scope

With the Scope and Multi-axis scope windows, you can create scope images for diagnostic purposes for one or more drive controllers if an online connection is established.

Information

The Scope window can be reached using the button in the project menu if you have selected a drive controller in the project tree.

The Multi-axis scope window can be reached using the button in the project menu if you have selected the project in the project tree.





 
Fig. 105: Scope and multi-axis scope: Program interface

| No. | Area | Description |
|-----|--------------|--|
| 1 | Action area | In the Action area, you can define settings for the scope image, start and stop the scope image, and read information on the status, scope image progress and remaining recording time. |
| 2 | Scope images | In the Images area, you can open, delete, rename, comment on or export scope images that have already been read out. In the scope, the Combinations and Direct image tabs are also available in this area. |

Action area: Buttons

| Button | Availability | Description |
|----------|----------------------------|---|
| Start | Scope, multi-axis scope | Starts the scope image (prerequisite: online connection). |
| Stop | Scope, multi-axis scope | Stops the scope image (prerequisite: online connection). |
| Settings | Scope, multi-axis scope | Opens the Settings window where you can define the trigger condition, channel assignment, sampling time and, in the case of the multi-axis scope, the nodes for the scope image. |

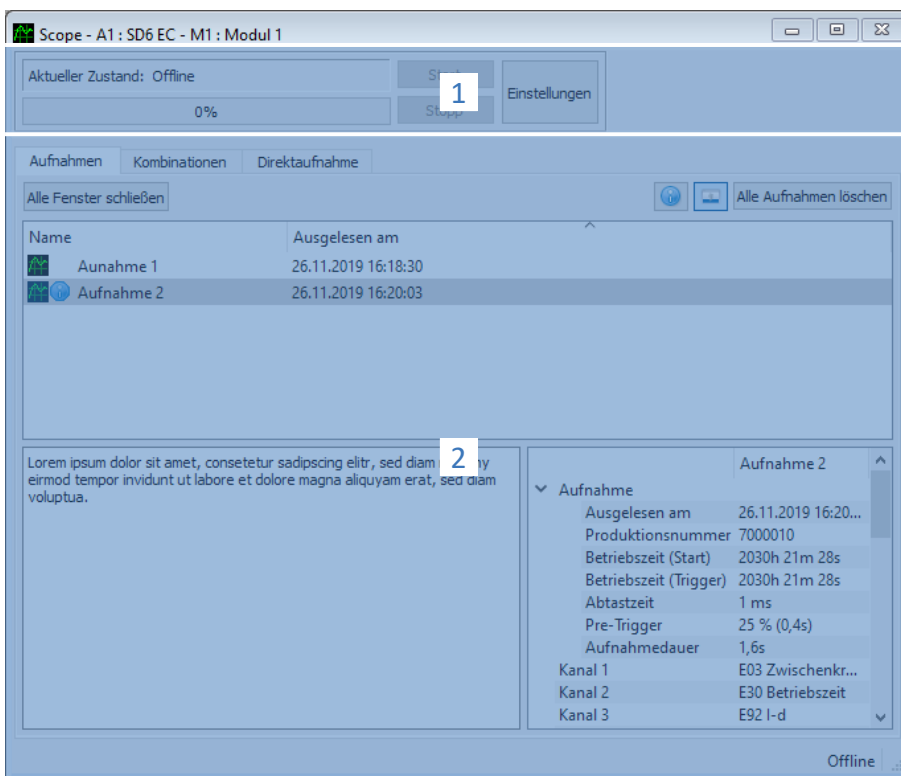Scope images: Buttons

| Icon | Description |
|---|---|
|  | Opens the dialog box for storing a comment for the scope image. |
|  | Shows/hides the bottom margin area. |

Information

If you want to learn more about a particular scope image, click on it. Any comments and the properties of the scope image are then displayed at the bottom of the window. You can show the lower margin area using the button in the **Scope images** or **Combinations** tab.

| Button | Description |
|-------------------------|--|
| Close all windows | Closes all open scope images and combinations. |
| Delete all scope images | Deletes all individual scope images; combined scope images are retained (tab: Scope images). |
| Delete all combinations | Deletes all combined scope images; individual scope images are retained (tab: Combinations). |

Scope images: Context menus

| Tab | Availability | Description | Context menu |
|--------------|------------------|---|---|
| Scope images | Scope | On the Images tab, completed scope images are listed after being read out from the drive controller. Double-click to open the scope image. If you have created multiple scope images and select this, you can combine and open them via the context menu. | <ul style="list-style-type: none"> ▪ Open ▪ Delete ▪ Rename ▪ Comment ▪ Export ▪ Combine and open |
| | Multi-axis scope | On the Images tab, completed scope images are listed after being read out from the drive controller. Double-click to open the scope image. | <ul style="list-style-type: none"> ▪ Open ▪ Delete ▪ Rename ▪ Comment ▪ Export |
| Combinations | Scope | On the Combinations tab, combined scope images are listed that you can open by double-clicking. | <ul style="list-style-type: none"> ▪ Open ▪ Delete ▪ Rename ▪ Comment ▪ Export |
| Direct image | Scope | In the Direct image tab, you can create a temporary scope image that is discarded with the start of the next scope image and use the set value generation to optimize the control cascade. | — |

20.1.1 Scope settings

In the Settings window, you define the settings for the scope image and the trigger before you start the scope image. The scope image settings are shown in the Channel assignment tab, the trigger settings in the Trigger condition tab (scope) or Node and trigger condition tab (multi-axis scope).

Information

The Settings window for scope images can be reached via the Settings button in the Scope or Multi-axis scope window.

| Tab | Availability | Description |
|----------------------------|-------------------------|---|
| Channel assignment | Scope, multi-axis scope | With the scope image settings in the Channel assignment tab, you define which data of the respective axis you want to record in the scope image, in which time intervals the data is sampled and which time period is recorded before triggering the trigger. |
| Trigger condition | Scope | With the trigger settings in the Trigger condition tab, you define which event triggers the recording of a scope image. |
| Node and trigger condition | Multi-axis scope | With the trigger settings in the Node and trigger condition tab, you define which event triggers the recording of a scope image and for which axes a scope image is recorded. |

Example: Trigger and scope image settings

| Settings | Example | Results |
|----------------------|---|--|
| Trigger settings | <ul style="list-style-type: none"> ▪ Simple trigger ▪ Source: E15 v-motor-encoder ▪ Condition: greater ▪ Comparison value: 50 rpm | The trigger condition is met if the value of parameter E15 v-motor-encoder is greater than 50 rpm. |
| Scope image settings | <ul style="list-style-type: none"> ▪ Recorded channels: 1 ▪ Sampling time: 1 ms ▪ Pre-trigger: 33% | The recording time calculated from the number of channels and the sampling time is 6.6 s. 2.2 s (33%) are recorded before the trigger is triggered and 4.4 s afterwards. |

Information

Additional settings for your scope images can be made using parameters T25 Automatic start and T26 Retrigger scope.

20.1.1.1 Trigger settings

With the trigger settings in the **Trigger condition** tab (scope) or **Node and trigger condition** tab (multi-axis scope), you define which event triggers the recording of a scope image. To do this, define the trigger for each axis and, if applicable, the trigger condition. The selection of the trigger influences which of the settings described below are available to you.

Information

The **Settings** window for the scope image can be reached via the **Settings** button in the **Scope** or **Multi-axis scope** window. For the scope, you can find the trigger settings directly in the **Trigger condition** tab. For the multi-axis scope, you can reach the trigger settings for the respective axis via the **Settings** button in the **Node and trigger condition** tab.


| Trigger | Description |
|----------------------|--|
| Manually at stop | The trigger is triggered by the Stop button, without taking the pre-trigger time into account. |
| Immediately at start | The trigger is triggered by the Start button as soon as the pre-trigger time has elapsed. |
| Simple trigger | The trigger is triggered automatically when the trigger condition is met and the pre-trigger time has elapsed. |
| Trigger logic | The trigger is triggered automatically when the trigger logic is satisfied and the pre-trigger time has elapsed. |

Trigger conditions

A simple trigger consists of a single trigger condition, while trigger logic is composed of 2 trigger conditions logically linked by an operator. A trigger condition consists of the source, the condition and the comparison value.

| Source | Description |
|----------------------|---|
| Inactive | Default value if Manually at stop was selected as the trigger. |
| Immediately at start | Default value if Immediately at stop was selected as the trigger. |
| Parameter | Defines a parameter as the source for the trigger. You can enter the parameter either via the [...] button and Add parameter dialog box or directly into the text field with auto-completion by specifying the coordinate, name and, if applicable, axis number (example: 1.I80 Current position). |
| Signal name | Defines a signal as the source for the trigger. You have assigned a signal name for this signal in the graphical programming at the input or output of a block. If you have not yet assigned a signal name in the graphical programming, the list is empty. |
| Physical address | Defines a physical address in the drive controller memory as the source for the trigger. Physical addresses can be assigned as part of an extended diagnosis by the development team. They must be specified with the associated data type. |

Information

If you record the value of a parameter or use a parameter as a trigger source, you can display the associated parameter description as a tooltip in both the scope image settings and the trigger settings (button: ).

| Setting | Description |
|------------------|---|
| Condition | Condition for the trigger condition with which the source and the comparison value are compared. <ul style="list-style-type: none"> less than less than or equal to greater than greater than or equal to equal to not equal to |
| Comparison value | Comparison value for the trigger condition that is compared to the source. |
| Minimum time | Time, in μs , in which the condition must at least be met for the trigger condition to be considered met. |

| Option | Description |
|----------------|--|
| Absolute value | The Absolute value option enables you to ignore the sign when comparing the source and comparison value. |
| Mask | The Mask option allows you to evaluate only a single bit of the source. |
| Edge | The Edge option activates/deactivates edge detection. |

Information

You can switch the display of the Mask option between hexadecimal and binary display if required. The mask is displayed with leading zeros according to the data type or data width of the selected parameter.

| Operator | Description |
|-----------|---|
| AND | The trigger logic is satisfied if both trigger conditions are met. |
| OR | The trigger logic is satisfied if one or both trigger conditions are met. |
| XOR | The trigger logic is satisfied if one of the two trigger conditions is met, not both . |
| NAND | The trigger logic is satisfied if neither or one of the two trigger conditions is met, not both . |
| NOR | The trigger logic is satisfied if neither of the two trigger conditions is satisfied. |
| XNOR | The trigger logic is satisfied if neither or both of the two trigger conditions are met. |
| Trigger 1 | The trigger logic is satisfied if the first trigger condition is met. |
| Trigger 2 | The trigger logic is satisfied if the second trigger condition is met. |

| Button | Description |
|--------|---|
| Export | Exports all settings (trigger and scope image settings) to a text file (*.txt). |
| Import | Imports all settings from a text file (*.txt). |
| Close | Closes the window. All settings are accepted. |

Information

Export your settings if you want to reuse the same or similar settings in other projects or import existing settings and adjust them as necessary.

20.1.1.2 Scope image settings

With the scope image settings in the Channel assignment tab, you define which data of the respective axis you want to record in the scope image, in which time intervals the data is sampled and which time period is recorded before triggering the trigger. To do this, define the channel assignment, the sampling time and the pre-trigger for each axis.

Information


The Settings window for the scope image can be reached via the Settings button in the Scope or Multi-axis scope window. For the scope and multi-axis scope, the scope image settings are shown in the Channel assignment tab.

Information

For a multi-axis scope, you must first select at least 2 nodes before you can specify the settings in the Channel assignment tab. You can specify identical channel assignments for all axes or use the Individual option to store differing settings for each axis. The calculation of the recording time and pre-trigger time relate to the axis with the shortest recording time.

| Setting | Selection | Description |
|--------------------|------------------|---|
| Channel assignment | Inactive | When Inactive is selected, no value is recorded in the scope image for the channel. |
| | Parameters | When Parameter is selected, the value of a parameter is recorded in the scope image for the channel. |
| | Signal names | When Signal name is selected, the value of a signal is recorded in the scope image for the channel. You defined a signal name for this signal in the graphic programming at the input or output of a block. |
| | Physical address | When Physical address is selected, the value of a physical address in the memory of the drive controller is recorded in the scope image for the channel. |
| Sampling time | 250 µs - 100 ms | With the Sampling time setting, you define the time interval in which the signals are sampled for the scope image. |
| Pre-trigger | 0 % – 100 % | With the Pre-Trigger setting, you define the percentage of the scope memory that must be occupied for the axis to be trigger-ready and thus the percentage of the recording time before the trigger. |

Information

If you record the value of a parameter or use a parameter as a trigger source, you can display the associated parameter description as a tooltip in both the scope image settings and the trigger settings (button: .

Information

The scope memory has approximately 32 KB available for the scope image. The recording time is calculated from the sampling time, the number of recorded channels and the available disk space. The larger the number of recorded channels and the more frequently the channels are sampled, the faster the available disk space is occupied and the shorter the scope image becomes.

The pre-trigger time is calculated from the set pre-trigger and the recording time.

Information

If a large pre-trigger value is entered with a long recording time, the scope image may remain in the Started state for a period after the start until the pre-trigger is fulfilled and recording readiness is signaled by the Trigger-ready state. Status and progress of the scope image are displayed in DriveControlSuite. The scope image is then read out from the drive controller and transmitted to DriveControlSuite.

| Button | Description |
|--------|---|
| Export | Exports all settings (trigger and scope image settings) to a text file (*.txt). |
| Import | Imports all settings from a text file (*.txt). |
| Close | Closes the window. All settings are accepted. |

Information

Export your settings if you want to reuse the same or similar settings in other projects or import existing settings and adjust them as necessary.

20.1.2 Image editor

The image editor contains all the functions you need to edit your scope images.

Information

The image editor can be reached by double-clicking a scope image or via the context menu of the respective scope image.

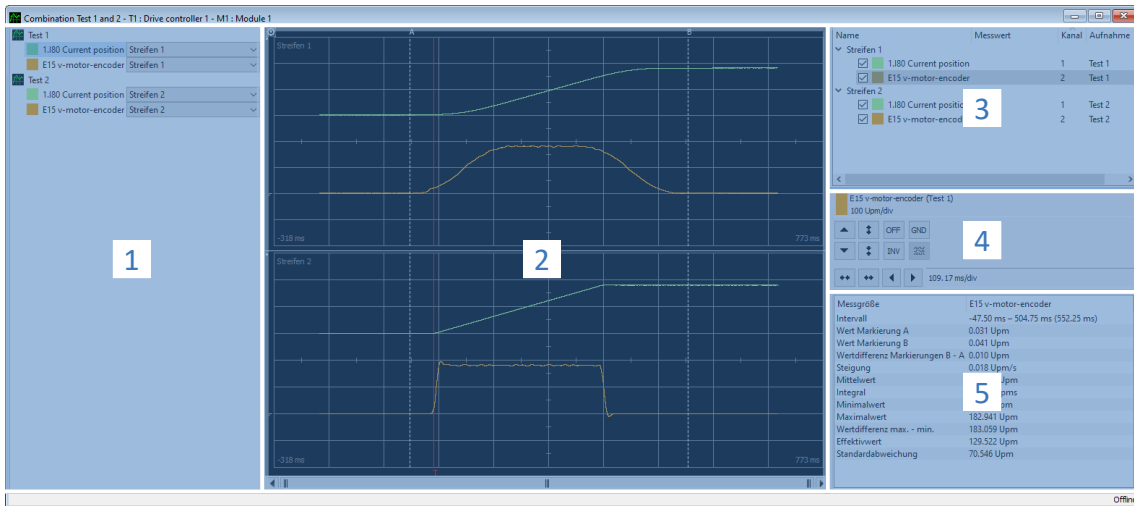


Fig. 106: Scope and multi-axis scope: Image editor




| No. | Area | Description |
|-----|-------------------------------|---|
| 1 | Assignment of channel to band | For combinations or multi-axis scope images, you can change the assignment to a section within the scope image (= band) for each channel in the Channels and bands area. |
| 2 | Scope image | In the Scope image area, you see the graphical representation of the recorded and visible channels. |
| 3 | Channel selection | In the Channel selection area, you manage the bands and channels of a scope image. |
| 4 | Channel settings | In the Channel settings area, you can adjust the graphical representation of the channels. |
| 5 | Measured values | In the Measured values area, values for different measured variables are output with measuring points A and B for the selected channel. For scope images, there is also the option to carry out a frequency analysis. |




Assignment of channel to band

 This area is only available in case of combinations or multi-axis scope images. By default, each scope image is assigned a band with the recorded channels. You can hide each channel (parameter, signal name or physical address) or change the assignment to a band via the corresponding picklist. However, new bands must be created beforehand in the Channel selection area.

Scope image

A scope image shows a graphical representation of the recorded and visible channels.

| Icon/Button | Description | Context menu |
|---|--|--|
|  | Left-clicking on measuring line A or B allows the line to be shifted to the left or right as desired. | — |
| [Right mouse button] | Right-clicking on any point of the scope image opens the context menu. | <ul style="list-style-type: none"> Set marking A here Set marking B here Jump to marking A Jump to marking B |
| [Left mouse button] | Left-clicking on any point of the scope image activates the quick measurement. The values are output in the Channel selection area in the Measured value column. | — |
|  | Marking the zero line of a channel. | — |
|  | Marking the trigger line. | — |

| Icon | Description |
|---|--|
|  | Opens the image editor settings for the coloring of the drawing area and channels. |
|  | Opens the dialog box for storing a comment for the scope image. |
|  | Opens the list of scope images in order to take over the channel scaling from a scope image that has already been adjusted. Button only available for scope images, not for combinations or multi-axis scope images. |






 

 





Channel selection

In the Channel selection area, you manage the bands and the channels assigned to them. You can delete existing bands or create new bands. You can activate or deactivate the display of a channel. For each channel, a channel number and the name of the scope image is output. If you click any point within the scope image, the associated measured value is also displayed.

| Element | Description | Context menu |
|---------|---|--|
| Band | Section of a scope image | <ul style="list-style-type: none"> Delete band Create new band |
| Channel | Recorded parameter, signal name or physical address | <ul style="list-style-type: none"> Hide channel Only show this channel Show all channels Invert display of channels Create new band |

Channel settings

The channel settings are used to adjust the graphical representation of the channels and scope image. In the display above the buttons, you see the color, complete designation and scaling of the selected channel. You can use the buttons to change the display of the channel or time axis. In the display next to the button for the time axis, the current scaling of the x-axis is displayed.

| Button | Section | Description |
|--|--------------------|---|
|  | Channel display | Opens the color palette for changing the channel color. |
|   | Channel settings | Moves the curve of the activated channel up or down by a grid interval: <ul style="list-style-type: none"> [Shift] + [button]: Moves curve up or down by a pixel [Ctrl] + [button]: Moves curve up or down to the next grid line [Shift] + [Ctrl] + [button]: Centers curve vertically |
|   | | Enlarges or reduces the channel scaling (fixed point = horizontal image center): <ul style="list-style-type: none"> [Shift] + [button]: Autoscaling |
|  | | Displays or hides the channel. |
|  | | Inverts the channel display. |
|  | | Indicates the zero line of the channel. |
|  | | Opens the list of parameter signals for selecting an individual bit. Button can only be used for whole-number parameters without decimal places (BYTE, WORD or DWORD data types), but not for selection parameters. |
|   | Time axis settings | Enlarges or reduces the scaling of the x-axis: <ul style="list-style-type: none"> [Ctrl] + [button]: Autoscaling |
|   | | Moves the scope image left or right by a grid interval: <ul style="list-style-type: none"> [Shift] + [button]: Moves scope image left or right by a pixel [Ctrl] + [button]: Moves scope image left or right to the next grid line [Shift] + [Ctrl] + [button]: Centers scope image horizontally |

Information

You can use the buttons in the channel settings to scale both the channel (y-axis) and time axis (x-axis) in steps. Alternatively, you can freely scale both axes by entering the desired scaling factor directly in the respective field. Also define the desired unit for the time axis (ns, µs/us, ms, s).

Free channel scaling makes it easier to compare channels or parameters with different scaling, e.g. for comparing set and actual values. To convert between motor and user sizes, you can either view the scaling factor in parameter I240 or use the scaling calculator (wizard: Axis: Scaling).

Measured values

In the Measured values area, values for different measured variables are output with measuring points A and B for the selected channel. For scope images, there is also the option to carry out temporary frequency analyses in the form of a discrete Fourier transform (DFT). When the image editor is closed, DFT calculations are discarded again.

| Tab | Availability | Description |
|--------------------|-------------------------|--|
| Scope | Scope, multi-axis scope | The Scope tab has a list of the values for various variables referring to measuring points A and B for the selected channel. |
| Frequency analysis | Scope | The Frequency analysis tab can be used for performing Fourier transforms on scope images. |

20.1.3 Frequency analysis

Between measuring points A and B in the Frequency analysis tab of the image editor, a blue transparent window appears for which a discrete Fourier transform can be carried out. Interval and measured values (= number of sensing points between A and B) are displayed for you.

| |
|--------------------|
| Information |
|--------------------|

You can reach the tab where you can carry out a frequency analysis in the image editor of a scope image through the Measured values area > Frequency analysis tab.

| Setting | Selection | Description |
|-----------------|-------------------|---|
| Window function | Hamming | Minimizes the leakage effect for the Fourier transform. |
| | Without weighting | Calculation without correction. |

| Button | Description |
|---------------|--|
| Calculate DFT | The DFT is calculated and opened in a separate window. |

DFT window

The calculated DFT opens in a separate window. When the window is closed, the calculation is discarded again. You can adjust the display:

- [Ctrl] + [Left mouse button]: Zoom in on section
- [Ctrl] + [Right mouse button]: Reset display to initial value (100%)

| Button | Description |
|--------|--|
| OFF | Displays or hides the selected channel. |
| Log | Logarithmically scales the y- or x-axis. |
| Lin | Linearly scales the y- or x-axis. |

20.2 Scope image

Scope image recording is divided into 3 steps:

- Preparation of the scope image in DriveControlSuite
 - Establish online connection
 - Configure channels of the participating axis
 - Define trigger settings
 - Start the scope image
- Loading the data in the drive controller
 - Process of trigger communication (independent of DriveControlSuite)
 - Monitor the scope image with DriveControlSuite
- Reading out and displaying the scope image
 - Read the scope image out of the drive controller
 - Display the scope image in DriveControlSuite

20.2.1 Creating a scope image

Create a scope image by specifying the scope image and trigger settings. Then start the scope image with an existing online connection.

Information

To create a scope image with the scope or multi-axis scope, you need an online connection between DriveControlSuite and the drive controller. You can establish the online connection either before or after defining the scope image and trigger settings.

Define the settings for scope images and triggers

Define the scope image settings and the trigger settings before you start the scope image.

1. Select the relevant drive controller in the project tree and click **Scope** in the project menu.
 - ⇒ The **Scope** window opens.
2. Action area:
 - To define the settings for the scope image, click **Settings**.
 - ⇒ The **Settings** window opens.
3. **Trigger condition tab:**
 - Define which event triggers the scope image.
 - 3.1. Select **Manual at stop** to activate the trigger via the **Stop** button (without pre-trigger).
 - 3.2. Select **Immediately at start** to activate the trigger via the **Start** button (with pre-trigger).
 - 3.3. Select **Simple trigger** to activate the trigger automatically when a trigger condition occurs.
 - 3.4. Select **Trigger logic** to activate the trigger automatically when two logically linked trigger conditions occur.
4. **Trigger condition tab:**
 - If you have selected **Simple trigger** or **Trigger logic**, define the **Source**, **Condition** and **Comparison** value for the trigger condition.
 - 4.1. If you have selected **Single trigger**, define the individual trigger condition.
 - 4.2. If you have selected **Trigger logic**, define both trigger conditions and the operator for the logical operation.

5. Channel assignment tab:
Select which data is to be recorded with the scope image.
 - 5.1. Parameter:
To record the value of a parameter, enter the coordinate, name and, if applicable, axis number of the parameter with the **Add parameter** dialog box via ... or by writing directly into the text field and using auto-completion (example: 1.I80 Current position).
 - 5.2. Signal name:
To record the value of a signal, select a signal for which you have assigned a signal name in the graphic programming.
 - 5.3. Physical address:
To record the value of a physical address in the drive controller memory, select the data type and specify the address.
6. Channel assignment tab, Sampling time selection:
Select the time interval at which the channel is to be sampled.
7. Channel assignment tab, Pre-trigger selection:
Define the percentage of the recording time before the trigger.
 - ⇒ The calculated recording time and pre-trigger time are displayed.
8. Confirm your settings with **Close**.

Creating a scope image

Start the scope image of the data in the drive controller and read out the scope image to DriveControlSuite according to the scope image and trigger settings.

- ✓ You are in the **Scope window**, **Scope images tab**.
- ✓ You have configured the settings for the scope image.
- ✓ There is an online connection between DriveControlSuite and the drive controller.

1. Action area:
To start the scope image of the data in the drive controller, click **Start**.
 - ⇒ The drive controller records the data in the scope memory in accordance with the scope image settings.
 - ⇒ The **Action area** of DriveControlSuite displays information about the status of the scope image.
 2. If you are using the **Manually at stop trigger** setting or if you want to stop the scope image early before the recording time expires, click **Stop**.
 - ⇒ When the trigger is triggered, DriveControlSuite reads the data from the scope memory according to the scope image settings.
- ⇒ The finished scope image is listed in the **Scope images tab** and can be opened via double-click.

20.2.2 Combining scope images

Combine scope images with each other to easily compare the recorded data.

- ✓ You are in the **Scope window**, **Scope images tab**.
 - ✓ You have created multiple scope images for a drive controller.
1. **Scope images tab:**
Select the scope images you want to combine and choose **Combine** and open from the context menu.
 - ⇒ **Combinations tab:**
The combined scope image is listed in the **Combinations tab** and opens in the image editor.

20.2.3 Creating a direct image

Create a scope image by specifying the scope image and trigger settings. Then start the scope image with an existing online connection.

Information

To create a scope image with the scope or multi-axis scope, you need an online connection between DriveControlSuite and the drive controller. You can establish the online connection either before or after defining the scope image and trigger settings.

Define the settings for scope images and triggers

Define the scope image settings and the trigger settings before you start the scope image.

1. Select the relevant drive controller in the project tree and click **Scope** in the project menu.
 - ⇒ The **Scope window** opens.
2. **Action area:**
To define the settings for the scope image, click **Settings**.
 - ⇒ The **Settings window** opens.
3. **Trigger condition tab:**
Define which event triggers the scope image.
 - 3.1. Select **Manual at stop** to activate the trigger via the **Stop button** (without pre-trigger).
 - 3.2. Select **Immediately at start** to activate the trigger via the **Start button** (with pre-trigger).
 - 3.3. Select **Simple trigger** to activate the trigger automatically when a trigger condition occurs.
 - 3.4. Select **Trigger logic** to activate the trigger automatically when two logically linked trigger conditions occur.
4. **Trigger condition tab:**
If you have selected **Simple trigger** or **Trigger logic**, define the **Source**, **Condition** and **Comparison value** for the trigger condition.
 - 4.1. If you have selected **Single trigger**, define the individual trigger condition.
 - 4.2. If you have selected **Trigger logic**, define both trigger conditions and the operator for the logical operation.

5. Channel assignment tab:
Select which data is to be recorded with the scope image.
 - 5.1. Parameter:
To record the value of a parameter, enter the coordinate, name and, if applicable, axis number of the parameter with the **Add parameter** dialog box via ... or by writing directly into the text field and using auto-completion (example: 1.I80 Current position).
 - 5.2. Signal name:
To record the value of a signal, select a signal for which you have assigned a signal name in the graphic programming.
 - 5.3. Physical address:
To record the value of a physical address in the drive controller memory, select the data type and specify the address.
6. Channel assignment tab, Sampling time selection:
Select the time interval at which the channel is to be sampled.
7. Channel assignment tab, Pre-trigger selection:
Define the percentage of the recording time before the trigger.
 - ⇒ The calculated recording time and pre-trigger time are displayed.
8. Confirm your settings with **Close**.

Creating a direct image

Start the scope image of the data in the drive controller and read out the scope image to DriveControlSuite according to the scope image and trigger settings.

- ✓ You are in the **Scope window**, **Direct image tab**.
- ✓ You have configured the settings for the scope image.
- ✓ There is an online connection between DriveControlSuite and the drive controller.

1. Action area:
To start the scope image of the data in the drive controller, click **Start**.
 - ⇒ The drive controller records the data in the scope memory in accordance with the scope image settings.
 - ⇒ The **Action area** of DriveControlSuite displays information about the status of the scope image.
 2. If you are using the **Manually at stop trigger** setting or if you want to stop the scope image early before the recording time expires, click **Stop**.
 - ⇒ When the trigger is triggered, DriveControlSuite reads the data from the scope memory according to the scope image settings.
- ⇒ The finished scope image is displayed in the **Direct image tab**.

20.3 Multi-axis scope images

Recording via multi-axis scope is divided into 3 steps:

- Preparation of the scope images in DriveControlSuite
 - Establish online connections
 - Select participating axes and define settings for triggering axes
 - Configure channels of the participating axes
 - Start recording
- Loading of the data in the drive controllers
 - Process of trigger communication (independent of DriveControlSuite)
 - Monitoring of individual recordings by DriveControlSuite
- Reading out and displaying the scope images
 - Read out scope images from the drive controllers
 - Display scope images in DriveControlSuite

20.3.1 Prerequisites

To find the participating drive controllers in the network and their communication with each other via broadcast, you must observe the following requirements:

- Network supports IPv4 limited broadcast
- All drive controllers are in the same subnet (broadcast domain)
- All drive controllers are connected to each other by IGB motion bus and connected to the PC with DriveControlSuite commissioning software installed; also see [IGB and IGB motion bus network \[▶ 483\]](#)
- Optional: An EtherCAT-based controller takes over synchronization of the scope images via distributed clocks

The following graphic shows the basic network structure for multi-axis scope images.

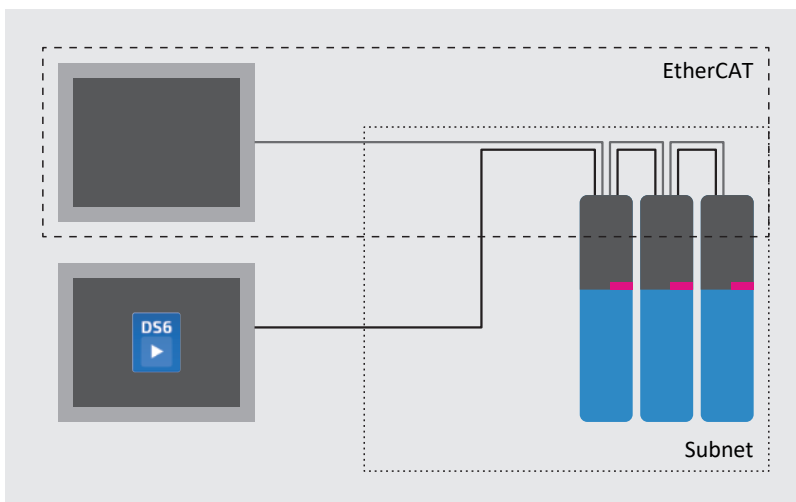


Fig. 107: Multi-axis scope: Network structure

20.3.2 Creating a multi-axis scope image

Create a scope image by specifying the scope image and trigger settings. Then start the scope image with an existing online connection.

Information

To create a scope image with the scope or multi-axis scope, you need an online connection between DriveControlSuite and the drive controller. You can establish the online connection either before or after defining the scope image and trigger settings.

Defining nodes and triggering axes

Define which axes are recorded for the multi-axis scope image and which of the axes can trigger the scope image.

1. Select the project in the project tree and click **Multi-axis scope** in the project menu.
 - ⇒ The Multi-axis scope window opens.
2. Action area:
 - To define the settings for the scope image, click **Settings**.
 - ⇒ The Settings window opens.
3. Node and trigger condition **tab**, Node **column**:
 - Activate all axes that you want to record with the multi-axis scope image.
4. Node and trigger condition **tab**, Distribute trigger **column**:
 - Activate all axes for which you want to define a trigger that triggers the scope image for all participating axes.
 - ⇒ The Settings button is displayed for each triggering axis.

Information

If you define more than one trigger for a multi-axis scope image, the scope image is triggered for all participating axes as soon as one of the trigger conditions occurs (logical OR operation).

Define the settings for scope images and triggers

Define the scope image settings and the trigger settings before you start the scope image.

- ✓ You are in the Multi-axis scope window > Settings window.
1. Node and trigger condition **tab**:
 - To define the trigger condition, click **Settings** next to the respective triggering axis.
 - ⇒ The Settings window opens.
 2. Node and trigger condition > Settings **tab**:
 - For each triggering axis, define which event triggers the scope image.
 - 2.1. Select **Manual at stop** to activate the trigger via the **Stop** button (without pre-trigger).
 - 2.2. Select **Immediately at start** to activate the trigger via the **Start** button (with pre-trigger).
 - 2.3. Select **Simple trigger** to activate the trigger automatically when a trigger condition occurs.
 - 2.4. Select **Trigger logic** to activate the trigger automatically when two logically linked trigger conditions occur.

3. Node and trigger condition > Settings tab:
If you have selected Simple trigger or Trigger logic, define the Source, Condition and Comparison value for the trigger condition.
 - 3.1. If you have selected Single trigger, define the individual trigger condition.
 - 3.2. If you have selected Trigger logic, define both trigger conditions and the operator for the logical operation.
4. Confirm your settings with Close.
⇒ The Settings window closes.
5. Node and trigger condition tab:
If you have defined more than one triggering axis, repeat the procedure for the remaining triggering axes.
6. Channel assignment tab:
Select which data is to be recorded with the scope image.
 - 6.1. Parameter:
To record the value of a parameter, enter the coordinate, name and, if applicable, axis number of the parameter with the Add parameter dialog box via ... or by writing directly into the text field and using auto-completion (example: 1.I80 Current position).
 - 6.2. Signal name:
To record the value of a signal, select a signal for which you have assigned a signal name in the graphic programming.
 - 6.3. Physical address:
To record the value of a physical address in the drive controller memory, select the data type and specify the address.
7. Channel assignment tab, Sampling time selection:
Select the time interval at which the channel is to be sampled.
8. Channel assignment tab, Pre-trigger selection:
Define the percentage of the recording time before the trigger.
⇒ The calculated recording time and pre-trigger time are displayed.
9. Confirm your settings with Close.

Information

In a multi-axis scope image, you can define per channel whether the same data is recorded for all participating axes or individual data per axis. To do this, activate the Individual option in the Channel assignment tab, click Open settings and define the data to be recorded per participating axis for the respective channel.

Creating a multi-axis scope image

Start the scope image of the data in the drive controller and read out the scope image to DriveControlSuite according to the scope image and trigger settings.

- ✓ You are in the Multi-axis scope window.
 - ✓ You have configured the settings for the scope image.
 - ✓ There is an online connection between DriveControlSuite and the drive controller.
1. Action area:
To start the scope image of the data in the drive controller, click Start.
 - ⇒ The drive controller records the data in the scope memory in accordance with the scope image settings.
 - ⇒ The Action area of DriveControlSuite displays information about the status of the scope image.
 2. If you are using the Manually at stop trigger setting or if you want to stop the scope image early before the recording time expires, click Stop.
 - ⇒ When the trigger is triggered, DriveControlSuite reads the data from the scope memory according to the scope image settings.
- ⇒ The finished scope image is listed in the Scope images tab and can be opened via double-click.

20.4 Parameters

You can use the following parameters to configure additional settings for the scope images:

- T25 Automatic start
- T26 Retrigger scope

21 Replacement

The following chapters describe the replacement of a drive controller and the available accessories.

21.1 Notes on the safety configuration

A drive controller with extended safety technology through the SE6 safety module always requires a valid safety configuration. If this is missing, an error message is generated.

The checksums of the safety configuration are displayed in parameter S09 Safety modul checksum of safety configuration.

The safety configuration of the safety module has a unique CRC overall checksum in which the encrypted production number of the safety module (S09[1]), among other things, is saved. If different safety modules have an identical safety configuration, the checksums of the safety functions will match (S09[2]).

The safety configuration is saved on the safety module. In addition, a copy of the configuration is saved on the Paramodul (S09[0]).

21.2 Replacing the drive controller

⚠ WARNING!

Electrical voltage! Risk of fatal injury due to electric shock!

Hazardous voltages may be present on the connection terminals and the cores connected to them.

- Always switch off all power supply voltage before working on the devices!
- Note the discharge time of the DC link capacitors in the general technical data. You can only determine the absence of voltage after this time period.

ATTENTION!

Loss of absolute position!

The absolute position in the encoder is lost if the encoder cable is disconnected from the AES battery module.

- Do not disconnect the encoder cable from the AES during service work! Disconnect the AES from the drive controller.

ATTENTION!

Damage to property due to electrostatic discharge!

Take appropriate measures when handling exposed printed boards, e.g. wearing ESD-safe clothing.

Do not touch contact surfaces.

Information

The safety module is a permanently integrated component in the drive controller where any design, technical and electrical modifications are prohibited!

Tools and material

You will need:

- Tool for loosening and tightening the fastening screws

Requirements and replacement

- ✓ Drive controllers of the same series and same power can be replaced interchangeably.
 - ✓ The hardware and firmware of the drive controller to be installed is of the same or a newer version as that of the drive controller to be replaced. For information on firmware updates, see [Updating firmware using DS6 \[► 451\]](#).
 - ✓ The Paramodul of the drive controller being replaced is present; the original project is stored on the Paramodul.
1. Optional: If an AES battery module is present, disconnect the AES from the drive controller.
 2. Disconnect all terminals from the drive controller being replaced.
 3. Release the grounding conductor from the ground bolt.
 4. Sizes 0 to 2: Unscrew the upper fastening screw slightly and remove the lower one to allow removal of the EM6A0 EMC shield plate.
 5. Remove the fastening screws and take the drive controller out of the control cabinet. Note that, if you couple the drive controller to the DC link over Quick DC-Link or you use a rear section braking resistor, you first have to press the drive controller up at the guides before you can remove it from the control cabinet.
 6. Remove the Paramodul of the new drive controller being installed.
 7. Insert the Paramodul with the original project into the drive controller being installed.
 8. Optional: Remove the communication and terminal modules from the drive controller being replaced if no accessories have been provided with the new drive controller.
 9. Optional: Install the accessories into the new drive controller.
 10. Install the new drive controller in the control cabinet.
 11. Reconnect the previously removed grounding conductor.
 12. Reattach the terminals.
 13. Optional: If an AES battery module was present, attach it to the new drive controller with the associated encoder cable. Tighten the knurled screws so that AES is securely connected to the drive controller.
- ⇒ The replacement is completed. Now commission the new drive controller.

21.3 Commissioning the new drive controller after replacing the device

After replacing the device, transfer the existing configuration to the new Paramodul. In addition, for drive controllers with extended safety technology through the SE6 safety module, deliberate action via the operating buttons is required in order to confirm the correct assignment of the safety configuration to the safety module.

Drive controller without SE6 option (advanced safety technology)

- ✓ The Paramodul with the original project is inserted.
- 1. Switch on the 24 V_{DC} supply of the drive controller.
 - ⇒ The transmission of configuration data from the Paramodul starts.
 - ⇒ After successful data transmission, the display switches from **NOT READY TO SWITCH ON** to displaying the operating status.
- 2. Remove the inserted Paramodul with the original project and insert the new Paramodul into the drive controller.
- 3. Press the [Save] button for 3 s.
 - ⇒ All data is stored in non-volatile memory on the new Paramodul.
 - ⇒ The progress is shown on the display.
 - ⇒ After successful data transmission, the display changes to show the operating status.
- 4. Restart the drive controller to have the configuration on the drive controller take effect.
 - ⇒ The commissioning of the new drive controller is complete.

Drive controller with SE6 option (advanced safety technology)

- ✓ The Paramodul with the original project is inserted.
- 1. Switch on the 24 V_{DC} supply of the drive controller.
 - ⇒ The transmission of configuration data from the Paramodul starts.
 - ⇒ The display changes from **NOT READY TO SWITCH ON** to **SAFETY ACTIVATION** as soon as the safety configuration needs to be activated.
- 2. Press the left and right arrow keys simultaneously for 2 s to activate the safety configuration.
 - ⇒ The safety configuration saved on the Paramodul is saved in the safety module.
 - ⇒ The checksum of the safety functions is shown on the display.
- 3. Check whether the checksum stored in the machine documentation of the replaced drive controller matches the checksum of the new drive controller:
 - 3.1. Manual comparison: Check the checksum of the new drive controller on the display or in DriveControlSuite via parameter S09[2].
 - 3.2. Automated comparison: In the controller, make sure that the checksum of the new drive controller is checked via parameter S09[2]. An error message is generated if there is a deviation.
- 4. Acknowledge the checksum display with [Esc].
 - ⇒ A fault event is shown on the display.
- 5. Acknowledge the fault event with [Esc].
- 6. Remove the inserted Paramodul with the original project and insert the new Paramodul into the drive controller.
- 7. Press the [Save] button for 3 s.
 - ⇒ All data is stored in non-volatile memory on the new Paramodul.
 - ⇒ The progress is shown on the display.
 - ⇒ After successful data transmission, the display changes to show the operating status.
- 8. Restart the drive controller to have the configuration on the drive controller take effect.
 - ⇒ The commissioning of the new drive controller is complete.

Information

The checksum for the safety functions is displayed in DriveControlSuite using parameter S09 Safety modul SE6 checksum of safety configuration in element 2.

21.4 Replacing the Paramodul

If you need to replace the original Paramodul supplied with the drive controller with a new one, you can reorder it from STOBER (see [Removable data storage \[▶ 44\]](#)).

Information

A new Paramodul from STOBER is always empty. It must be prepared for operation in the drive controller.

If a spare empty Paramodul from STOBER is plugged in when the drive controller is started, the drive controller starts in emergency operation and an error message appears on the display (see [Drive controller state: Display \[▶ 353\]](#)).

Preparation

To replace an original Paramodul and prepare the new one for operation in the drive controller, proceed as described below:

- ✓ The original Paramodul is plugged into the drive controller.
 - 1. Switch on the 24 V_{DC} supply of the control unit.
 - 2. Replace the original Paramodul with the new one.
 - 3. Execute the A00 action and wait until saving is finished.
- ⇒ The new Paramodul is prepared for operation in the drive controller.

21.5 Updating firmware using DS6

If you require a different firmware version or want to update the firmware of a drive controller, you can change the firmware using the DriveControlSuite commissioning software. You can prepare a live firmware update while the drive controller and machine are operating. The update does not take effect until after a restart. This dual firmware behavior prevents a firmware loss or need for a case of service, since it ensures, for example, that the existing firmware can be accessed if the connection is interrupted.

Updating the firmware

Update the firmware of your drive controllers to the current version to use the full range of DriveControlSuite functions.

- ✓ You are in the Online functions window, Live firmware update tab.
- ✓ You have added a direct connection between DriveControlSuite and drive controllers.
- 1. Live firmware update tab:
 - Click Assign default version to all drive controllers.
 - ⇒ The current firmware version is assigned to the drive controllers.
- 2. Click Start live firmware update.
- 3. Confirm the safety note with OK.
 - ⇒ The firmware version is downloaded and installed during the next restart of the drive controller.
- 4. For the live firmware update to take effect, click Restart all drive controllers.
- 5. Confirm the restart with Yes.
 - ⇒ The fieldbus communication and connection between DriveControlSuite and drive controllers are interrupted.
 - ⇒ All connected drive controllers restart.

Information

The firmware version that is available for the update in the standard depends on the DriveControlSuite version used. Install the latest version of DriveControlSuite to update the firmware of your drive controllers to the latest version and to be able to use the full range of functions.

Updating firmware (alternative version)

To update the firmware of your drive controllers to a version other than that of the DriveControlSuite version used, proceed as described below.

- ✓ You are in the Online functions window, Live firmware update tab.
- ✓ You have added a direct connection between DriveControlSuite and the drive controller.
- 1. Live firmware update tab:
 - Click Add new firmware version.
 - ⇒ The Live firmware update dialog box opens.
- 2. Navigate to the firmware file (*.fli) that you want to use to perform the live firmware update.
- 3. Confirm with Open.
 - ⇒ The firmware version becomes available in the DriveControlSuite.
- 4. Assignment tab, Firmware update selection:
 - Select Alternative version.

5. Assignment area, Firmware version selection:
Select the firmware version you want to use to perform the live firmware update.
6. Click Start live firmware update.
7. Confirm the safety note with OK.
 - ⇒ The firmware version is downloaded and installed during the next restart of the drive controller.
8. For the live firmware update to take effect, click Restart all drive controllers.
9. Confirm the restart with Yes.
 - ⇒ The fieldbus communication and connection between DriveControlSuite and drive controllers are interrupted.
 - ⇒ All connected drive controllers restart.

21.6 Motor replacement

When replacing a synchronous servo motor with EnDat encoder and electronic nameplate, the drive controller detects that a motor replacement has been performed upon switching on the drive controller (prerequisite: B04 = 64: Active).

As a response, the drive controller reads out the changed data from the electronic nameplate, transmits this data to the corresponding parameters and reports the process using a fault of type 81: Motor allocation. Based on the cause of the fault, you can recognize what has changed.

In order to take over the changed data onto the Paramodul and thus store it in non-volatile memory, you must carry out the Save values action in parameter A00. As an alternative, save the data using the save button on the display.

Otherwise, the next time the drive controller is switched on, the electronic nameplate is read out again and the changed data is reported using a fault of type 81: Motor allocation.

22 Service

You can find important information all about our range of services in this chapter.

22.1 Information about the product

You can find information about your product online at the following address: <https://id.stober.com>.

In the search field there, enter the serial number, delivery note number or invoice number of the product.

Alternatively, you can use a suitable mobile device to scan in the QR code on the front of the device in order to directly access product information that is available online.

22.2 STOBER electronics service

If you need support, please contact our service department (see [Consultation, service and address](#) [► 526]).

Please have the following descriptive information on hand so that we can provide you with quick, professional assistance.

Ordering a replacement device

If you would like to order a replacement device, our System Support requires the following information:

- MV and serial number of the drive controller being replaced (see Material variant)
- Information on subsequent changes (e.g. change in option modules, application or firmware)

The MV number indicates the ordered and delivered material variant, i.e. the device-specific combination of all hardware and software components. The serial number is used to determine your customer information. Both numbers are stored in the STOBER enterprise resource planning system and make reordering a drive controller easier in case of service.

Service request

If you need assistance or have any questions regarding commissioning, create reverse documentation for your project as your first step. This makes it easier for our System Support to process your request.

22.3 Reverse documentation


If you have questions concerning commissioning and would like to contact our service department, start by first creating reverse documentation and send this to our System Support email address (see [Consultation, service and address](#) [▶ 526]).

When creating reverse documentation, DriveControlSuite captures a snapshot of the parameter values in the drive controller before the online connection is disconnected. With reverse documentation, the parameter values in DriveControlSuite, which you can otherwise only view with an existing online connection to the drive controller, are also available offline.

22.3.1 Creating reverse documentation

If you have any questions about commissioning your drive project and would like to contact our service department, create reverse documentation in advance so that we can help you more specifically.

Information

If you create reverse documentation of the values in the drive controller when disconnecting the online connection, the assigned configuration is write-protected in the project tree of DriveControlSuite until you delete the reverse documentation. The  icon in the project tree shows you whether a drive controller contains reverse documentation.

Creating reverse documentation (single)

- ✓ You are in the Online functions window, Online tab.
- ✓ There is an online connection between DriveControlSuite and drive controllers.
- 1. Assignment area, drive controller:
 - Click Set offline for the relevant drive controller.
 - ⇒ The Reverse documentation dialog box opens.
- 2. Confirm the dialog box with Yes.
 - ⇒ The reverse documentation is created and the drive controller is marked as write-protected in the project tree.
 - ⇒ The online connection between DriveControlSuite and the drive controller is disconnected.

Information

If you have networked multiple SD6 drive controllers via IGB motion bus, when you disconnect the connection, you can create reverse documentation for the entire module or selected drive controllers of the module by disconnecting the connection for the network adapter in the Assignment area.


Creating reverse documentation (all)

- ✓ You are in the Online functions window, Online tab.
- ✓ There is an online connection between DriveControlSuite and drive controllers.
- 1. Online tab:
 - Click Set all drive controllers to offline (with reverse documentation).
 - ⇒ The reverse documentation is created, the drive controllers are marked in the project tree as write-protected.
 - ⇒ The online connections between DriveControlSuite and drive controllers are disconnected.

22.3.2 Deleting reverse documentation

Delete reverse documentation that you no longer need in order to remove the write protection of the drive controller in the project tree and be able to edit it again.

Information

If you create reverse documentation of the values in the drive controller when disconnecting the online connection, the assigned configuration is write-protected in the project tree of DriveControlSuite until you delete the reverse documentation. The  icon in the project tree shows you whether a drive controller contains reverse documentation.

Deleting reverse documentation

Clean reverse documentation that is no longer needed from your project.

- ✓ You have created one or more instances of reverse documentation.
- 1. Delete reverse documentation (drive controller):
Select the relevant drive controller in the project tree and choose **Delete reverse documentation** from its context menu.
- 2. Delete all reverse documentation (module):
Select the relevant module in the project tree and choose **Delete all reverse documentation** from its context menu.
- 3. Delete all reverse documentation (project):
Select the project in the project tree and choose **Delete all reverse documentation** from its context menu.
- ⇒ The reverse documentation of the selected drive controllers is deleted.
- ⇒ The write protection of the selected drive controllers is removed.

ATTENTION!

Data loss due to deletion

If you delete reverse documentation from the project, DriveControlSuite cannot restore the reverse documentation after the fact.

- Delete reverse documentation from the project only if you definitely no longer need it.

23 Appendix

23.1 Weights

| Description | Type | ID No. | Weight without packaging [g] | Weight with packaging [g] |
|--|--------|--------|------------------------------|---------------------------|
| Drive controller size 0 | SD6A02 | — | 2530 | 3520 |
| | SD6A04 | — | 2530 | 3520 |
| | SD6A06 | — | 2530 | 3520 |
| Drive controller size 1 | SD6A14 | — | 3700 | 5470 |
| | SD6A16 | — | 3700 | 5470 |
| Drive controller size 2 | SD6A24 | — | 5050 | 6490 |
| | SD6A26 | — | 5050 | 6490 |
| Drive controller size 3 | SD6A34 | — | 13300 | 14800 |
| | SD6A36 | — | 13300 | 14800 |
| | SD6A38 | — | 13300 | 14800 |
| Quick DC-Link for drive controller size 0 | DL6A0 | 56440 | 400 | 500 |
| Quick DC-Link for drive controller size 1 | DL6A1 | 56441 | 390 | 460 |
| Quick DC-Link for drive controller size 2 | DL6A2 | 56442 | 540 | 620 |
| Quick DC-Link for drive controller size 3 | DL6A3 | 56443 | 1540 | 1580 |
| Quick DC-Link insulation end section | — | 56494 | 10 | 10 |
| Safety module – STO using terminals | ST6 | 56431 | 110 | 110 |
| Safety module – Extended safety technology | SE6 | 56432 | 110 | 110 |
| X50 adapter cable (SE6 option) | — | 56434 | 90 | 90 |
| IGB connecting cable 0.4 m | — | 56489 | 20 | 20 |
| IGB connecting cable 2 m | — | 56490 | 60 | 60 |
| PC connecting cable | — | 49857 | 190 | 190 |
| USB 2.0 Ethernet adapter | — | 49940 | 50 | 50 |
| Communication module | EC6 | 138425 | 50 | 50 |
| | CA6 | 138427 | 50 | 50 |
| | PN6 | 138426 | 50 | 50 |
| EtherCAT cable approx. 0.25 m | — | 49313 | 15 | 15 |
| EtherCAT cable approx. 0.5 m | — | 49314 | 20 | 20 |
| Terminal module | IO6 | 138420 | 135 | 135 |
| | XI6 | 138421 | 135 | 135 |
| | RI6 | 138422 | 135 | 135 |

| Description | Type | ID No. | Weight without packaging [g] | Weight with packaging [g] |
|-------------------------------|-----------------|--------|------------------------------|---------------------------|
| X120 TTL connecting cable | — | 49482 | 60 | 60 |
| Interface adapters | AP6A00 | 56498 | 30 | 30 |
| | AP6A01 | 56522 | 30 | 30 |
| | AP6A02 | 56523 | 30 | 30 |
| Braking resistor | FZMU 400×65 | 49010 | 2200 | 2200 |
| | FZZMU 400×65 | 53895 | 4170 | 4170 |
| | GVADU 210×20 | 55441 | 300 | 300 |
| | GBADU 265×30 | 55442 | 930 | 930 |
| | GBADU 405×30 | 55499 | 1410 | 1410 |
| | GBADU 335×30 | 55443 | 1200 | 1200 |
| | FGFKU (22/2500) | 55449 | 7500 | 7500 |
| | FGFKU (15/2500) | 55450 | 7500 | 7500 |
| | FGFKU (15/6000) | 55451 | 12000 | 12000 |
| | FGFKU (15/8000) | 53897 | 18000 | 18000 |
| Rear section braking resistor | RB 5022 | 45618 | 640 | 640 |
| | RB 5047 | 44966 | 460 | 460 |
| | RB 5100 | 44965 | 440 | 440 |
| Power choke | TEP4010-2US00 | 56528 | 9900 | 9900 |
| Output choke | TEP3720-0ES41 | 53188 | 2900 | 2900 |
| | TEP3820-0CS41 | 53189 | 5900 | 5900 |
| | TEP4020-ORS41 | 53190 | 8800 | 8800 |
| EMC shield plate | EM6A0 | 56459 | 25 | 25 |
| | EM6A3 | 56521 | 40 | 40 |
| Battery module | AES | 55452 | 60 | 60 |
| Removable data storage | Paramodul | 56403 | 5 | 5 |

Tab. 374: Weights of SD6 and accessories

23.2 Terminal specifications

Relevant information for project configuration of the connecting wiring can be taken from the following chapters.

EN 60204-1 contains basic recommendations that should be taken into account when selecting conductors. The chapter "Conductors and cables" provides specifications for the maximum current carrying capacity of conductors based on the way they are laid as well as tips for derating, for example in the case of increased surrounding temperatures or lines with multiple loaded individual conductors.

⚠ WARNING!

Personal injury and material damage due to electric shock and thermal overload!

- Prepare the conductor ends according to the terminal specifications.
- In the case of pre-made cables and conductors, check the conductor ends and adjust them if necessary.

23.2.1 Overview

The following tables clarify which specifications must be observed for which connections depending on the type of drive controller or accessory.

Drive controller

| Type | X1 | X10, X20 | X11 | X30 |
|--------|---|--|---|---|
| SD6A02 | FMC 1,5 -ST-3,5 [▶ 462] | GFKC 2,5 -ST-7,62 [▶ 463] | BLDF 5.08 180 SN [▶ 460] | GFKIC 2.5 -ST-7.62 [▶ 463] |
| SD6A04 | | | | |
| SD6A06 | | | | |
| SD6A14 | | SPC 5 -ST-7,62 [▶ 466] | | ISPC 5 -STGCL-7,62 [▶ 464] |
| SD6A16 | | | | |
| SD6A24 | | SPC 16 -ST-10,16 [▶ 466] | | ISPC 16 -ST-10,16 [▶ 464] |
| SD6A26 | | | | |
| SD6A34 | | MKDSP 25 -15,00 [▶ 465] | | — |
| SD6A36 | | | | |
| SD6A38 | | | | |

Tab. 375: Terminal specifications for the base device

Safety module

| Type | X2, X5, X6 ⁴² | X12 |
|------|---|---|
| ST6 | BLF 5.08HC 180 SN [▶ 460] | BCF 3,81 180 SN [▶ 459] |

Tab. 376: Terminal specifications of the ST6 safety module

| Type | X2, X5, X7, X8 ⁴³ | X14, X15 |
|------|---|--|
| SE6 | BLF 5.08HC 180 SN [▶ 460] | DFMC 1.5 -ST-3.5 [▶ 461] |

Tab. 377: Terminal specifications of the SE6 safety module

⁴² In addition to the connection for the safety technology, the functional connections X2, X5, X6 are also located on the ST6 safety module (not related to the safety technology).

⁴³ In addition to connections for the safety technology, the connections X2 and X5 are also located on the SE6 safety module (not related to the safety technology).

Terminal modules

| Type | X100, X101 | X102, X103 |
|------|--|---|
| XI6 | FK-MCP 1,5 -ST-3,5 [▶ 461] | FMC 1,5 -ST-3,5 [▶ 462] |
| RI6 | | — |
| IO6 | | — |

Tab. 378: Terminal specifications for the terminal modules

Encoder adapter box

| Type | X302, X305, X306 | X303 |
|------|--|---|
| LA6 | FK-MCP 1,5 -ST-3,5 [▶ 461] | BLF 5.08HC 180 SN [▶ 460] |

Tab. 379: Terminal specifications for the encoder adapter box

Braking resistors

| Type | Braking resistor |
|-------------|--------------------------------|
| FZMU, FZZMU | G 10/2 [▶ 462] |
| FGFKU | G 10/2 [▶ 462] |

Tab. 380: Terminal specifications for the braking resistors

23.2.2 BCF 3,81 180 SN

| Feature | Conductor type | Value |
|---|--|-------------------------------|
| Contact spacing | — | 3.81 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 16 A/10 A/ 11 A |
| Max. conductor cross-section | Flexible without end sleeve | 1.5 mm ² |
| | Flexible with end sleeve without plastic collar | 1.0 mm ² |
| | Flexible with end sleeve with plastic collar | 1.0 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | — |
| | AWG according to UL/CSA | 16 |
| Min. conductor cross-section | Flexible without end sleeve | 0.14 mm ² |
| | Flexible with end sleeve without plastic collar | 0.25 mm ² |
| | Flexible with end sleeve with plastic collar | 0.25 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | — |
| | AWG according to UL/CSA | 26 |
| Insulation stripping length | — | 10 mm |
| Tightening torque | — | — |

Tab. 381: BCF 3,81 180 SN BK specification

23.2.3 BLF 5.08HC 180 SN

| Feature | Conductor type | Value |
|---|--|-------------------------------|
| Contact spacing | — | 5.08 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 16 A/10 A/ 10 A |
| Max. conductor cross-section | Flexible without end sleeve | 2.5 mm ² |
| | Flexible with end sleeve without plastic collar | 2.5 mm ² |
| | Flexible with end sleeve with plastic collar | 2.5 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | — |
| | AWG according to UL/CSA | 12 |
| Min. conductor cross-section | Flexible without end sleeve | 0.2 mm ² |
| | Flexible with end sleeve without plastic collar | 0.2 mm ² |
| | Flexible with end sleeve with plastic collar | 0.25 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | — |
| | AWG according to UL/CSA | 26 |
| Insulation stripping length | — | 10 mm |
| Tightening torque | — | — |

Tab. 382: BFL 5.08HC 180 SN specification

23.2.4 BLDF 5.08 180 SN

| Feature | Conductor type | Value |
|---|--|-------------------------------|
| Contact spacing | — | 5.08 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 14 A/10 A/ 10 A |
| Max. conductor cross-section | Flexible without end sleeve | 2.5 mm ² |
| | Flexible with end sleeve without plastic collar | 2.5 mm ² |
| | Flexible with end sleeve with plastic collar | 2.5 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | — |
| | AWG according to UL/CSA | 12 |
| Min. conductor cross-section | Flexible without end sleeve | 0.2 mm ² |
| | Flexible with end sleeve without plastic collar | 0.2 mm ² |
| | Flexible with end sleeve with plastic collar | 0.25 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | — |
| | AWG according to UL/CSA | 26 |
| Insulation stripping length | — | 10 mm |
| Tightening torque | — | — |

Tab. 383: BLDF 5.08 180 SN specification

23.2.5 DFMC 1.5 -ST-3.5

| Feature | Conductor type | Value |
|---|--|----------------------|
| Contact spacing | — | 3.5 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 8 A |
| Max. conductor cross-section | Flexible without end sleeve | 1.5 mm ² |
| | Flexible with end sleeve without plastic collar | 1.5 mm ² |
| | Flexible with end sleeve with plastic collar | 0.75 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | — |
| | AWG according to UL/CSA | 16 |
| Min. conductor cross-section | Flexible without end sleeve | 0.2 mm ² |
| | Flexible with end sleeve without plastic collar | 0.25 mm ² |
| | Flexible with end sleeve with plastic collar | 0.25 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | — |
| | AWG according to UL/CSA | 24 |
| Insulation stripping length | — | 10 mm |
| Tightening torque | — | — |

Tab. 384: Specification for DFMC 1.5 -ST-3.5

23.2.6 FK-MCP 1,5 -ST-3,5

| Feature | Conductor type | Value |
|---|--|----------------------|
| Contact spacing | — | 3.5 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 8 A |
| Max. conductor cross-section | Flexible without end sleeve | 1.5 mm ² |
| | Flexible with end sleeve without plastic collar | 1.5 mm ² |
| | Flexible with end sleeve with plastic collar | 0.5 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | — |
| | AWG according to UL/CSA | 16 |
| Min. conductor cross-section | Flexible without end sleeve | 0.14 mm ² |
| | Flexible with end sleeve without plastic collar | 0.25 mm ² |
| | Flexible with end sleeve with plastic collar | 0.25 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | — |
| | AWG according to UL/CSA | 28 |
| Insulation stripping length | — | 9 mm |
| Tightening torque | — | — |

Tab. 385: FK-MCP 1,5 -ST-3,5 specification

23.2.7 FMC 1,5 -ST-3,5

| Feature | Conductor type | Value |
|---|--|----------------------|
| Contact spacing | — | 3.5 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 8 A |
| Max. conductor cross-section | Flexible without end sleeve | 1.5 mm ² |
| | Flexible with end sleeve without plastic collar | 1.5 mm ² |
| | Flexible with end sleeve with plastic collar | 0.75 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | — |
| | AWG according to UL/CSA | 16 |
| Min. conductor cross-section | Flexible without end sleeve | 0.2 mm ² |
| | Flexible with end sleeve without plastic collar | 0.25 mm ² |
| | Flexible with end sleeve with plastic collar | 0.25 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | — |
| | AWG according to UL/CSA | 24 |
| Insulation stripping length | — | 10 mm |
| Tightening torque | — | — |

Tab. 386: FMC 1,5 -ST-3,5 specification

23.2.8 G 10/2

| Feature | Conductor type | Value |
|---|--|-------------------------------|
| Contact spacing | — | 17.5 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 57 A/65 A/ 65 A |
| Max. conductor cross-section | Flexible without end sleeve | 10.0 mm ² |
| | Flexible with end sleeve without plastic collar | 16.0 mm ² |
| | Flexible with end sleeve with plastic collar | 16.0 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 6.0 mm ² |
| | AWG according to UL/CSA | 6 |
| Min. conductor cross-section | Flexible without end sleeve | 0.5 mm ² |
| | Flexible with end sleeve without plastic collar | 0.5 mm ² |
| | Flexible with end sleeve with plastic collar | 0.5 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 0.5 mm ² |
| | AWG according to UL/CSA | 24 |
| Insulation stripping length | — | 12 mm |
| Tightening torque | — | 1.5 – 1.8 Nm |

Tab. 387: G 10/2 specification

23.2.9 GFKC 2,5 -ST-7,62

| Feature | Conductor type | Value |
|---|--|-------------------------------|
| Contact spacing | — | 7.62 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 12 A/10 A/ 10 A |
| Max. conductor cross-section | Flexible without end sleeve | 2.5 mm ² |
| | Flexible with end sleeve without plastic collar | 2.5 mm ² |
| | Flexible with end sleeve with plastic collar | 2.5 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 1.5 mm ² |
| | AWG according to UL/CSA | 12 |
| Min. conductor cross-section | Flexible without end sleeve | 0.2 mm ² |
| | Flexible with end sleeve without plastic collar | 0.25 mm ² |
| | Flexible with end sleeve with plastic collar | 0.25 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 0.5 mm ² |
| | AWG according to UL/CSA | 24 |
| Insulation stripping length | — | 10 mm |
| Tightening torque (for terminals with screw) | — | 0.3 – 0.7 Nm |

Tab. 388: GFKC 2,5 -ST-7,62 specification

23.2.10 GFKIC 2.5 -ST-7.62

| Feature | Conductor type | Value |
|---|--|-------------------------------|
| Contact spacing | — | 7.62 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 12 A/10 A/ 10 A |
| Max. conductor cross-section | Flexible without end sleeve | 2.5 mm ² |
| | Flexible with end sleeve without plastic collar | 2.5 mm ² |
| | Flexible with end sleeve with plastic collar | 2.5 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 1.0 mm ² |
| | AWG according to UL/CSA | 12 |
| Min. conductor cross-section | Flexible without end sleeve | 0.2 mm ² |
| | Flexible with end sleeve without plastic collar | 0.25 mm ² |
| | Flexible with end sleeve with plastic collar | 0.25 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 0.5 mm ² |
| | AWG according to UL/CSA | 26 |
| Insulation stripping length | — | 10 mm |
| Tightening torque (for terminals with screw) | — | 0.3 – 0.7 Nm |

Tab. 389: Specification for GFKIC 2.5 -ST-7.62

23.2.11 ISPC 5 -STGCL-7,62

| Feature | Conductor type | Value |
|---|--|-------------------------------|
| Contact spacing | — | 7.62 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 32 A/35 A/ 35 A |
| Max. conductor cross-section | Flexible without end sleeve | 6.0 mm ² |
| | Flexible with end sleeve without plastic collar | 6.0 mm ² |
| | Flexible with end sleeve with plastic collar | 4.0 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 1.5 mm ² |
| | AWG according to UL/CSA | 8 |
| Min. conductor cross-section | Flexible without end sleeve | 0.2 mm ² |
| | Flexible with end sleeve without plastic collar | 0.25 mm ² |
| | Flexible with end sleeve with plastic collar | 0.25 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 0.25 mm ² |
| | AWG according to UL/CSA | 24 |
| Insulation stripping length | — | 15 mm |
| Tightening torque | — | — |

Tab. 390: ISPC 5 -STGCL-7,62 specification

23.2.12 ISPC 16 -ST-10,16

| Feature | Conductor type | Value |
|---|--|-------------------------------|
| Contact spacing | — | 10.16 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 55 A/66 A/ 66 A |
| Max. conductor cross-section | Flexible without end sleeve | 16.0 mm ² |
| | Flexible with end sleeve without plastic collar | 16.0 mm ² |
| | Flexible with end sleeve with plastic collar | 10.0 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 4.0 mm ² |
| | AWG according to UL/CSA | 4 |
| Min. conductor cross-section | Flexible without end sleeve | 0.75 mm ² |
| | Flexible with end sleeve without plastic collar | 0.75 mm ² |
| | Flexible with end sleeve with plastic collar | 0.75 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 0.75 mm ² |
| | AWG according to UL/CSA | 20 |
| Insulation stripping length | — | 18 mm |
| Tightening torque | — | — |

Tab. 391: SPC 16 -ST-10,16 specification

23.2.13 MKDSP 25 -15,00

| Feature | Conductor type | Value |
|---|--|----------------------------------|
| Contact spacing | — | 15.0 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 125 A/115 A/ 115 A |
| Max. conductor cross-section | Flexible without end sleeve | 35.0 mm ² |
| | Flexible with end sleeve without plastic collar | 35.0 mm ² |
| | Flexible with end sleeve with plastic collar | 35.0 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 16.0 mm ² |
| | AWG according to UL/CSA | 2 |
| Min. conductor cross-section | Flexible without end sleeve | 0.5 mm ² |
| | Flexible with end sleeve without plastic collar | 1.0 mm ² |
| | Flexible with end sleeve with plastic collar | 1.5 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 0.5 mm ² |
| | AWG according to UL/CSA | 20 |
| Insulation stripping length | — | 18 mm |
| Tightening torque | Conductor cross-sections $\leq 25.0\text{ mm}^2$ | 2.5 Nm (22 Lb.inch) |
| | Conductor cross-sections $> 25.0\text{ mm}^2$ | 4.5 Nm (40 Lb.inch) |

Tab. 392: MKDSP 25 -15,00 specification

23.2.14 SPC 5 -ST-7,62

| Feature | Conductor type | Value |
|---|--|-------------------------------|
| Contact spacing | — | 7.62 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 32 A/35 A/ 35 A |
| Max. conductor cross-section | Flexible without end sleeve | 6.0 mm ² |
| | Flexible with end sleeve without plastic collar | 6.0 mm ² |
| | Flexible with end sleeve with plastic collar | 4.0 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 1.5 mm ² |
| | AWG according to UL/CSA | 8 |
| Min. conductor cross-section | Flexible without end sleeve | 0.2 mm ² |
| | Flexible with end sleeve without plastic collar | 0.25 mm ² |
| | Flexible with end sleeve with plastic collar | 0.25 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 0.25 mm ² |
| | AWG according to UL/CSA | 24 |
| Insulation stripping length | — | 12 – 15 mm |
| Tightening torque (for terminals with screw) | — | 0.3 – 0.7 Nm |

Tab. 393: SPC 5 -ST-7,62 specification

23.2.15 SPC 16 -ST-10,16

| Feature | Conductor type | Value |
|---|--|-------------------------------|
| Contact spacing | — | 10.16 mm |
| Nominal current at $\vartheta_{amb} = 40\text{ °C}$ | — | CE/UL/CSA: 55 A/66 A/ 66 A |
| Max. conductor cross-section | Flexible without end sleeve | 16.0 mm ² |
| | Flexible with end sleeve without plastic collar | 16.0 mm ² |
| | Flexible with end sleeve with plastic collar | 10.0 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 4.0 mm ² |
| | AWG according to UL/CSA | 4 |
| Min. conductor cross-section | Flexible without end sleeve | 0.75 mm ² |
| | Flexible with end sleeve without plastic collar | 0.75 mm ² |
| | Flexible with end sleeve with plastic collar | 0.75 mm ² |
| | 2 conductors, flexible, with double end sleeve with plastic collar | 0.75 mm ² |
| | AWG according to UL/CSA | 20 |
| Insulation stripping length | — | 18 mm |
| Tightening torque (for terminals with screw) | — | 0.3 – 0.7 Nm |

Tab. 394: SPC 16 -ST-10,16 specification

23.3 Wiring examples

The following chapters show the basic connection using examples.

Information

For UL-compliant operation: The connections marked with PE are intended solely for the functional grounding.

23.3.1 Stand-alone operation with direct brake control

The following graphic shows a wiring example for the stand-alone operation of SD6 with direct brake control.

Note the information on EMC-compliant installation (see [EMC recommendations](#) [▶ 151]).

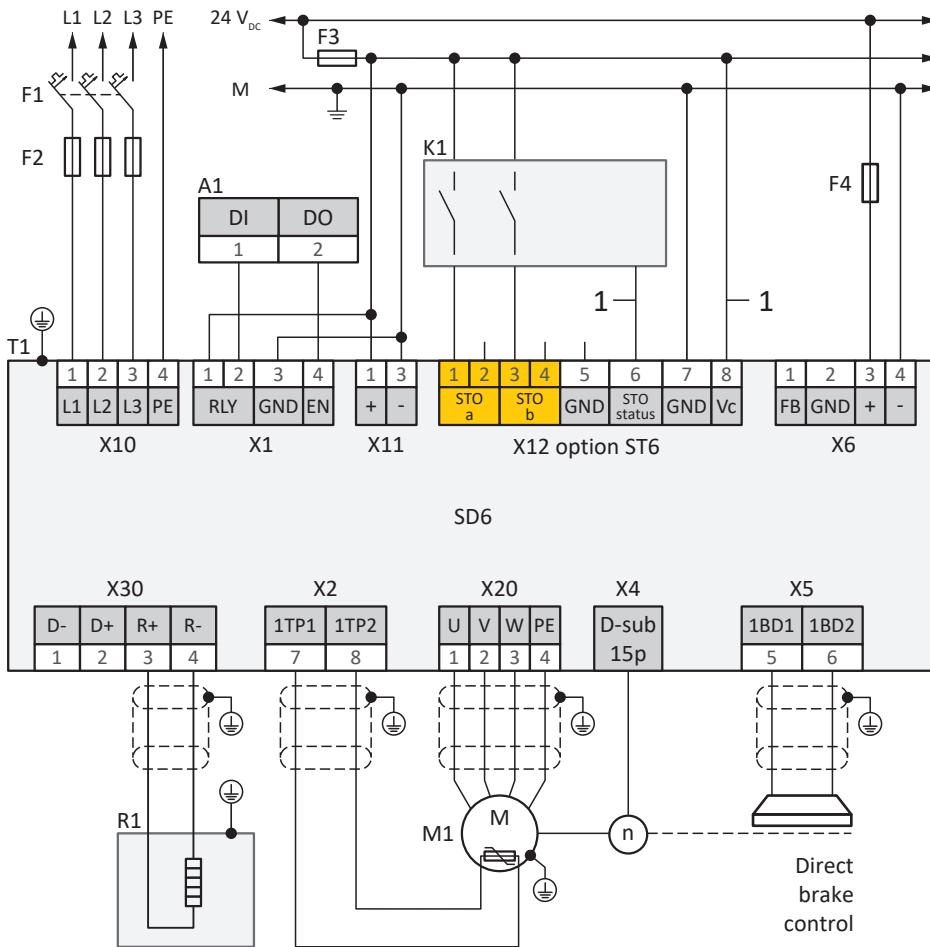


Fig. 108: Wiring example of stand-alone operation with direct brake control

- A1 Controller
- F1 – F4 Fuse
- K1 Safety relay
- L1 – L3 Three-phase power supply
- M Reference potential
- M1 Motor
- R1 Braking resistor
- T1 Drive controller
- 1 Optional connection

23.3.2 Stand-alone operation with indirect brake control

The following graphic shows a wiring example for the stand-alone operation of SD6 with indirect brake control.

Note the information on EMC-compliant installation (see [EMC recommendations](#) [▶ 151]).

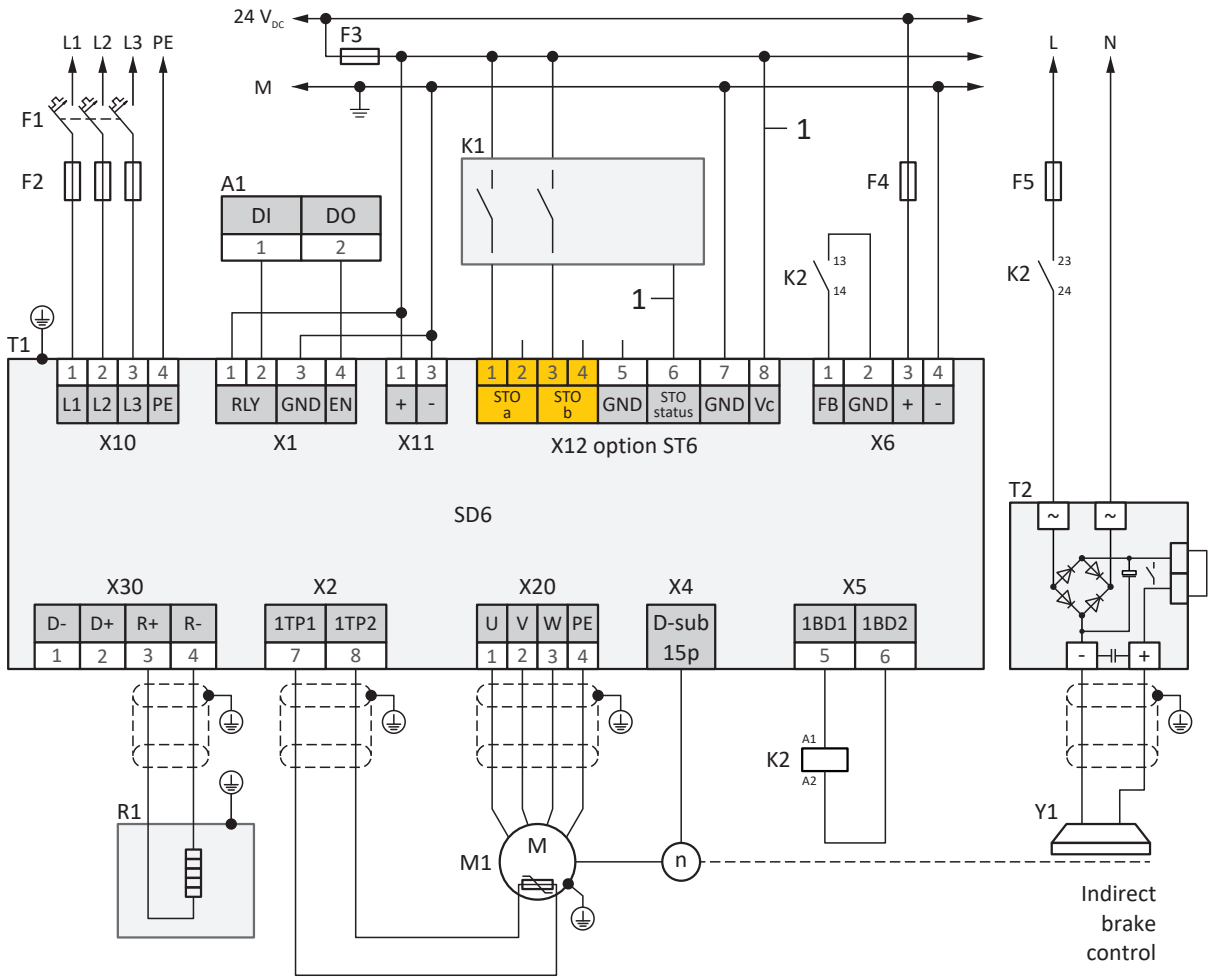


Fig. 109: Wiring example of stand-alone operation with indirect brake control

- A1 Controller
- F1 – F5 Fuse
- K1 Safety relay
- K2 Contactor
- L 230 V_{AC} supply
- L1 – L3 Three-phase power supply
- M Reference potential
- 24 V_{DC} 24 V_{DC} supply
- M1 Motor
- N Neutral conductor
- R1 Braking resistor
- T1 Drive controller
- T2 Brake rectifier
- Y1 Brake
- 1 Optional connection

23.3.3 DC link connection

The following graphic shows the basic connection of multiple SD6 drive controllers based on a DC link connection with DL6A Quick DC-Link.

Note the information on EMC-compliant installation (see [EMC recommendations](#) [▶ 151]).

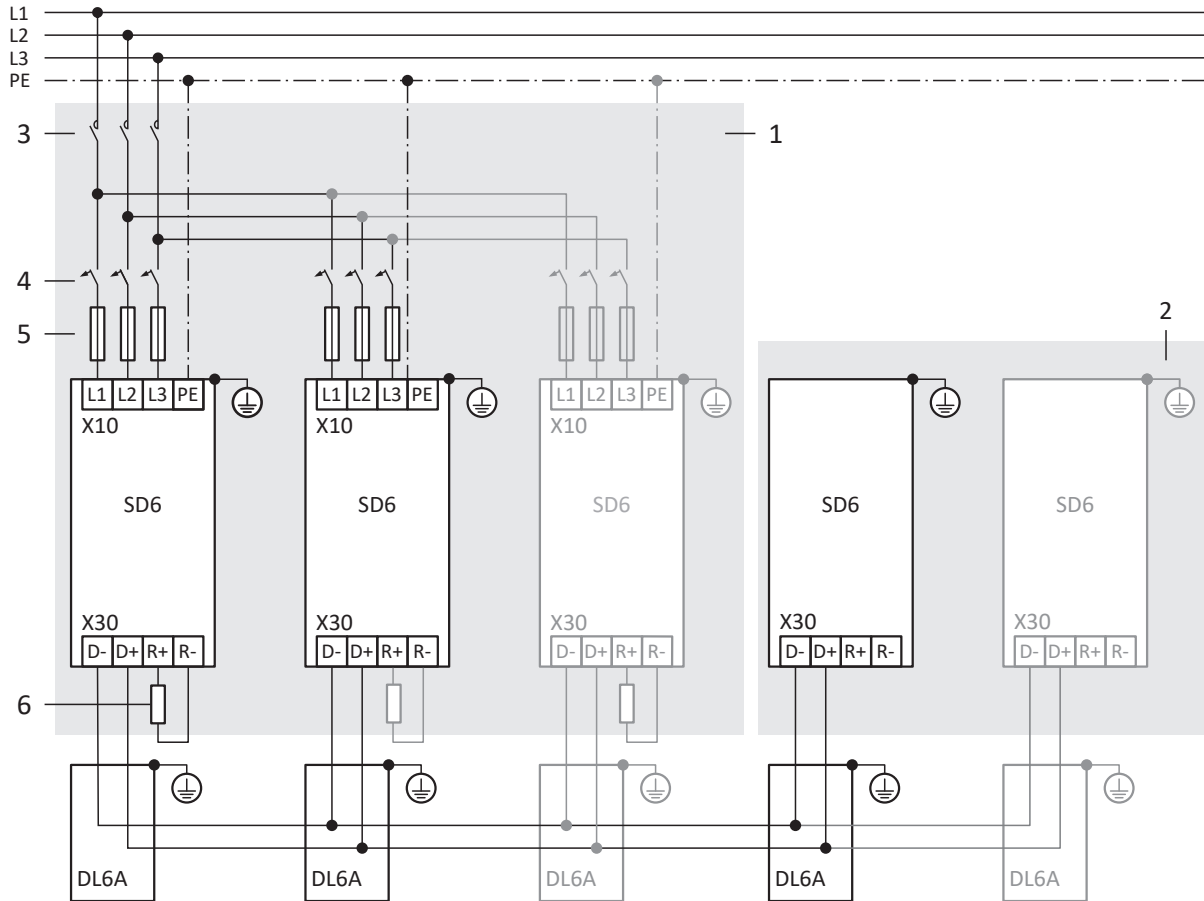


Fig. 110: Wiring example with Quick DC-Link

- 1 Group 1
- 2 Group 2
- 3 Grid contactor
- 4 Miniature circuit breakers
- 5 Short-circuit protection
- 6 Braking resistor: Dimension the braking resistor in accordance with the Quick DC-Link braking power and the technical data of the drive controller

23.4 SSI encoders

The following chapters provide you with more detailed information on setting SSI encoders with the help of the DriveControlSuite commissioning software.

23.4.1 SSI: Evaluation at X4 with free setting (H00 = 78)

Obey the instructions described below if you use X4 as the connection for SSI encoders and want to use the free setting option for the encoder function.

| |
|--------------------|
| Information |
|--------------------|

The free setting of SSI encoders is supported by drive controllers in firmware V 6.5-G or higher.

Evaluation of an encoder

To evaluate an encoder connected to X4, configure the following settings in DriveControlSuite.

| Parameters | Description | Value | | |
|------------|-------------------|---|--|---|
| | | Rotational single-turn encoder | Rotational multi-turn encoder | Linear encoder |
| H00 | Function | 78: SSI free setting | 78: SSI free setting | 78: SSI free setting |
| H14 | Data bit | Sum of single-turn bits + alarm bits | Sum of single-turn bits + multi-turn bits + alarm bits | Sum of position bits + alarm bits |
| H01 | Mechanical value | 1 rotation | 1 rotation | Measuring range, e.g. 200 mm |
| H02 | Raw encoder value | $2^{\text{Number of single-turn bits}}$ | $2^{\text{Number of single-turn bits}}$ | Number of increments of the measuring range |

Tab. 395: Evaluation of an SSI encoder at X4 with free setting

Interpretation

The interpretation of the data bits as the position is carried out using the H01 and H02 parameters.

Relationship between resolution, clock frequency and double transmission in SSI encoders

Ideally, a new, valid position value in high resolution is available in every cycle of the control.

With a higher resolution of the position value, the amount of data to be transmitted (H14) increases and thus so does the transmission time. The same applies if the position is read out twice to enable better detection of transmission errors (H11) for increasing data security.

The transmission time of the position value should not exceed the cycle time of the control. To compensate for the increased transmission time, you can transmit the bits at a higher clock frequency (H15) if the SSI encoder supports this function. From approx. 600 kHz, cable lengths of 100 m are no longer possible.

23.4.2 SSI: Evaluation at X4 with fixed setting (H00 = 65)

Obey the instructions described below if you use X4 as the connection for SSI encoders and want to use the fixed setting option for the encoder function.

Information

For the setting of the data bit option (H10):

If none of the available data bit options matches the number or sum of bits of your encoder, use the nearest, larger data bit option. If the number or sum of bits of the encoder is greater than the largest available data bit option, then use the largest available data bit option.

Evaluation of an encoder

To evaluate an encoder connected to X4, configure the following settings in DriveControlSuite.

| Parameter s | Description | Value | | |
|----------------|-------------------|----------------------------------|---|--|
| | | Rotational single-turn encoder | Rotational multi-turn encoder | Linear encoder |
| H00 | Function | 65: SSI | 65: SSI | 65: SSI |
| H10 | Data bit | Number of single-turn bits | Sum of single-turn bits + multi-turn bits | Number of position bits |
| H01 | Mechanical value | 1 rotation | 1 rotation | Position bits ≤ Data bits: Distance per 1 LSB Position bits > Data bits: Distance per $2^{\text{Number of position bits} - \text{Number of data bits}}$ LSB |
| H02 | Raw encoder value | $2^{\text{Number of data bits}}$ | $2^{\text{Number of data bits} - \text{Number of multi-turn bits}}$ | Position bits < Data bits: $2^{\text{Number of data bits} - \text{Number of position bits}}$ Position bits ≥ Data bits: 1 |

Tab. 396: Evaluation of an SSI encoder at X4 with fixed setting

Interpretation

The interpretation of the data bits as the position is carried out using the H01 and H02 parameters.

Relationship between resolution, clock frequency and double transmission in SSI encoders

Ideally, a new, valid position value in high resolution is available in every cycle of the control.

With a higher resolution of the position value, the amount of data to be transmitted (H10) increases and thus so does the transmission time. The same applies if the position is read out twice to enable better detection of transmission errors (H11) for increasing data security.

The transmission time of the position value should not exceed the cycle time of the control. To compensate for the increased transmission time, you can transmit the bits at a higher clock frequency (H06) if the SSI encoder supports this function and the cable length permits it.

Examples of rotary encoders

| Number of single-turn bits | Number of multi-turn bits | Guide value H10 | Guide value H01 | Guide value H02 |
|----------------------------|---------------------------|-----------------|-----------------|---------------------------|
| Up to 12 | – | 2: 13 bit short | 1 | $8192 = 2^{13}$ |
| 13 | – | 2: 13 bit short | 1 | $8192 = 2^{13}$ |
| 14 – 23 | – | 1: 24 | 1 | $16\,777\,216 = 2^{24}$ |
| 24 | – | 1: 24 | 1 | $16\,777\,216 = 2^{24}$ |
| 25 | – | 0: 25 | 1 | $33\,554\,432 = 2^{25}$ |
| Starting from 26 | – | 0: 25 | 1 | $33\,554\,432 = 2^{25}$ |
| 12 | 12 | 1: 24 | 1 | $4096 = 2^{24 - 12 = 12}$ |
| 13 | 12 | 0: 25 | 1 | $8192 = 2^{25 - 12 = 13}$ |
| 14 | 12 | 0: 25 | 1 | $8192 = 2^{25 - 12 = 13}$ |
| 13 | 13 | 0: 25 | 1 | $4096 = 2^{25 - 13 = 12}$ |
| 13 | 14 | 0: 25 | 1 | $2048 = 2^{25 - 14 = 11}$ |

Tab. 397: Examples of rotational SSI encoders at X4

Examples of translational encoders

| Number of position bits | Guide value H10 | Guide value H01 | Guide value H02 |
|-------------------------|-----------------|--|---------------------------|
| 12 | 2: 13 bit short | mm per 1 LSB | $2 = 2^{13 - 12 = 1}$ |
| 13 | 2: 13 bit short | mm per 1 LSB | 1 |
| 14 | 1: 24 | mm per 1 LSB | $1024 = 2^{24 - 14 = 10}$ |
| 15 | 1: 24 | mm per 1 LSB | $512 = 2^{24 - 15 = 9}$ |
| 24 | 1: 24 | mm per 1 LSB | 1 |
| 25 | 0: 25 | mm per 1 LSB | 1 |
| 26 | 0: 25 | mm per 2 LSB ($2^{26 - 25 = 1} = 2$) | 1 |

Tab. 398: Examples of translational SSI encoders at X4

23.4.3 SSI: Evaluation and simulation at X120 with free setting (H120 = 76 or 83)

Obey the instructions described below if you use X120 on a XI6 or RI6 terminal module as the connection for an SSI encoder and want to use the free setting option for the encoder function.

Information

The prerequisite for the free setting of SSI encoders is a hardware version ≥ 14 for the XI6 option and a hardware version ≥ 8 for the RI6 option. The hardware version of the terminal module is displayed in parameter E58[1].

Evaluation of an encoder

To evaluate an encoder connected to X120, configure the following settings in DriveControlSuite.

| Parameters | Description | Value | | |
|------------|-------------------|---|--|---|
| | | Rotational single-turn encoder | Rotational multi-turn encoder | Linear encoder |
| H120 | Role | 76: SSI free setting | 76: SSI free setting | 76: SSI free setting |
| H134 | Data bit | Sum of single-turn bits + alarm bits | Sum of single-turn bits + multi-turn bits + alarm bits | Sum of position bits + alarm bits |
| H121 | Mechanical value | 1 rotation | 1 rotation | Measuring range, e.g. 200 mm |
| H122 | Raw encoder value | $2^{\text{Number of single-turn bits}}$ | $2^{\text{Number of single-turn bits}}$ | Number of increments of the measuring range |

Tab. 399: Evaluation of an SSI encoder at X120 with free setting

Simulation of an encoder

To simulate an encoder at X120, configure the following settings in DriveControlSuite.

| Parameters | Description | Value | | |
|------------|----------------------------------|---|--|---|
| | | Rotational single-turn encoder | Rotational multi-turn encoder | Linear encoder |
| H120 | Role | 83: SSI simulation free setting | 83: SSI simulation free setting | 83: SSI simulation free setting |
| H80 | Source of the simulated position | E.g.: 5: Motor position (E09) | E.g.: 5: Motor position (E09) | E.g.: 5: Motor position (E09) |
| H134 | Data bit | Sum of single-turn bits + alarm bits | Sum of single-turn bits + multi-turn bits + alarm bits | Sum of position bits + alarm bits |
| H121 | Mechanical value | 1 rotation | 1 rotation | Measuring range, e.g. 200 mm |
| H122 | Raw encoder value | $2^{\text{Number of single-turn bits}}$ | $2^{\text{Number of single-turn bits}}$ | Number of increments of the measuring range |

Tab. 400: Simulation of an SSI encoder at X120 with free setting

Interpretation

The interpretation of the data bits as the position is carried out using the H121 and H122 parameters.

Relationship between resolution, clock frequency and double transmission in SSI encoders

Ideally, a new, valid position value in high resolution is available in every cycle of the control.

With a higher resolution of the position value, the amount of data to be transmitted (H134) increases and thus so does the transmission time. The same applies if the position is read out twice to enable better detection of transmission errors (H128) for increasing data security.

The transmission time of the position value should not exceed the cycle time of the control. To compensate for the increased transmission time, you can transmit the bits at a higher clock frequency (H135) if the SSI encoder supports this function. From approx. 600 kHz, cable lengths of 100 m are no longer possible.

23.4.4 SSI: Evaluation and simulation at X120 with fixed setting (H120 = 67 or 82)

Obey the instructions described below if you want to use X120 on a XI6 or RI6 terminal module as the connection for an SSI encoder and want to use the fixed setting option for the encoder function.

| |
|--------------------|
| Information |
|--------------------|

For the setting of the data bit option (H126):

If none of the available data bit options matches the number or sum of bits of your encoder, use the nearest, larger data bit option. If the number or sum of bits of the encoder is greater than the largest available data bit option, then use the largest available data bit option.

Evaluation of an encoder

To evaluate an encoder connected to X120, configure the following settings in DriveControlSuite.

| Parameters | Description | Value | | |
|------------|-------------------|----------------------------------|---|---|
| | | Rotational single-turn encoder | Rotational multi-turn encoder | Linear encoder |
| H120 | Role | 67: SSI | 67: SSI | 67: SSI |
| H126 | Data bit | Number of single-turn bits | Sum of single-turn bits + multi-turn bits | Number of position bits |
| H121 | Mechanical value | 1 rotation | 1 rotation | Position bits ≤ Data bits: Distance per 1 LSB Position bits > Data bits: Distance per $2^{\frac{\text{Number of position bits} - \text{Number of data bits}}{\text{LSB}}}$ |
| H122 | Raw encoder value | $2^{\text{Number of data bits}}$ | $2^{\text{Number of data bits} - \text{Number of multi-turn bits}}$ | Position bits < Data bits: $2^{\text{Number of data bits} - \text{Number of position bits}}$ Position bits ≥ Data bits: 1 |

Tab. 401: Evaluation of an SSI encoder at X120 with fixed setting

Simulation of an encoder

To simulate an encoder at X120, configure the following settings in DriveControlSuite.

| Parameters | Description | Value | | |
|------------|----------------------------------|----------------------------------|---|--|
| | | Rotational single-turn encoder | Rotational multi-turn encoder | Linear encoder |
| H120 | Role | 82: SSI simulation | 82: SSI simulation | 82: SSI simulation |
| H80 | Source of the simulated position | E.g.: 5: Motor position (E09) | E.g.: 5: Motor position (E09) | E.g.: 5: Motor position (E09) |
| H126 | Data bit | Number of single-turn bits | Sum of single-turn bits + multi-turn bits | Number of position bits |
| H121 | Mechanical value | 1 rotation | 1 rotation | Position bits ≤ Data bits: Distance per 1 LSB Position bits > Data bits: Distance per $2^{\text{Number of position bits} - \text{Number of data bits}}$ LSB |
| H122 | Raw encoder value | $2^{\text{Number of data bits}}$ | $2^{\text{Number of data bits} - \text{Number of multi-turn bits}}$ | Position bits < Data bits: $2^{\text{Number of data bits} - \text{Number of position bits}}$ Position bits ≥ Data bits: 1 |

Tab. 402: Simulation of an SSI encoder at X120 with fixed setting

Interpretation

The interpretation of the data bits as the position is carried out using the H121 and H122 parameters.

Relationship between resolution, clock frequency and double transmission in SSI encoders

Ideally, a new, valid position value in high resolution is available in every cycle of the control.

With a higher resolution of the position value, the amount of data to be transmitted (H126) increases and thus so does the transmission time. The same applies if the position is read out twice to enable better detection of transmission errors (H128) for increasing data security.

The transmission time of the position value should not exceed the cycle time of the control. To compensate for the increased transmission time, you can transmit the bits at a higher clock frequency (H127) if the SSI encoder supports this function and the cable length permits it.

Examples of rotational encoders

| Number of single-turn bits | Number of multi-turn bits | Guide value H126 | Guide value H121 | Guide value H122 |
|----------------------------|---------------------------|------------------|------------------|---------------------------|
| Up to 12 | – | 2: 13 bit short | 1 | $8192 = 2^{13}$ |
| 13 | – | 2: 13 bit short | 1 | $8192 = 2^{13}$ |
| 14 – 23 | – | 1: 24 | 1 | $16\,777\,216 = 2^{24}$ |
| 24 | – | 1: 24 | 1 | $16\,777\,216 = 2^{24}$ |
| 25 | – | 0: 25 | 1 | $33\,554\,432 = 2^{25}$ |
| Starting from 26 | – | 0: 25 | 1 | $33\,554\,432 = 2^{25}$ |
| 12 | 12 | 1: 24 | 1 | $4096 = 2^{24 - 12 = 12}$ |
| 13 | 12 | 0: 25 | 1 | $8192 = 2^{25 - 12 = 13}$ |
| 14 | 12 | 0: 25 | 1 | $8192 = 2^{25 - 12 = 13}$ |
| 13 | 13 | 0: 25 | 1 | $4096 = 2^{25 - 13 = 12}$ |
| 13 | 14 | 0: 25 | 1 | $2048 = 2^{25 - 14 = 11}$ |

Tab. 403: Examples of rotational SSI encoders at X120

Examples of translational encoders

| Number of position bits | Guide value H126 | Guide value H121 | Guide value H122 |
|-------------------------|------------------|--|---------------------------|
| 12 | 2: 13 bit short | mm per 1 LSB | $2 = 2^{13 - 12 = 1}$ |
| 13 | 2: 13 bit short | mm per 1 LSB | 1 |
| 14 | 1: 24 | mm per 1 LSB | $1024 = 2^{24 - 14 = 10}$ |
| 15 | 1: 24 | mm per 1 LSB | $512 = 2^{24 - 15 = 9}$ |
| 24 | 1: 24 | mm per 1 LSB | 1 |
| 25 | 0: 25 | mm per 1 LSB | 1 |
| 26 | 0: 25 | mm per 2 LSB ($2^{26 - 25 = 1} = 2$) | 1 |

Tab. 404: Examples of translational SSI encoders at X120

23.5 Commutation finding

Obey the instructions on commutation finding described below when using the control types 48: SSM-vector control incremental encoder or 70: SLM - vector control for synchronous servo motors or synchronous linear motors.

The following table provides an overview:

| Control mode | Encoder | Commutation finding |
|--|--|---------------------|
| 48: SSM-vector control incremental encoder | Incremental encoders | Wake and Shake |
| 70: SLM - vector control | Linear encoders (incremental encoders) | Wake and Shake |
| 70: SLM - vector control | Linear encoders (absolute encoders) | Action B40 |

Tab. 405: Commutation finding with control mode B20 = 48 or 70

Commutation finding via Wake and Shake



Risk of fatal injury due to gravity-loaded vertical axis!

Gravity-loaded axes can sink during a commutation finding process using Wake and Shake because the brake for the commutation finding process has to be released.

- Use the 48: SSM-vector control incremental encoder and 70: SLM - vector control control modes in combination with a commutation finding process using Wake and Shake only for axes without a gravity load.
- For gravity-loaded axes, use motors with an absolute encoder.

Incremental encoders

With incremental encoders, commutation finding via Wake and Shake takes place automatically after the control unit is switched on and the power unit is enabled for the first time. Select the velocity control control type for this first enable (G90 = 2: Velocity control; alternatively: select a command with velocity control as the first motion command if G90 = 0: Inactive).

Incremental encoder in combination with a brake

With incremental encoders in combination with a brake, automatic commutation finding via Wake and Shake after Enable-on is not possible, as the brake is not released in this case (event 69: Motor connection, cause: 4: Brake).

Perform the following steps each time you switch on the control unit. The axis moves by up to one pole pitch.

1. Release brake using release override (F06)
2. Enable power unit (via Enable-on if G90 = 2: Velocity control; alternatively: Select a command with velocity control as the first motion command if G90 = 0: Inactive)
3. Check E85 (2: Commutation OK = commutation succeeded; 0: Commutation unknown = commutation failed)
4. Deactivate release override F06 after successful commutation

Commutation finding via action B40

Absolute encoder

With absolute encoders, start commutation finding via the action B40 Test phase with a referenced axis. Then execute the action A00 Save values.

23.6 Device addressing

MAC address

A MAC address consists of a fixed and a variable portion. The fixed portion designates the manufacturer and the variable portion distinguishes the individual network nodes and must be universally unique.

The MAC addresses of the interfaces are issued by STOBER and cannot be changed.

| |
|--------------------|
| Information |
|--------------------|

The MAC address range of the STOBER hardware is: 00:11:39:00:00:00 – 00:11:39:FF:FF:FF

IP address – Value range

An IPv4 address always consists of 4 decimal numbers, each in a range from 0 to 255, and separated by periods. It must be unique within a (sub)network.

Subnet and subnet mask – Value range

Subnets are created in order to provide standalone networks with their own address range. Each IP address is divided into a network and host address. The subnet mask determines where this division takes place.

Like the IP address, the subnet mask consists of 4 decimal numbers, each in a range from 0 to 255, separated by periods.

Assignment for direct connection

In the default factory settings, both the IP address and the subnet mask are automatically assigned by DriveControlSuite or using DHCP for a direct connection. Alternatively, you can switch to manual parameterization using parameter A166.

The active address is displayed in parameter A157 and the active subnet mask in parameter A158.

Assignment for fieldbus connection

Note that the IP address and subnet mask are assigned by the controller for a fieldbus connection.

23.7 DriveControlSuite

The DriveControlSuite commissioning software uses wizards to guide you step by step through the installation process. You can find more detailed information on the system requirements and installation in the following chapters.

23.7.1 System requirements

The following minimum requirements for the PC system apply to the installation and operation of the DriveControlSuite commissioning software, including the integrated PASmotion Safety Configurator component, for configuring the SE6 or SX6 safety module:

- Operating system: Windows 10 (32-bit, 64-bit *) or Windows 11 (32-bit, 64-bit *)
- Processor: Intel Pentium 4 (2 GHz, Dual Core) or equivalent
- Memory: 2 GB
- Free disk space on the hard disk: 1 GB
- Graphics: 1024 × 768 pixel resolution, 65536 colors
- Font size: 100% (default)
- Interfaces: 100 Mbps Ethernet (Fast Ethernet, copper)
- Display of documentation: Adobe Acrobat Reader version 7.1.0 or later**

*) Only DriveControlSuite

***) Only PASmotion Safety Configurator

23.7.2 Installation types

To install the DriveControlSuite commissioning software, select one of two installation types.

Default installation

Select this installation type if you want to install the latest version of DriveControlSuite. DriveControlSuite is installed in the version-independent .../Programs/STOBER/DriveControlSuite/ directory. During the installation process, you do not need to specify any additional installation instructions.

Provided that you are connected to the Internet, a check is performed prior to installation to determine if a newer software version is available. If a newer version is already available, it is downloaded and installed in place of the started version.

If an older software version is already installed on your PC, it is deleted prior to installation. However, if the latest version is already installed on your PC, a new installation is not performed.

User-defined installation

Select this installation type if you want to install a specific version of DriveControlSuite or if you still need an older version that is already installed on your PC. You can use this installation type to change the default installation directory and manage the version-dependent destination folders.

Checking whether the software version is up-to-date before installation is optional.

23.7.3 Installing DriveControlSuite

Current versions of the DriveControlSuite commissioning software can be found in our download center at: <http://www.stoeber.de/en/downloads/>.

Information

If you use the extended safety technology through the SE6 or SX6 safety module, you also need the PASmotion Safety Configurator component integrated into DriveControlSuite. To this end, the PASmotion Safety Configurator installation wizard starts at the end of the DriveControlSuite installation process. You can either execute installation of the component for the safety configuration or cancel it if you do not need it.

- ✓ You have administrator rights.
 - ✓ The DriveControlSuite software is currently not running.
 - ✓ You have downloaded the setup file from the STOBER Download Center and saved it locally.
1. Start the installation via the setup file.
 2. Select the language for the installation and confirm with OK.
 3. Select Default as the installation type.
 - ⇒ If an Internet connection is available, the recency of the setup file is checked and, if necessary, the latest version is downloaded.
 - ⇒ The latest DriveControlSuite version is installed.
 - ⇒ After successful installation, DriveControlSuite checks the access to the network.
 - ⇒ If a firewall is active, a safety note opens according to the firewall settings.
 4. If applicable, allow DriveControlSuite to communicate on public and private networks.
 5. PASmotion Safety Configurator:
 - If you are using the SE6 or SX6 safety module, follow the steps in the PASmotion Safety Configurator installation wizard.
 - ⇒ After successful installation, DriveControlSuite opens automatically.

23.7.4 Communication requirements

Note the following requirements for direct connection, remote maintenance and IGB network.

23.7.4.1 Personal firewall

For communication, both DriveControlSuite and the SATMISL communication service must be enabled in the PC's firewall.

Test communication is initiated during the installation of DriveControlSuite that opens a dialog box for enabling communication in case of an activated firewall. Note that operation on public networks must also be enabled for communication using mobile network adapters.

The required setup file for installing DriveControlSuite can be found in our download center at:

<http://www.stoeber.de/en/downloads/>.

| Program/service | Path |
|------------------------------------|--|
| DS6A.exe (DriveControlSuite) | Standard installation: C:\Program Files (x86)\STOBER\DriveControlSuite\bin Parallel installation of different versions (version 6.X-X): C:\Program Files (x86)\STOBER\DriveControlSuite (V 6.X-X)\bin |
| SATMISLVC.exe (SATMISL service) | 32-bit Windows 7, 32-bit Windows 10, or 32-bit Windows 11: C:\Windows\System32 64-bit Windows 7, 64-bit Windows 10, or 64-bit Windows 11: C:\Windows\SysWOW64 |

Tab. 406: Programs and services

23.7.4.2 Protocols and ports for communication using routers

For communication using routers, the protocols and ports used by DriveControlSuite and the SATMISL communication service must be enabled in the routers, if applicable.

| Protocol | Port | Use | Program/service |
|----------|---------------|--|-------------------|
| UDP/IP | 37915 | Connection test (inquiry) | SATMISL service |
| UDP/IP | 37916 | Node search | SATMISL service |
| UDP/IP | 30001 | Primary port for connection response (response) | SATMISL service |
| | 30002 – 39999 | Alternative ports for connection response (response) | |
| UDP/IP | 40000 | Primary port for IP address specification | DriveControlSuite |
| | 40001 – 50000 | Alternative ports for IP address specification | |
| TCP/IP | 37915 | Data transmission | DriveControlSuite |

Tab. 407: Protocols and ports for a direct connection

| Protocol | Port | Use |
|----------|------|------------------------------|
| TCP | 80 | Data transmission using HTTP |

Tab. 408: Protocols and ports for STOBER remote maintenance

23.7.4.3 IGB and IGB motion bus network

An IGB network is used for pure service background communication, whereas data is exchanged synchronously within an IGB-motion bus network.

An IGB motion bus network exchanges data synchronously and in real time. The network is particularly well suited to the synchronous operation of drive controllers in order to exchange master value positions or actual and set values regarding velocity and torque. The IGB motion bus network is also used for graphical programming, such as for configuring the transmission and processing of any data.

Both network variants require the following conditions:

- At least 2 and up to 32 SD6 devices can be networked
- All nodes in the respective network must be connected with each other directly—without any intermediary hubs or switches
- Both networks must follow a line topology
- The X3A interfaces may be connected only to the X3B interfaces of other drive controllers and vice versa
- The use of a suitable Ethernet cable is required for a functioning network; STOBER offers pre-made cables for setting up an IGB or IGB motion bus network
- The total length of each network can be up to 100 m
- There is no complicated fieldbus configuration, even when commissioning master/slave systems

X3A gateway socket for connecting PC or Internet

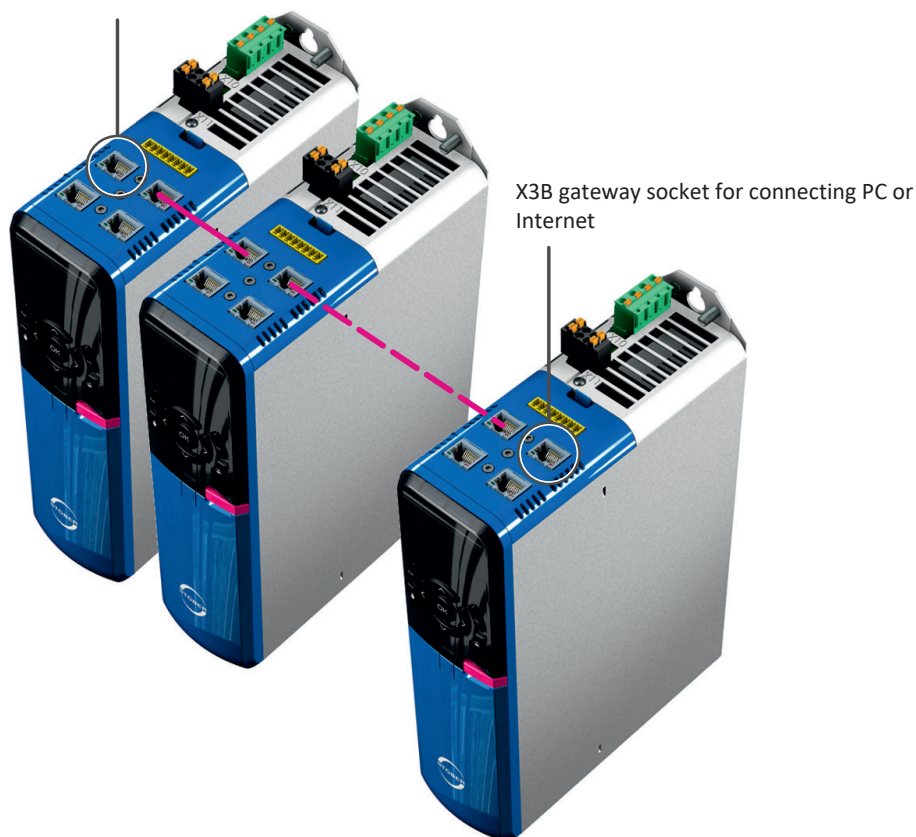


Fig. 111: IGB and IGB motion bus network

The PC or Internet is connected to one of the two open external sockets. The IGB motion bus network is set up automatically once you switch on at least one drive controller. For integrating additional drive controllers into the IGB motion bus network, the following conditions apply:

- You have integrated the drive controllers in question into the IGB motion bus network
- The drive controllers involved must be supplied with 24 V_{DC}

In order to start integration, the 24 V_{DC} supply must be switched on at one of the connected drive controllers. When the 24 V_{DC} supply is switched on, the IGB motion bus network is re-established and the connected drive controllers are integrated.

For information on device addressing, see [Device addressing](#) [▶ 479].

23.7.5 Establishing a connection

Establishing an online connection between DriveControlSuite and the drive controller is divided into 3 steps. In each step, you can influence the settings for establishing the connection.

 


Fig. 112: DriveControlSuite: Establishing a connection

Add connection

To establish an online connection, first determine how you want to connect DriveControlSuite to the drive controller.

- **Direct connection**
With a direct connection, the connection between the drive controller and DS6 is established directly over the local network via IGB or wirelessly.
- **Remote maintenance**
With remote maintenance, the connection between the drive controller and DS6 is not established directly over the local network, but over the Internet via the STOBER teleserver.

Making an assignment

After you have added the connection between DriveControlSuite and the drive controller and before you establish an online connection, make the assignment between the real drive controller and its virtual copy in the DS6. Select whether DriveControlSuite should have read or write access to the drive controller and assign a configuration from your project to each drive controller (manually or automatically).

- **Read access**
With read access, the configuration is read out from the drive controller to DriveControlSuite.
- **Send access**
With send access, the configuration is sent from DriveControlSuite to the drive controller.

Information

DriveControlSuite stores the reference and the production number of the real drive controller with which an online connection was last established in the project tree for each drive controller.

The information with which reference or with which production number an online connection most recently existed is saved as part of the project configuration. It is also retained when the drive controller is duplicated or imported into another project.

Establishing an online connection

After you have specified the settings for the assignment, the last step is to establish the online connection between DriveControlSuite and the drive controller. With an online connection, you can read out information from the drive controller to DriveControlSuite and vice versa. For example, the two-way data exchange allows you to create scope images for diagnostic purposes or to move axes using control panels. With an online connection, you can change the configuration with regard to the parameters. However, changes to the project configuration or graphical programming are only possible offline.

Information

Whether you have read or send access to the drive controller controls if the configuration is initially transferred from DriveControlSuite to the drive controller when the online connection is established or vice versa. As soon as there is an online connection, the information flows bidirectionally: The values of the drive controller are displayed in DriveControlSuite and changes in DriveControlSuite affect the drive controller.

23.7.5.1 Adding a connection (direct connection)

Add a direct connection to a drive controller in the local network to DriveControlSuite to enable an online connection to be established or to perform a firmware update. If the network topology does not allow an automatic direct connection, you can add a direct connection manually via the IP address of the drive controller.

Information

The **Add connection** dialog box can be reached via the start screen, the toolbar, the button in the project menu if you have selected the project or a module in the project tree, or via the button with the same name in the **Online functions** window.

Adding a direct connection

Establish a direct connection to a drive controller in the local network to enable an online connection to be established or to update the firmware.

- ✓ You are in the **Add connection** dialog box.
- ✓ The drive controller is switched on and can be found in the network.
- 1. **Direct connection** tab, **IP address** column:
Select the drive controller by activating the relevant IP address.
- 2. Confirm with **OK**.
- ⇒ The connection is added, the **Online functions** window opens.

Information

In the **Direct connection** tab, select **Select all** from the context menu to establish a direct connection to all drive controllers found in the local network.

Information

During the search, all drive controllers within the broadcast domain are found via IPv4 limited broadcast.

Requirements for finding a drive controller in the network:

- Network supports IPv4 limited broadcast
- All drive controllers and the PC are in the same subnet (broadcast domain)

Adding a direct connection (manual)

Establish a direct connection via the IP address of the drive controller if DriveControlSuite does not automatically find the drive controller in the local network due to the network topology.

- ✓ You are in the Add connection dialog box.
- ✓ The drive controller is switched on and can be found in the network.
- ✓ You know the IP address of the drive controller to which you want to establish a direct connection.

1. Direct connection (manual) tab, IP address field:
Enter the IP address of the drive controller (A157).
 2. Confirm with OK.
- ⇒ The search for the specified IP address in the local network starts.
 - ⇒ The connection is added, the Online functions window opens.

Information

DriveControlSuite cannot automatically find the drive controllers in the local network if they are connected to a controller, DS6 is running on a separate PC and the controller does not forward the broadcast telegrams of DS6 to the drive controllers. With the manual direct connection, DriveControlSuite deliberately sends unicast telegrams to the IP address of the respective drive controller. The telegrams are usually forwarded by the controller.

You can read out the IP address from the drive controller if an online connection exists, for example (parameter A157). For SD6 drive controllers, the IP address is shown on the display of the operating unit.

Adding a direct connection (additional IP addresses)

You can add additional IP addresses to the search in the local network if DriveControlSuite does not automatically find the drive controllers due to the network topology. The drive controllers found are displayed in the Direct connection tab and are available for establishing the connection.

- ✓ You are in the Add connection dialog box.
- ✓ The drive controllers are switched on and can be found in the network.
- ✓ You know the IP addresses of the drive controllers to which you want to establish a direct connection.

1. Direct connection tab:
Use the context menu to select Additional IP addresses.
 - ⇒ The Additional IP addresses window opens.
2. To include additional IP addresses in the local network search, select one of the options below.
3. Address range:
To add additional IP addresses via an address range, activate the Address range option.
 - 3.1. First IP address, Last IP address:
Define the range of addresses you want to include in the local network search.
4. Address list:
To add additional IP addresses via an address list, activate the Address list option.
 - 4.1. Define the list of IP addresses you want to include in the local network search, separated by commas.

5. Addresses from project:
To add additional IP addresses in line with the project's presets, activate the **Addresses from project** option.
⇒ The IP addresses from the project's presets are included in the search in the local network.
6. Import settings:
To import the settings for the search for additional IP addresses from an INI file (*.ini), click **Import**.
⇒ The **Import additional IP addresses** dialog box opens.
 - 6.1. Select the directory from which you want to import the settings.
 - 6.2. Confirm with **Open**.
⇒ The settings for searching for additional IP addresses are imported.
7. To start the search for additional IP addresses in the local network according to the selected option, confirm with **OK**.
⇒ The search for the specified IP addresses in the local network starts.
⇒ The drive controllers found are displayed in the **Direct connection** tab and are available for establishing the connection.

Information

The list of additional IP addresses is not limited and there is no limit to the number of telegrams. An extensive address list can lead to increased telegram traffic and, accordingly, to increased network utilization.

23.7.5.2 Adding a connection (remote maintenance)

To establish a secure connection for remote maintenance, you need the production number of the drive controller to be accessed. As an additional security measure, the specification of the session ID can be requested as an option.

Remote maintenance – Internet

- ✓ You are in the **Add connection** dialog box.
 - ✓ The drive controller is switched on and can be found in the network.
1. **Remote maintenance – Internet** tab:
Enter the production number of the drive controller.
 2. If you use the session ID as an additional security measure, specify the session ID.
 3. To specify the proxy settings and test the connection, click **Proxy settings**.
⇒ The **Proxy settings** dialog box opens.
 - 3.1. If you use a proxy server, enable the corresponding option and specify the IP address and port of the proxy server.
 - 3.2. If you use a proxy server with login, enable the corresponding option and specify the username and password for the login.
 - 3.3. Use **Test connection** to make sure that a connection to the STOBER teleserver is possible.
 - 3.4. Confirm with **OK**.
⇒ The **Proxy settings** dialog box closes.
 4. Confirm with **OK**.
⇒ The connection is added, the **Online functions** window opens.

Remote maintenance – LAN

- ✓ You are in the Add connection dialog box.
- ✓ The drive controller is switched on and can be found in the network.
- 1. Remote maintenance – LAN tab:
Enter the production number of the drive controller.
- 2. If you use the session ID as an additional security measure, specify the session ID.
- 3. To specify teleserver settings and test the connection, click LAN teleserver settings.
 - ⇒ The Teleserver settings dialog box opens.
 - 3.1. Enter the IP address or DNS name of the teleserver.
 - 3.2. Use Test connection to make sure that a connection to the STOBER teleserver is possible.
 - 3.3. Confirm with OK.
 - ⇒ The Teleserver settings dialog box closes.
- 4. Confirm with OK.
 - ⇒ The connection is added, the Online functions window opens.

Information

You can read off the production number (S/N) from the nameplate attached to the side of the drive controller or read it out from the drive controller if an online connection exists (parameter E52[2]).

For SD6 drive controllers, the production number is shown on the display as soon as remote maintenance is activated.

Information

You can read out the session ID from the drive controller if an online connection exists (parameter A151).

For SD6 drive controllers, the session ID is shown on the display as soon as remote maintenance is activated.

23.7.5.3 Establishing an online connection

Establish an online connection between DriveControlSuite and the drive controller to read out or transfer a configuration, create scope images or use control panels to move the axis.

WARNING!

Injury to persons and material damage due to axis movement!

If there is an online connection between DriveControlSuite and the drive controller, changes to the configuration can lead to unexpected axis movements.

- Only change the configuration if you have visual contact with the axis.
- Make sure that no people or objects are within the travel range.
- For access via remote maintenance, there must be a communication link between you and a person on site with eye contact to the axis.

Adding a direct connection

Establish a direct connection to a drive controller in the local network to enable an online connection to be established or to update the firmware.

- ✓ You are in the **Add connection** dialog box.
 - ✓ The drive controller is switched on and can be found in the network.
1. **Direct connection** tab, **IP address** column:
Select the drive controller by activating the relevant IP address.
 2. Confirm with **OK**.
- ⇒ The connection is added, the **Online functions** window opens.

Information

In the **Direct connection** tab, select **Select all** from the context menu to establish a direct connection to all drive controllers found in the local network.

Information

During the search, all drive controllers within the broadcast domain are found via IPv4 limited broadcast.

Requirements for finding a drive controller in the network:

- Network supports IPv4 limited broadcast
- All drive controllers and the PC are in the same subnet (broadcast domain)

Establishing an online connection

Establish an online connection to enable the exchange of information between the drive controller and DriveControlSuite.

- ✓ You are in the Online functions window, Online tab.
 - ✓ The drive controller is switched on and can be found in the network.
 - ✓ You have added a direct connection between DriveControlSuite and the drive controller.
1. Assignment area, Access selection:
Select how DriveControlSuite should access the relevant drive controller.
 - 1.1. If DriveControlSuite is to read a configuration from the drive controller, select Read.
 - 1.2. If DriveControlSuite is to send a configuration to the drive controller, select Send.
 - 1.3. If DriveControlSuite is not to establish an online connection, select Do not connect.
 2. Assignment area, Configuration selection:
Select which configuration from the project tree is to be assigned to the real drive controller.
 - 2.1. Read access:
Select a configuration from the project tree or select Create new drive controller.
 - 2.2. Send access:
Select the configuration from the project tree that you want to send to the drive controller.
 3. Online tab:
Click Establish online connection.
 - ⇒ The online connection between DriveControlSuite and the drive controller is established.
 - ⇒ With read access, the configuration is read from the drive controller to DriveControlSuite.
 - ⇒ With send access, the configuration is sent from DriveControlSuite to the drive controller.

| | |
|--|--|
| Information | |
| <p>For drive controllers with extended safety technology using the SE6 safety module, the PASmotion Safety Configurator configuration tool for transferring the safety configuration opens when an online connection is established (see also Transmitting the configuration [▶ 273]).</p> | |

| | |
|---|--|
| Information | |
| <p>Whether you have read or send access to the drive controller controls if the configuration is initially transferred from DriveControlSuite to the drive controller when the online connection is established or vice versa. As soon as there is an online connection, the information flows bidirectionally: The values of the drive controller are displayed in DriveControlSuite and changes in DriveControlSuite affect the drive controller.</p> | |

| | |
|--|--|
| Information | |
| <p>If you want to establish an online connection to multiple drive controllers, you can use the buttons in the Online tab to make the assignment easier by setting the access for all drive controllers to Read or Send.</p> <p>If you have previously established an online connection between DriveControlSuite and the drive controller with the current project, you can make the assignment automatically according to the reference or according to the production number of the drive controller.</p> | |

23.7.6 Configuring virtual machines

If you would like to connect the drive controllers to the DriveControlSuite commissioning software from a virtual machine, you have to configure the communication between the virtual machine and host so that, from the perspective of the network, the virtual machine is no different from a physical PC.

VMware, Inc. VMware

If you use the VMware software from the company of the same name as a virtual machine, configure it in the VMware Workstation. For the direct connection, the virtual network card is operated as a network bridge.

Microsoft Windows Virtual PC

If you use the Windows Virtual PC software from Microsoft as a virtual machine, configure it in the Virtual PC software and in the Virtual Server. In both components, the name of the virtual network card has to match the physical network card. For Virtual PC network connections, Microsoft distinguishes between the **Public** and **Private** types. For the direct connection, the virtual network card is operated on the Virtual Server with the Public connection type.

Microsoft Hyper-V

If you use the Hyper-V software from Microsoft as a virtual machine, configure a Virtual Switch Manager in the Hyper-V Manager.

For network connections through Virtual Switch, Microsoft distinguishes between the **External**, **Internal** and **Private** types. For the direct connection, the virtual network card is operated with the External connection type.

Oracle VirtualBox

If you use the VirtualBox software from Oracle as a virtual machine, configure the network directly in VirtualBox. For the direct connection, a virtual network adapter is operated in bridge mode.

23.7.7 Updates

In the **Help** menu of the DriveControlSuite commissioning software, you can search for a newer version and, if available, download and install it.

| |
|--------------------|
| Information |
|--------------------|

If the DriveControlSuite version is outdated, but the latest version is already installed on the computer, the check will yield the result that no newer version is available.

23.7.8 Script mode

Script mode is an automation function of the DriveControlSuite commissioning software. In Script mode, commands can be processed automatically. For example, this includes opening and closing project files or changing parameters. Processing commands can be used for executing various actions, such as transmitting a firmware update to multiple drive controllers.

When Script mode is called up from DriveControlSuite, a window with the same name opens. Here, you can transfer commands to DriveControlSuite in the form of a command script.

When you switch from Script mode to DriveControlSuite, the instance of DriveControlSuite being run in the background becomes visible.

Information

It is not possible to send a safety configuration to or read one from the SE6 safety module using Script mode.

23.7.8.1 Script mode window

In the DriveControlSuite – Script mode window, you can execute a command script and view information about the status of the script.

Information

The DriveControlSuite – Script mode window can be reached using the key combination [Ctrl] + [F9] when DriveControlSuite is open and by executing a command script by double-clicking the batch file when DriveControlSuite is closed.

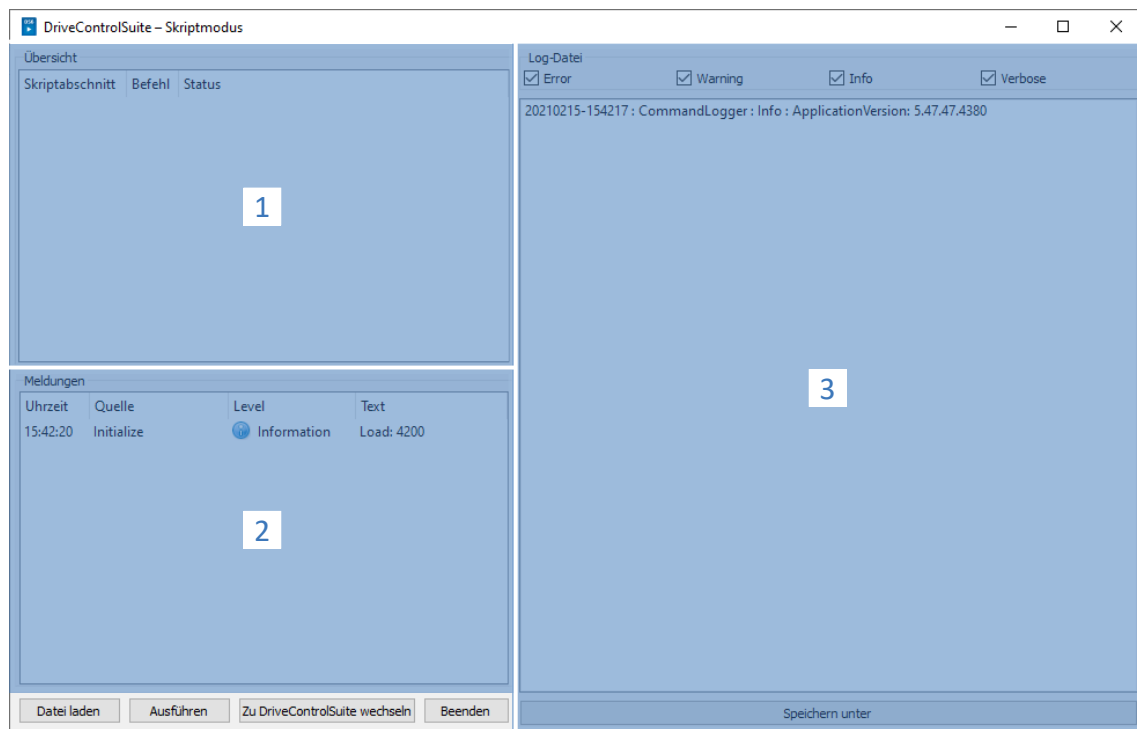


Fig. 113: Script mode: Program interface

| No. | Area | Description |
|-----|----------|--|
| 1 | Overview | The Overview area informs you about the progress of the individual script sections. |
| 2 | Messages | The entries in the messages log the connection and communication status of the drive controllers, incorrect inputs caught by the system, errors when opening a project or rule violations in the graphical programming. |
| 3 | Log file | The Log file area shows the entries that are written to the log file while the command script is running. Each entry is output with a time stamp and source and can be filtered by its level through use of the options above the entries (Error, Warning, Info, Verbose). You can use Save as to save the log file locally. |

| Button | Description |
|-----------------------------|---|
| Load file | Loads a command script in Script mode. |
| Run | Runs a loaded command script. |
| Switch to DriveControlSuite | Exits Script mode and switches to DriveControlSuite. |
| Exit | Exits Script mode and, where applicable, DriveControlSuite. |

23.7.8.2 Command script structure

The command script is structured in the JSON data format (*.json) with UTF-8 encoding with BOM. You can find an introduction to JSON at:

<https://www.json.org/json-en.html>

| |
|--------------------|
| Information |
|--------------------|

To create a script for DriveControlSuite, use a JSON editor such as JSON Editor Online, JSONViewer or Visual Studio Code.

Three data types are used in the script based on the standard JSON RFC-7159:

- Boolean
- String
- Integer

The command script is divided into three sections: settings, sequence and commands.

| Script section | Description |
|----------------|--|
| settings | In the settings section, you define basic settings for executing the command script. |
| sequence | In the sequence section, you define the sequence of the individual commands. |
| commands | In the commands section, you define the individual commands of the command script. |

23.7.8.2.1 "settings" script section

In the settings section, you define basic settings for executing the command script. You specify whether a log file is created when the script is executed and whether DriveControlSuite is closed after the script ends. The settings section is optional.

Attributes

- "logFilePath": Path of the log file, <optional> <string>
- "quitWhenDone": Behavior of DriveControlSuite after script end, <optional> <string>

Example

```
"settings": {
  "logFilePath": "%COMMANDFILE%/LoadNewConfig.log",
  "quitWhenDone": "never"
},
```

Creating a log file (logFilePath)

The log file logs the progress of a command script in chronological order. You create a log file by using the logFilePath attribute to specify the file path under which the log file is to be created. If you specify a file path for the log file, the command script will be executed only if the log file could be created successfully.

You can specify the file path for the log file either absolutely or relative to the command script directory (%COMMANDFILE%), \\ or / serve as separators of the path. By specifying %TIMESTAMP%, you can add the current time stamp (format: YYYYMMDD-hhmmss) to the file name and thus create a new log file each time the command script is executed. Without a time stamp in the file name, the log file will be overwritten each time the command script is executed.

Quit when done (quitWhenDone)

quitWhenDone can have three values assigned to it, which determine the behavior after the script is done.

| | |
|------------|---|
| "never" | DriveControlSuite remains open after the script has ended (default value). |
| "noErrors" | DriveControlSuite is closed after the script has ended, insofar as no errors have occurred. |
| "always" | DriveControlSuite is closed after the script has ended in every case. |

23.7.8.2.2 "sequence" script section

In the sequence section, you define the sequence of the individual commands. The commands are specified as an array of strings with the key "sequence" and the name you specify in the commands section. A command can occur any number of times in the array.

The order in the array corresponds to the order in which the commands are executed in the command script. Set a reasonable order for the commands so that the command script does not abort with an error if a command cannot be executed. For example, you must first open a project (openProject) before you can change a parameter in it (setParameter).

Example

```
"sequence": [
  "commandName 1",
  "commandName 2",
  "commandName 1",
  "commandName 3"
],
```

23.7.8.2.3 "commands" script section

In the commands section, you define the individual commands of the command script. A command consists at least of a name and the "command" attribute, which determines the command and the further attributes of the command.

Example

```
"commandName1": {
  "command": "commandName",
  "attributeKey": "attributeValue"
},
```

23.7.8.3 Script mode commands

In the following, all available commands are described with the corresponding attributes.

The following table shows an overview of the available commands.

| Command | Description |
|---|--|
| openProject [▶ 497] | Open project file |
| closeProject [▶ 497] | Close project file |
| connect [▶ 498] | Establish connection |
| disconnect [▶ 499] | Disconnect connection |
| setOnline [▶ 499] | Send/read out configuration |
| setOnlineByPreset [▶ 500] | Send/read out configuration according to the presets |
| setOffline [▶ 501] | Set offline |
| updateFirmware [▶ 502] | Multiple live firmware updates |
| setParameter [▶ 503] | Modify parameters |
| performAction [▶ 503] | Executing an action |
| openMessageBox [▶ 504] | Open message window |
| wait [▶ 504] | Wait |
| exportParameter [▶ 505] | Export parameters |
| importParameter [▶ 506] | Import parameters |
| updateTemplates [▶ 507] | Update project configuration |
| takeSnapShot [▶ 508] | Create reverse documentation |
| discardReverseDocumentation [▶ 509] | Delete reverse documentation |

Tab. 409: Script mode commands

23.7.8.3.1 openProject

With the command `openProject`, you can open a project in Script mode, which is required for many commands. When you open a project with `openProject`, `closeProject` is automatically called for the current project.

Attributes

- `"filePath"`: directory of the project file (*.ds6), <binding> <string>

Description

In the `filePath` attribute, you specify the name of the project file to be opened. The specification can be made either as an absolute value or relative to the command script directory (`%COMMANDFILE%`).

Example

```
"openProjectfile": {
  "command": "openProject",
  "filePath": "<your path>"
},
```

23.7.8.3.2 closeProject

With the `closeProject` command, you can close an open project in Script mode. When you open a project with `openProject`, `closeProject` is automatically called for the current project.

Attributes

- `"saveAs"`: Storage directory of the project file (*.ds6), <optional> <string>
- `"saveBeforeClose"`: <optional> <Boolean>

Description

`saveAs` specifies the storage location of the project. Alternatively, the project can be saved at the path specified in the `filePath` attribute before it is closed with `saveBeforeClose: true`. By default, a dialog box opens if the project has been modified.

Example

```
"closeProjectfile": {
  "command": "closeProject",
  "saveBeforeClose": true
},
```

23.7.8.3.3 connect

With the connect command, you can establish a direct connection to the drive controllers of a module in Script mode.

Requirements for communication with the drive controllers include a direct connection to the gateway drive controller and assignment to the module within the project under which this drive controller is recorded.

Attribute

- "module": Reference of the module in the project, <binding> <string>

One of the attributes listed below must be specified for the assignment. The IP address can always be used. The production number can be used only if the drive controller can be found by searching in a network. The reference can be used only if the drive controller can be found by searching in a network and a unique reference is defined for each drive controller that is found:

- "ipAddress": IPv4 address of the direct connection, <optional> <string>
- "serialNumber": Production number of the gateway drive controller, <optional> <integer>
- "reference": Reference of the gateway drive controller, <optional> <string>

Information

During the search, all drive controllers within the broadcast domain are found via IPv4 limited broadcast.

Requirements for finding a drive controller in the network:

- Network supports IPv4 limited broadcast
- All drive controllers and the PC are in the same subnet (broadcast domain)

Description

The command establishes a direct connection to the gateway drive controller with the corresponding IP address, production number or reference. Establishing a connection using Internet remote maintenance or LAN-based remote maintenance is not supported.

Example

```
"ipConnect": {
  "command": "connect",
  "module": "M1",
  "ipAddress": "192.168.3.2"
},
"serialnumberConnect": {
  "command": "connect",
  "module": "M1",
  "serialNumber": 70012345
},
"referenceConnect": {
  "command": "connect",
  "module": "M1",
  "reference": "T123"
},
```

23.7.8.3.4 disconnect

With the disconnect command, you can disconnect all existing direct connections in Script mode (without reverse documentation).

Example

```
"DisconnectAll": {  
  "command": "disconnect"  
},
```

23.7.8.3.5 setOnline

With the setOnline command, you can establish an online connection in Script mode to send a configuration from the project to the drive controller or to read it from the drive controller into the project.

Attributes

- "direction": Read or send access; read or write, <optional> <string>
- "reference": Reference of the drive controller in the project, <optional> <string>
- "targetId": Reference, production number or IGB position of the physical drive controller, <optional> <string> or <integer>
- "targetType": igbPosition, serialNumber or reference, <optional> <string>
- "connectAndAssignMethod": serialNumber or reference, <optional> <string>

Description of single connection

The configuration of the active project file specified with "reference" is loaded into the specified drive controller or vice versa. The specification must be unique. Based on the content of targetType, a decision is made about how to interpret the content of targetId. The online connection is established in the reading or sending direction according to the attribute.

Value set of targetType:

1. "igbPosition": The position of the drive controller is determined for the IGB based on the plug sequence; assignment takes place based on this position; the left, outer drive controller in the IGB has the position 0 (zero)
2. "serialNumber": The assignment is made using the production number of the drive controller
3. "reference": The assignment is made based on the reference already existing in the drive controller (E120); this was assigned during the most recently executed project configuration

It is always a prerequisite that a drive controller with this igbPosition, production number or reference must be in the established connection.

Description of multi-connection

When using the connectAndAssignMethod attribute with the values serialNumber or reference (see example 4), the configurations of the active project file are loaded to the corresponding drive controllers most recently connected or vice versa. The online connection is established in the reading or sending direction according to the attribute.

Examples

Example 1

The configuration of the projected drive controller T1 is loaded into the device with the production number 7000026.

```
"sendConfigFromT1to7000026": {
  "command": "setOnline",
  "direction": "write",
  "reference": "T1",
  "targetId": 7000026,
  "targetType": "serialNumber"
},
```

Example 2

```
"readConfigOutOfIgb5intoT2": {
  "command": "setOnline",
  "direction": "read",
  "reference": "T2",
  "targetId": 5,
  "targetType": "igbPosition"
},
```

Example 3

```
"writeFromT3ToArAlt": {
  "command": "setOnline",
  "direction": "write",
  "reference": "T3",
  "targetId": "ArAlt",
  "targetType": "reference"
},
```

Example 4

```
"setOnline": {
  "command": "setOnline",
  "direction": "write",
  "connectAndAssignMethod": "reference"
},
```

23.7.8.3.6 Sending/reading out a configuration according to the presets (setOnlinebyPreset)

With the setOnlineByPreset command, you can establish an online connection in Script mode to send a configuration from the project to the drive controller or to read it from the drive controller into the project. The command uses the presets stored in the project to establish the connection. If you do not specify any specific drive controllers via the attributes, an online connection is established for all drive controllers in the project.

If you store presets for the connection setup in the project, you can easily store a command script or reuse it for multiple projects. For more information on the presets, see [Presetting connections](#) [► 511].

Attributes

- "module": Reference of the module, <optional> <string>
- "reference": Reference of the drive controller, <optional> <string>
- "direction": Read or send access; read or write; overwrites the preset transmission direction, <optional> <string>

Description

The transmission applies to one individual drive controller based on the specification of module and reference (see example 1), but it can also be defined for all drive controllers pre-defined in the project (see example 2).

Examples

Example 1

```
"singleConnectByPresets": {  
  "command": "setOnlineByPreset", "module": "m1", "reference": "T1"  
},
```

Example 2

```
"multiConnectByPresets": {  
  "command": "setOnlineByPreset"  
},
```

23.7.8.3.7 setOffline

With the setOffline command, you can disconnect the online connection to all connected drive controllers in Script mode (with or without reverse documentation). You can save changes to the parameter values of the drive controller before disconnecting.

Attribute

- "reverseDocumentation": For true or false, reverse documentation is either created or not, <optional> <Boolean> <default = false>
- "saveValues": For true, the parameter A00 is set to active before setOffline is carried out, <optional> <Boolean> <default = false>

Example

```
"setOfflineAndSaveValues":  
{  
  "command": "setOffline",  
  "reverseDocumentation": false,  
  "saveValues": true  
},
```

23.7.8.3.8 Updating firmware (updateFirmware)

With the updateFirmware command, you can perform a live firmware update in Script mode for a defined list of drive controllers in the network.

Attributes

- "ipAddresses": List of IP addresses of the drive controllers at the gateways
- "serialNumbers": List of production numbers of the drive controllers at the gateways, <integer>
- "references": List of references of the drive controllers at the gateways
- "connectByMethod": serialNumber, reference or presets, <optional> <string>
 - "serialNumber": In the open project, all drive controllers are provided with a firmware update whose production number matches the production number defined in the project
 - "reference": In the open project, all drive controllers are provided with a firmware update whose references matches the reference defined in the project
 - "presets": In the open project, all drive controllers are provided with a firmware update that corresponds to the drive controllers defined in the presets
- "firmwarePath": Directory in which the firmware files are stored, <optional>
- "firmware": Firmware version
 - "default": In this value, the version of the target firmware corresponds to the DriveControlSuite version (highest firmware version that was loaded)
- "restart": Restart after the update is finished, <optional> <Boolean> <default = false>
- "waitForRenewedAvailability": Wait until the update has been completed and the drive controllers are available again in the network, <optional> <Boolean> <default = false>

Example

```
"updateFirmwareToV_6_4_D": {
  "command": "updateFirmware",
  "firmware": "V 6.4-D",
  "firmwarePath": "<your path>",
  "ipAddresses": ["192.168.3.101",
                 "192.168.3.102",
                 "192.168.3.103"
  ],
  "restart": true,
  "waitForRenewedAvailability": true
},
```

23.7.8.3.9 Changing the parameter value (setParameter)

With the setParameter command, you can change the value of a parameter in Script mode. You can execute the command both offline and with an existing online connection.

Attributes

- "module": Reference of the module, <binding> <string>
- "reference": Reference of the drive controller, <binding> <string>
- "coordinate": Coordinate of the parameter, <binding> <string>
- "value": Value of the parameter, <binding> <string>

Example

```
"setA10[3]:" {
  "command": "setParameter",
  "module": "M1",
  "reference": "T2",
  "coordinate": "A10[3]",
  "value": "2"
},
```

23.7.8.3.10 performAction

With the performAction command, you can perform an action in Script mode. You can only execute the command if there is an existing online connection.

Attributes

- "reference": Reference of the drive controller, <optional> <string>
 - If the specification is missing, the action is executed on all connected drive controllers
- "module": Reference of the module, <optional> <string>
 - If the specification is missing, the action is executed on all connected drive controllers
- "coordinate": Coordinate of the action parameter, <binding> <string>
- "waitForDone": Wait until the action has been completed, <optional> <Boolean> <default=true>
- "timeout", <optional> <integer><default = 60> (timeout in seconds):
 - If waitForDone is true: If the timeout is reached before the action has been fully completed, the command was unsuccessful and the sequence has been interrupted
 - If waitForDone is false: After the action is started, there is a wait until the timeout has expired; then the sequence is continued; the command is considered successfully processed
- "livingSpace": Axis (in the case of multiple axes, those to which a parameter is assigned), <optional> <string><default=Global>

Possible values:

```
"livingSpace": "Global",
"livingSpace": "Axis1",
"livingSpace": "Axis2",
"livingSpace": "Axis3",
"livingSpace": "Axis4",
```

Example

```
"restartSIAx1": {
  "command": "performAction",
  "module": "M1",
  "reference": "SIAx1",
  "coordinate": "A09",
  "livingSpace": "Global",
  "waitForDone": false,
  "timeout": 10
},
```

23.7.8.3.11 Opening a message (openMessageBox)

With the `openMessageBox` command, you can open a message in Script mode that displays the specified text. The command script is stopped until the message is confirmed with `OK`.

Attributes

- "text": text of the message, <binding> <string>

Example

```
"ShowMsgBox": {
  "command": "openMessageBox",
  "text": "Please press OK!"
},
```

23.7.8.3.12 wait

With the `wait` command, you can pause the command script in Script mode for the specified time.

Attribute

- "seconds": Wait time in seconds, <binding> <integer>

Example

```
"Wait15Secs": {
  "command": "wait",
  "seconds": 15
},
```


23.7.8.3.13 Exporting parameter values (exportParameter)

With the `exportParameter` command, you can export the parameter values of a drive controller, a module or the entire project in Script mode. If you do not define any specific drive controller or module via the attributes, the parameter values of the entire project are exported. You can work with the variables listed below to have unique file names when exporting the entire project. These are replaced by the actual values during export.

Attributes

- `"exportPath"`: Directory to which the parameter values are exported as a text file, <binding> <string>
- `"module"`: Reference of the module, <optional> <string>
- `"reference"`: Reference of the drive controller, <optional> <string>

Variables

| Variable | Description |
|----------|--|
| %m% | Module reference |
| %M% | Designation of the module |
| %r% | Reference of the drive controller |
| %d% | Designation of the drive controller |
| %i% | Iteration over the number of drive controllers |

Tab. 410: Script mode: Variables for importing and exporting parameters

Example

```

"ExportSingle": {
  "command": "exportParameter",
  "module": "M1",
  "reference": "T2",
  "exportPath": "%COMMANDFILE%/parameters_%r%-%d%_ProjectName.txt"
},
,
"ExportMulti": {
  "command": "exportParameter",
  "exportPath": "%COMMANDFILE%/parameters_%r%-%d%_ProjectName.txt"
},
,

```

23.7.8.3.14 Importing parameter values (importParameter)

With the `importParameter` command, you can import previously exported parameter values for a drive controller, a module or the entire project in Script mode. If you do not define a specific drive controller or module via the attributes, the parameter values of the entire project are imported. You can work with the variables listed below to have unique file names when exporting the entire project. These are replaced by the actual values during export.

Attributes

- `"importPath"`: Path to the text file from which the parameter values are imported, <binding> <string>
- `"module"`: Reference of the module, <optional> <string>
- `"reference"`: Reference of the drive controller, <optional> <string>
- `"deleteAfter"`: If true, the text file with the parameter values will be deleted after import <optional> <Boolean><default = true>
- `"reportPath"`: Path under which the change overview (*.html) is saved, <binding> <string>

Variables

| Variable | Description |
|----------|--|
| %m% | Module reference |
| %M% | Designation of the module |
| %r% | Reference of the drive controller |
| %d% | Designation of the drive controller |
| %i% | Iteration over the number of drive controllers |

Tab. 411: Script mode: Variables for importing and exporting parameters

Example

```

"ImportSingle": {
  "command": "importParameter",
  "module": "M1",
  "reference": "T2",
  "importPath": "%COMMANDFILE%/parameters_%r%-%d%_ProjectName.txt",
  "reportPath": "%COMMANDFILE%/parameterImportReport_ ProjectName.html",
  "deleteAfter": false
},
,
"ImportMulti": {
  "command": "importParameter",
  "importPath": "%COMMANDFILE%/parameters_%r%-%d%_ProjectName.txt",
  "reportPath": "%COMMANDFILE%/parameterImportReport_ ProjectName.html",
  "deleteAfter": false
},
,

```

23.7.8.3.15 updateTemplates

With the updateTemplates command, you can update the project configuration of the drive controllers to the latest version in Script mode (templates and system parameter version).

Attributes

- "reportPath": Generates an overview (*.html) of the changes in the project configuration, <optional> <string>

Example

```
"updateTemplates": {  
  "command": "updateTemplates",  
  "reportPath": "%COMMANDFILE%/updateReport.html"  
},
```

23.7.8.3.16 Creating reverse documentation (takeSnapshot)

With the takeSnapshot command, you can establish an online connection in Script mode to read out the configurations of the connected drive controllers into the project and to create reverse documentation when disconnecting. The configurations are read out into a new module in the project tree. If you do not use the attributes to specify any specific drive controllers, the configuration is read out for all drive controllers in the network and reverse documentation is created.

IGBs are always read out completely. If no project is open, the command creates a new, empty project.

Attributes

- "ipAddresses": List of IP addresses of the drive controllers at the gateways, <optional> <string array>
- "serialNumbers": List of production numbers of the drive controllers at the gateways, <optional> <integer array>
- "references": List of references of the drive controllers at the gateways, <optional> <string array>

Information

During the search, all drive controllers within the broadcast domain are found via IPv4 limited broadcast.

Requirements for finding a drive controller in the network:

- Network supports IPv4 limited broadcast
- All drive controllers and the PC are in the same subnet (broadcast domain)

Description

The command establishes a direct connection to the gateway drive controllers with the corresponding IP addresses, production numbers or references.

Establishing a connection using Internet remote maintenance or LAN-based remote maintenance is not supported.

Example 1

```
"takeSnapshot": {
  "command": "takeSnapshot"
},
```

Example 2

```
"takeSnapshotIpAddresses": {
  "command": "takeSnapshot",
  "ipAddresses": ["192.168.3.4", "192.168.3.139"]
},
```

Example 3

```
"takeSnapshotReferences": {
  "command": "takeSnapshot",
  "references": ["T3", "T4"]
},
```

Example 4

```
"takeSnapshotSerialNumbers": {
  "command": "takeSnapshot",
  "serialNumbers": [9011564, 9012296]
},
```

23.7.8.3.17 Deleting reverse documentation (discardReverseDocumentation)

With the `discardReverseDocumentation` command, you can delete one or all instances of reverse documentation in Script mode. If you do not define any specific drive controller via the attributes, the reverse documentation of all drive controllers in the project is deleted.

Attributes

- "reference": Reference of the drive controller, <optional> <string>
- "module": Reference of the module, <optional> <string>

Example

```
"discardReverseDocu": {
  "command": "discardReverseDocumentation",
  "reference": "T1"
  "module": "M1"
},
```

23.7.8.4 Executing a command script

To execute a command script, in addition to the actual script, you need a batch file with which you pass the command script to DriveControlSuite. You can execute the command script either when DriveControlSuite is opened from the DriveControlSuite – Script mode window or when DriveControlSuite is closed by double-clicking on the corresponding batch file.

Information

Place all the files you need to execute a command script in the same directory. To execute a command script, you need at least 2 files (command script and batch file). If you want to log the script execution, you also need a log file. Depending on the application, you may also need a project file if you want to create or import a backup, for example.

Information

For application examples for the Script mode, go to our download center at <http://www.stoerber.de/en/downloads/> and search for `Script mode`. The application examples contain sample files for the 3 following use cases: update firmware (firmware update), save configuration (backup) and import configuration (restore). You can adapt the sample files to your application by changing the number and addressing of the drive controllers and also the file names and path specifications.

Creating a command script

Create a command script (*.json) that contains the appropriate commands and attribute values for your application.

- ✓ You are in the directory for the command script files.
- 1. Create a new text file via the Windows Explorer context menu.
- 2. Assign a suitable file name and change the file extension from *.txt to *.json.
 - 2.1. Example: `FirmwareUpdate.json`.
- 3. Open the file.

4. Write the command script for your application by defining the settings, sequence and commands script sections.

- 4.1. Example:

```
{
  "settings": {
    "logFilePath": "%COMMANDFILE%/FirmwareUpdate.log",
    "quitWhenDone": "never"
  },
  "sequence": [
    "UpdateFirmware"
  ],
  "UpdateFirmware": {
    "command": "updateFirmware",
    "firmware": "V 6.4-D",
    "ipAddresses":
      [ "200.0.0.1",
        "200.0.0.2",
        "200.0.0.3"
      ],
    "restart": true
  }
}
```

5. Save the command script.

Creating a batch file

Create a batch file (*.bat) with which you pass the command script to DriveControlSuite.

- ✓ You are in the directory for the command script files.

1. Create a new text file via the Windows Explorer context menu.
2. Assign a suitable file name and change the file extension from *.txt to *.bat.
 - 2.1. Example: `FirmwareUpdate.bat`.
3. Open the file.
4. Specify the path to the EXE file of DriveControlSuite and assign the command script.

- 4.1. Example:

```
"C:\Program Files (x86)\STOBER\DriveControlSuite\bin\DS6A.exe"
FirmwareUpdate.json
```

5. Save the batch file.

Executing a command script

Execute a command script with DriveControlSuite closed or open.

- ✓ You are in DriveControlSuite.
- 1. Use the key combination [Ctrl] + [F9].
 - ⇒ The DriveControlSuite – Script mode window opens.
- 2. Click Load file.
 - ⇒ The Open file dialog box opens.
- 3. Navigate to the desired command script and click Open.
- 4. To run the command script, click Run.
 - ⇒ The command script will be executed.
 - ⇒ The DriveControlSuite – Script mode window displays information about the status of the command script in the Overview, Messages and Log file areas.

Information

You can execute a command script even when DriveControlSuite is closed by double-clicking the associated batch file. Double-clicking the batch file executes the command script and the DriveControlSuite – Script Mode window will open to display information about the status of the command script.

23.7.8.5 Presetting connections

You need the presets for the connection setup for the setOnlineByPreset command in Script mode. If you store presets for establishing the connection in the project, you can easily keep a command script or reuse it for multiple projects.

The IP addresses stored in the presets can be taken into account for establishing the connection when searching for drive controllers in the local network.

- ✓ You are in DriveControlSuite.
- ✓ Your project is open.
- 1. Select the project in the project tree and choose Preset connections from the context menu.
 - ⇒ The Preset connections window opens.
- 2. Direction selection:
Select whether read or send access to the drive controllers is to be made when the connection is established.
- 3. Target selection:
Select how the configuration and drive controller are to be assigned to each other when the connection is established (IP address, reference, production number, PLC device name).
- 4. Confirm the presets with OK.
 - ⇒ The presets are taken into account in the next execution of the setOnlineByPreset command.
 - ⇒ The stored IP addresses can be taken into account when searching for drive controllers in the local network.

23.7.8.6 Application examples for EtherCAT

Examples are provided to illustrate how Script mode functions and how you can use it.

The files required for running the application examples can be found in our download center at:

<http://www.stoeber.de/en/downloads/>.

Enter `Script mode` in the search field.

The package contains the example files for the following actions:

- Carry out a firmware update (FirmwareUpdate)
- Load the prepared configuration (Restore)
- Saving the current configuration (Backup)

The requirements for executing the actions are almost identical for all example files (see Running a script).

If you would like to use the example files, you must adapt them (file names and paths, addressing of the drive controllers).

Test setup

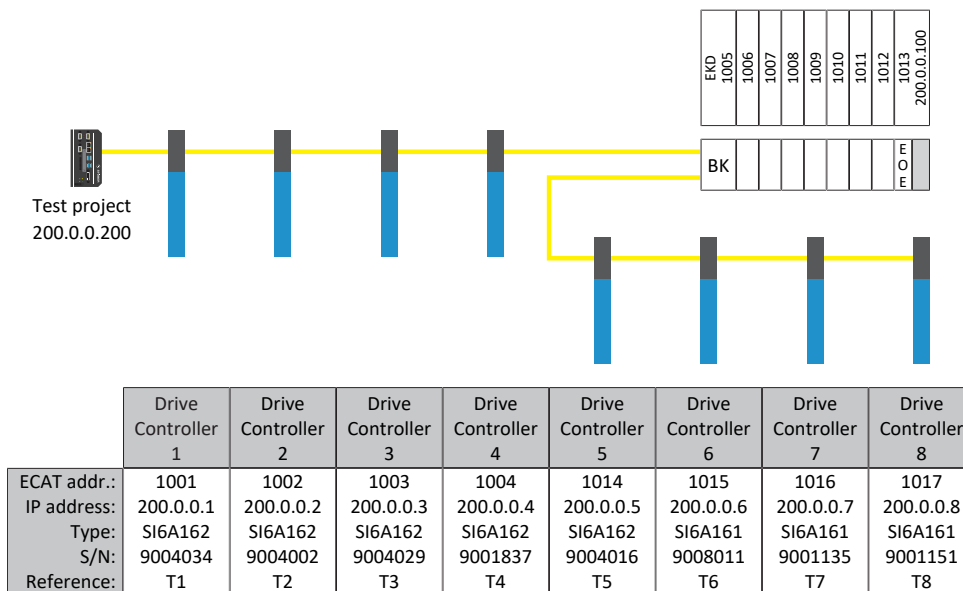


Fig. 114: Test setup of the application examples

Eight drive controllers of the SI6 series with fixed IP addresses 200.0.0.1 - 200.0.0.8 assigned by the EtherCAT MainDevice.

Variante 1

DriveControlSuite runs on the same IPC as the EtherCAT MainDevice.

Variante 2

The DriveControlSuite runs on a PC or laptop. The PC or laptop are on the same network as the IPC, but not on the same network as the EoE device group. A route must also be set here. For more information, see [Network route \[► 514\]](#).

23.7.8.6.1 Carrying out a firmware update

Requirements

- DriveControlSuite version 6.4-D or later is the default installation
- All drive controllers are operated with firmware version 6.4-A or later
- All drive controllers can be reached through a direct connection using IP addresses 200.0.0.1 to 200.0.0.8

Behavior of the script

The script for the drive controllers with the IP addresses 200.0.0.1 - 200.0.0.8 transfers a firmware update to firmware version 6.4-D. The drive controllers are then restarted.

Information

Be aware that values that have been changed or only stored in volatile memory are lost and that fieldbus communication and the connection to DriveControlSuite are interrupted in the event of a drive controller restart.

23.7.8.6.2 Load the prepared configuration (Restore)

Requirements

- DriveControlSuite version 6.4-D or later is the default installation
- All drive controllers are operated with firmware version 6.4-A or later
- All drive controllers can be reached through a direct connection using IP addresses 200.0.0.1 to 200.0.0.8
- A project file Restore.ds6 with the drive controllers

Behavior of the script

The configurations of the drive controllers projected in the Restore.ds6 project are transferred to the drive controllers with the parameterized IP addresses by a script.

Information

Be aware that values that have been changed or only stored in volatile memory are lost and that fieldbus communication and the connection to DriveControlSuite are interrupted in the event of a drive controller restart.

ATTENTION!

Machine damage from uncontrolled stopping!

Note that sending a configuration includes a brief stop of the device configuration. Communication with the EtherCAT MainDevice is interrupted. For this reason, the script may be run only in the pre-operational state.

23.7.8.6.3 Saving the current configuration (Backup)

Requirements

- DriveControlSuite version 6.4-D or later is the default installation
- All drive controllers are operated with firmware version 6.4-A or later
- All drive controllers can be reached through a direct connection using IP addresses 200.0.0.1 to 200.0.0.8
- A project file Backup.ds6 with the drive controllers.

Behavior of the script:

The configurations of the drive controllers with the parameterized IP addresses are saved in the Backup.ds6 file by a script.

23.7.8.6.4 Network route

The Internet Protocol (IP) ensures that data packets are communicated across network boundaries. Routing is the determination of a suitable path for transferring the data packets.

Particularly when EoE is used, it is often necessary to create a route manually.

Information

Note that manually routing to the controller will function only if the IP address of the controller and the IP address of the PC in question are in the same network. Otherwise, the network administration has to add a static route to the router's routing table.

Creating a network route

In Windows, the route is created as follows:

```
route ADD 200.0.0.0 MASK 255.0.0.0 192.168.12.36
```

Explanation:

200.0.0.0 is the EoE network with a network mask of 255.0.0.0.

192.168.12.36 is the address of the controller that connects to the EoE network.

Deleting a network route

In Windows, the route is deleted as follows:

```
route delete 200.0.0.0
```

23.7.8.7 Exit statuses

Calling a command script returns the exit statuses described below, which can be output on a Windows PC using the command prompt, for example. The exit status for the successful execution of a command script is 0. An exit status not equal to 0 signals an error.

| Exit status | Name | Description or cause | Check and action |
|-------------|-------------------------------|---|---|
| 0 | SUCCESS | Command script was executed without errors | — |
| 100 | JSON-ERROR | Error parsing the command script | Check syntax of JSON file and correct if necessary |
| 101 | JSON-FILE-NOT-EXISTING | Command script was not found | Check assignment of the command script in the batch file and correct if necessary |
| 201 | PROJECT-FILE-NOT-EXISTING | Project file was not found | Check attributes in the command script and correct if necessary |
| 202 | PROJECT-FILE-NOT-OPENING | Project file could not be opened | Check whether the DS6 project is already open and close it if necessary |
| 203 | PROJECT-FILE-NOT-READABLE | Project file was not readable | Check read access rights to the DS6 project and extend them if necessary |
| 204 | PROJECT-FILE-WRONG-FW | Project file could not be loaded due to wrong firmware; firmware version of the project file does not match the DriveControlSuite | Check firmware version in DS6 project and correct if necessary |
| 210 | CANNOT-SAVE-PROJECT-FILE | Project file could not be saved | Check write access rights to the DS6 project and extend them if necessary |
| 300 | CONNECTION-ERROR | Error when establishing a connection | Check network connection; check attributes in the command script and correct if necessary |
| 400 | SETONLINE-ERROR | Error during online connection if the error cannot be narrowed down more precisely | Check attributes in the command script and correct if necessary |
| 401 | SETONLINE-ERROR-READING | Error with read online connection | Check attributes in the command script and correct if necessary |
| 402 | SETONLINE-ERROR-WRITING | Error with write online connection | Check attributes in the command script and correct if necessary |
| 500 | FWUPDATE-ERROR | Error during firmware update if the error cannot be narrowed down more precisely | Check attributes in the command script and correct if necessary |
| 501 | FWUPDATE-FILE-NOT-FOUND | Error during firmware update if the firmware file was not found | Check attributes in the command script and correct if necessary |
| 502 | FWUPDATE-CONTROLLER-NOT-FOUND | Error during firmware update if the drive controller was not found | Check attributes in the command script and correct if necessary |
| 601 | PARAIMPORT-FILE-NOT-FOUND | Error during parameter import if the import file was not found | Check attributes in the command script and correct if necessary |
| 602 | PARAEXPORT-FILE-NOT-WRITABLE | Error during parameter export if the file could not be written | Check access rights to the directory and file and extend them if necessary |
| 700 | ACTION-ERROR | Error when performing an action if the error cannot be narrowed down more precisely | Check attributes in the command script and correct if necessary |

| Exit status | Name | Description or cause | Check and action |
|-------------|----------------------------|--|--|
| 701 | ACTION-WRONG-PARAMETER | Error while executing an action if the parameter coordinate was wrong | Check attributes in the command script and correct if necessary |
| 800 | SET-PARAMETER-ERROR | Error when writing a parameter value if the error cannot be narrowed down more precisely | Check attributes in the command script and correct if necessary |
| 801 | SET-PARAMETER-NOT-WRITABLE | Error when writing a parameter value if the parameter is write-protected | Parameter value cannot be changed; check attributes in the command script and change parameter coordinate if necessary |
| 802 | SET-PARAMETER-NOT-EXISTING | Error writing a parameter value if the parameter does not exist | Check attributes in the command script and correct if necessary |
| 900 | UPDATE-TEMPLATES-ERROR | Error when updating a template | Check project configuration of the drive controllers for compatibility with the latest version of the templates |
| 1100 | SNAPSHOT-ERROR | Error when creating reverse documentation | Check attributes in the command script and correct if necessary |
| 1150 | DISCARD-SNAPSHOT-ERROR | Error when deleting reverse documentation | Check attributes in the command script and correct if necessary |
| 1200 | ONLINE-BY-PRESET-ERROR | Error during online connection according to the default settings | Check network connection; check attributes in the command script and correct if necessary |
| 1300 | START-SAFETY-TOOL-ERROR | Error when starting PASmotion Safety Configurator | If necessary, reinstall DriveControlSuite with PASmotion Safety Configurator |

Tab. 412: Script mode: Exit statuses

Extending a batch file

The exit status can be queried with the following command:

```
echo %ERRORLEVEL%
```

The following example shows the content of a batch file (*.bat), extended by the output of the exit status in the penultimate line:

```
echo off
"C:\Program Files (x86)\STOBER\DriveControlSuite\bin\DS6A.exe" FirmwareUpdate.json
IF %ERRORLEVEL% NEQ 0 Echo An error was found:
IF %ERRORLEVEL% EQU 0 Echo No error found:
echo %ERRORLEVEL%
pause
```

23.7.9 Security log

The Security log window shows a complete, antichronological overview of all changes to the firmware and configuration of the drive controller.

Information

In firmware V 6.5-K and later, the Security log window can be reached using either the context menu of the drive controller in the project tree or the button in the Online functions window.

In the Online functions window, the current security log is read out from the drive controller to DriveControlSuite if a direct connection or online connection exists. It can also be saved with the project file. In the project tree, the security log is only read out if there is an existing online connection. If there is no online connection between DS6 and the drive controller, the last security log read out is displayed.

| Field | Description |
|-------------------|---|
| Production number | Production number of the drive controller |
| Time stamp | Time stamp of the readout (local date and time) |

| Column | Description |
|-------------------|---|
| Index | Entry index |
| Event type | Type of event |
| Date + time (UTC) | Date and time of the event in UTC (source: DS6) |
| Operating time | Operating time of the drive controller (source: E30) |
| Interface | Interface through which the event occurred (DriveControlSuite, SD card) |
| Event information | Information about the event |

Information

The source for the Date + time (UTC) column of the event is the time that the drive controller has at the moment of the event (e.g. via DriveControlSuite or fieldbus). If the configuration of the drive controller is changed via the SD card, the date and time of the event are not recorded.

| Button | Description |
|--------|---|
| Export | Exports the security log to a CSV file (*.csv). |
| Close | Closes the Security log window. |


23.7.9.1 Reading out the security log

With an existing online connection, you can read out the current version of the security log from the drive controller to DriveControlSuite in order to track changes to the firmware and configuration of the drive controller and export them if necessary.

Reading out the security log

Read out the security log from the drive controller into DriveControlSuite as described below.

- ✓ You are in the Online functions window.
- ✓ You have added a direct connection between DriveControlSuite and the drive controller.

1. Click next to the relevant drive controller on .
- ⇒ The security log is read out from the drive controller.
 - ⇒ The Security log window opens.

Exporting the security log

Export the security log to be able to view it later.

- ✓ You have read out the security log from the drive controller to DriveControlSuite.
- ✓ You are in the Security log window.

1. Click Export.
 - ⇒ The Export security log dialog box opens.
 2. Select the directory where you want to save the security log.
 3. Confirm with Save.
- ⇒ The security log is saved as a CSV file (*.csv).

23.8 Detailed information

The documentation listed below provides you with further relevant information on the 6th STOBER drive controller generation. The current status of the documentation can be found in our download center at:

<http://www.stoeber.de/en/downloads/>.

Enter the ID of the documentation in the search field.

The grouping of the documentation is intended to provide you with assistance, but is only relevant if you control the drive controller using a fieldbus.

PROFINET

| Title | Documentation | Contents | ID |
|---|---------------|--|--------|
| PROFINET communication – SD6 | Manual | Installation, electrical installation, data transfer, commissioning, diagnostics, detailed information | 442710 |
| Drive Based application (DB) – SD6 | Manual | Project configuration, configuration, parameterization, function test, detailed information | 442706 |
| Drive Based Synchronous application (DBS) – SD6 | Manual | Project configuration, configuration, parameterization, function test, detailed information | 443046 |
| Drive Based Center Winder application (DBCW) – SD6 | Manual | Project configuration, configuration, parameterization, function test, detailed information | 443346 |
| ST6 safety technology – STO via terminals | Manual | Technical data, installation, commissioning, diagnostics, detailed information | 442478 |
| SE6 safety technology – Safe drive monitoring via terminals | Manual | Technical data, installation, commissioning, diagnostics | 442796 |
| Connection method | Manual | Selection of encoder, power and hybrid cables, accessories, technical data, connection | 443102 |

EtherCAT

| Title | Documentation | Contents | ID |
|---|---------------|--|--------|
| EtherCAT communication – SD6 | Manual | Installation, electrical installation, data transfer, commissioning, diagnostics, detailed information | 442516 |
| CiA 402 application – SD6 | Manual | Project planning, configuration, parameterization, function test, detailed information | 443077 |
| Drive Based application (DB) – SD6 | Manual | Project configuration, configuration, parameterization, function test, detailed information | 442706 |
| Drive Based Synchronous application (DBS) – SD6 | Manual | Project configuration, configuration, parameterization, function test, detailed information | 443046 |
| Drive Based Center Winder application (DBCW) – SD6 | Manual | Project configuration, configuration, parameterization, function test, detailed information | 443346 |
| ST6 safety technology – STO via terminals | Manual | Technical data, installation, commissioning, diagnostics, detailed information | 442478 |
| SE6 safety technology – Safe drive monitoring via terminals | Manual | Technical data, installation, commissioning, diagnostics | 442796 |
| Connection method | Manual | Selection of encoder, power and hybrid cables, accessories, technical data, connection | 443102 |

CANopen

| Title | Documentation | Contents | ID |
|---|---------------|---|--------|
| CANopen communication – SD6 | Manual | Installation, electrical installation, data transfer, commissioning, detailed information | 442637 |
| CiA 402 application – SD6 | Manual | Project planning, configuration, parameterization, function test, detailed information | 443077 |
| Drive Based application (DB) – SD6 | Manual | Project configuration, configuration, parameterization, function test, detailed information | 442706 |
| Drive Based Synchronous application (DBS) – SD6 | Manual | Project configuration, configuration, parameterization, function test, detailed information | 443046 |
| Drive Based Center Winder application (DBCW) – SD6 | Manual | Project configuration, configuration, parameterization, function test, detailed information | 443346 |
| ST6 safety technology – STO via terminals | Manual | Technical data, installation, commissioning, diagnostics, detailed information | 442478 |
| SE6 safety technology – Safe drive monitoring via terminals | Manual | Technical data, installation, commissioning, diagnostics | 442796 |
| Connection method | Manual | Selection of encoder, power and hybrid cables, accessories, technical data, connection | 443102 |

23.9 Symbols in formulas

| Symbol | Unit | Explanation |
|------------------|------|--|
| $C_{1\max}$ | F | Maximum input capacitance |
| $C_{N,PU}$ | F | Nominal charging capacity of the power unit |
| C_{PU} | F | Self-capacitance of the power unit |
| D_{IA} | % | Reduction in the nominal current depending on the installation altitude |
| D_T | % | Reduction in the nominal current depending on the surrounding temperature |
| $E_{2\max}$ | J | Maximum switch-off energy at the output |
| $f_{1\max}$ | Hz | Maximum input frequency |
| $f_{2\max}$ | Hz | Maximum output frequency |
| f_{2PU} | Hz | Output frequency of the power unit |
| f_N | Hz | Rotating magnetic field frequency at nominal speed |
| $f_{PWM,PU}$ | Hz | Frequency of the pulse width modulation of the power unit |
| I_0 | A | Stall current |
| $I_{1\max}$ | A | Maximum input current |
| $I_{1\max CU}$ | A | Maximum input current of the control unit |
| $I_{1N,PU}$ | A | Nominal input current of the power unit |
| $I_{1N,PU\min}$ | A | Nominal input current of the power unit from the smallest drive controller connected to the grid |
| $I_{2\max}$ | A | Maximum output current |
| $I_{2\max PU}$ | % | Maximum output current of the power unit (in relation to the nominal output current) |
| $I_{2\min}$ | A | Minimum output current |
| $I_{2N,PU}$ | A | Nominal output current of the power unit |
| i^2t | % | Limit load integral |
| $I_{d,ref}$ | A | Magnetization-generating reference current in the d/q coordinate system |
| I_{LINE} | A | Supply current |
| $I_{\max LINE}$ | A | Maximum supply current |
| $I_{\min LINE}$ | A | Required supply current |
| I_N | A | Nominal current |
| $I_{N,MF}$ | A | Nominal current of the choke or motor filter |
| $I_{q,ref}$ | A | Torque/force-generating reference current in the d/q coordinate system |
| K_I | — | Integral coefficient |
| K_P | — | Proportional coefficient |
| λ_{LINE} | — | Power factor of the supply grid |
| M/F_{set} | Nm/N | Set torque or set force |
| M_0 | Nm | Stall torque |
| M_{1Bstat} | Nm | Static braking torque of the brake in the motor adapter (tolerance +40%, -20%) |
| M_{2N} | Nm | Nominal torque on the gear unit output (relative to n_{1N}) |
| M_{2NOT} | Nm | Gear unit emergency off torque on the gear unit output for max. 1000 load changes |
| M_B | Nm | Braking torque |
| M_{Bstat} | Nm | Static braking torque of the motor brake at 100 °C |
| M_k | Nm | Permitted tilting torque on the output |
| M_N | Nm | Nominal torque |

| Symbol | Unit | Explanation |
|-----------------------|-------------------|--|
| $M_{N,B}$ | Nm | Nominal braking torque |
| $MTTF_D$ | Year, a | Average time before dangerous failure |
| n_{1N} | rpm | Nominal speed at the gear unit input |
| n_{2N} | min ⁻¹ | Nominal speed at the gear unit output |
| n_{fed} | – | Number of drive controllers connected to the grid |
| n_N | rpm | Nominal speed: The speed for which the nominal torque M_N is specified |
| p | – | Number of pole pairs |
| P_{effRB} | W | Effective power at the external braking resistor |
| P_{LINE} | W | Power output |
| P_{maxRB} | W | Maximum power at the external braking resistor |
| P_{MOT} | W | Motor rating |
| $P_{totalMOT}$ | W | Total rating of all motors |
| P_V | W | Power loss |
| $P_{V,CU}$ | W | Power loss of the control unit |
| R_{2minRB} | Ω | Minimum resistance of the external braking resistor |
| R_{intRB} | Ω | Resistance of the internal braking resistor |
| ϑ_{amb} | °C | Surrounding temperature |
| $\vartheta_{amb,max}$ | °C | Maximum surrounding temperature |
| t_{1B} | ms | Engaging time (also: linking time) of the brake; time span from when the current is switched off until the nominal holding torque is reached |
| t_{2B} | ms | Release time (also: disengagement time) of the brake; time span from when the current is switched off until the brake is completely released |
| T_M | Year, a | Mission time |
| T_i | ms | Reset time |
| t_{min} | ms | Minimum cycle time of the application |
| τ_{th} | °C | Thermal time constant |
| U_0/U | V | Nominal voltage of electrical conductors, expressed by the ratio of 2 values: <ul style="list-style-type: none"> ▪ U_0: RMS value of the voltage between the line conductor and ground ▪ U: RMS value of the voltage between 2 line conductors |
| U_1 | V | Input voltage |
| U_{1CU} | V | Input voltage of the control unit |
| U_{1max} | V | Maximum input voltage |
| U_{1PU} | V | Input voltage of the power unit |
| U_2 | V | Output voltage |
| U_{2max} | V | Maximum output voltage |
| U_{2PU} | V | Output voltage of the power unit |
| $U_{2PU,ZK}$ | V | Output voltage of the power unit for the DC link connection (typical values: 400 V _{AC} corresponds to 560 V _{DC} , 480 V _{AC} corresponds to 680 V _{DC}) |
| U_{max} | V | Maximum voltage |
| U_{maxMOT} | V | Maximum motor voltage |
| U_{MOT} | V | Motor voltage |
| U_{offCH} | V | Switch-off threshold of the brake chopper |

| Symbol | Unit | Explanation |
|-------------------|-------|-------------------------------|
| U_{onCH} | V | On limit of the brake chopper |
| v_{act} | m/min | Actual velocity |
| v_{set} | m/min | Set velocity |
| x_{act} | m | Actual position |
| x_{set} | m | Set position |

23.10 Abbreviations

| Abbreviation | Meaning |
|----------------|---|
| AC | Alternating Current |
| AEH | Aderendhülse (end sleeve) |
| AI | Analog Input |
| AO | Analog Output |
| AWG | American Wire Gauge |
| BAT | Battery |
| BG | Baugröße (size) |
| CAN | Controller Area Network |
| CiA | CAN in Automation |
| CNC | Computerized Numerical Control |
| DC | Direct Current |
| DHCP | Dynamic Host Configuration Protocol |
| DI | Digital Input |
| DMZ | Demilitarized zone |
| DO | Digital Output |
| EMC | Electromagnetic Compatibility |
| ETG | EtherCAT Technology Group |
| EtherCAT | Ethernet for Control Automation Technology |
| HTTP | Hypertext Transfer Protocol |
| HTL | High Threshold Logic |
| I/O | Input/Output |
| IE | International Efficiency |
| IE class | Energy efficiency class |
| IIoT | Industrial Internet of Things |
| IP | International Protection |
| IP | Internet Protocol |
| MAC | Media Access Control |
| NAT | Nennansprechtemperatur (nominal response temperature) |
| P controller | Proportional controller |
| PE | Protective Earth (grounding conductor) |
| PELV | Protective Extra Low Voltage |
| PI controller | Proportional-Integral controller |
| PID controller | Proportional-Integral-Differential controller |
| PL | Performance Level |
| PLC | Programmable Logic Controller |
| PM | Paramodul |
| pp | Profile position mode |
| PRM | Predictive Maintenance |
| pt | Profile torque mode |
| PTC | Positive Temperature Coefficient |

| Abbreviation | Meaning |
|--------------|---|
| pv | Profile velocity mode |
| RCD | Residual Current protective Device |
| RoHS | Restriction of Hazardous Substances |
| SBC | Safe Brake Control |
| SBT | Safe Brake Test |
| SCCR | Short-circuit current rating |
| SD | Secure Digital (memory card) |
| SDI | Safe Direction |
| S/FTP | Screened/Foiled Twisted Pair |
| SF/FTP | Screened Foiled/Foiled Twisted Pair |
| SF/UTP | Screened Foiled/Unshielded Twisted Pair |
| SIL | Safety Integrity Level |
| SLI | Safely-Limited Increment |
| SLS | Safely-Limited Speed |
| PLC | Programmable Logic Controller |
| SS1 | Safe Stop 1 |
| SS2 | Safe Stop 2 |
| SSI | Serial Synchronous Interface |
| STO | Safe Torque Off |
| TCP | Transmission Control Protocol |
| TTL | Transistor-Transistor Logic |
| UDP | User Data Protocol |
| UL | Underwriters Laboratories |
| W&S | Wake and Shake |

24 Contact

24.1 Consultation, service and address

We would be happy to help you!

We offer a wealth of information and services to go with our products on our website:

<http://www.stoeber.de/en/service>

For additional or personalized information, contact our consultation and support service:

<http://www.stoeber.de/en/support>

If you need our system support:

Phone +49 7231 582-3060

systemsupport@stoeber.de

If you need a replacement device:

Phone +49 7231 582-1128

replace@stoeber.de

Call our 24-hour service hotline:

Tel. +49 7231 582-3000

Our address:

STÖBER Antriebstechnik GmbH + Co. KG

Kieselbronner Strasse 12

75177 Pforzheim, Germany

24.2 Your opinion is important to us

We created this documentation to the best of our knowledge with the goal of helping you build and expand your expertise productively and efficiently with our products.

Your suggestions, opinions, wishes and constructive criticism help us to ensure and further develop the quality of our documentation.

If you want to contact us for a specific reason, we would be happy to receive an e-mail from you at:

documentation@stoeber.de

Thank you for your interest.

Your STÖBER editorial team

24.3 Close to customers around the world

We offer you committed, expert advise and support in over 40 countries worldwide:

STOBER AUSTRIA

www.stoerber.at
+43 7613 7600-0
sales@stoerber.at

STOBER FRANCE

www.stoerber.fr
+33 478 98 91 80
sales@stoerber.fr

STOBER ITALY

www.stoerber.it
+39 02 93909570
sales@stoerber.it

STOBER KOREA

www.stoerber.kr
+82 10 5681 6298
sales@stoerber.kr

STOBER SWITZERLAND

www.stoerber.ch
+41 56 496 96 50
sales@stoerber.ch

STOBER TURKEY

www.stoerber.com
+90 216 510 2290
sales-turkey@stoerber.com

STOBER USA

www.stoerber.com
+1 606 759 5090
sales@stoerber.com

STOBER CHINA

www.stoerber.cn
+86 512 5320 8850
sales@stoerber.cn

STOBER Germany

www.stoerber.de
+49 7231 582-0
sales@stoerber.de

STOBER JAPAN

www.stoerber.co.jp
+81-3-5875-7583
sales@stoerber.co.jp

STOBER SWEDEN

www.stoerber.com
+46 702 394 675
neil.arstad@stoerber.de

STOBER TAIWAN

www.stoerber.tw
+886 4 2358 6089
sales@stoerber.tw

STOBER UK

www.stoerber.co.uk
+44 1543 458 858
sales@stoerber.co.uk

Glossary

100Base-TX

Ethernet network standard based on symmetrical copper cables in which the nodes are connected to a switch via copper cables twisted in pairs (shielded twisted pair, CAT 5e quality level). 100Base-TX is the subsequent progression from 10Base-T and includes those properties with the option of a transfer speed of 100 Mbps (Fast Ethernet).

Band

In the context of a scope, a section in the display of a scope image. The recorded channels can be individually assigned, each to one such section.

Braking resistor

Electrical resistor that is switched on by a brake chopper in order to avoid a hazard to electrical components in the event of significant brake energy by limiting the DC link voltage. Braking energy, which is usually only present for brief periods, is converted into heat in the resistor.

Broadcast domain

Logical grouping of network devices within a local network that reaches all nodes via broadcast.

Channel (scope, multi-axis scope)

The reserved disk space for recording a signal in DriveControlSuite. As part of a scope image, up to 12 channels can be recorded simultaneously.

Channel assignment

Source of the data that is recorded with/by/in a channel. For example, this may involve parameters that are transmitted in a cyclical fieldbus communication channel or a parameter that is recorded in a measurement channel.

Circuit breakers

Current-limiting switches for motor or starter protection. They guarantee safe shut-off in the event of a short-circuit and protect loads and systems from overload.

Control cascade

Complete model of the control structure with the position controller, velocity controller and current controller components.

Current controller

Controller that is part of the control cascade and makes sure the deviation between the set and actual torque/force is small. In addition, it uses the deviation to calculate a value for the set current and transfers this to the power unit. The controller has a part that controls torque/force and a part that controls the magnetic flux.

Cyclic redundancy check (CRC)

Procedure for determining a check value for data in order to detect errors during transmission or saving.

DC link discharge time

Time until the DC link capacitors are discharged enough that the device can be worked on safely.

Defense in depth

In accordance with DIN EN IEC 62443-4-1, an approach to defend the system against any kind of attack using multiple independent methods.

Demilitarized zone (DMZ)

Specially controlled network located between the external network (Internet) and internal network. It represents a kind of buffer zone that separates the networks from each other through strict communication rules and firewalls.

Differential (HTL/TTL)

In the context of signal transmission, a process for being able to transmit signals with the highest possible fault tolerance even with longer transmission paths. In this approach, transmission takes place using a pair of signal conductors instead of just one signal conductor. The actual signal is transmitted on one line and the inverse signal on the other.

Discrete Fourier transform (DFT)

Maps a time-discrete signal onto a periodic, discrete frequency spectrum. A Fourier transform can be carried out on a scope image in DriveControlSuite. The spectrum display of the scope image shows all occurring frequencies. The amplitude of a frequency stands for its frequency of occurrence.

Electronic nameplate

The synchronous servo motors are generally equipped with absolute encoders that provide special memory. This memory includes the electronic nameplate, i.e. all type-relevant master data as well as special mechanical and electronic values of a motor. When you operate a drive controller with a synchronous servo motor and an absolute encoder, the electronic nameplate is read and all motor data transferred if the drive controller is connected online. The drive controller automatically determines the associated limit values and control parameters from this data.

Emergency stop

An energy supply to the machine drives that could cause a dangerous situation must either be immediately interrupted (stop category 0) or controlled so that the dangerous movement is stopped as quickly as possible (stop category 1) without creating other risks.

Firewall

Network security device that monitors incoming and outgoing network traffic and decides whether to allow or block specific traffic based on a set of defined security rules. It is based either on hardware, software or a combination of both.

Frequency analysis

Method for investigating how frequently certain events occur in a certain time span, or how strongly which frequency components are represented in a signal.

i²t model

Computational model for thermal monitoring.

i²t value

Criterion for short-term overload capacity.

Industrial Internet of Things (IIoT)

Subgroup of the Internet of Things (IoT) that focuses specifically on the application of IoT technologies in industrial environments, including manufacturing, logistics and other sectors. The focus is on improving industrial processes, efficiency, automation and real-time data collection. It is about optimizing operations, reducing downtime and maximizing productivity.

IPv4 limited broadcast

Type of broadcast in a network with IPv4 (Internet Protocol version 4). The IP address 255.255.255.255 is entered as the destination. The content of the broadcast is not forwarded by a router, which limits it to the local network.

I-share

Integral share of the controller that acts on the manipulated variable through the temporal integration of the control deviation with the weighting caused by the reset time: the longer the control difference is present, the stronger the response is.

KTY temperature sensor

Temperature sensor with a resistance characteristic that follows the temperature in a nearly linear fashion. As a result, it allows for analog measurements of the motor temperatures. However, measurements are each limited to one phase of the motor winding, which is why motor protection is significantly limited compared to PTC triplets.

Life performance indicator

Value for the calculated life performance of the geared motor.

Load matrix

Recording of the frequency distribution of speeds and torques that occurred at the output of the geared motor.

Miniature circuit breakers

Special switch that protects electrical systems from overload and short-circuits. It is specifically used for the fuse protection of individual cores or cables. The switch has different triggering characteristics (A, B, C, D) and, thus, serves all application areas in industrial, functional and residential construction.

Multi-axis scope

Analysis tool of DriveControlSuite with graphical output. It can be used to create synchronized scope images of multiple drive controllers or axes in order to measure and depict the progress of parameter values, signal names or physical addresses over time.

MV number

The number of the material variant ordered and delivered as stored in the enterprise resource planning system, i.e. the device-specific combination of all hardware and software components.

Output choke

Choke type that delays the current increase at the input of the drive controller or supply module in order to reduce the harmonics in the supply grid and reduces the load of the power feed-in of the devices.

P controller

Controller type in which the manipulated variable is always proportional to the recorded control difference. As a result of this, the controller responds to the control deviation without a delay and only creates a manipulated variable if a deviation is present. It is a fast and stable controller with a permanent control deviation that can be used for non-critical controls where permanent control deviation can be accepted when faults occur, e.g. pressure, flow, fill level and temperature control.

Performance Level (PL)

In accordance with DIN EN ISO 13849-1: Measure for the reliability of a safety function or a component. The Performance Level is measured on a scale of a – e (lowest – highest PL). The higher the PL, the safer and more reliable the function in question is. The PL can be assigned to a specific SIL. A reversed inference from a SIL to a PL is not possible.

PI controller

Controller type that results from a parallel connection of a P and an I-controller. With the right layout, it combines the advantages of both types (stable and fast, no permanent control deviation) and compensates for the disadvantages simultaneously.

PID controller

Universal controller type with a P-, I- and D-share. These three adjustment parameters make the controller flexible and ensure exact and highly dynamic control. However, by implication, it also necessitates a wide variety of variants. It is that much more important to ensure careful construction that is well-coordinated to the system. The application areas for this controller type are control circuits with systems of the second order and higher, which must be stabilized quickly and do not allow for any permanent control deviation.

Plausibility encoder

Encoder used for checking other encoders in the context of safety technology but which cannot be used for velocity or position control.

Plug connectors

Component for disconnecting and connecting cables. The connecting parts are appropriately aligned by the positive locking of the plug pieces, feature detachable, positive attachment by spring force (pin) and are often also secured against unintended disconnection by a screw connection.

Position controller

Controller that is part of the control cascade and makes sure the deviation between the set and actual position is small. To do so, it calculates a set velocity from the deviation and passes it to the velocity controller.

Power choke

Choke type that delays the increase in current at the input of the drive controller or supply module in order to reduce harmonics in the supply grid.

Predictive Maintenance (PRM)

Proactive maintenance process based on permanent monitoring and evaluation of machine and process data. The aim here is to predict future maintenance requirements, thereby avoiding faults and making maintenance processes more efficient.

Pre-trigger

Percentage portion of the recording time that takes place before the trigger and that defines the starting time of the scope image.

Pre-trigger time

Portion of the recording time that takes place before the trigger and that defines the starting time of the scope image.

PROFINET

Open Ethernet standard of PROFIBUS Nutzerorganisation e. V. (PNO) for automation.

PROFINET RT

Transmission method for time-critical process data in a PROFINET IO system.

P-share

Proportional share of the controller gain: the greater this share is, the stronger the influence on the manipulated variable.

Pt1000 temperature sensor

Temperature sensor made of platinum with a resistance characteristic that follows the temperature in a linear fashion. As a result, it allows for analog measurements of the motor temperatures. However, measurements are each limited to one phase of the motor winding, which is why motor protection is significantly limited compared to PTC triplets.

PTC thermistor

Thermistor whose resistance significantly changes with the temperature. When a PTC reaches its defined nominal response temperature, the resistance increases dramatically, by two or more times the original resistance, to several kOhms. Since PTC triplets are used, each thermistor monitors one phase of the motor winding. For 3 thermistors, this means all 3 phases are monitored, achieving effective motor protection.

Quantization

Conversion of analog signals into numbers and measurable variables. For this purpose, the analog signals are scanned in regular intervals at the sampling rate and their voltage rating is converted at each of these scanning points to a digital value. The analog signal can only be expressed in a finite number of digital values.

Recording time

Recording of an image, occurrence, acoustic event or other event on a corresponding medium. In the context of a scope, the display of the calculated duration of scope image recording. The memory size, sampling time and channels used form the basis of the calculation.

Reforming

Protective measure for drive controllers. In case of a longer storage time, the oxide layer of the capacitors reacts with the electrolytes. This influences the electrical strength and capacitance. The process to be performed before commissioning re-establishes the dielectric in the capacitors.

Reverse documentation

Refers to a read-only file read out by a drive controller that includes the fault memory in addition to the configuration of a drive controller. This file is a snapshot of the time that the connection between the PC and drive controller was interrupted. The information it contains is used for diagnostics as well as for processing service requests.

Safe Brake Control (SBC)

In accordance with DIN EN 61800-5-2: A safety function that provides safe output signals for controlling external brakes.

Safe Brake Test (SBT)

Safety function that tests the proper functioning of a fail-safe brake.

Safe Direction (SDI)

In accordance with DIN EN 61800-5-2: A safety function that prevents the motor shaft from moving in the unintended direction.

Safe Stop 1 (SS1)

In accordance with DIN EN 61800-5-2: Procedure for stopping a PDS(SR). With the SS1 safety function, the PDS(SR) performs one of the following functions: a) Triggering and controlling the motor delay variable within defined limits and triggering the STO function if the motor speed falls below a specified limit value (SS1-d), or b) triggering and monitoring the motor delay variable within defined limits and triggering the STO function if the motor speed falls below a specified limit value (SS1-r), or c) triggering the motor delay and triggering the STO function after an application-specific delay (SS1-t). In this case, SS1(-t) corresponds to the time-controlled stop in accordance with IEC 60204-1, stop category 1(-t).

Safe Stop 2 (SS2)

In accordance with DIN EN 61800-5-2: Procedure for stopping a PDS(SR). For the safety function SS2, the PDS(SR) performs one of the following functions: a) Initiation and control of the size of the motor delay within defined limits and triggering the SOS function when the motor speed drops below a defined limit value, or b) Initiation and monitoring of the size of the motor delay within defined limits and initiation of the SOS function when the motor speed drops below a limit value, or c) initiation of the motor delay and initiation of the SOS function after an application-specific time delay. This safety function corresponds to a controlled stop according to IEC 60204-1, stop category 2.

Safe Torque Off (STO)

In accordance with DIN EN 61800-5-2: Procedure for stopping a PDS(SR). The STO safety function prevents the motor from being supplied with any energy that could cause rotation (or motion in a linear motor). The PDS(SR) does not supply the motor with any energy that could generate torque (or force in a linear motor). STO is the most fundamental drive-integrated safety function. It corresponds to an uncontrolled stop in accordance with DIN EN 60204-1, stop category 0.

Safely-Limited Increment (SLI)

In accordance with DIN EN 61800-5-2: A safety function that prevents the motor shaft from exceeding a position increment limit.

Safely-Limited Speed (SLS)

In accordance with DIN EN 61800-5-2: A safety function that prevents the motor from exceeding the defined velocity limit.

Safety Integrity Level (SIL)

In accordance with DIN EN 61800-5-2: Probability of a safety function failure. SIL is divided into levels 1 – 4 (lowest – highest level). SIL precisely assesses systems or subsystems based on the reliability of their safety functions. The higher the SIL, the safer and more reliable the function in question is.

Sampling time

In signal processing, the time after which an analog signal (also called a continuous-time signal) is scanned again, i.e. measured and converted into a discrete-time signal.

Scope

Analysis tool of DriveControlSuite with graphical output. It can be used to create scope images of a drive controller in order to measure and depict the progress of parameter values, signal names or physical addresses over time. The term stems from traditional scope-type measuring instruments.

Scope memory

Disk space in the drive controller that records the data of a scope image.

Security

Term for the protection and safety of components and systems with regard to confidentiality, integrity and availability.

Self-discharge

Passive running process that causes the capacitors to discharge even when no electrical load is connected.

Serial number

Consecutive number stored for a product in the enterprise resource planning system and used for individual identification of the product and for determining the associated customer information.

Short-circuit current rating (SCCR)

Characteristic of electrotechnical components or modules. It is defined as the maximum short-circuit current that a component or system must safely withstand.

Single-ended (HTL/TTL)

In the context of signal transmission, electrical signal transmission takes place using a voltage that changes in relation to a constant reference potential.

System parameter

Parameter that is defined by the firmware. Examples include parameters for motor control, for encoders or parameters of the control cascade.

Template

In the context of the DriveControlSuite commissioning software, a template for graphical programming. This template can be selected in the configuration dialog for device control, communication (fieldbus) or application in a certain version.

Trigger

Switch or software function that generates a pulse or a switching operation during a triggering event.

Trigger condition

Triggering event that generates a pulse or switching operation.

Velocity controller

Controller that is part of the control cascade and makes sure the deviation between the set and actual velocity is small. In addition, it uses the deviation to calculate a value for the set torque/force and transfers this to the current controller.

Window function

Auxiliary function for minimizing the leakage effect for the Fourier transform.

List of figures

| | | |
|---------|---|-----|
| Fig. 1 | Defense in depth concept | 25 |
| Fig. 2 | System overview | 29 |
| Fig. 3 | SD6A06TEX nameplate..... | 30 |
| Fig. 4 | Sticker with MV and serial number | 32 |
| Fig. 5 | SD6 dimensional drawing, sizes 0 to 2 | 58 |
| Fig. 6 | SD6 dimensional drawing, size 3 | 59 |
| Fig. 7 | DL6A dimensional drawing..... | 63 |
| Fig. 8 | FZMU (1), FZZMU (2) dimensional drawing..... | 88 |
| Fig. 9 | GVADU, GBADU dimensional drawing | 90 |
| Fig. 10 | FGFKU dimensional drawing | 92 |
| Fig. 11 | Power choke dimensional drawing | 95 |
| Fig. 12 | TEP dimensional drawing | 97 |
| Fig. 13 | LA6 dimensional drawing [mm] | 98 |
| Fig. 14 | Grounding concept in mixed operation of SI6 and SC6 with powered SD6 drive controller | 103 |
| Fig. 15 | Grounding concept in mixed operation of SI6 and powered SD6 drive controller | 104 |
| Fig. 16 | Derating the nominal current based on surrounding temperature | 106 |
| Fig. 17 | Derating the nominal current depending on installation elevation | 106 |
| Fig. 18 | Derating the voltage depending on installation elevation | 106 |
| Fig. 19 | Derating the nominal current depending on the clock frequency, TEP3720-0ES41 | 107 |
| Fig. 20 | Derating the nominal current depending on the clock frequency, TEP3820-0CS41 | 107 |
| Fig. 21 | Derating the nominal current depending on the clock frequency, TEP4020-ORS41 | 108 |
| Fig. 22 | Derating the nominal current based on surrounding temperature | 108 |
| Fig. 23 | Derating the nominal current depending on installation elevation | 108 |
| Fig. 24 | Derating the voltage depending on installation elevation | 109 |
| Fig. 25 | Voltage levels dependent on storage time | 111 |
| Fig. 26 | Minimum clearances | 115 |
| Fig. 27 | SD6 and DL6A drilling diagram | 117 |
| Fig. 28 | FZMU, FZZMU drilling diagram..... | 119 |
| Fig. 29 | GVADU, GBADU drilling diagram..... | 119 |
| Fig. 30 | FGFKU drilling diagram..... | 120 |
| Fig. 31 | Power choke drilling diagram..... | 120 |
| Fig. 32 | TEP drilling diagram..... | 121 |
| Fig. 33 | Connection of the grounding conductor | 150 |
| Fig. 34 | Connection overview of sizes 0 and 1 with ST6 safety module..... | 152 |
| Fig. 35 | Connection overview of size 2 with ST6 safety module..... | 153 |

| | | |
|---------|---|-----|
| Fig. 36 | Connection overview of size 3 with ST6 safety module, top of device | 154 |
| Fig. 37 | Connection overview of size 3 with ST6 safety module, bottom of device..... | 155 |
| Fig. 38 | Connection overview of sizes 0 and 1 with SE6 safety module..... | 156 |
| Fig. 39 | Connection overview of size 2 with SE6 safety module | 157 |
| Fig. 40 | Connection overview of size 3 with SE6 safety module, top of device | 158 |
| Fig. 41 | Connection overview of size 3 with SE6 safety module, bottom of device..... | 160 |
| Fig. 42 | FZMU connection overview | 185 |
| Fig. 43 | FZZMU connection overview..... | 185 |
| Fig. 44 | FGFKU connection overview | 187 |
| Fig. 45 | FGFKU connection overview | 187 |
| Fig. 46 | TEP output choke connection example..... | 189 |
| Fig. 47 | Shielded connection of the power cable..... | 190 |
| Fig. 48 | Connection overview for EC6 communication module..... | 190 |
| Fig. 49 | Connection overview for CA6 communication module | 192 |
| Fig. 50 | Connection overview for PN6 communication module | 193 |
| Fig. 51 | Connection overview for the XI6 terminal module | 195 |
| Fig. 52 | X100: Potentiometer connection example | 196 |
| Fig. 53 | X100: Sensor connection example 1 | 197 |
| Fig. 54 | X100: Sensor connection example 2 | 197 |
| Fig. 55 | X100: Actuator connection example | 197 |
| Fig. 56 | Connection overview for the RI6 terminal module | 205 |
| Fig. 57 | X100: Potentiometer connection example | 206 |
| Fig. 58 | X100: Sensor connection example 1 | 206 |
| Fig. 59 | X100: Sensor connection example 2 | 206 |
| Fig. 60 | X100: Actuator connection example | 207 |
| Fig. 61 | Connection overview for the IO6 terminal module | 218 |
| Fig. 62 | X100: Potentiometer connection example | 219 |
| Fig. 63 | X100: Sensor connection example 1 | 219 |
| Fig. 64 | X100: Sensor connection example 2 | 219 |
| Fig. 65 | X100: Actuator connection example..... | 220 |
| Fig. 66 | Connection overview for the LA6 adapter box | 223 |
| Fig. 67 | Operating unit of the SD6 drive controller | 254 |
| Fig. 68 | Menu structure and navigation using the SD6 operating unit | 255 |
| Fig. 69 | DS6: Program interface | 257 |
| Fig. 70 | Schematic test sequence for wiring and function test..... | 278 |
| Fig. 71 | Structure of the control cascade | 283 |

| | | |
|----------|---|-----|
| Fig. 72 | Schematic sequence of optimization based on relevant parameters | 287 |
| Fig. 73 | Velocity controller – Filters for the actual velocity | 288 |
| Fig. 74 | Velocity controller – Proportional coefficient | 290 |
| Fig. 75 | Scope – Proportional coefficient of the velocity controller (C31), default value | 291 |
| Fig. 76 | Scope – Proportional coefficient of the velocity controller (C31), continuous oscillations | 291 |
| Fig. 77 | Scope – Proportional coefficient of the velocity controller (C31), optimized value | 292 |
| Fig. 78 | Scope – Proportional coefficient of the velocity controller (C31), overshooting | 293 |
| Fig. 79 | Velocity controller – Integral coefficient | 294 |
| Fig. 80 | Scope – Integral coefficient of the velocity controller (C32) | 295 |
| Fig. 81 | Position controller – Proportional coefficient | 296 |
| Fig. 82 | Position controller – Feedforward control of the velocity controller | 297 |
| Fig. 83 | Scope – Motor reaches saturation without tracking (B59) | 298 |
| Fig. 84 | Scope – Motor reaches saturation with tracking (B59) | 299 |
| Fig. 85 | Brake control for control mode B20 = 0: ASM - V/f-control or 1: ASM - V/f-slip compensated | 311 |
| Fig. 86 | Brake control for control mode B20 = 2: ASM - vector control | 312 |
| Fig. 87 | Brake control for control mode B20 = 3: ASM - sensorless vector control | 313 |
| Fig. 88 | Brake control for control mode B20 = 48: SSM-vector control incremental encoder, 64: SSM - vector control or 70: SLM - vector control | 314 |
| Fig. 89 | Minimum time between 2 release processes for the brake | 318 |
| Fig. 90 | State machine of brake management | 319 |
| Fig. 91 | Scaling of the recorded speed classes | 337 |
| Fig. 92 | Scaling of the recorded torque classes | 338 |
| Fig. 93 | Signaling area | 346 |
| Fig. 94 | Predictive Maintenance: Options for readout | 348 |
| Fig. 95 | Positions of the diagnostic LEDs on the front and top of the drive controller | 350 |
| Fig. 96 | LEDs for the state of the drive controller on the front of the SD6 | 351 |
| Fig. 97 | Appearance of a fault on the display | 353 |
| Fig. 98 | LEDs for the state of the service network connection on the top of the SD6 | 357 |
| Fig. 99 | LEDs for the EtherCAT state | 358 |
| Fig. 100 | LEDs for the PROFINET state | 360 |
| Fig. 101 | LEDs for the CAN status | 361 |
| Fig. 102 | LEDs for the IGB state on the top of the device | 362 |
| Fig. 103 | LEDs for the state of the EtherCAT network connection | 363 |
| Fig. 104 | LEDs for the state of the PROFINET network connection | 364 |
| Fig. 105 | Scope and multi-axis scope: Program interface | 426 |
| Fig. 106 | Scope and multi-axis scope: Image editor | 434 |

| | | |
|----------|--|-----|
| Fig. 107 | Multi-axis scope: Network structure..... | 442 |
| Fig. 108 | Wiring example of stand-alone operation with direct brake control..... | 467 |
| Fig. 109 | Wiring example of stand-alone operation with indirect brake control..... | 468 |
| Fig. 110 | Wiring example with Quick DC-Link | 469 |
| Fig. 111 | IGB and IGB motion bus network..... | 483 |
| Fig. 112 | DriveControlSuite: Establishing a connection | 484 |
| Fig. 113 | Script mode: Program interface | 493 |
| Fig. 114 | Test setup of the application examples | 512 |

List of tables

| | | |
|---------|---|----|
| Tab. 1 | File number-certified products | 13 |
| Tab. 2 | Short-circuit current rating (SCCR) | 19 |
| Tab. 3 | Short-circuit current rating (SCCR) | 26 |
| Tab. 4 | Overload capacity of the drive controller | 26 |
| Tab. 5 | Tightening torques | 28 |
| Tab. 6 | Meaning of the specifications on the nameplate..... | 31 |
| Tab. 7 | Example code for type designation | 32 |
| Tab. 8 | Meaning of the example code..... | 32 |
| Tab. 9 | Meaning of the specifications on the sticker | 32 |
| Tab. 10 | Available SD6 types and sizes..... | 33 |
| Tab. 11 | Device features..... | 46 |
| Tab. 12 | Transport and storage conditions | 46 |
| Tab. 13 | Operating conditions..... | 47 |
| Tab. 14 | Discharge times of the DC link circuit..... | 47 |
| Tab. 15 | Control unit electrical data..... | 47 |
| Tab. 16 | SD6 electrical data, size 0..... | 48 |
| Tab. 17 | SD6 electrical data, size 0, for 4 kHz clock frequency | 48 |
| Tab. 18 | SD6 electrical data, size 0, for 8 kHz clock frequency | 48 |
| Tab. 19 | Brake chopper electrical data, size 0..... | 48 |
| Tab. 20 | SD6 electrical data, size 1..... | 49 |
| Tab. 21 | SD6 electrical data, size 1, for 4 kHz clock frequency | 49 |
| Tab. 22 | SD6 electrical data, size 1, for 8 kHz clock frequency | 49 |
| Tab. 23 | Brake chopper electrical data, size 1..... | 49 |
| Tab. 24 | SD6 electrical data, size 2..... | 50 |
| Tab. 25 | SD6 electrical data, size 2, for 4 kHz clock frequency | 50 |
| Tab. 26 | SD6 electrical data, size 2, for 8 kHz clock frequency | 50 |
| Tab. 27 | Brake chopper electrical data, size 2..... | 50 |
| Tab. 28 | SD6 electrical data, size 3..... | 51 |
| Tab. 29 | SD6 electrical data, size 3, for 4 kHz clock frequency | 51 |
| Tab. 30 | SD6 electrical data, size 3, for 8 kHz clock frequency | 51 |
| Tab. 31 | Brake chopper electrical data, size 3..... | 51 |
| Tab. 32 | X1 electrical data, enable and relay | 52 |
| Tab. 33 | Power loss data of the SD6 drive controller in accordance with EN 61800-9-2..... | 53 |
| Tab. 34 | Absolute losses of the accessories | 55 |
| Tab. 35 | Nominal output current I _{2N} ,PU dependent on the clock frequency | 56 |

| | | |
|---------|---|----|
| Tab. 36 | SD6 dimensions, sizes 0 to 2 [mm]..... | 58 |
| Tab. 37 | SD6 dimensions, size 3 [mm]..... | 59 |
| Tab. 38 | SD6 weight [g] | 60 |
| Tab. 39 | Weight of the accessory part [g] | 60 |
| Tab. 40 | Cycle times | 60 |
| Tab. 41 | Device features..... | 61 |
| Tab. 42 | Transport and storage conditions | 61 |
| Tab. 43 | Operating conditions..... | 61 |
| Tab. 44 | Assignment of DL6A to SD6..... | 62 |
| Tab. 45 | DL6A dimensions [mm] | 63 |
| Tab. 46 | DL6A weight [g] | 64 |
| Tab. 47 | X12 electrical data – Digital inputs..... | 64 |
| Tab. 48 | X14 electrical data – Digital inputs (SE6 option) | 65 |
| Tab. 49 | X15 electrical data – Digital outputs (SE6 option) | 65 |
| Tab. 50 | Motor types and control modes | 66 |
| Tab. 51 | Encoder connections..... | 67 |
| Tab. 52 | Signal level encoder inputs, single-ended | 68 |
| Tab. 53 | Signal levels of encoder inputs, differential | 68 |
| Tab. 54 | Signal level of encoder outputs, single-ended | 68 |
| Tab. 55 | Signal levels of encoder outputs, differential..... | 68 |
| Tab. 56 | X4 technical data – EnDat 2.1 digital signals | 69 |
| Tab. 57 | X4 technical data – EnDat 2.2 digital signals | 69 |
| Tab. 58 | X4 technical data – SSI signals with free setting | 70 |
| Tab. 59 | X4 technical data – SSI signals with fixed setting | 70 |
| Tab. 60 | X4 technical data – Incremental signals | 71 |
| Tab. 61 | Encoder supply X4..... | 71 |
| Tab. 62 | X50 technical data – SSI..... | 72 |
| Tab. 63 | X50 technical data – Incremental encoder..... | 72 |
| Tab. 64 | Maximum core/cable length [m]..... | 73 |
| Tab. 65 | X101 electrical data on RI6 terminal module – Incremental, pulse/direction or Hall sensor signals..... | 73 |
| Tab. 66 | X101 electrical data on XI6 terminal module – Incremental, pulse/direction or Hall sensor signals..... | 74 |
| Tab. 67 | X101 electrical data on IO6 terminal module – Incremental, pulse/direction or Hall sensor signals | 74 |
| Tab. 68 | X120 technical data – SSI signals with free setting (evaluation and simulation) | 75 |
| Tab. 69 | X120 technical data – SSI signals with fixed setting (evaluation and simulation) | 75 |
| Tab. 70 | X120 technical data – Differential TTL incremental, pulse/direction or hall sensor signals..... | 76 |
| Tab. 71 | X120 encoder supply | 76 |

| | | |
|----------|--|----|
| Tab. 72 | X140 technical data – EnDat 2.1 digital signals | 76 |
| Tab. 73 | X140 technical data – EnDat 2.2 digital encoder signals | 77 |
| Tab. 74 | X140 technical data – Resolver signals..... | 77 |
| Tab. 75 | X140 technical data – EnDat 2.1 sin/cos, sin/cos signals | 77 |
| Tab. 76 | Encoder supply X140..... | 78 |
| Tab. 77 | X300 technical data – TTL differential incremental signals | 78 |
| Tab. 78 | X301 technical data – Differential TTL hall sensor signals..... | 78 |
| Tab. 79 | X302 technical data – Single-ended HTL Hall sensor signals | 79 |
| Tab. 80 | X303 electrical data – Adapter box | 79 |
| Tab. 81 | Maximum core/cable length [m]..... | 79 |
| Tab. 82 | X304, 305, X306 technical data – Differential TTL incremental signals with single-ended TTL hall sensor signals..... | 80 |
| Tab. 83 | Technical data – Inputs and outputs | 81 |
| Tab. 84 | X100 electrical data – Analog inputs and outputs..... | 81 |
| Tab. 85 | X101 electrical data – Digital inputs and outputs..... | 81 |
| Tab. 86 | X102 electrical data – Analog inputs | 82 |
| Tab. 87 | X103A electrical data – Digital outputs | 82 |
| Tab. 88 | X103B electrical data – Digital inputs and outputs | 82 |
| Tab. 89 | X103C electrical data – Digital inputs..... | 82 |
| Tab. 90 | Technical data – Inputs and outputs | 83 |
| Tab. 91 | X100 electrical data – Analog inputs and outputs..... | 83 |
| Tab. 92 | X101 electrical data – Digital inputs and outputs..... | 83 |
| Tab. 93 | Technical data – Inputs and outputs | 84 |
| Tab. 94 | X100 electrical data – Analog inputs and outputs..... | 84 |
| Tab. 95 | X101 electrical data – Digital inputs and outputs..... | 85 |
| Tab. 96 | Weight of the accessory part [g] | 85 |
| Tab. 97 | X5 electrical data – Brake connection | 86 |
| Tab. 98 | X8 electrical data – Brake connection | 86 |
| Tab. 99 | Triggering limit of temperature sensor | 86 |
| Tab. 100 | Assignment of FZMU, FZZMU braking resistor – SD6 drive controller | 87 |
| Tab. 101 | FZMU, FZZMU technical data | 88 |
| Tab. 102 | FZMU, FZZMU dimensions [mm]..... | 88 |
| Tab. 103 | Assignment of GVADU, GBADU braking resistor – SD6 drive controller | 89 |
| Tab. 104 | GVADU, GBADU technical data | 89 |
| Tab. 105 | GVADU, GBADU dimensions [mm]..... | 90 |
| Tab. 106 | Assignment of FGFKU braking resistor – SD6 drive controller | 91 |

| | | |
|----------|---|-----|
| Tab. 107 | FGFKU technical data | 91 |
| Tab. 108 | FGFKU dimensions [mm] | 92 |
| Tab. 109 | Assignment of RB 5000 braking resistor – SD6 drive controller | 92 |
| Tab. 110 | RB 5000 technical data | 93 |
| Tab. 111 | RB 5000 dimensions [mm] | 93 |
| Tab. 112 | TEP technical data | 94 |
| Tab. 113 | TEP dimensions and weight..... | 95 |
| Tab. 114 | TEP technical data | 96 |
| Tab. 115 | TEP dimensions and weight..... | 97 |
| Tab. 116 | LA6 dimensions [mm]..... | 98 |
| Tab. 117 | LA6 weight [g]..... | 98 |
| Tab. 118 | Minimum clearances [mm] | 115 |
| Tab. 119 | Dimensions [mm] | 116 |
| Tab. 120 | Drilling dimensions for SD6 drive controller [mm]..... | 118 |
| Tab. 121 | Drilling dimensions for DL6A Quick DC-Link or RB 5000 rear section braking resistor [mm]..... | 118 |
| Tab. 122 | FZMU, FZZMU drilling dimensions [mm]..... | 119 |
| Tab. 123 | GVADU, GBADU drilling dimensions [mm] | 119 |
| Tab. 124 | FGFKU drilling dimensions [mm] | 120 |
| Tab. 125 | TEP drilling dimensions | 121 |
| Tab. 126 | Determination of the correct length of the copper rails [mm] | 122 |
| Tab. 127 | Short-circuit current rating (SCCR) | 144 |
| Tab. 128 | Line fuses in stand-alone operation | 144 |
| Tab. 129 | Line fuses for DC link connection | 145 |
| Tab. 130 | UL-compliant line fuses | 147 |
| Tab. 131 | Individual components of Type E motor starters | 147 |
| Tab. 132 | Minimum cross-section of the grounding conductor..... | 149 |
| Tab. 133 | X1 connection description..... | 161 |
| Tab. 134 | Maximum core/cable length [m]..... | 161 |
| Tab. 135 | X2 connection description..... | 162 |
| Tab. 136 | Maximum cable length [m] | 162 |
| Tab. 137 | X3A and X3B connection description | 163 |
| Tab. 138 | X4 connection description for EnDat 2.1/2.2 digital encoders and SSI encoders | 164 |
| Tab. 139 | X4 connection description for differential HTL incremental encoders | 165 |
| Tab. 140 | X4 connection description for differential TTL incremental encoders..... | 165 |
| Tab. 141 | Maximum cable length [m] | 166 |
| Tab. 142 | X5 connection description, brake..... | 166 |

| | | |
|----------|--|-----|
| Tab. 143 | Maximum cable length [m] | 166 |
| Tab. 144 | X6 electrical data – Brake supply | 167 |
| Tab. 145 | X6 connection description..... | 167 |
| Tab. 146 | Maximum core/cable length [m]..... | 167 |
| Tab. 147 | X7 electrical data – Brake supply | 168 |
| Tab. 148 | X7 connection description..... | 168 |
| Tab. 149 | Maximum core/cable length [m]..... | 168 |
| Tab. 150 | X8 connection description..... | 169 |
| Tab. 151 | Maximum cable length [m] | 169 |
| Tab. 152 | X10 connection description, size 0, 1-phase line connection..... | 170 |
| Tab. 153 | X10 connection description, size 0, 3-phase line connection..... | 170 |
| Tab. 154 | X10 connection description, size 1, 3-phase line connection..... | 170 |
| Tab. 155 | X10 connection description, size 2, 3-phase line connection..... | 171 |
| Tab. 156 | X10 connection description, size 3, 3-phase line connection..... | 171 |
| Tab. 157 | Control unit electrical data..... | 172 |
| Tab. 158 | X11 connection description..... | 172 |
| Tab. 159 | Maximum core/cable length [m]..... | 172 |
| Tab. 160 | X12 connection description..... | 173 |
| Tab. 161 | Maximum core/cable length [m]..... | 173 |
| Tab. 162 | X14 connection description..... | 174 |
| Tab. 163 | Maximum core/cable length [m]..... | 174 |
| Tab. 164 | X15 connection description..... | 175 |
| Tab. 165 | Maximum core/cable length [m]..... | 175 |
| Tab. 166 | X20 connection description, size 0..... | 176 |
| Tab. 167 | X20 connection description, size 1..... | 176 |
| Tab. 168 | X20 connection description, size 2..... | 176 |
| Tab. 169 | X20 connection description, size 3..... | 177 |
| Tab. 170 | Maximum core/cable length of the braking resistor and DC link connection [m] | 177 |
| Tab. 171 | Maximum cable length of the power cable [m] | 177 |
| Tab. 172 | X30 connection description, size 0..... | 178 |
| Tab. 173 | X30 connection description, size 1..... | 178 |
| Tab. 174 | X30 connection description, size 2..... | 178 |
| Tab. 175 | Maximum core/cable length [m]..... | 178 |
| Tab. 176 | X50 connection description for SSI encoders..... | 179 |
| Tab. 177 | X50 connection description for differential TTL incremental encoders | 179 |
| Tab. 178 | Cable length [m]..... | 180 |

| | | |
|----------|--|-----|
| Tab. 179 | X50 connector description for differential TTL incremental encoders..... | 180 |
| Tab. 180 | Connection description of FZMU, FZZMU to sizes 0 to 2 | 185 |
| Tab. 181 | Connection description of FZMU, FZZMU to size 3 | 185 |
| Tab. 182 | Connection description of GVADU, GBADU to sizes 0 to 2 | 186 |
| Tab. 183 | Connection description of GBADU to size 3 | 186 |
| Tab. 184 | Connection description of FGFKU to sizes 0 to 2 | 187 |
| Tab. 185 | Connection description of FGFKU to size 3 | 187 |
| Tab. 186 | Connection description of RB 5000 to sizes 0 to 2 | 187 |
| Tab. 187 | TEP power choke connection description | 188 |
| Tab. 188 | TEP output choke connection description | 189 |
| Tab. 189 | X200 and X201 connection description..... | 191 |
| Tab. 190 | X200 connection description..... | 192 |
| Tab. 191 | X200 and X201 connection description..... | 193 |
| Tab. 192 | X100 connection description..... | 196 |
| Tab. 193 | Maximum core/cable length [m]..... | 196 |
| Tab. 194 | X101 connection description for digital signals..... | 198 |
| Tab. 195 | Maximum core/cable length [m]..... | 198 |
| Tab. 196 | X101 connection description for single-ended HTL incremental signals..... | 199 |
| Tab. 197 | X101 connection description for single-ended HTL pulse/direction signals | 199 |
| Tab. 198 | X101 connection description for single-ended HTL Hall sensor signals | 200 |
| Tab. 199 | Maximum core/cable length [m]..... | 200 |
| Tab. 200 | X102 connection description..... | 200 |
| Tab. 201 | Maximum core/cable length [m]..... | 200 |
| Tab. 202 | X103A connection description | 201 |
| Tab. 203 | Maximum core/cable length [m]..... | 201 |
| Tab. 204 | X103B connection description | 201 |
| Tab. 205 | Maximum core/cable length [m]..... | 201 |
| Tab. 206 | X103C connection description..... | 202 |
| Tab. 207 | Maximum core/cable length [m]..... | 202 |
| Tab. 208 | X120 connection description for SSI encoders..... | 203 |
| Tab. 209 | X120 connection description for differential TTL incremental encoders..... | 203 |
| Tab. 210 | X120 connection description for differential TTL hall sensors | 204 |
| Tab. 211 | X120 connection description for differential TTL pulse/direction signals..... | 204 |
| Tab. 212 | Cable length [m]..... | 204 |
| Tab. 213 | X100 connection description..... | 205 |
| Tab. 214 | Maximum core/cable length [m]..... | 205 |

| | | |
|----------|---|-----|
| Tab. 215 | X101 connection description for digital signals..... | 207 |
| Tab. 216 | Maximum core/cable length [m]..... | 207 |
| Tab. 217 | X101 connection description for single-ended HTL and single-ended TTL incremental signals..... | 208 |
| Tab. 218 | X101 connection description for single-ended HTL and single-ended TTL pulse/direction signals | 208 |
| Tab. 219 | X101 connection description for single-ended HTL Hall sensor signals | 209 |
| Tab. 220 | Maximum core/cable length [m]..... | 209 |
| Tab. 221 | X120 connection description for SSI encoders | 209 |
| Tab. 222 | X120 connection description for differential TTL incremental encoders | 210 |
| Tab. 223 | X120 connection description for differential TTL hall sensors | 210 |
| Tab. 224 | X120 connection description for differential TTL pulse/direction signals..... | 210 |
| Tab. 225 | Cable length [m]..... | 211 |
| Tab. 226 | X140 connection description for EnDat 2.1/2.2 digital encoders..... | 211 |
| Tab. 227 | X140 connection description for resolvers..... | 212 |
| Tab. 228 | X140 connection description for EnDat 2.1 sin/cos encoders..... | 213 |
| Tab. 229 | X140 connection description for sin/cos encoders | 214 |
| Tab. 230 | Maximum cable length [m] | 214 |
| Tab. 231 | AP6A00 connection description for resolver (9-pin to 15-pin) | 215 |
| Tab. 232 | AP6A01 connection description for the resolver and motor temperature sensor (9-pin to 15-pin) | 216 |
| Tab. 233 | AP6A02 connection description for EnDat 2.1 sin/cos encoder and motor temperature sensor (15-pin to 15-pin) | 217 |
| Tab. 234 | X100 connection description..... | 218 |
| Tab. 235 | Maximum core/cable length [m]..... | 218 |
| Tab. 236 | X101 connection description for digital signals..... | 220 |
| Tab. 237 | Maximum core/cable length [m]..... | 220 |
| Tab. 238 | X101 connection description for single-ended HTL incremental signals..... | 221 |
| Tab. 239 | X101 connection description for single-ended HTL pulse/direction signals | 221 |
| Tab. 240 | X101 connection description for single-ended HTL Hall sensor signals | 222 |
| Tab. 241 | Maximum core/cable length [m]..... | 222 |
| Tab. 242 | X300 connection description for differential TTL incremental encoders | 224 |
| Tab. 243 | Cable length [m]..... | 224 |
| Tab. 244 | X301 connection description for differential TTL Hall sensors..... | 225 |
| Tab. 245 | Cable length [m] | 225 |
| Tab. 246 | X302 connection description for single-ended TTL hall sensors | 226 |
| Tab. 247 | Maximum core/cable length [m]..... | 226 |
| Tab. 248 | X303 electrical data – Adapter box | 227 |
| Tab. 249 | X303 connection description..... | 227 |

| | | |
|----------|--|-----|
| Tab. 250 | Maximum core/cable length [m]..... | 227 |
| Tab. 251 | X304 connection description for differential TTL incremental encoder with single-ended TTL Hall sensor ... | 228 |
| Tab. 252 | Cable length [m]..... | 228 |
| Tab. 253 | X305 connection description for differential incremental encoder with single-ended TTL Hall sensor | 229 |
| Tab. 254 | X306 connection description for differential TTL incremental encoder with single-ended TTL Hall sensor ... | 229 |
| Tab. 255 | Cable length [m]..... | 229 |
| Tab. 256 | Maximum cable length of the power cable [m] | 233 |
| Tab. 257 | con.15 power cable pin assignment..... | 233 |
| Tab. 258 | con.15 connector dimensions | 233 |
| Tab. 259 | con.23 power cable pin assignment..... | 234 |
| Tab. 260 | con.23 connector dimensions | 234 |
| Tab. 261 | con.40 power cable pin assignment..... | 234 |
| Tab. 262 | con.40 connector dimensions | 234 |
| Tab. 263 | con.58 power cable pin assignment..... | 235 |
| Tab. 264 | con.58 connector dimensions | 235 |
| Tab. 265 | con.15 encoder cable pin assignment, EnDat 2.1/2.2 digital | 237 |
| Tab. 266 | con.15 connector dimensions | 237 |
| Tab. 267 | con.17 encoder cable pin assignment, EnDat 2.1/2.2 digital | 238 |
| Tab. 268 | con.17 connector dimensions | 238 |
| Tab. 269 | con.23 encoder cable pin assignment, EnDat 2.1/2.2 digital | 239 |
| Tab. 270 | con.23 plug dimensions..... | 239 |
| Tab. 271 | con.23 encoder cable pin assignment, SSI | 240 |
| Tab. 272 | con.23 plug dimensions..... | 240 |
| Tab. 273 | con.23 encoder cable pin assignment, incremental HTL..... | 241 |
| Tab. 274 | con.23 plug dimensions..... | 241 |
| Tab. 275 | con.17 encoder cable pin assignment..... | 242 |
| Tab. 276 | con.17 connector dimensions | 242 |
| Tab. 277 | Encoder cable pin assignment con.15, resolver, "Motion Resolver" cable label | 244 |
| Tab. 278 | con.15 connector dimensions | 244 |
| Tab. 279 | Encoder cable pin assignment con.17, resolver, "Motion Resolver" cable label | 245 |
| Tab. 280 | con.17 connector dimensions | 245 |
| Tab. 281 | Encoder cable pin assignment con.23, resolver, "Motion Resolver" cable label | 246 |
| Tab. 282 | con.23 plug dimensions..... | 246 |
| Tab. 283 | Encoder cable pin assignment con.15, resolver, "No. 44206" cable label | 247 |
| Tab. 284 | con.15 connector dimensions | 247 |
| Tab. 285 | Encoder cable pin assignment con.17, resolver, "No. 44206" cable label | 248 |

| | | |
|----------|--|-----|
| Tab. 286 | con.17 connector dimensions | 248 |
| Tab. 287 | Encoder cable pin assignment con.23, resolver, "No. 44206" cable label | 249 |
| Tab. 288 | con.23 plug dimensions..... | 249 |
| Tab. 289 | con.15 encoder cable pin assignment, EnDat 2.1 sin/cos | 251 |
| Tab. 290 | con.15 connector dimensions | 251 |
| Tab. 291 | con.17 encoder cable pin assignment, EnDat 2.1 sin/cos | 252 |
| Tab. 292 | con.17 connector dimensions | 252 |
| Tab. 293 | con.23 encoder cable pin assignment, EnDat 2.1 sin/cos | 253 |
| Tab. 294 | con.23 plug dimensions..... | 253 |
| Tab. 295 | Parameter groups..... | 259 |
| Tab. 296 | Parameters: Data types, parameter types, possible values | 260 |
| Tab. 297 | Parameter types..... | 261 |
| Tab. 298 | Requirements for a direct connection | 282 |
| Tab. 299 | Guide values for C34 | 288 |
| Tab. 300 | Application cases for brake management..... | 300 |
| Tab. 301 | Correlation between F92[0] and F06 | 316 |
| Tab. 302 | Information on the load matrix..... | 340 |
| Tab. 303 | Load matrix: Impermissible characters or control characters..... | 341 |
| Tab. 304 | Predictive Maintenance files on SD card..... | 349 |
| Tab. 305 | Meaning of file extensions on SD card | 349 |
| Tab. 306 | Meaning of the blue LED (REMOTE)..... | 351 |
| Tab. 307 | Meaning of the green and red LED (RUN)..... | 352 |
| Tab. 308 | *NoConfiguration, Cause: ParaModul Error – Causes and actions | 354 |
| Tab. 309 | *NoConfiguration, Cause: ConfigStartError – Causes and actions | 355 |
| Tab. 310 | *NoConfiguration, Cause: Configuration Stopped – Causes and actions | 356 |
| Tab. 311 | Meaning of the green LED (LINK) | 357 |
| Tab. 312 | Meaning of the yellow LED (ACTIVITY)..... | 357 |
| Tab. 313 | Meaning of the green LED (Run) | 358 |
| Tab. 314 | Meaning of the red LED (error) | 359 |
| Tab. 315 | Meaning of the red LED (BF) | 360 |
| Tab. 316 | Meaning of the green LED (Run) | 360 |
| Tab. 317 | Meaning of the green LED (Run) | 361 |
| Tab. 318 | Meaning of the red LED (error) | 361 |
| Tab. 319 | Meaning of the green LED (RUN) | 362 |
| Tab. 320 | Meaning of the red LED (ERROR) | 362 |
| Tab. 321 | Meaning of the green LEDs (LA) | 363 |

| | | |
|----------|--|-----|
| Tab. 322 | Meaning of the green LEDs (Link) | 364 |
| Tab. 323 | Meaning of the yellow LEDs (Act.) | 364 |
| Tab. 324 | Events..... | 365 |
| Tab. 325 | Event 31 – Causes and actions | 367 |
| Tab. 326 | Event 32 – Causes and actions | 367 |
| Tab. 327 | Event 33 – Causes and actions | 368 |
| Tab. 328 | Event 34 – Causes and actions | 369 |
| Tab. 329 | Event 35 – Causes and actions | 370 |
| Tab. 330 | Event 36 – Causes and actions | 370 |
| Tab. 331 | Event 37 – Causes and actions | 371 |
| Tab. 332 | Event 38 – Causes and actions | 374 |
| Tab. 333 | Event 39 – Causes and actions | 375 |
| Tab. 334 | Event 40 – Causes and actions | 376 |
| Tab. 335 | Event 41 – Causes and actions | 377 |
| Tab. 336 | Event 42 – Causes and actions | 378 |
| Tab. 337 | Event 43 – Causes and actions | 379 |
| Tab. 338 | Event 44 – Causes and actions | 380 |
| Tab. 339 | Event 45 – Causes and actions | 381 |
| Tab. 340 | Event 46 – Causes and actions | 382 |
| Tab. 341 | Event 47 – Causes and actions | 383 |
| Tab. 342 | Event 48 – Causes and actions | 384 |
| Tab. 343 | Event 49 – Causes and actions | 385 |
| Tab. 344 | Event 50 – Causes and actions | 386 |
| Tab. 345 | Event 51 – Causes and actions | 387 |
| Tab. 346 | Event 52 – Causes and actions | 388 |
| Tab. 347 | Event 53 – Causes and actions | 390 |
| Tab. 348 | Event 54 – Causes and actions | 391 |
| Tab. 349 | Event 55 – Causes and actions | 392 |
| Tab. 350 | Event 56 – Causes and actions | 394 |
| Tab. 351 | Event 57 – Causes and actions | 395 |
| Tab. 352 | Event 58 – Causes and actions | 396 |
| Tab. 353 | Event 59 – Causes and actions | 397 |
| Tab. 354 | Events 60 – 67 – Causes and actions..... | 398 |
| Tab. 355 | Event 68 – Causes and actions | 399 |
| Tab. 356 | Event 69 – Causes and actions | 400 |
| Tab. 357 | Event 70 – Causes and actions | 401 |

| | | |
|----------|---|-----|
| Tab. 358 | Event 71 – Causes and actions | 402 |
| Tab. 359 | Events 72 – 75 – Causes and actions | 403 |
| Tab. 360 | Event 76 – Causes and actions | 405 |
| Tab. 361 | Event 77 – Causes and actions | 407 |
| Tab. 362 | Event 78 – Causes and actions | 409 |
| Tab. 363 | Event 79 – Causes and actions | 410 |
| Tab. 364 | Event 80 – Causes and actions | 410 |
| Tab. 365 | Event 81 – Causes and actions | 411 |
| Tab. 366 | Event 82 – Causes and actions | 412 |
| Tab. 367 | Event 83 – Causes and actions | 413 |
| Tab. 368 | Event 84 – Causes and actions | 415 |
| Tab. 369 | Event 85 – Causes and actions | 415 |
| Tab. 370 | Event 88 – Causes and actions | 416 |
| Tab. 371 | Event 90 – Causes and actions | 417 |
| Tab. 372 | Error list of the SE6 safety module | 418 |
| Tab. 373 | Application cases for scope and multi-axis scope | 425 |
| Tab. 374 | Weights of SD6 and accessories | 456 |
| Tab. 375 | Terminal specifications for the base device | 458 |
| Tab. 376 | Terminal specifications of the ST6 safety module | 458 |
| Tab. 377 | Terminal specifications of the SE6 safety module | 458 |
| Tab. 378 | Terminal specifications for the terminal modules | 459 |
| Tab. 379 | Terminal specifications for the encoder adapter box | 459 |
| Tab. 380 | Terminal specifications for the braking resistors | 459 |
| Tab. 381 | BCF 3,81 180 SN BK specification | 459 |
| Tab. 382 | BFL 5.08HC 180 SN specification | 460 |
| Tab. 383 | BLDF 5.08 180 SN specification | 460 |
| Tab. 384 | Specification for DFMC 1.5 -ST-3.5 | 461 |
| Tab. 385 | FK-MCP 1,5 -ST-3,5 specification | 461 |
| Tab. 386 | FMC 1,5 -ST-3,5 specification | 462 |
| Tab. 387 | G 10/2 specification | 462 |
| Tab. 388 | GFKC 2,5 -ST-7,62 specification | 463 |
| Tab. 389 | Specification for GFKIC 2.5 -ST-7.62 | 463 |
| Tab. 390 | ISPC 5 -STGCL-7,62 specification | 464 |
| Tab. 391 | SPC 16 -ST-10,16 specification | 464 |
| Tab. 392 | MKDSP 25 -15,00 specification | 465 |
| Tab. 393 | SPC 5 -ST-7,62 specification | 466 |

| | | |
|----------|---|-----|
| Tab. 394 | SPC 16 -ST-10,16 specification | 466 |
| Tab. 395 | Evaluation of an SSI encoder at X4 with free setting | 470 |
| Tab. 396 | Evaluation of an SSI encoder at X4 with fixed setting | 471 |
| Tab. 397 | Examples of rotational SSI encoders at X4 | 472 |
| Tab. 398 | Examples of translational SSI encoders at X4..... | 472 |
| Tab. 399 | Evaluation of an SSI encoder at X120 with free setting | 473 |
| Tab. 400 | Simulation of an SSI encoder at X120 with free setting | 473 |
| Tab. 401 | Evaluation of an SSI encoder at X120 with fixed setting | 475 |
| Tab. 402 | Simulation of an SSI encoder at X120 with fixed setting..... | 476 |
| Tab. 403 | Examples of rotational SSI encoders at X120 | 477 |
| Tab. 404 | Examples of translational SSI encoders at X120..... | 477 |
| Tab. 405 | Commutation finding with control mode B20 = 48 or 70 | 478 |
| Tab. 406 | Programs and services..... | 482 |
| Tab. 407 | Protocols and ports for a direct connection..... | 482 |
| Tab. 408 | Protocols and ports for STOBER remote maintenance | 482 |
| Tab. 409 | Script mode commands..... | 496 |
| Tab. 410 | Script mode: Variables for importing and exporting parameters | 505 |
| Tab. 411 | Script mode: Variables for importing and exporting parameters | 506 |
| Tab. 412 | Script mode: Exit statuses | 515 |



4 4 2 4 2 6 . 1 3

11/2024

STÖBER Antriebstechnik GmbH + Co. KG
Kieselbronner Str. 12
75177 Pforzheim
Germany
Tel. +49 7231 582-0
mail@stoeber.de
www.stober.com

24 h Service Hotline
+49 7231 582-3000

www.stober.com